



# Table of Contents

|   |    |
|---|----|
| Table of Contents .....                         | 1  |
| Usage Notice .....                              | 2  |
| Safety Information .....                        | 2  |
| Precautions .....                               | 3  |
| Eye Safety Warnings .....                       | 5  |
| Product Features .....                          | 5  |
| Introduction .....                              | 6  |
| Package Overview .....                          | 6  |
| Product Overview .....                          | 7  |
| Main Unit .....                                 | 7  |
| Control Panel .....                             | 8  |
| Input / Output Connections .....                | 9  |
| Remote Control .....                            | 11 |
| Installation .....                              | 12 |
| Connecting the Projector .....                  | 12 |
| Connect to Computer/Notebook .....              | 12 |
| Connect to Video Sources .....                  | 13 |
| Powering On/Off the Projector .....             | 14 |
| Powering On the Projector .....                 | 14 |
| Powering Off the projector .....                | 15 |
| Warning Indicator .....                         | 15 |
| Adjusting the Projected Image .....             | 16 |
| Adjusting the Projector's Height .....          | 16 |
| Adjusting the Projector's Zoom / Focus .....    | 17 |
| Adjusting Projected Image Size .....            | 17 |
| User Controls .....                             | 18 |
| Control Panel & Remote Control .....            | 18 |
| Control Panel .....                             | 18 |
| Remote Control .....                            | 19 |
| Using the HELP button .....                     | 21 |
| On-screen Display Menus .....                   | 24 |
| How to operate .....                            | 24 |
| Menu Tree .....                                 | 25 |
| Image .....                                     | 27 |
| Display .....                                   | 31 |
| Setup .....                                     | 35 |
| Options .....                                   | 45 |
| Appendices .....                                | 48 |
| Troubleshooting .....                           | 48 |
| Projector Status Indication .....               | 51 |
| Remote Control .....                            | 52 |
| Replacing the Lamp .....                        | 53 |
| Compatibility Modes .....                       | 55 |
| RS232 Commands and Protocol Function List ..... | 57 |
| Ceiling Mount Installation .....                | 61 |
| Optoma Global Offices .....                     | 62 |
| Regulation & Safety notices .....               | 64 |

## Safety Information

|   |   |
|---|---|
|  | The lightning flash with arrow head within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons. |
|  | The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.  |

**WARNING:** TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. DANGEROUS HIGH VOLTAGES ARE PRESENT INSIDE THE ENCLOSURE. DO NOT OPEN THE CABINET. REFER SERVICING TO QUALIFIED PERSONNEL ONLY.

### **Class B emissions limits**

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

### **Important Safety Instruction**

1. Do not block any ventilation openings. To ensure reliable operation of the projector and to protect from over heating, it is recommended to install the projector in a location that does not block ventilation. As an example, do not place the projector on a crowded coffee table, sofa, bed, etc. Do not put the projector in an enclosure such as a book case or a cabinet that restricts air flow.
2. Do not use the projector near water or moisture. To reduce the risk of fire and/or electric shock, do not expose the projector to rain or moisture.
3. Do not install near heat sources such as radiators, heaters, stoves or any other apparatus such as amplifiers that emits heat.
4. Clean only with dry cloth.
5. Only use attachments/accessories specified by the manufacturer.
6. Do not use the unit if it has been physically damaged or abused.  
Physical damage/abuse would be (but not limited to):
  - Unit has been dropped.
  - Power supply cord or plug has been damaged.
  - Liquid has been spilled on to the projector.
  - Projector has been exposed to rain or moisture.
  - Something has fallen in the projector or something is loose inside.Do not attempt to service the unit yourself. Opening or removing covers may expose you to dangerous voltages or other hazards. Please call Optoma before you send the unit for repair.
7. Do not let objects or liquids enter the projector. They may touch dangerous voltage points and short out parts that could result in fire or electric shock.
8. See projector enclosure for safety related markings.
9. The unit should only be repaired by appropriate service personnel.

## Precautions



*Please follow all warnings, precautions and maintenance as recommended in this user's guide.*

- Warning- Do not look into the projector's lens when the lamp is on. The bright light may hurt and damage your eyes.
- Warning- To reduce the risk of fire or electric shock, do not expose this projector to rain or moisture.
- Warning- Please do not open or disassemble the projector as this may cause electric shock.
- Warning- When replacing the lamp, please allow the unit to cool down. Follow instructions as described on pages 53-54.
- Warning- This projector will detect the life of the lamp itself. Please be sure to change the lamp when it shows warning messages.
- Warning- Reset the "Lamp Reset" function from the on-screen display "Options|Lamp Settings" menu after replacing the lamp module (refer to page 47).
- Warning- When switching the projector off, please ensure the cooling cycle has been completed before disconnecting power. Allow 90 seconds for the projector to cool down.
- Warning- Do not use lens cap when projector is in operation.
- Warning- When the lamp is approaching the end of its lifetime, the message "Lamp Warning: Lamp life exceeded." will show on the screen. Please contact your local reseller or service center to change the lamp as soon as possible.
- Warning- Do not look into or point the laser pointer on your remote control into your or someone's eyes. Laser pointer can cause permanent damage to eyesight.



- ❖ When the lamp reaches the end of its life, the projector will not turn back on until the lamp module has been replaced. To replace the lamp, follow the procedures listed under "Replacing the Lamp" section on pages 53-54.

# Usage Notice

## **Do:**

- ❖ Turn off and unplug the power plug from the AC outlet before cleaning the product.
- ❖ Use a soft dry cloth with mild detergent to clean the display housing.
- ❖ Disconnect the power plug from AC outlet if the product is not being used for a long period of time.

## **Do not:**

- ❖ Block the slots and openings on the unit provided for ventilation.
- ❖ Use abrasive cleaners, waxes or solvents to clean the unit.
- ❖ Use under the following conditions:
  - In extremely hot, cold or humid environments.
    - ▶ Ensure that the ambient room temperature is within 5 - 35°C.
    - ▶ Relative Humidity is 5 - 35°C, 80% (Max.), non-condensing.
  - In areas susceptible to excessive dust and dirt.
  - Near any appliance generating a strong magnetic field.
  - In direct sunlight.

## Eye Safety Warnings



- ■ Avoid staring/facing directly into the projector beam at all times. Keep your back to the beam as much as possible.
- ■ When projector is used in a classroom, adequately supervise students when they are asked to point out something on the screen.
- ■ In order to minimize the lamp power, use room blinds to reduce ambient light levels.

## Product Features

- ■ XGA (1024x768) Native resolution
- ■ HD compatible – 1080p supported
- ■ VGA monitor loop through  
(works on standby mode > 1W)
- ■ BrilliantColor™ Technology
- ■ Security Bar and Kensington Lock
- ■ RS232 control
- ■ Rapid shutdown
- ■ Built-in speaker
- ■ Network support (on specific models)

 
# Introduction

## Package Overview


*Unpack and inspect the box contents to ensure all parts listed below are in the box. If something is missing, please contact your nearest customer service center.*



Projector with lens cap



Power Cord 1.8m

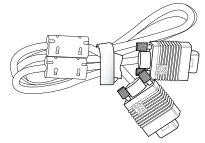

VGA Cable 1.8m



❖ Due to different applications in each Country, some regions may have different accessories.



2 × AAA Batteries




IR Remote Control

### Documentation :

- User's Manual
- Warranty Card
- Quick Start Card
- WEEE Card  
(for EMEA only)

# Introduction

## Product Overview

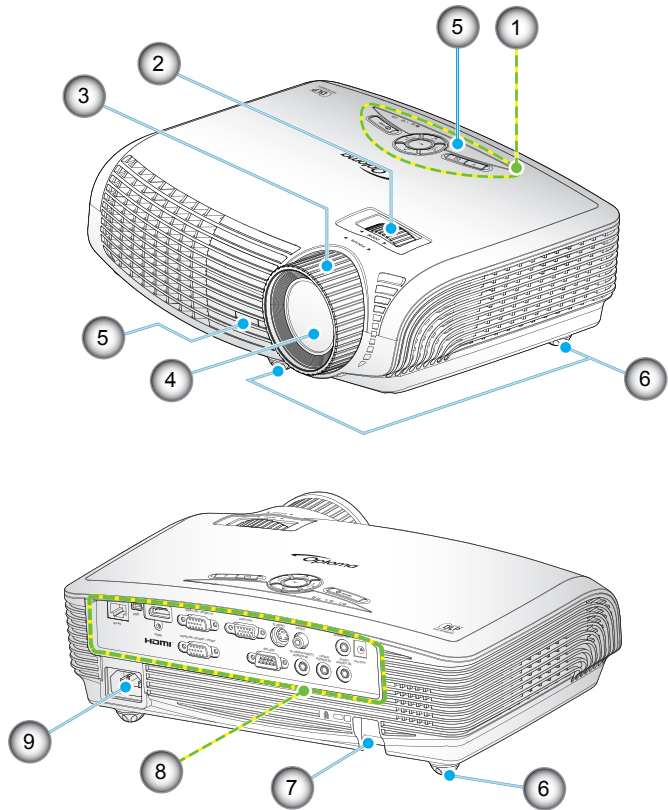


1. Control Panel
2. Zoom Ring
3. Focus Ring
4. Zoom Lens
5. IR Receivers

6. Tilt-Adjustment Feet
7. Security Bar
8. Input / Output Connections
9. Power Socket

# Introduction

## Control Panel

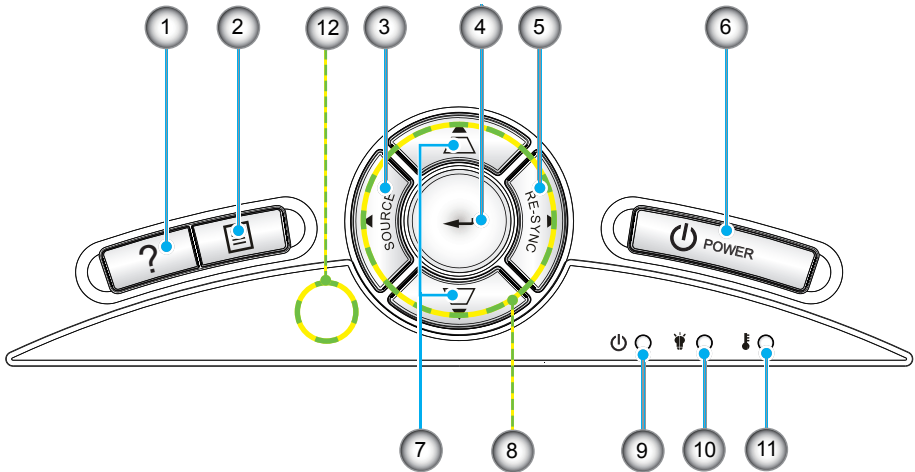


1. Help
2. Menu
3. Source
4. Enter
5. Re-Sync
6. Power
7. Keystone Correction
8. Four Directional Select Keys
9. On/Standby LED
10. Lamp Fail LED
11. Temp LED
12. IR Receiver




# Introduction

## Input / Output Connections

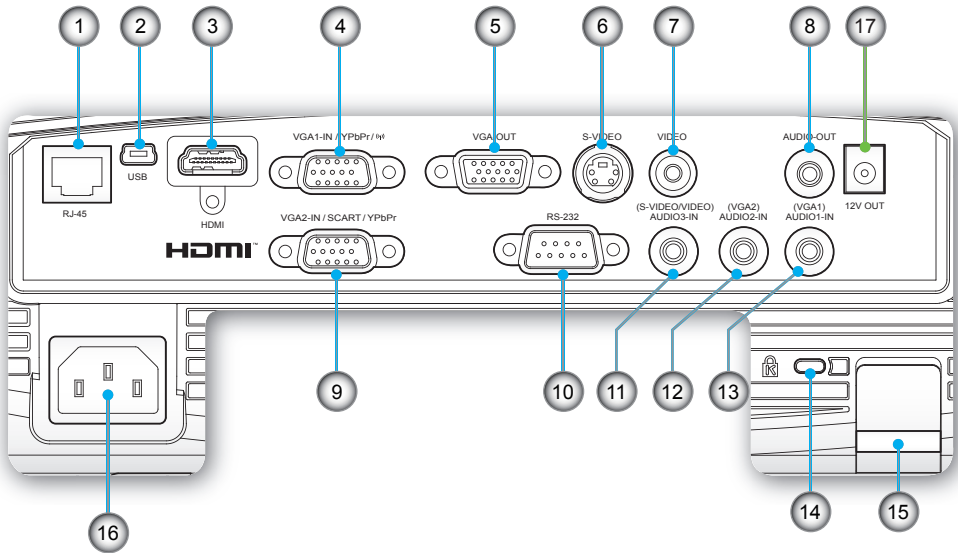

1. RJ-45 Networking Connector
2. USB Connector (Connect to PC for Remote Mouse function)
3. HDMI Connector
4. VGA1-In/YPbPr/“(i)” Connector  
(PC Analog Signal/Component Video Input/HDTV/YPbPr/  
Wireless Dongle)
5. VGA-Out Connector (Monitor Loop-through Output from  
VGA1-In)
6. S-Video Input Connector
7. Composite Video Input Connector
8. Audio Output Connector (3.5mm Mini Jack)
9. VGA2-In/SCART/YPbPr Connector  
(PC Analog Signal/Component Video Input/HDTV/SCART/  
YPbPr)
10. RS-232 Connector (9-pin)

# Introduction

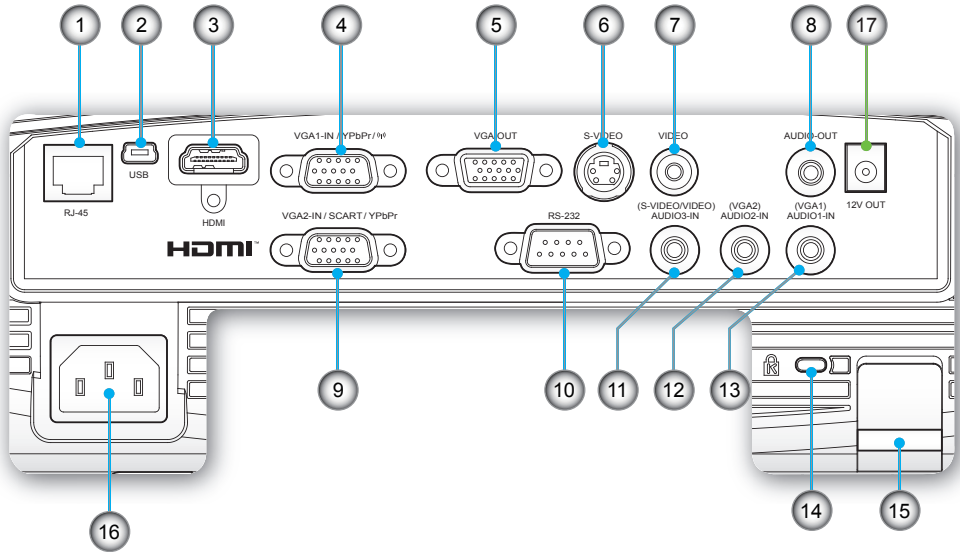


- 11. Audio 3 Input connector (3.5mm mini jack)  
(for S-Video/Video)
- 12. Audio 2 Input connector (3.5mm mini jack)  
(for VGA2)
- 13. Audio 1 Input connector (3.5mm mini jack)  
(for VGA1)
- 14. Kensington™ Lock Port
- 15. Security Bar
- 16. Power Socket

The item below is only present on specific models.

- 17. 12V Trigger Relay Connector

# Introduction

## Remote Control

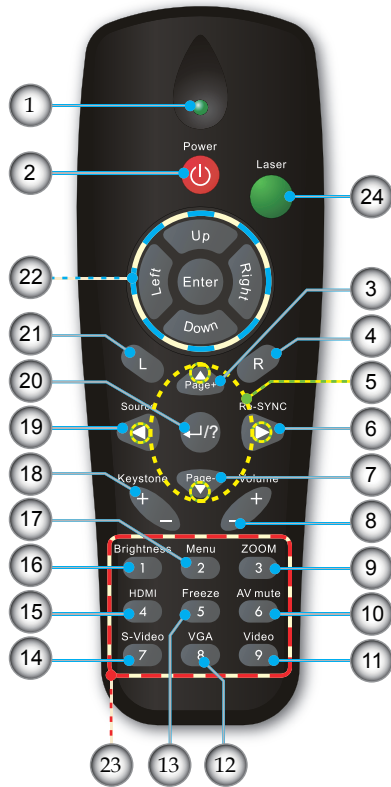


- |                                    |   |
|------------------------------------|---|
| 1. LED Indicator                   | 13. Freeze                                  |
| 2. Power On/Off                    | 14. S-Video                                 |
| 3. Page Up                         | 15. HDMI                                    |
| 4. Mouse Right Click               | 16. Brightness                              |
| 5. Four Directional<br>Select Keys | 17. Menu                                    |
| 6. Re-Sync                         | 18. Keystone +/-                            |
| 7. Page Down                       | 19. Source                                  |
| 8. Volume +/-                      | 20. Enter/Help                              |
| 9. Zoom                            | 21. Mouse Left Click                        |
| 10. AV mute                        | 22. PC/Mouse control                        |
| 11. Video                          | 23. Numbered keypad<br>(for password input) |
| 12. VGA                            | 24. Laser Pointer                           |

# Installation

## Connecting the Projector

### Connect to Computer/Notebook

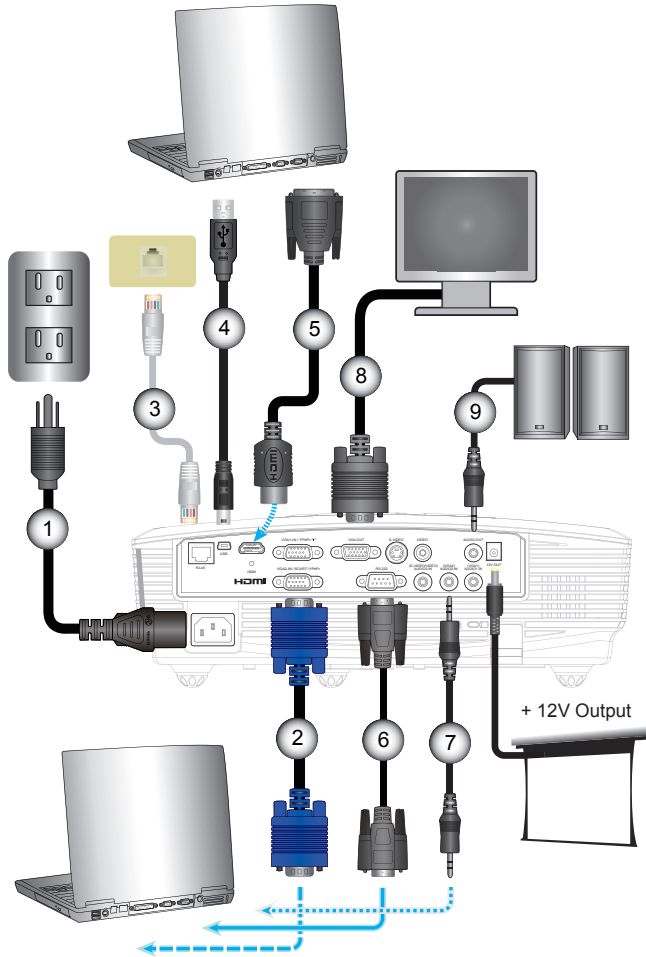


- ❖ I/O configuration depends on models.
- ❖ Due to the difference in applications for each country, some regions may have different accessories.
- ❖ (\*) Optional accessory

- 1.....Power Cord
- 2.....VGA Cable
- 3.....\*Network Cable
- 4.....\*USB Cable
- 5.....\*DVI/HDMI Cable
- 6.....\*RS232 Cable
- 7.....\*Audio Input Cable
- 8.....\*VGA Output Cable
- 9.....\*Audio Output Cable

# Installation

## Connect to Video Sources

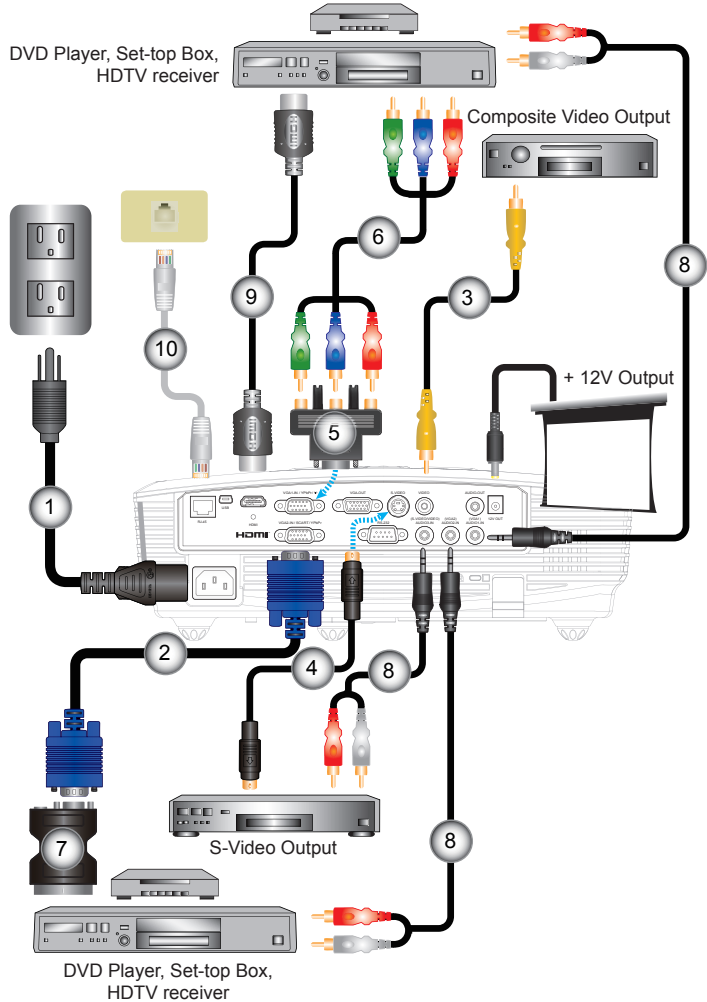


- ❖ I/O configuration depends on models
- ❖ Due to the difference in applications for each country, some regions may have different accessories.
- ❖ (\*) Optional accessory

|         |   |
|---------|---|
| 1.....  | Power Cord                              |
| 2.....  | VGA Cable                               |
| 3.....  | *Composite Video Cable                  |
| 4.....  | *S-Video Cable                          |
| 5.....  | *15-Pin to 3 RCA Component/HDTV Adaptor |
| 6.....  | *3 RCA Component Cable                  |
| 7.....  | *SCART/VGA Adaptor                      |
| 8.....  | *Audio Cable Jack/RCA                   |
| 9.....  | *HDMI Cable                             |
| 10..... | *Network Cable                          |

## Powering On/Off the Projector

### Powering On the Projector


1. Remove the lens cap. ❶
2. Securely connect the power cord and signal cable. When connected, the ON/STANDBY LED will turn Amber.
3. Turn on the lamp by pressing “” button either on the top of the projector or on the remote. The ON/STANDBY LED will now turn Green. ❷

The startup screen will display in approximately 10 seconds. The first time you use the projector, you will be asked to select the preferred language and power saving mode.(\*)

4. Turn on and connect the source that you want to display on the screen (computer, notebook, video player, etc). The projector will detect the source automatically. If not, push menu button and go to “OPTIONS”. Make sure that the “Source Lock” has been set to “Off”.
- ❖ If you connect multiple sources at the same time, press the “SOURCE” button on the control panel or direct source keys on the remote control to switch between inputs.



❖ (\*) When power saving mode is enabled, the VGA & Audio pass-through, RS-232 and RJ-45 will be de-activated during standby mode.

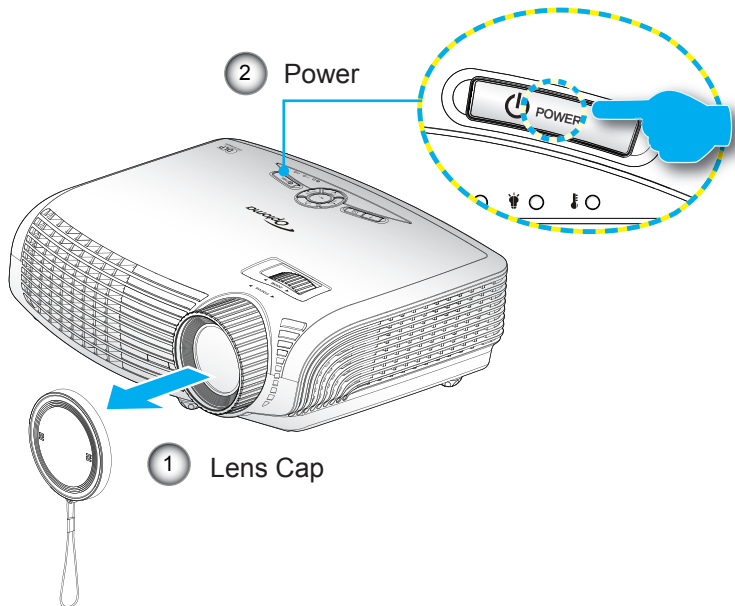


❖ Turn on the projector first and then select the signal sources.

# Installation
 
## Powering Off the Projector

1. Press the “**⏻**” button on the remote control or on the control panel to turn off the projector. The following message will be displayed on the screen.



Press the “**⏻**” button again to confirm otherwise the message will disappear after 15 seconds. When you press the “**⏻**” button for the second time, the projector will display countdown timer and will shut down.

2. The cooling fans continue to operate for about 10 seconds for cooling cycle and the ON/STANDBY LED will Flash Green. When the ON/STANDBY LED lights solid Amber, the projector has entered standby mode.

If you wish to turn the projector back on, you must wait until the projector has completed the cooling cycle and has entered standby mode. Once in standby mode, simply press “**⏻**” button to restart the projector.

3. Disconnect the power cord from the electrical outlet and the projector.
4. Do not turn on the projector immediately following a power off procedure.

## Warning Indicator

When the warning indicators (see below) come on, the projector will automatically shutdown:



- ❖ Contact the nearest service center if the projector displays these symptoms. See pages 61-62 for more information.
- ❖ “LAMP” LED indicator is lit red and if “On/Standby” indicator flashes amber.
- ❖ “TEMP” LED indicator is lit red and if “On/Standby” indicator flashes amber. This indicates the projector has overheated. Under normal conditions, the projector can be switched back on.
- ❖ “TEMP” LED indicator flashes red and if “On/Standby” indicator flashes amber.


Unplug the power cord from the projector, wait for 30 seconds and try again. If the warning indicator light up again, please contact your nearest service center for assistance.

## Adjusting the Projected Image

### Adjusting the Projector's Height

*The projector is equipped with elevator feet for adjusting the image height.*

1. Locate the adjustable foot you wish to modify on the underside of the projector.
2. Rotate the adjustable rings clockwise/anticlockwise to lower or raise the projector. Repeat with the remaining feet as needed.

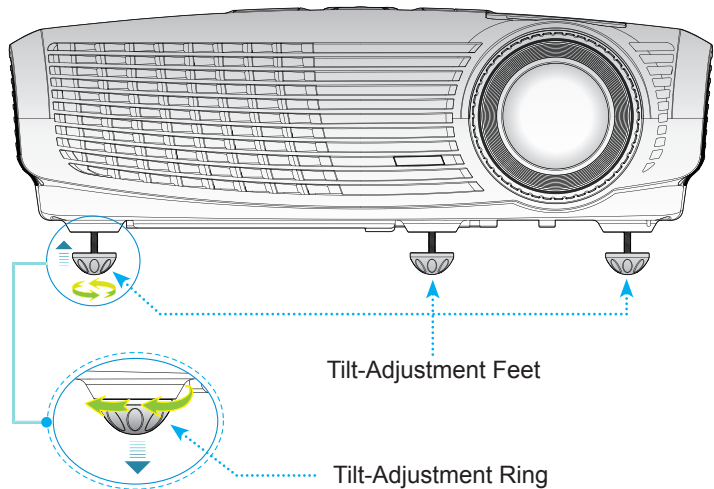




# Installation


## Adjusting the Projector's Zoom / Focus

You may turn the zoom lever to zoom in or out. To focus the image, rotate the focus ring until the image is clear.

- ▶ 1.2x Zoom series will focus at distances from 4.92 to 32.81 feet (1.50 to 10.00 meters).

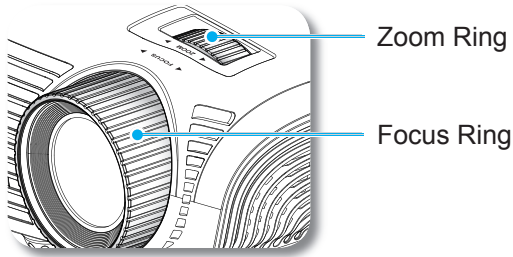

## Adjusting Projection Image Size

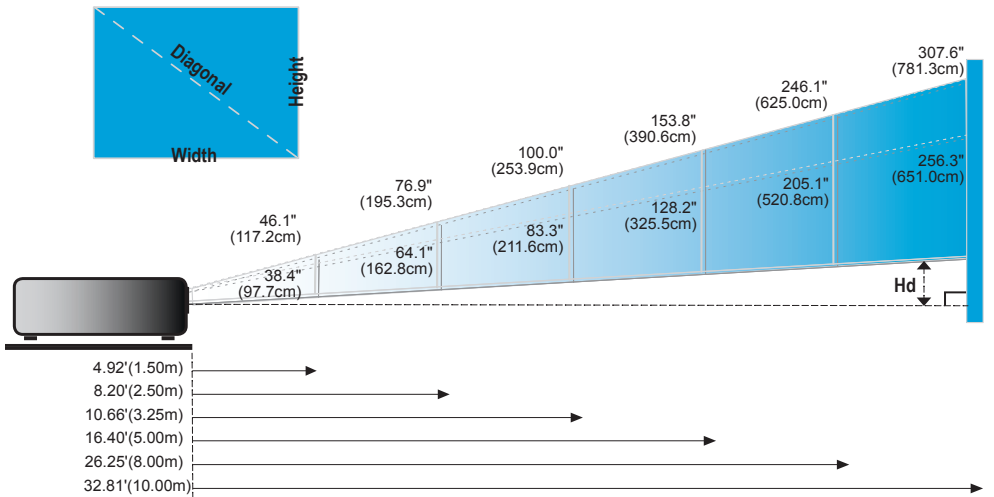


|                   |            |                                |                                  |                                  |                                   |                                    |                                    |
|-------------------|------------|--------------------------------|----------------------------------|----------------------------------|-----------------------------------|------------------------------------|------------------------------------|
| Screen (Diagonal) | Max.       | 46.1" (117.2cm)                | 76.9" (195.3cm)                  | 100.0" (253.9cm)                 | 153.8" (390.6cm)                  | 246.1" (625.0cm)                   | 307.6" (781.3cm)                   |
|                   | Min.       | 38.4" (97.7cm)                 | 64.1" (162.8cm)                  | 83.3" (211.6cm)                  | 128.2" (325.5cm)                  | 205.1" (520.8cm)                   | 256.3" (651.0cm)                   |
| Screen Size       | Max. (WxH) | 36.9" x 27.7"<br>93.8 x 70.3cm | 61.5" x 46.1"<br>156.3 x 117.2cm | 80.0" x 60.0"<br>203.1 x 152.3cm | 123.0" x 92.3"<br>312.5 x 234.4cm | 196.9" x 147.6"<br>500.0 x 375.0cm | 246.1" x 184.5"<br>625.0 x 468.8cm |
|                   | Min. (WxH) | 30.8" x 23.1"<br>78.1 x 58.6cm | 51.3" x 38.4"<br>130.2 x 97.7cm  | 66.6" x 50.0"<br>169.3 x 127.0cm | 102.5" x 76.9"<br>260.4 x 195.3cm | 164.0" x 123.0"<br>416.7 x 312.5cm | 205.1" x 153.8"<br>520.8 x 390.6cm |
| Hd                | Max.       | 4.15" (10.55cm)                | 6.92" (17.58cm)                  | 9.00" (22.85cm)                  | 13.84" (35.16cm)                  | 22.15" (56.25cm)                   | 27.68" (70.31cm)                   |
|                   | Min.       | 3.46" (8.79cm)                 | 5.77" (14.65cm)                  | 7.50" (19.04cm)                  | 11.53" (29.3cm)                   | 18.45" (46.88cm)                   | 23.07" (58.59cm)                   |
| Distance          |            | 4.92' (1.50m)                  | 8.20' (2.50m)                    | 10.66' (3.25m)                   | 16.40' (5.00m)                    | 26.25' (8.00m)                     | 32.81' (10.00m)                    |

❖ This table is for user's reference only.





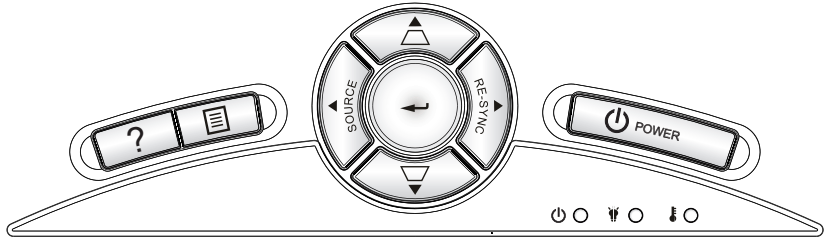

# User Controls

## Control Panel & Remote Control

### Control Panel



#### Using the Control Panel


|  |   |
|--|---|
|  Power              | Refer to the “Power On/Off the Projector” section on pages 14-15.                         |
| RE-SYNC  | Automatically synchronize the projector to the input source.                              |
|  Enter              | Confirm your item selection.  |
| SOURCE   | Press “SOURCE” to select an input signal.   |
|  Menu               | Press “Menu” to launch the on-screen display (OSD) menu. To exit OSD, Press “Menu” again. |
| ? HELP   | Help Menu (refer to page 21).   |
| Four Directional Select Keys   | Use ▲ ▼ ◀ ▶ to select items or make adjustments to your selection.                        |
| Keystone   | Use ▭ ▮ to adjust image distortion caused by tilting the projector. (±40 degrees)         |
|  ○ Lamp LED       | Indicate the projector’s lamp status.   |
|  ○ Temp LED       | Indicate the projector’s temperature status.  |
|  ○ ON/STANDBY LED | Indicate the projector’s status.  |


# User Controls

## Remote Control



### Using the Remote Control

**Power**  Refer to the “Power On/Off the Projector” section on pages 14-15.


**Laser**  Press to use laser pointer.

**L Button** Mouse left click.

**R Button** Mouse right click.

**Page +** Use this button to page up.

**Page -** Use this button to page down.

**Enter/Help**  Confirm your item selection.  
? Help Menu (refer to page 21).

**Source** Press “Source” to select an input signal.

**Re-SYNC** Automatically synchronizes the projector to the input source.


**Four Directional Select Keys** Use  to select items or make adjustments to your selection.

**Keystone +/-** Adjust image distortion caused by tilting the projector.

**Volume +/-** Adjust to increase / decrease the volume.

**Brightness** Adjust the brightness of the image.

**Menu** Press “Menu” to launch the on-screen display (OSD) menu. To exit OSD, press “Menu” again.

**ZOOM** Zoom in on an image.  
Press  buttons to alter zoom.


# User Controls

## Remote Control



### Using the Remote Control


|         |  |
|---------|--|
| HDMI    | Press "HDMI" to choose HDMI source.  |
| Freeze  | Press "Freeze" to pause the screen image. Press this button again to unlock. |
| AV mute | Momentarily turns off/on the audio and video.                                |
| S-Video | Press "S-Video" to choose S-Video source.                                    |
| VGA     | Press "VGA" to choose VGA sources.   |
| Video   | Press "Video" to choose Composite video source.                              |

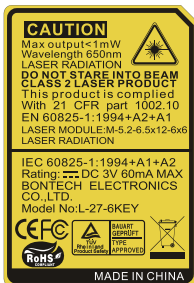

## Using the HELP button

The HELP function ensures easy setup and operation.

- ▶ Press the “?” button on the control panel to open the Help Menu.

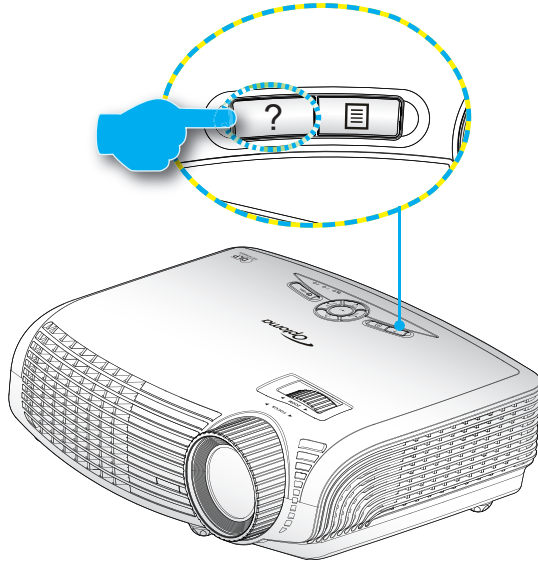

# User Controls

- ▶ Help menu button functions only when no input source is detected.



- ❖ Please refer to the “Troubleshooting” section on pages 48-51 for more details.

The screenshot shows a 'HELP' menu with the following content:

HELP

? No Image appears on-screen.

UpDown Select Menu Exit

No Image appears on-screen.

- ▶ Ensure all the cables and power connections are correctly and securely connected as described in the Installation section of User's Manual.
- ▶ Ensure all the pins of connectors are not bent or broken.
- ▶ Ensure that the [AV MUTE] feature is not turned on.

[NEXT]

[Exit]

UpDown Select Menu Exit

No Image appears on-screen.

- ▶ If you are using a Notebook :
- 1. First, follow the steps above to adjust resolution of the computer.
- ▶ 2. Press the toggle output settings. Example : [Fn]+[F 4]

|           |           |              |           |
|-----------|-----------|--------------|-----------|
| Acer ⇨    | [Fn]+[F5] | IBM/Lenovo ⇨ | [Fn]+[F7] |
| Asus ⇨    | [Fn]+[F8] | HP/Compaq ⇨  | [Fn]+[F4] |
| Dell ⇨    | [Fn]+[F8] | NEC ⇨        | [Fn]+[F3] |
| Gateway ⇨ | [Fn]+[F4] | Toshiba ⇨    | [Fn]+[F5] |

Mac Apple :

System Preference ⇨ Display ⇨ Arrangement ⇨ Mirror display

[PREV]

[Exit]

UpDown Select Menu Exit

- ▶ If input source is detected and help button is pressed, the following pages will appear to help diagnose any problems.

The screenshot shows a 'HELP' menu with the following content:

HELP

- ? Image has slanted sides.
- ? Image is too small or too large.
- ? Image is unstable or flickering.
- ? There is no audio heard or the volume is too low.

UpDown Select Menu Exit

# User Controls

Image has slanted sides.

- ▶ If possible, reposition the projector so that is centered on the screen and below the bottom of the screen.
- ▶ Press [KEYSTONE + / -] button until the sides are vertical on the remote control.

[KEYSTONE + / -]



[Exit]



UpDown



Select



Menu

Exit

Image is too small or too large.

- ▶ Adjust the Zoom Ring on the top of projector.
- ▶ Move the projector closer to or further from the screen.
- ▶ Press [MENU] button on the remote control or projector panel, go to "DISPLAY | Format" and try the different settings.

[DISPLAY | Format]



[Exit]



UpDown



Select



Menu

Exit

There is no audio heard or the volume is too low.



Is the volume setting at the minimum?

- ▶ Turn up the volume setting.



Is the cable connected properly to the projector?

- ▶ Check the physical connection and ensure the cable is connected properly from the source to projector.

[Volume]



[Exit]



UpDown



Select



Menu

Exit

Image is unstable or flickering.

- ▶ Use [Phase / Frequency] to correct it.
- ▶ Change the monitor color setting on your computer.

[Phase]

[Frequency]



[Exit]



UpDown



Select



Menu


Exit

## On-screen Display Menus

The Projector has multilingual On-screen Display menus that allow you to make image adjustments and change a variety of settings. The projector will automatically detect the source.

### How to operate

1. To open the OSD menu, press “Menu” on the Remote Control or Projector Keypad.
2. When OSD is displayed, use ◀▶ keys to select any item in the main menu. While making a selection on a particular page, press ▼ or “Enter” key to enter sub menu.
3. Use ▲▼ keys to select the desired item and adjust the settings using ◀▶ key.
4. Select the next item to be adjusted in the sub menu and adjust as described above.
5. Press “Enter” to confirm, and the screen will return to the main menu.
6. To exit, press “MENU” again. The OSD menu will close and the projector will automatically save the new settings.

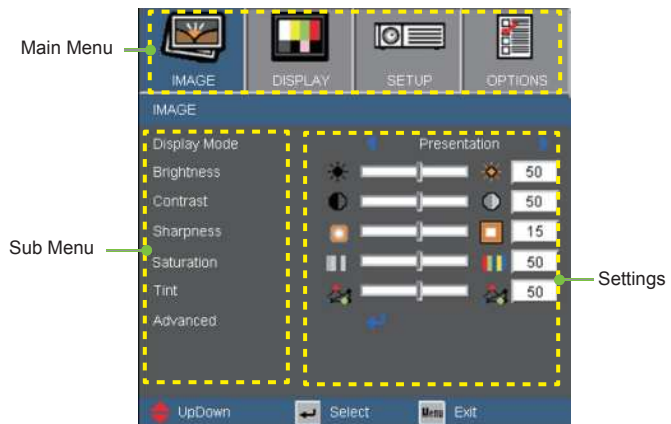



# User Controls

## Menu Tree

NOTE


❖ (#) “Saturation” and “Tint” are only supported in Video mode.

❖ (\*) “Signal” is only supported in Analog VGA (RGB) signal.

NOTE


❖ The items below are only present on specific models.

(\*) “Auto Keystone”, “3D”, “3D Sync. Invert”, “Closed Captioning”

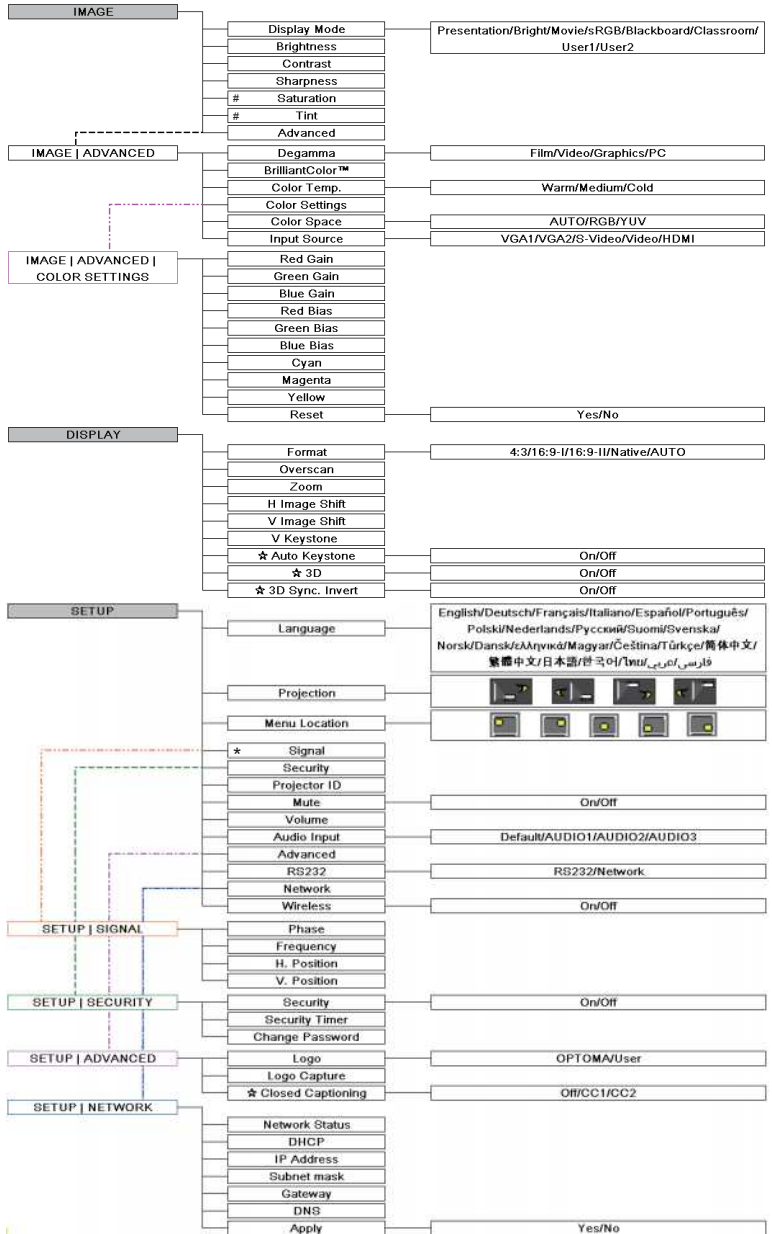

# User Controls

## Menu Tree

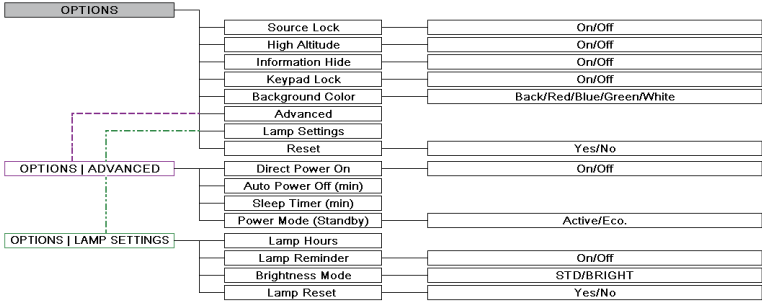

## IMAGE



### Display Mode

There are many factory presets optimized for various types of images.

- ▶ Presentation: Good color and brightness from PC input.
- ▶ Bright: Maximum brightness from PC input.
- ▶ Movie: For home theater.
- ▶ sRGB: Standardised accurate color.
- ▶ Blackboard: This mode should be selected to achieve optimum color settings when projecting onto a blackboard (green).
- ▶ Classroom: This mode is recommended for projecting in a classroom.
- ▶ User1: User's settings.
- ▶ User2: The initial default settings of this mode is from Movie mode. Any further adjustments by the user in User2 will be saved in this mode for future use.

### Brightness

Adjust the brightness of the image.

- ▶ Press the ◀ to darken image.
- ▶ Press the ▶ to lighten the image.

## IMAGE



### Contrast

The contrast controls the degree of difference between the lightest and darkest parts of the picture.

- ▶ Press the ◀ to decrease the contrast.
- ▶ Press the ▶ to increase the contrast.

### Sharpness

Adjust the sharpness of the image.

- ▶ Press the ◀ to decrease the sharpness.
- ▶ Press the ▶ to increase the sharpness.

### Saturation

Adjust a video image from black and white to fully saturated color.

- ▶ Press the ◀ to decrease the amount of saturation in the image.
- ▶ Press the ▶ to increase the amount of saturation in the image.




❖ “Saturation” and “Tint” functions are only supported under Video mode.

### Tint

Adjust the color balance of red and green.

- ▶ Press the ◀ to increase the amount of green in the image.
- ▶ Press the ▶ to increase the amount of red in the image.

## IMAGE | Advanced

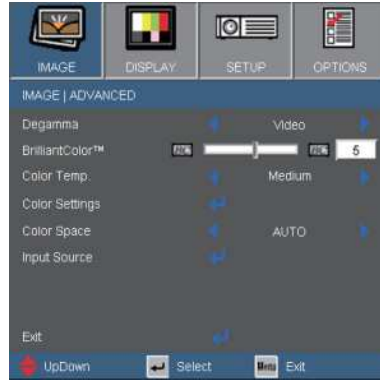

### Degamma

This allows you to choose a degamma table that has been fine-tuned to bring out the best image quality for the input.

- ▶ Film: for home theater.
- ▶ Video: for video or TV source.
- ▶ Graphics: for image source.
- ▶ PC: for PC or computer source.

### BrilliantColor™

This adjustable item utilizes a new color-processing algorithm and system level enhancements to enable higher brightness while providing true, more vibrant colors in picture. The range is from “0” to “10”. If you prefer a stronger enhanced image, adjust toward the maximum setting. For a smoother, more natural image, adjust toward the minimum setting.

### Color Temp

Adjust the color temperature. With cold temperature, the screen looks colder; with warm temperature, the screen looks warmer.

### Color Space

Select an appropriate color matrix type from AUTO, RGB or YUV.

## Advanced | Color Settings




### Color

Use these settings for advanced adjustment of the individual Red, Green, Blue, Cyan, Magenta and Yellow Colors.


### Reset

Choose “Yes” to return the factory default settings for color adjustments.

## Advanced | Input Source

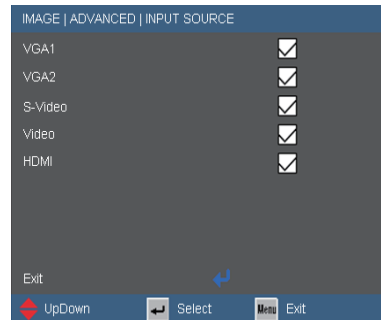

### Input Source

Use this option to enable / disable input sources. Press  to enter the sub menu and select which sources you require. Press “Enter” to finalize the selection. The projector will not search for inputs that are not selected.

## DISPLAY




### Format

Use this function to choose your desired aspect ratio.

- ▶ 4:3: This format is for 4×3 input sources.
- ▶ 16:9-I: This format is for 16×9 input sources, like HDTV and DVD enhanced for Wide screen TV. (576i/p)
- ▶ 16:9-II: This format is for 16×9 input sources, like HDTV and DVD enhanced for Wide screen TV. (480i/p)
- ▶ Native: This format displays the original image without any scaling.
- ▶ AUTO: Automatically selects the appropriate display format.

| Aspect ratio<br>(source detected) | Resize image  |
|-----------------------------------|---|
|                                   | XGA model   |
| 4:3                               | 1024 x 768 center   |
| 16:9-I                            | 1024 x 576 center   |
| 16:9-II                           | 854 x 480 center  |
| Native                            | Resize image of native change to above description not pixels resolution. |

# User Controls

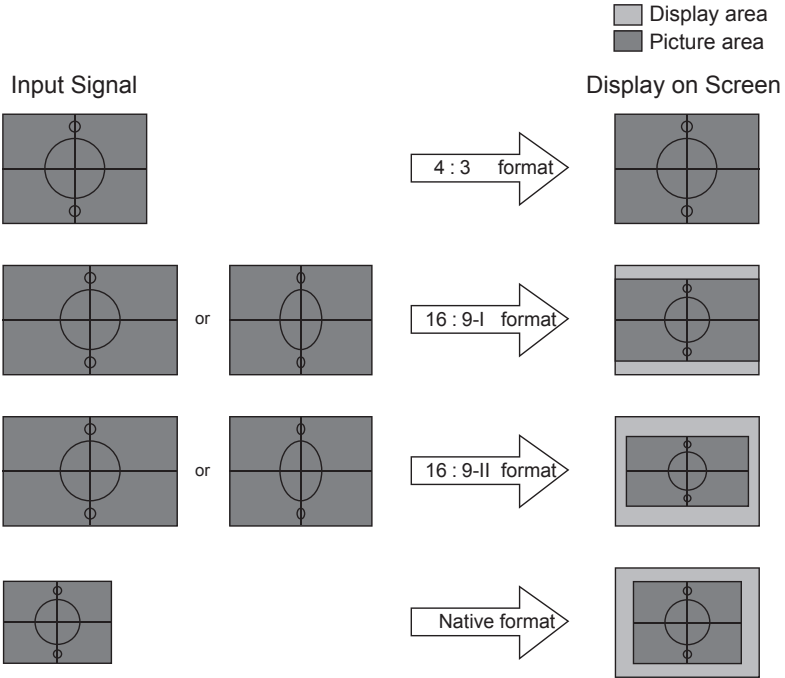



## DISPLAY



### Overscan

Overscan function removes the noise in a video image. Overscan the image to remove video encoding noise on the edge of video source.

### Zoom

- ▶ Press the ◀ to reduce the size of an image.
- ▶ Press the ▶ to magnify an image on the projection screen.

### H Image Shift

Shift the projected image position horizontally.

### V Image Shift

Shift the projected image position vertically.

### V Keystone

Press the ◀ or ▶ to adjust image distortion vertically. If the image looks trapezoidal, this option can help make the image rectangular.

### Auto Keystone

Automatically adjusts vertical image distortion.

### 3D

Press the "On" to turn 3D on for 3D images.

### 3D Sync. Invert

- ▶ Press the "On" to invert left and right frame contents.
- ▶ Press the "Off" for default frame contents.



❖ The items below are only present on specific models.

"Auto Keystone",  
"3D",  
"3D Sync. Invert"



❖ "3D Sync Invert" is only available when 3D is enabled.

## SETUP | Language



### Language

Choose the multilingual OSD menu. Press ◀ or ▶ into the sub menu and then use the ▲ or ▼ key to select your preferred language. Press “Enter” to finalize the selection.





## SETUP



### Projection



- ❖ Rear-Desktop and Rear-Ceiling are to be used with a translucent screen.

- ▶  **Front-Desktop**  
This is the default selection. The image is projected straight on the screen.
- ▶  **Rear-Desktop**  
When selected, the image will appear reversed.
- ▶  **Front-Ceiling**  
When selected, the image will turn upside down.
- ▶  **Rear-Ceiling**  
When selected, the image will appear reversed in upside down position.

## SETUP



### Menu Location

Choose the menu location on the display screen.

### Projector ID

ID definition can be set up by menu (range 0~99), and allow user control an individual projector by RS232. Refer to page 58 for the complete list of RS232 commands.

### Mute

- ▶ Choose the “On” to turn mute on.
- ▶ Choose the “Off” to turn mute off.

### Volume

- ▶ Press the ◀ to decrease the volume.
- ▶ Press the ▶ to increase the volume.

### Audio Input

The default audio settings are on the back panel of the projector. Use this option to reassign any of the Audio Inputs (1, 2 or 3) to the current image source. Each Audio input can be assigned to more than one video source.

- ▶ AUDIO1: VGA1
- ▶ AUDIO2: VGA2
- ▶ AUDIO3: S-VIDEO / VIDEO

## SETUP | Signal



- ❖ “Signal” is only supported in Analog VGA (RGB) signal.



### Phase

Synchronize the signal timing of the display with the graphic card. If the image appears to be unstable or flickers, use this function to correct it.

### Frequency

Change the display data frequency to match the frequency of your computer's graphic card. Use this function only if the image appears to flicker vertically.

### H. Position

- ▶ Press the ◀ to move the image left.
- ▶ Press the ▶ to move the image right.

### V. Position

- ▶ Press the ◀ to move the image down.
- ▶ Press the ▶ to move the image up.

## SETUP | Security



### Security

- ▶ On: Choose “On” to use security verification when the turning on the projector.
- ▶ Off: Choose “Off” to be able to switch on the projector without password verification.

### Security Timer

Can be select the time (Month/Day/Hour) function to set the number of hours the projector can be used. Once this time has elapsed you will be requested to enter your password again.




## SETUP | Security



- ❖ Pass-code default value is "1234" (first time).

### Change Password

- ▶ First time:
  1. Press "↵" to set the password.
  2. The password has to be 4 digits.
  3. Use number button on the remote to enter your new password and then press "↵" key to confirm your password.
- ▶ Change Password:
  1. Press "↵" to input old password.
  2. Use number button to enter current password and then press "↵" to confirm.
  3. Enter new password (4 digits in length) using the number buttons on the remote, then press "↵" to confirm.
  4. Enter new password again and press "↵" to confirm.
- ▶ If the incorrect password is entered 3 times, the projector will automatically shut down.
- ▶ If you have forgotten your password, please contact your local office for support.

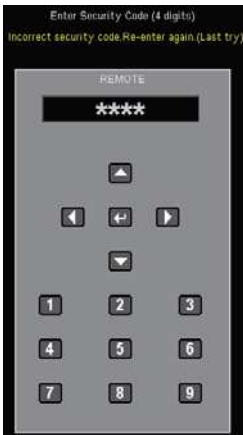

## SETUP



### RS232

- ▶ RS232: Allow RS232 control of an individual projector. (Default setting)
- ▶ Network: Allow projector control via web browser (Internet Explorer) using the network.

 


❖ “Wireless” is only functional with VGA1 connector

⚠ Warning:  
Wired VGA will not function and the projector may be shut down if Wireless is turned on.

### Wireless

Choose the “On” to turn on the Wireless.





## SETUP | Advanced



 
### Logo

Use this function to set the desired startup screen. If changes are made they will take effect the next time the projector is powered on.

- ▶ OPTOMA: The default startup screen.
- ▶ User: Use memorize picture from “Logo Capture” function.

### Logo Capture

Press “←” to immediately capture an image of the picture currently displayed on screen.



❖ “Closed Captioning”:  
on specific models

### Closed Captioning

- ▶ Off: select “off” to turn off the closed captioning feature.
- ▶ CC1: CC1 language: American English.
- ▶ CC2: CC2 language (depending on the TV channel of the user): Spanish, French, Portuguese, German, Danish.

## SETUP | Network



### Network State

Display the network connection status.

### DHCP

Use this function to select your desired startup screen. If you change the setting from one to another, when you exit the OSD menu, the new setting will take effect on next open.

- ▶ On: Assign an IP address to the projector from an external DHCP server automatically.
- ▶ Off: Assign an IP address manually.

### IP Address

Select an IP address.

### Subnet Mask

Select subnet mask number.

### Gateway

Select the default gateway of the network connected to the projector.

### DNS

Select DNS number.


### Apply

Press “↵” and then choose “Yes” to apply the selection.

# User Controls

## How to use web browser to control your projector

1. Turn on DHCP to allow the DHCP server to automatically assign an IP, or manually enter the required network information.

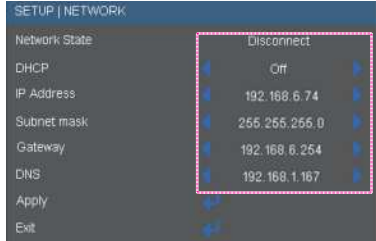

2. Then choose apply and press “↵” button to complete the configuration process.
3. Open your web browser and type in from the OSD LAN screen then the web page will display as below:



❖ When you used the projector IP address, you will can not link to your service server.



4. Open “Control Panel” to control your projector.




**When making a direct connection from your computer to the projector**

Step 1: Find an IP Address (192.168.6.74) from LAN function of projector.




# User Controls


Step 2: Select apply and press “Enter” button to submit function or press “menu” key to exit.

Step 3: To open Network Connections, click **Start**, click **Control Panel**, click **Network and Internet Connections**, and then click **Network Connections**. Click the connection you want to configure, and then, under **Network Tasks** , click **Change settings of this connection**.

Step 4: On the **General** tab, under **This connection uses the following items**, click **Internet Protocol (TCP/IP)**, and then click “Properties.”

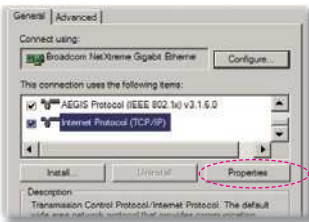


Step 7: The **Local Area Network (LAN) Setting** dialog box appears, In the **Proxy Server** area, cancel the **Use a proxy server for your LAN check box**., then click “OK” button twice.

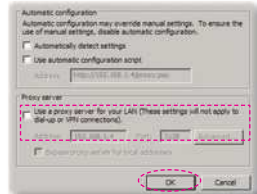

Step 5: Click **Use the following IP address**, and type in as below:


- 1) IP address: 192.168.6.XXX
- 2) Subnet mask: 255.255.0.0
- 3) Default gateway:192.168.6.254

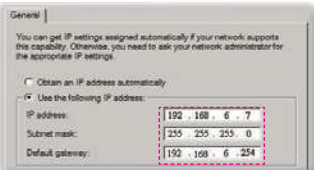

Step 8: Open your IE and type in the IP address of 192.168.6.74 in the URL then press “Enter” key. The web page will display as below:



Step 6: To open Internet Options, click IE web browser, click Internet Options, click the **Connections** tab and click “LAN Settings...”

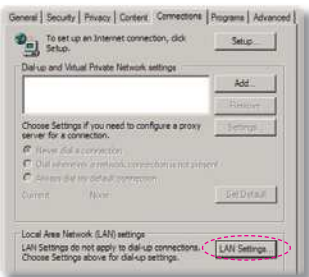

Step 9: Open “Control Panel” to control your projector.



## OPTIONS



### Source Lock

- ▶ On: The projector will only search current input connection.
- ▶ Off: The projector will search for other signals if the current input signal is lost.

### High Altitude

When “On” is selected, the fans will spin faster. This feature is useful in high altitude areas where the air is thin.

### Information Hide

- ▶ On: Choose “On” to hide the info message.
- ▶ Off: Choose “Off” to show the “searching” message.

### Keypad Lock

When the keypad lock function is “On”, the control panel will be locked however, the projector can be operated by the remote control. By selecting “Off”, you will be able to reuse the control panel.

### Background Color

Use this feature to display a “Black”, “Red”, “Blue”, “Green” or “White”, screen when no signal is available.

### Reset

Choose “Yes” to return the display parameters on all menus to the factory default settings.



- ❖ To turn off the keypad lock, press and hold “Enter” key on top of the projector for 5 seconds.

## OPTIONS | Advanced



### Direct Power On

Choose “On” to activate Direct Power mode. The projector will automatically power on when AC power is supplied, without pressing the “**⏻**” key on the projector control panel or on the remote control.

### Auto Power Off (min)

Sets the countdown timer interval. The countdown timer will start, when there is no signal being sent to the projector. The projector will automatically power off when the countdown has finished (in minutes).

### Sleep Timer (min)

Sets the countdown timer interval. The countdown timer will start, with or without a signal being sent to the projector. The projector will automatically power off when the countdown has finished (in minutes).



❖ This disables VGA out and RJ-45 control when the projector is in Power Mode (Standby) as Eco..

### Power Mode (Standby)

- ▶ Eco.: Choose “Eco.” to save power dissipation further < 1W.
- ▶ Active: Choose “Active” to return to normal standby and the VGA out port will be enabled.

## OPTIONS | Lamp Settings



### Lamp Hours

Display the projection time.

### Lamp Reminder

Choose this function to show or to hide the warning message when the changing lamp message is displayed.

The message will appear 30 hours before suggested replacement of lamp.



❖ When ambient temperature is over 35°C in operating, the projector will switch to STD automatically.

### Brightness Mode

- ▶ STD: Choose “STD” to dim the projector lamp which will lower power consumption and extend the lamp life.
- ▶ BRIGHT: Choose “BRIGHT” to increase the brightness.

### Lamp Reset

Reset the lamp hour counter after replacing the lamp.

## Troubleshooting

*If you experience a problem with your projector, please refer to the following information. If a problem persists, please contact your local reseller or service center.*

### **?** No image appears on-screen

- ▶ Ensure all the cables and power connections are correctly and securely connected as described in the “Installation” section.
- ▶ Ensure all the pins of connectors are not bent or broken.
- ▶ Check if the projection lamp has been securely installed. Please refer to the “Replacing the lamp” section.
- ▶ Make sure you have removed the lens cap and the projector is switched on.
- ▶ Ensure that the “AV mute” feature is not turned on.

### **?** Partial, scrolling or incorrectly displayed image

- ▶ Press “Re-SYNC” on the remote.
- ▶ If you are using a PC:

For Windows 95, 98, 2000, XP:

1. Open the “My Computer” icon, the “Control Panel” folder, and then double click on the “Display” icon.
2. Select the “Settings” tab.
3. Verify that your display resolution setting is lower than or equal to UXGA (1600 × 1200).
4. Click on the “Advanced Properties” button.

If the projector is still not projecting the whole image, you will also need to change the monitor display you are using. Refer to the following steps.

5. Verify the resolution setting is lower than or equal to UXGA (1600 × 1200).
6. Select the “Change” button under the “Monitor” tab.



# Appendices

7. Click on “Show all devices”. Next, select “Standard monitor types” under the SP box; choose the resolution mode you need under the “Models” box.
  8. Verify that the resolution setting of the monitor display is lower than or equal to UXGA (1600 × 1200).
- ▶ If you are using a Notebook:
1. First, follow the steps above to adjust resolution of the computer.
  2. Press the appropriate keys listed below for your notebook manufacturer to send signal out from notebook to projector.  
Example: [Fn]+[F4]

|           |           |              |           |
|-----------|-----------|--------------|-----------|
| Acer ⇨    | [Fn]+[F5] | IBM/Lenovo ⇨ | [Fn]+[F7] |
| Asus ⇨    | [Fn]+[F8] | HP/Compaq ⇨  | [Fn]+[F4] |
| Dell ⇨    | [Fn]+[F8] | NEC ⇨        | [Fn]+[F3] |
| Gateway ⇨ | [Fn]+[F4] | Toshiba ⇨    | [Fn]+[F5] |

Mac Apple:

System Preference ⇨ Display ⇨ Arrangement ⇨ Mirror display

- ▶ If you experience difficulty changing resolutions or your monitor freezes, restart all equipment including the projector.

**[?]** The screen of the Notebook or PowerBook computer is not displaying your presentation

▶ If you are using a Notebook PC

Some Notebook PCs may deactivate their own screens when a second display device is in use. Each has a different way to be reactivated. Refer to your computer’s manual for detailed information.

**[?]** Image is unstable or flickering

- ▶ Use “Phase” to correct it. See page 37 for more information.  
▶ Change the monitor color setting on your computer.

**[?]** Image has vertical flickering bar

- ▶ Use “Frequency” to make an adjustment. See page 37 for more information.  
▶ Check and reconfigure the display mode of your graphic card to make it compatible with the projector.

## **[?]** Image is out of focus

- ▶ Make sure the lens cap is removed.
- ▶ Adjust the Focus Ring on the projector lens.
- ▶ Make sure the projection screen is between the required distance. See page 17.

 

## **[?]** The image is stretched when displaying 16:9 DVD title

- ▶ When you play anamorphic DVD or 16:9 DVD, the projector will show the best image when the projector display mode is set to 16:9 in the OSD.
- ▶ If you play 4:3 format DVD titles, please change the format to 4:3 in the projector OSD.
- ▶ If the image is still stretched, you will also need to adjust the aspect ratio by referring to the following:
- ▶ Please setup the display format as 16:9 (wide) aspect ratio type on your DVD player.

## **[?]** Image is too small or too large

- ▶ Adjust the Zoom Ring on the top of the projector.
- ▶ Move the projector closer to or further from the screen.
- ▶ Press “Menu” button on the remote control or projector panel, go to “Display → Format” and try the different settings.

## **[?]** Image has slanted sides

- ▶ If possible, reposition the projector so that it is horizontally centered on the screen and below the bottom of the screen.
- ▶ Press “Keystone +/-” button on the remote control or press “ / ” on the projector panel, until the sides are vertical.



❖ Use of Keystone is not recommended.

## **[?]** Image is reversed

- ▶ Select “SETUP → Projection” from the OSD and adjust the projection direction.

## **[?]** The projector stops responding to all controls

- ▶ If possible, turn off the projector, then unplug the power cord and wait at least 60 seconds before reconnecting power.
- ▶ Check that “Keypad Lock” is not activated by trying to control the projector with the remote control.

## **[?]** Lamp burns out or makes a popping sound

- ▶ When the lamp reaches its end of life, it will burn out and may make a loud popping sound. If this happens, the projector will not turn on until the lamp module has been replaced. To replace the lamp, follow the procedures in the “Replacing the Lamp” section on pages 53-54.

## Projector Status Indication

### **[?]** LED lighting message

| Message                             | ON/STANDBY LED | Temp-LED | Lamp-LED |
|-------------------------------------|----------------|----------|----------|
|                                     | (Green/Amber)  | (Red)    | (Red)    |
| Standby State<br>(Input power cord) | Amber          | ○        | ○        |
| Power on (Warming)                  | Flashing Green | ○        | ○        |
| Lamp lighting                       | Green          | ○        | ○        |
| Power off (Cooling)                 | Flashing Green | ○        | ○        |
| Error (Over Temp.)                  | Flashing Amber | ☀        | ○        |
| Error (Fan fail)                    | Flashing Amber | Flashing | ○        |
| Error (Lamp fail)                   | Flashing Amber | ○        | ☀        |



Steady light ⇔ ☀


No light ⇔ ○

\* ON/STANDBY LED be ON when OSD appears, be OFF when OSD disappears.

# Appendices

## **[?]** On Screen Messages


### ▶ Temperature warning:

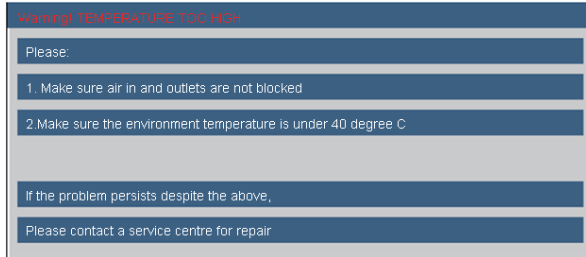

### ▶ Fan failed:


 
### ▶ Lamp warning:



### ▶ Out of display range:



 
## Remote Control

### **[?]** If the remote control does not work


- ▶ Check the operating angle of the remote control is within  $\pm 15^\circ$  both horizontally and vertically of one of the IR receivers on the projector.
- ▶ Make sure there are not any obstructions between the remote control and the projector. Move to within 7 m ( $\pm 0^\circ$ ) of the projector.
- ▶ Make sure the batteries are inserted correctly.
- ▶ Replace batteries if they are exhausted.




## Replacing the lamp

The projector automatically detects the lamp life. When the lamp life is nearing the end of use, you will receive a warning message.

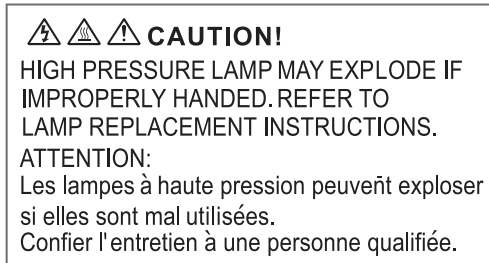

When you see this message, please contact your local reseller or service center to change the lamp as soon as possible. Make sure the projector has been cooled down for at least 30 minutes before changing the lamp.




-  Warning: If ceiling mounted, please use caution when opening the lamp access panel. It is recommended to wear safety glasses if changing the bulb when ceiling mounted. "Caution must be used to prevent any loose parts from falling out of projector."
-  Warning: Lamp compartment may be hot! Allow it to cool down before changing the lamp!
-  Warning: To reduce the risk of personal injury, do not drop the lamp module or touch the lamp bulb. The bulb may shatter and cause injury if it is dropped.


# Appendices



- ❖ The screws on the lamp cover and the lamp cannot be removed.
- ❖ The projector cannot be turned on if the lamp cover has not been placed back on the projector.
- ❖ Do not touch the glass area of the lamp. Hand oil can cause the lamp to shatter. Use a dry cloth to clean the lamp module if it was accidentally touched.

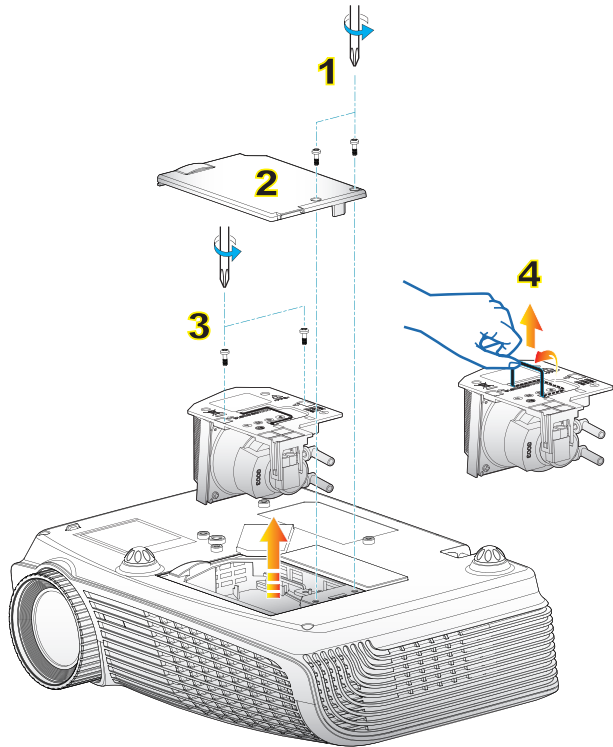

## Lamp Replacement Procedure:

1. Switch off the power to the projector by pressing the “” button.
  2. Allow the projector to cool down for at least 30 minutes.
  3. Disconnect the power cord.
  4. Unscrew the two screws on the cover. **1**
  5. Lift up and remove the cover. **2**
  6. Unscrew the two screws on the lamp module. **3**
  7. Lift up the lamp handle and remove the lamp module slowly and carefully. **4**
- To replace the lamp module, reverse the previous steps.
8. Turn on the projector and use “Lamp Reset” after the lamp module is replaced.
- Lamp Reset: (i) Press “Menu” → (ii) Select “OPTIONS” → (iii) Select “Lamp Settings” → (iv) Select “Lamp Reset” → (v) Select “Yes”.

## Compatibility Modes

### ► Computer Compatibility

| Mode  | Resolution  | V-Sync (Hz) |         | H-Sync (KHz) |         |
|-------|-------------|-------------|---------|--------------|---------|
|       |             | Anglog      | Digital | Anglog       | Digital |
| VGA   | 640 × 350   | 70          | 70      | 31.50        | 31.50   |
| VGA   | 640 × 350   | 85          | 85      | 37.90        | 37.90   |
| VGA   | 640 × 400   | 85          | 85      | 37.90        | 37.90   |
| VGA   | 640 × 480   | 60          | 60      | 31.50        | 31.50   |
| VGA   | 640 × 480   | 72          | 72      | 37.90        | 37.90   |
| VGA   | 640 × 480   | 75          | 75      | 37.50        | 37.50   |
| VGA   | 640 × 480   | 85          | 85      | 43.30        | 43.30   |
| VGA   | 720 × 400   | 70          | 70      | 31.50        | 31.50   |
| VGA   | 720 × 400   | 85          | 85      | 37.90        | 37.90   |
| SVGA  | 800 × 600   | 56          | 56      | 35.20        | 35.20   |
| SVGA  | 800 × 600   | 60          | 60      | 37.90        | 37.90   |
| SVGA  | 800 × 600   | 72          | 72      | 48.10        | 48.10   |
| SVGA  | 800 × 600   | 75          | 75      | 46.90        | 46.90   |
| SVGA  | 800 × 600   | 85          | 85      | 53.70        | 53.70   |
| XGA   | 1024 × 768  | 60          | 60      | 48.40        | 48.40   |
| XGA   | 1024 × 768  | 70          | 70      | 56.50        | 56.50   |
| XGA   | 1024 × 768  | 75          | 75      | 60.00        | 60.00   |
| XGA   | 1024 × 768  | 85          | 85      | 68.70        | 68.70   |
| WXGA  | 1280 × 768  | 60          | 60      | 47.80        | 47.80   |
| WXGA  | 1280 × 768  | 75          | -       | 60.30        | -       |
| WXGA  | 1280 × 720  | 60          | 60      | 45.00        | -       |
| WXGA  | 1280 × 800  | 60          | 60      | 49.68        | 49.64   |
| SXGA  | 1152 × 864  | 60          | 60      | 53.50        | 53.50   |
| SXGA  | 1152 × 864  | 70          | -       | 63.80        | 63.80   |
| SXGA  | 1152 × 864  | 75          | -       | 67.50        | 67.50   |
| SXGA  | 1152 × 864  | 85          | -       | 77.10        | 77.10   |
| SXGA  | 1280 × 1024 | 60          | 60      | 63.98        | 63.98   |
| SXGA  | 1280 × 1024 | 75          | -       | 79.98        | 79.98   |
| SXGA  | 1280 × 1024 | 85          | -       | 91.10        | 91.10   |
| SXGA  | 1280 × 960  | 60          | -       | 60.00        | -       |
| SXGA+ | 1400 × 1050 | 60          | 60      | 63.98        | 63.98   |
| UXGA  | 1600 × 1200 | 60          | 60      | 75.00        | 75.00   |



❖ For widescreen resolution (WXGA), the compatibility support is dependent on Notebook/PC models.

# Appendices

## ▶ Computer Compatibility

| Mode       | Resolution | V-Sync (Hz) | H-Sync (KHz) |
|------------|------------|-------------|--------------|
| MAC LC 13" | 640 × 480  | 66.66       | 34.98        |
| MAC II 13" | 640 × 480  | 66.68       | 35.00        |
| MAC 16"    | 832 × 624  | 74.55       | 49.73        |
| MAC 19"    | 1024 × 768 | 75          | 60.24        |
| MAC        | 1152 × 870 | 75.06       | 68.68        |
| MAC G4     | 640 × 480  | 60          | 31.35        |
| i MAC DV   | 1024 × 768 | 75          | 60.00        |
| i MAC DV   | 1152 × 870 | 75          | 68.49        |
| i MAC DV   | 1280 × 960 | 75          | 75.00        |


## ▶ Video Compatibility

|           |   |
|-----------|---|
| NTSC      | M (3.58MHz), 4.43 MHz                             |
| PAL       | B, D, G, H, I, M, N                               |
| SECAM     | B, D, G, K, K1, L                                 |
| SDTV/HDTV | 480i/p, 576i/p, 720p@50Hz/60Hz, 1080i/p@50Hz/60Hz |



## RS232 Commands and Protocol Function List

### RS232 Pin Assignments

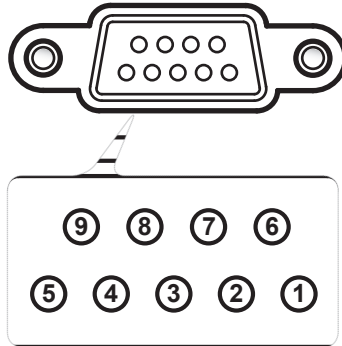

| Pin no. | Spec.<br>(from projector side) |
|---------|--------------------------------|
| 1       | N/A                            |
| 2       | RXD                            |
| 3       | TXD                            |
| 4       | N/A                            |
| 5       | GND                            |
| 6       | N/A                            |
| 7       | N/A                            |
| 8       | N/A                            |
| 9       | N/A                            |

# Appendices

## RS232 Protocol Function List

Baud Rate : 9600  
 Data Bits : 8  
 Parity : None  
 Stop Bits : 1  
 Flow Control : None  
 UART16550 FIFO: Disable  
 Projector Return (Pass): P  
 Projector Return (Fail): F

Note : There is a <CR> after all ASCII commands  
 0D is the HEX code for <CR> in ASCII code

XX=01-99, projector's ID, XX=00 is for all projectors

### SEND to projector

| 232 ASCII Code | HEX Code                     | Function               | Description  |
|----------------|------------------------------|------------------------|--|
| ~XX00 1        | 7E 30 30 30 30 20 31 0D      | Power ON               |  |
| ~XX00 0        | 7E 30 30 30 30 20 30 0D      | Power OFF              | (0/2 for backward compatible)                              |
| ~XX00 1 ~nnnn  | 7E 30 30 30 30 20 31 20 a 0D | Power ON with Password | ~nnnn = ~0000 (a=7E 30 30 30 30) - ~9999(a=7E 39 39 39 39) |
| ~XX01 1        | 7E 30 30 30 31 20 31 0D      | Resync                 |  |
| ~XX02 1        | 7E 30 30 30 32 20 31 0D      | AV Mute                | On   |
| ~XX02 0        | 7E 30 30 30 32 20 30 0D      |                        | Off (0/2 for backward compatible)                          |
| ~XX03 1        | 7E 30 30 30 33 20 31 0D      | Mute                   | On   |
| ~XX03 0        | 7E 30 30 30 33 20 30 0D      |                        | Off (0/2 for backward compatible)                          |
| ~XX04 1        | 7E 30 30 30 34 20 31 0D      | Freeze                 |  |
| ~XX04 0        | 7E 30 30 30 34 20 30 0D      | Unfreeze               | (0/2 for backward compatible)                              |
| ~XX05 1        | 7E 30 30 30 35 20 31 0D      | Zoom Plus              |  |
| ~XX06 1        | 7E 30 30 30 36 20 31 0D      | Zoom Minus             |  |
| ~XX07 1        | 7E 30 30 30 37 20 31 0D      | Up (Pan under zoom)    |  |
| ~XX08 1        | 7E 30 30 30 38 20 31 0D      | Down (Pan under zoom)  |  |
| ~XX09 1        | 7E 30 30 30 39 20 31 0D      | Left (Pan under zoom)  |  |
| ~XX10 1        | 7E 30 30 31 30 20 31 0D      | Right (Pan under zoom) |  |
| ~XX12 1        | 7E 30 30 31 32 20 31 0D      | Direct Source Commands | HDMI   |
| ~XX12 5        | 7E 30 30 31 32 20 35 0D      |                        | VGA 1  |
| ~XX12 6        | 7E 30 30 31 32 20 36 0D      |                        | VGA 2  |
| ~XX12 8        | 7E 30 30 31 32 20 38 0D      |                        | VGA 1 Component  |
| ~XX12 9        | 7E 30 30 31 32 20 39 0D      |                        | S-Video  |
| ~XX12 10       | 7E 30 30 31 32 20 31 30 0D   |                        | Video  |
| ~XX12 12       | 7E 30 30 31 32 20 31 33 0D   |                        | VGA 2 SCART  |
| ~XX12 13       | 7E 30 30 31 32 20 31 33 0D   |                        | VGA 2 Component  |
| ~XX20 1        | 7E 30 30 32 30 20 31 0D      | Display Mode           | Presentation   |
| ~XX20 2        | 7E 30 30 32 30 20 32 0D      |                        | Bright   |
| ~XX20 3        | 7E 30 30 32 30 20 33 0D      |                        | Movie  |
| ~XX20 4        | 7E 30 30 32 30 20 34 0D      |                        | sRGB   |
| ~XX20 5        | 7E 30 30 32 30 20 35 0D      |                        | User1  |
| ~XX20 6        | 7E 30 30 32 30 20 36 0D      |                        | User2  |
| ~XX20 7        | 7E 30 30 32 30 20 37 0D      |                        | Blackboard   |
| ~XX20 8        | 7E 30 30 32 30 20 38 0D      |                        | Classroom  |
| ~XX21 n        | 7E 30 30 32 31 20 a 0D       | Brightness             | n = 0 (a=30) ~ 100 (a=31 30 30)                            |
| ~XX22 n        | 7E 30 30 32 32 20 a 0D       | Contrast               | n = 0 (a=30) ~ 100 (a=31 30 30)                            |
| ~XX23 n        | 7E 30 30 32 33 20 a 0D       | Sharpness              | n = 0 (a=30) ~ 31 (a=33 31)                                |
| ~XX24 n        | 7E 30 30 32 34 20 a 0D       | Color Settings         | Red Gain n = -50 (a=2D 35 30) ~ 50 (a=35 30)               |
| ~XX25 n        | 7E 30 30 32 35 20 a 0D       |                        | Green Gain n = -50 (a=2D 35 30) ~ 50 (a=35 30)             |
| ~XX26 n        | 7E 30 30 32 36 20 a 0D       |                        | Blue Gain n = -50 (a=2D 35 30) ~ 50 (a=35 30)              |
| ~XX27 n        | 7E 30 30 32 37 20 a 0D       |                        | Red Bias n = -50 (a=2D 35 30) ~ 50 (a=35 30)               |
| ~XX28 n        | 7E 30 30 32 38 20 a 0D       |                        | Green Bias n = -50 (a=2D 35 30) ~ 50 (a=35 30)             |
| ~XX29 n        | 7E 30 30 32 39 20 a 0D       |                        | Blue Bias n = -50 (a=2D 35 30) ~ 50 (a=35 30)              |
| ~XX30 n        | 7E 30 30 33 30 20 a 0D       |                        | Cyan n = -50 (a=2D 35 30) ~ 50 (a=35 30)                   |
| ~XX31 n        | 7E 30 30 33 31 20 a 0D       |                        | Yellow n = -50 (a=2D 35 30) ~ 50 (a=35 30)                 |
| ~XX32 n        | 7E 30 30 33 32 20 a 0D       |                        | Magenta n = -50 (a=2D 35 30) ~ 50 (a=35 30)                |
| ~XX33 1        | 7E 30 30 33 33 20 31 0D      |                        | Reset  |
| ~XX34 n        | 7E 30 30 33 34 20 a 0D       | BrilliantColor™        | n = 0 (a=30) ~ 10 (a=31 30)                                |
| ~XX35 1        | 7E 30 30 33 35 20 31 0D      | Degamma                | Film   |
| ~XX35 2        | 7E 30 30 33 35 20 32 0D      |                        | Video  |
| ~XX35 3        | 7E 30 30 33 35 20 33 0D      |                        | Graphics   |
| ~XX35 4        | 7E 30 30 33 35 20 34 0D      |                        | PC   |
| ~XX36 1        | 7E 30 30 33 36 20 31 0D      | Color Temp.            | Warm   |
| ~XX36 2        | 7E 30 30 33 36 20 32 0D      |                        | Medium   |
| ~XX36 3        | 7E 30 30 33 36 20 33 0D      |                        | Cold   |
| ~XX37 1        | 7E 30 30 33 37 20 31 0D      | Color Space            | Auto   |
| ~XX37 2        | 7E 30 30 33 37 20 32 0D      |                        | RGB  |
| ~XX37 3        | 7E 30 30 33 37 20 33 0D      |                        | YUV  |

# Appendices

|          |                            |                    |                                   |   |
|----------|----------------------------|--------------------|-----------------------------------|---|
| -XX44 n  | 7E 30 30 34 34 20 a 0D     | Color (Saturation) |                                   | n = 0 (a=30) ~ 100 (a=31 30 30)   |
| -XX45 n  | 7E 30 30 34 35 20 a 0D     | Tint               |                                   | n = 0 (a=30) ~ 100 (a=31 30 30)   |
| -XX60 1  | 7E 30 30 36 30 20 31 0D    | Format             | 4:3                               |   |
| -XX60 2  | 7E 30 30 36 30 20 32 0D    |                    | 16:9-I                            |   |
| -XX60 3  | 7E 30 30 36 30 20 33 0D    |                    | 16:9-II                           |   |
| -XX60 6  | 7E 30 30 36 30 20 36 0D    |                    | Native                            |   |
| -XX60 7  | 7E 30 30 36 30 20 37 0D    |                    | Auto                              |   |
| -XX61 n  | 7E 30 30 36 31 20 a 0D     | Overscan           |                                   | n = 0 (a=30) ~ 10 (a=31 30)   |
| -XX62 n  | 7E 30 30 36 32 20 a 0D     | Zoom               |                                   | n = -5 (a=2D 35) ~ 25 (a=32 35)   |
| -XX63 n  | 7E 30 30 36 35 20 a 0D     | H Image Shift      |                                   | n = -50 (a=2D 35 30) ~ +50 (a=35 30)  |
| -XX64 n  | 7E 30 30 36 34 20 a 0D     | V Image Shift      |                                   | n = -50 (a=2D 35 30) ~ +50 (a=35 30)  |
| -XX66 n  | 7E 30 30 36 36 20 a 0D     | V Keystone         |                                   | n = -40 (a=2D 34 30) ~ 40 (a=34 30)   |
| -XX69 1  | 7E 30 30 36 39 20 31 0D    | Auto Keystone      | On                                | Dependent upon model  |
| -XX69 0  | 7E 30 30 36 39 20 30 0D    |                    | Off                               | Dependent upon model  |
| -XX70 1  | 7E 30 30 37 30 20 31 0D    | Language           | English                           |   |
| -XX70 2  | 7E 30 30 37 30 20 32 0D    |                    | German                            |   |
| -XX70 3  | 7E 30 30 37 30 20 33 0D    |                    | French                            |   |
| -XX70 4  | 7E 30 30 37 30 20 34 0D    |                    | Italian                           |   |
| -XX70 5  | 7E 30 30 37 30 20 35 0D    |                    | Spanish                           |   |
| -XX70 6  | 7E 30 30 37 30 20 36 0D    |                    | Portuguese                        |   |
| -XX70 7  | 7E 30 30 37 30 20 37 0D    |                    | Polish                            |   |
| -XX70 8  | 7E 30 30 37 30 20 38 0D    |                    | Dutch                             |   |
| -XX70 9  | 7E 30 30 37 30 20 39 0D    |                    | Swedish                           |   |
| -XX70 10 | 7E 30 30 37 30 20 31 30 0D |                    | Norwegian/Danish                  |   |
| -XX70 11 | 7E 30 30 37 30 20 31 31 0D |                    | Finnish                           |   |
| -XX70 12 | 7E 30 30 37 30 20 31 32 0D |                    | Greek                             |   |
| -XX70 13 | 7E 30 30 37 30 20 31 33 0D |                    | Traditional Chinese               |   |
| -XX70 14 | 7E 30 30 37 30 20 31 34 0D |                    | Simplified Chinese                |   |
| -XX70 15 | 7E 30 30 37 30 20 31 35 0D |                    | Japanese                          |   |
| -XX70 16 | 7E 30 30 37 30 20 31 36 0D |                    | Korean                            |   |
| -XX70 17 | 7E 30 30 37 30 20 31 37 0D |                    | Russian                           |   |
| -XX70 18 | 7E 30 30 37 30 20 31 38 0D |                    | Hungarian                         |   |
| -XX70 19 | 7E 30 30 37 30 20 31 39 0D |                    | Czechoslovak                      |   |
| -XX70 20 | 7E 30 30 37 30 20 32 30 0D |                    | Arabic                            |   |
| -XX70 21 | 7E 30 30 37 30 20 32 31 0D |                    | Thai                              |   |
| -XX70 22 | 7E 30 30 37 30 20 32 32 0D |                    | Turkish                           |   |
| -XX70 23 | 7E 30 30 37 30 20 32 33 0D |                    | Farsi                             |   |
| -XX71 1  | 7E 30 30 37 31 20 31 0D    | Projection         | Front-Desktop                     |   |
| -XX71 2  | 7E 30 30 37 31 20 32 0D    |                    | Rear-Desktop                      |   |
| -XX71 3  | 7E 30 30 37 31 20 33 0D    |                    | Front-Ceiling                     |   |
| -XX71 4  | 7E 30 30 37 31 20 34 0D    |                    | Rear-Ceiling                      |   |
| -XX72 1  | 7E 30 30 37 32 20 31 0D    | Menu Location      | Top Left                          |   |
| -XX72 2  | 7E 30 30 37 32 20 32 0D    |                    | Top Right                         |   |
| -XX72 3  | 7E 30 30 37 32 20 33 0D    |                    | Centre                            |   |
| -XX72 4  | 7E 30 30 37 32 20 34 0D    |                    | Bottom Left                       |   |
| -XX72 5  | 7E 30 30 37 32 20 35 0D    |                    | Bottom Right                      |   |
| -XX73 n  | 7E 30 30 37 35 20 a 0D     | Signal             | Frequency                         | n = -5 (a=2D 35) ~ 5 (a=35) By signal   |
| -XX74 n  | 7E 30 30 37 34 20 a 0D     |                    | Phase                             | n = 0 (a=30) ~ 31 (a=33 31) By signal   |
| -XX75 n  | 7E 30 30 37 35 20 a 0D     |                    | H. Position                       | n = -5 (a=2D 35) ~ 5 (a=35) By timing   |
| -XX76 n  | 7E 30 30 37 36 20 a 0D     |                    | V. Position                       | n = -5 (a=2D 35) ~ 5 (a=35) By timing   |
| -XX77 n  | 7E 30 30 37 37 20 aabcc 0D | Security           | Security Timer                    | Month/Day/Hour n = mm/dd/hh<br>mm = 00 (aa=30 30) ~ 12 (aa=31 32)<br>dd = 00 (bb=30 30) ~ 30 (bb=33 30)<br>hh = 00 (cc=30 30) ~ 24 (cc=32 34) |
| -XX78 1  | 7E 30 30 37 38 20 31 0D    |                    | Security Settings                 | Enable  |
| -XX78 2  | 7E 30 30 37 38 20 32 0D    |                    |                                   | Disable   |
| -XX79 n  | 7E 30 30 37 39 20 a 0D     | Projector ID       |                                   | n = 00 (a=30 30) ~ 99 (a=39 39)   |
| -XX80 1  | 7E 30 30 38 30 20 31 0D    | Mute               | On                                |   |
| -XX80 0  | 7E 30 30 38 30 20 30 0D    |                    | Off (0/2 for backward compatible) |   |
| -XX81 n  | 7E 30 30 38 31 20 a 0D     | Volume             |                                   | n = 0 (a=30) ~ 10 (a=31 30)   |
| -XX82 1  | 7E 30 30 38 32 20 31 0D    | Logo               | Optoma                            |   |
| -XX82 2  | 7E 30 30 38 32 20 32 0D    |                    | User                              |   |
| -XX83 1  | 7E 30 30 38 33 20 31 0D    | Logo Capture       |                                   |   |
| -XX88 0  | 7E 30 30 38 38 20 30 0D    | Closed Captioning  | Off                               | Only for EX542/EX540  |
| -XX88 1  | 7E 30 30 38 38 20 31 0D    |                    | cc1                               | Only for EX542/EX540  |
| -XX88 2  | 7E 30 30 38 38 20 32 0D    |                    | cc2                               | Only for EX542/EX540  |
| -XX100 1 | 7E 30 30 31 30 30 20 31 0D | Source Lock        | On                                |   |
| -XX100 0 | 7E 30 30 31 30 30 20 30 0D |                    | Off (0/2 for backward compatible) |   |
| -XX100 3 | 7E 30 30 31 30 30 20 33 0D | Next Source        |                                   |   |
| -XX101 1 | 7E 30 30 31 30 31 20 31 0D | High Altitude      | On                                |   |
| -XX101 0 | 7E 30 30 31 30 31 20 30 0D |                    | Off (0/2 for backward compatible) |   |
| -XX102 1 | 7E 30 30 31 30 32 20 31 0D | Information Hide   | On                                |   |
| -XX102 0 | 7E 30 30 31 30 32 20 30 0D |                    | Off (0/2 for backward compatible) |   |
| -XX103 1 | 7E 30 30 31 30 33 20 31 0D | Keypad Lock        | On                                |   |
| -XX103 0 | 7E 30 30 31 30 33 20 30 0D |                    | Off (0/2 for backward compatible) |   |

# Appendices

|          |                            |                            |                      |  |
|----------|----------------------------|----------------------------|----------------------|--|
| ~XX104 1 | 7E 30 30 31 30 34 20 31 0D | Background Color           | Blue                 |  |
| ~XX104 2 | 7E 30 30 31 30 34 20 32 0D |                            | Black                |  |
| ~XX104 3 | 7E 30 30 31 30 34 20 33 0D |                            | Red                  |  |
| ~XX104 4 | 7E 30 30 31 30 34 20 34 0D |                            | Green                |  |
| ~XX104 5 | 7E 30 30 31 30 34 20 35 0D |                            | White                |  |
| ~XX105 1 | 7E 30 30 31 30 35 20 31 0D | Advanced                   | Direct Power On      | On                                     |
| ~XX105 0 | 7E 30 30 31 30 35 20 30 0D |                            |                      | Off (0/2 for backward compatible)      |
| ~XX106 n | 7E 30 30 31 30 36 20 a 0D  |                            | Auto Power Off (min) | n = 0 (a=30) ~ 180 (a=31 38 30) step:5 |
| ~XX107 n | 7E 30 30 31 30 37 20 a 0D  |                            | Sleep Timer (min)    | n = 0 (a=30) ~ 995 (a=39 39 39) step:5 |
| ~XX114 1 | 7E 30 30 31 31 34 20 31 0D |                            | Power Mode(Standby)  | Eco.(≤1W)                              |
| ~XX114 0 | 7E 30 30 31 31 34 20 30 0D |                            |                      | Active (0/2 for backward compatible)   |
| ~XX109 1 | 7E 30 30 31 30 39 20 31 0D | Reset                      | Lamp Reminder        | On                                     |
| ~XX109 0 | 7E 30 30 31 30 39 20 30 0D |                            |                      | Off (0/2 for backward compatible)      |
| ~XX110 1 | 7E 30 30 31 31 30 20 31 0D |                            | Brightness Mode      | Bright                                 |
| ~XX110 0 | 7E 30 30 31 31 30 20 30 0D |                            |                      | STD (0/2 for backward compatible)      |
| ~XX111 1 | 7E 30 30 31 31 31 20 31 0D |                            | Lamp Reset           | Yes                                    |
| ~XX111 0 | 7E 30 30 31 31 31 20 30 0D |                            |                      | No (0/2 for backward compatible)       |
| ~XX112 1 | 7E 30 30 31 31 32 20 31 0D |                            |                      | Yes                                    |
| ~XX99 1  | 7E 30 30 39 39 20 31 0D    | RS232 Alert Reset          | Reset System Alert   |  |
| ~XX210 n | 7E 30 30 32 30 20 n 0D     | Display message on the OSD |                      | n: 1-30 characters                     |

## SEND to emulate Remote

|           |                               |                             |
|-----------|-------------------------------|-----------------------------|
| ~XX140 1  | 7E 30 30 31 34 30 20 31 0D    | Power                       |
| ~XX140 3  | 7E 30 30 31 34 30 20 33 0D    | Remote Mouse Up             |
| ~XX140 4  | 7E 30 30 31 34 30 20 34 0D    | Remote Mouse Left           |
| ~XX140 5  | 7E 30 30 31 34 30 20 35 0D    | Remote Mouse Enter          |
| ~XX140 6  | 7E 30 30 31 34 30 20 36 0D    | Remote Mouse Right          |
| ~XX140 7  | 7E 30 30 31 34 30 20 37 0D    | Remote Mouse Down           |
| ~XX140 8  | 7E 30 30 31 34 30 20 38 0D    | Mouse Left Click            |
| ~XX140 9  | 7E 30 30 31 34 30 20 39 0D    | Mouse Right Click           |
| ~XX140 10 | 7E 30 30 31 34 30 20 31 30 0D | Up/Page +                   |
| ~XX140 11 | 7E 30 30 31 34 30 20 31 31 0D | Left/Source                 |
| ~XX140 12 | 7E 30 30 31 34 30 20 31 32 0D | Enter (for projection MENU) |
| ~XX140 13 | 7E 30 30 31 34 30 20 31 33 0D | Right/Re-SYNC               |
| ~XX140 14 | 7E 30 30 31 34 30 20 31 34 0D | Down/Page -                 |
| ~XX140 15 | 7E 30 30 31 34 30 20 31 35 0D | Keystone +                  |
| ~XX140 16 | 7E 30 30 31 34 30 20 31 36 0D | Keystone -                  |
| ~XX140 17 | 7E 30 30 31 34 30 20 31 37 0D | Volume -                    |
| ~XX140 18 | 7E 30 30 31 34 30 20 31 38 0D | Volume +                    |
| ~XX140 19 | 7E 30 30 31 34 30 20 31 39 0D | Brightness (1)              |
| ~XX140 20 | 7E 30 30 31 34 30 20 32 30 0D | Menu (2)                    |
| ~XX140 21 | 7E 30 30 31 34 30 20 32 31 0D | Zoom (3)                    |
| ~XX140 22 | 7E 30 30 31 34 30 20 32 32 0D | HDMI (4)                    |
| ~XX140 23 | 7E 30 30 31 34 30 20 32 33 0D | Freeze (5)                  |
| ~XX140 24 | 7E 30 30 31 34 30 20 32 34 0D | AV Mute (6)                 |
| ~XX140 25 | 7E 30 30 31 34 30 20 32 35 0D | S-Video (7)                 |
| ~XX140 26 | 7E 30 30 31 34 30 20 32 36 0D | VGA1/2 toggle (8)           |
| ~XX140 27 | 7E 30 30 31 34 30 20 32 37 0D | Video (9)                   |

## SEND from projector automatically

| 232 ASCII Code  | HEX Code | Function | Projector Return | Description  |
|---|----------|----------|------------------|--|
| when Standby/Warming/Cooling/Out of Range/Lamp fail/<br>Fan Lock/Over Temperature/Lamp Hours Running Out/Cover Open |          |          | INFOn            | n : 0/1/2/3/4/6/7/8/9 = Standby/Warming/Cooling/Out of Range/Lamp fail/<br>Fan Lock/Over Temperature/Lamp Hours Running Out/Cover Open |

## READ from projector

| 232 ASCII Code | HEX Code                   | Function              | Projector Return | Description  |
|----------------|----------------------------|-----------------------|------------------|--|
| ~XX121 1       | 7E 30 30 31 32 31 20 31 0D | Input Source Commands | OKn              | n : 0/1/2/3/4/5 =<br>None/VGA1/VGA2/S-Video/Video/HDMI   |
| ~XX122 1       | 7E 30 30 31 32 32 20 31 0D | Software Version      | OKdddd           | dddd: FW version   |
| ~XX123 1       | 7E 30 30 31 32 33 20 31 0D | Display Mode          | OKn              | n : 0/1/2/3/4/5/6/7/8 = None/Presentation/Bright/Movie/sRGB/User1/User2/<br>Blackboard/Classroom   |
| ~XX124 1       | 7E 30 30 31 32 34 20 31 0D | Power State           | OKn              | n : 0/1 = Off/On   |
| ~XX125 1       | 7E 30 30 31 32 35 20 31 0D | Brightness            | OKn              |  |
| ~XX126 1       | 7E 30 30 31 32 36 20 31 0D | Contrast              | OKn              |  |
| ~XX127 1       | 7E 30 30 31 32 37 20 31 0D | Aspect Ratio          | OKn              | n : 0/1/2/3/4 = 4:3/16:9-I/16:9-II/Native/AUTO   |
| ~XX128 1       | 7E 30 30 31 32 38 20 31 0D | Color Temperature     | OKn              | n : 0/1/2 = Warm/Medium/Cold   |
| ~XX129 1       | 7E 30 30 31 32 39 20 31 0D | Projection Mode       | OKn              | n : 0/1/2/3 = Front-Desktop/ Rear-Desktop/ Front-Ceiling/ Rear-Ceiling   |
| ~XX150 1       | 7E 30 30 31 35 30 20 31 0D | Information           | OKabbbbccddddd   | a : 0/1 = Off/On<br>bbbb: LampHour<br>cc: source 00/01/02/03/04/05 = None/VGA1/VGA2/S-Video/Video/HDMI<br>dddd: FW version<br>e : Display mode 0/1/2/3/4/5/6/7/8<br>None/Presentation/Bright/Movie/sRGB/User1/User2/<br>Blackboard/Classroom |
| ~XX151 1       | 7E 30 30 31 35 31 20 31 0D | Model name            | OKn              | n:1/2/4/5=EX615, EX542/EX540/EX762   |
| ~XX108 1       | 7E 30 30 31 30 38 20 31 0D | Lamp Hours            | OKbbbb           | bbbb: LampHour   |
| ~XX108 2       | 7E 30 30 31 30 38 20 31 0D | Cumulative Lamp Hours | OKbbbb           | bbbb: (5 digits) Total Lamp Hours  |

## Ceiling Mount Installation

1. To prevent damage to your projector, please use the Optoma ceiling mount.
2. If you wish to use a third party ceiling mount kit, please ensure the screws used to attach a mount to the projector meet the following specifications:
  - ▶ Screw type: M3\*3
  - ▶ Maximum screw length: 10mm
  - ▶ Minimum screw length: 7.5mm





❖ Please note that damage resulting from incorrect installation will invalidate the warranty.



### ⚠ Warning:

1. If you buy a ceiling mount from another company, please be sure to use the correct screw size. Screw size will vary depending on the thickness of the mounting plate.
2. Be sure to keep at least 10 cm gap between the ceiling and the bottom of the projector.
3. Avoid installing the projector near a heat source.

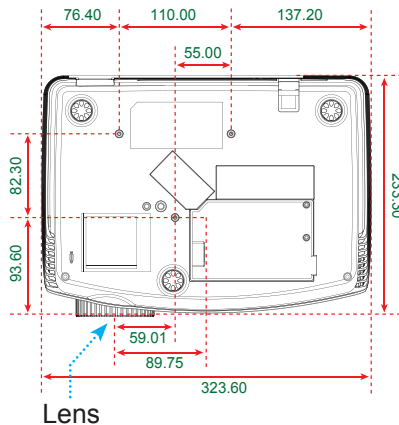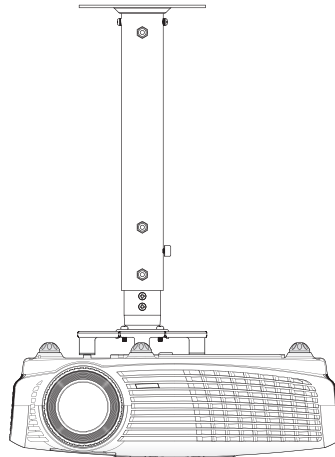

# Appendices

## Optoma Global Offices

*For service or support please contact your local office.*

### USA

715 Sycamore Drive  
Milpitas, CA 95035, USA  
www.optomausa.com

Tel : 408-383-3700  
Fax: 408-383-3702  
Service : [services@optoma.com](mailto:services@optoma.com)

### Canada

5630 Kennedy Road, Mississauga,  
ON, L4Z 2A9, Canada  
www.optoma.ca

Tel : 905-361-2582  
Fax: 905-361-2581  
Service : [canadacsragent@optoma.com](mailto:canadacsragent@optoma.com)

### Europe

42 Caxton Way, The Watford Business Park  
Watford, Hertfordshire,  
WD18 8QZ, UK  
www.optoma.eu  
Service Tel : +44 (0)1923 691865

Tel : +44 (0) 1923 691 800  
Fax: +44 (0) 1923 691 888  
Service : [service@tsc-europe.com](mailto:service@tsc-europe.com)

### France

Bâtiment E  
81-83 avenue Edouard Vaillant  
92100 Boulogne Billancourt, France

Tel : +33 1 41 46 12 20  
Fax: +33 1 41 46 94 35  
Service : [savoptoma@optoma.fr](mailto:savoptoma@optoma.fr)

### Spain

C/ José Hierro,36 Of. 1C  
28529 Rivas VaciaMadrid,  
Spain

Tel : +34 91 499 06 06  
Fax: +34 91 670 08 32

### Deutschland

Werftstrasse 25  
D40549 Düsseldorf,  
Germany

Tel : +49 (0) 211 506 6670  
Fax: +49 (0) 211 506 66799  
Service : [info@optoma.de](mailto:info@optoma.de)

### Scandinavia

Grev Wedels Plass 2  
3015 Drammen  
Norway

Tel : +47 32 26 89 90  
Fax: +47 32 83 78 98  
Service : [info@optoma.no](mailto:info@optoma.no)

### Latin America

715 Sycamore Drive  
Milpitas, CA 95035, USA  
www.optoma.com.br

Tel : 408-383-3700  
Fax: 408-383-3702  
www.optoma.com.mx

## Korea

WOOMI TECH.CO.,LTD.

4F,Minu Bldg,33-14, Kangnam-Ku,  
seoul,135-815, KOREA

Tel : +82+2+34430004

Fax: +82+2+34430005

## Japan

東京都足立区綾瀬3-25-18

株式会社オーエスエム

サポートセンター:0120-46-5040

E-mail : [info@osscreen.com](mailto:info@osscreen.com)

[www.os-worldwide.com](http://www.os-worldwide.com)

## Taiwan

5F., No. 108, Minchiuan Rd.

Shindian City,

Taipei Taiwan 231, R.O.C.

[www.optoma.com.tw](http://www.optoma.com.tw)

Tel : +886-2-2218-2360

Fax: +886-2-2218-2313

Service : [services@optoma.com.tw](mailto:services@optoma.com.tw)

[asia.optoma.com](http://asia.optoma.com)

## Hong Kong

Unit A, 27/F Dragon Centre,

79 Wing Hong Street,

Cheung Sha Wan,

Kowloon, Hong Kong

Tel : +852-2396-8968

Fax: +852-2370-1222

[www.optoma.com.hk](http://www.optoma.com.hk)

## China

5F, No. 1205, Kaixuan Rd.,

Changning District

Shanghai, 200052, China

Tel : +86-21-62947376

Fax: +86-21-62947375

[www.optoma.com.cn](http://www.optoma.com.cn)

## Regulation & Safety notices

*This appendix lists the general notices of your projector.*

### **FCC notice**

This device has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

### **Notice: Shielded cables**

All connections to other computing devices must be made using shielded cables to maintain compliance with FCC regulations.

### **Caution**

Changes or modifications not expressly approved by the manufacturer could void the user's authority, which is granted by the Federal Communications Commission, to operate this projector.



## ***Operation conditions***

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference and
2. This device must accept any interference received, including interference that may cause undesired operation.

## ***Notice: Canadian users***

This Class B digital apparatus complies with Canadian ICES-003.

## ***Remarque à l'intention des utilisateurs canadiens***

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

## ***Declaration of Conformity for EU countries***

- EMC Directive 2004/108/EC (including amendments)
- Low Voltage Directive 2006/95/EC
- R & TTE Directive 1999/5/EC (if product has RF function)

### **Disposal instructions**



**Do not throw this electronic device into the trash when discarding. To minimize pollution and ensure utmost protection of the global environment, please recycle it.**