

**EPSON**  
EXCEED YOUR VISION

# User's Guide

## Multimedia Projector

**EB-D6250**

**EB-D6155W**

**EB-D6150**



**ProSelecta**

View :: Compare :: Select - [www.ProSelecta.com](http://www.ProSelecta.com)





## Notations Used in This Guide

- **Safety indications**

The documentation and the projector use graphical symbols to show how to use the projector safely. Please understand and respect these caution symbols in order to avoid injury to persons or property.

 <b>Warning</b>	This symbol indicates information that, if ignored, could possibly result in personal injury or even death due to incorrect handling.
 <b>Caution</b>	This symbol indicates information that, if ignored, could possibly result in personal injury or physical damage due to incorrect handling.

- **General information indications**

<b>Attention</b>	Indicates procedures which may result in damage or injury if sufficient care is not taken.
	Indicates additional information and points which may be useful to know regarding a topic.
	Indicates a page where detailed information regarding a topic can be found.
	Indicates that an explanation of the underlined word or words in front of this symbol appears in the glossary of terms. See the "Glossary" section of the "Appendix".  "Glossary" <a href="#">p.136</a>
[Name]	Indicates the name of the buttons on the remote control or the control panel. Example: [Esc] button
"(Menu Name)"	Indicates Configuration menu items. Example: Select <b>Brightness</b> from <b>Image</b> . <b>Image - Brightness</b>



## Notations Used in This Guide ..... 2

### Introduction

---

#### Projector Features ..... 7

Usability and Reliability	7
Projection Functions	7
Projecting two images simultaneously (Split Screen)	7
Connecting to a network and projecting images from the computer's screen	7
Easy connection to a computer with Quick Wireless	8
Security Functions	8

#### Part Names and Functions ..... 9

Front/Top	9
Rear	10
Base	11
Control Panel	12
Remote Control	13
Replacing the remote control batteries	15
Remote control operating range	16

### Preparing the Projector

---

#### Installing the Projector ..... 18

Installation Methods	18
How to install	18
Screen Size and Approximate Projection Distance	19

#### Connecting Equipment ..... 20

Connecting a Computer	20
Connecting Image Sources	21
Connecting USB Devices	24
Connecting External Devices	25
Connecting a LAN Cable	26

Installing the Wireless LAN Unit	27
Attaching and Removing the Cable Cover	27
Attaching	27
Removing	28

### Basic Usage

---

#### Projecting Images ..... 30

From Installation to Projection	30
Automatically Detect Input Signals and Change the Projected Image (Source Search)	31
Switching to the Target Image by Remote Control	32

#### Adjusting Projected Images ..... 33

Correcting Keystone Distortion	33
H/V-Keystone	33
Quick Corner	34
Adjusting the Image Size	36
Adjusting the Image Position	36
Correcting the Focus	36
Adjusting the Volume	37
Selecting the Projection Quality (Selecting Color Mode)	37
Setting Auto Iris	38
Changing the Aspect Ratio	39
Changing methods	39
Changing the aspect mode (EB-D6155W only)	39
Changing the aspect mode (EB-D6250/EB-D6150 only)	40

### Useful Functions

---

#### Projection Functions ..... 43

Projecting Two Images Simultaneously (Split Screen)	43
Input sources for Split Screen projection	43
Projecting on a Split Screen	43
Changing the Projected Image	44
Switching the left and right screens	44



- Switching the left and right image sizes . . . . . 45
- Changing the Audio . . . . . 46
- Ending Split Screen . . . . . 47
- Restrictions during Split Screen Projection . . . . . 47
- Hiding the Image and Sound Temporarily (A/V Mute) . . . . . 47
- Freezing the Image (Freeze) . . . . . 48
- Pointer Function (Pointer) . . . . . 48
- Enlarging Part of the Image (E-Zoom) . . . . . 49
- Using the Remote Control to Operate the Mouse Pointer (Wireless Mouse) . . . . . 50
- Setting the ID and Using the Remote Control . . . . . 51
  - Setting the Projector ID . . . . . 52
  - Setting the remote control ID . . . . . 53
- Correcting Color when Projecting from Multiple Projectors . . . . . 53
  - Summary of correction procedure . . . . . 54
  - Correcting . . . . . 54
- Saving a User's Logo . . . . . 55

**Security Functions . . . . . 57**

- Managing Users (Password Protect) . . . . . 57
  - Kinds of Password Protect . . . . . 57
  - Setting Password Protect . . . . . 57
  - Entering the Password . . . . . 58
- Restricting Operation (Control Panel Lock) . . . . . 59
- Anti-Theft Lock . . . . . 60
  - Installing the wire lock . . . . . 60

**Configuration Menu**

**Using the Configuration Menu . . . . . 62**

**List of Functions . . . . . 63**

- Configuration Menu Table . . . . . 63
- Image Menu . . . . . 65
- Signal Menu . . . . . 66
- Settings Menu . . . . . 68
- Extended Menu . . . . . 69
- Network Menu . . . . . 71

- Notes on operating the Network menu . . . . . 71
- Soft keyboard operations . . . . . 72
- Basic menu . . . . . 73
- Wireless LAN menu . . . . . 74
- Security menu . . . . . 75
- Wired LAN Menu . . . . . 77
- Mail menu . . . . . 78
- Others menu . . . . . 78
- Reset Menu . . . . . 79
- Info Menu (Display Only) . . . . . 80
- Reset Menu . . . . . 81

**Troubleshooting**

**Using the Help . . . . . 83**

**Problem Solving . . . . . 84**

- Reading the Indicators . . . . . 84
- When the Indicators Provide No Help . . . . . 88
- Problems Relating to Images . . . . . 89
  - No images appear . . . . . 89
  - Moving images are not displayed (only the moving image portion turns black) . . . . . 89
  - Projection stops automatically . . . . . 90
  - The message "Not supported" is displayed. . . . . 90
  - The message "No Signal" is displayed. . . . . 90
  - Images are fuzzy, out of focus, or distorted . . . . . 91
  - Interference or distortion appear in images . . . . . 91
  - The image is truncated (large) or small, or the aspect is not suitable . . . . . 92
  - Image colors are not right . . . . . 93
  - Images appear dark . . . . . 93
- Problems when Projection Starts . . . . . 94
  - The projector does not turn on . . . . . 94
- Other Problems . . . . . 94
  - No sound can be heard or the sound is faint . . . . . 94
  - The remote control does not work . . . . . 95
  - Nothing appears on the external monitor . . . . . 95

I want to change the language for messages and menus . . . . . 96  
 Mail is not received even if an error occurs with the projector . . . . . 96

**About Event ID . . . . . 97**

**Maintenance**

---

**Cleaning . . . . . 99**

Cleaning the Projector's Surface . . . . . 99  
 Cleaning the Lens Cover Glass . . . . . 99  
 Cleaning the Air Filter . . . . . 99  
     How to clean the air filter . . . . . 99

**Replacing Consumables . . . . . 102**

Replacing the Lamp . . . . . 102  
     Lamp replacement period . . . . . 102  
     How to replace the lamp . . . . . 102  
     Resetting the lamp hours . . . . . 105  
 Replacing the Air Filter . . . . . 105  
     Air filter replacement period . . . . . 105  
     How to replace the air filter . . . . . 106

**Appendix**

---

**Slideshow . . . . . 109**

Projecting Without a Computer (Slideshow) . . . . . 109  
     Specifications for files that can be projected using Slideshow . . . . . 109  
     Slideshow examples . . . . . 109  
     Slideshow operating methods . . . . . 109  
     Projecting the selected image . . . . . 111  
     Projecting image files in a folder in sequence (Slideshow) . . . . . 112  
     Image file display settings and Slideshow operation settings . . . . . 113

**Monitoring and Controlling . . . . . 114**

About EasyMP Monitor . . . . . 114  
 Changing Settings Using a Web Browser (Web Control) . . . . . 114

Projector setup . . . . . 114  
 Displaying the Web Control screen . . . . . 115  
 Displaying the Web Remote screen . . . . . 115  
 Using the Mail Notification Function to Report Problems . . . . . 116  
     Reading Error Notification Mail . . . . . 117  
 Management Using SNMP . . . . . 117  
 ESC/VP21 Commands . . . . . 118  
     Command list . . . . . 118  
     Cable layouts . . . . . 118  
 About PLink . . . . . 119  
 About Crestron RoomView® . . . . . 120  
     Operating a projector from your computer . . . . . 120

**Optional Accessories and Consumables . . . . . 124**

Optional Accessories . . . . . 124  
 Consumables . . . . . 124

**Screen Size and Projection Distance . . . . . 125**

Projection Distance for EB-D6155W . . . . . 125  
 Projection Distance for EB-D6250/EB-D6150 . . . . . 126

**Supported Monitor Displays . . . . . 128**

Supported Resolutions . . . . . 128  
     Computer signals (analog RGB) . . . . . 128  
     Component Video . . . . . 128  
     Composite video . . . . . 128  
     Input signal from the HDMI port . . . . . 128

**Specifications . . . . . 130**

Projector General Specifications . . . . . 130

**Appearance . . . . . 134**

**Glossary . . . . . 136**

**General Notes . . . . . 138**

About Notations . . . . . 138  
 General Notice: . . . . . 138

**Index . . . . . 156**




# Introduction

This chapter explains the projector's features and the part names.

## Usability and Reliability

- Air exhaust vent shutter to prevent dust from entering the projector.

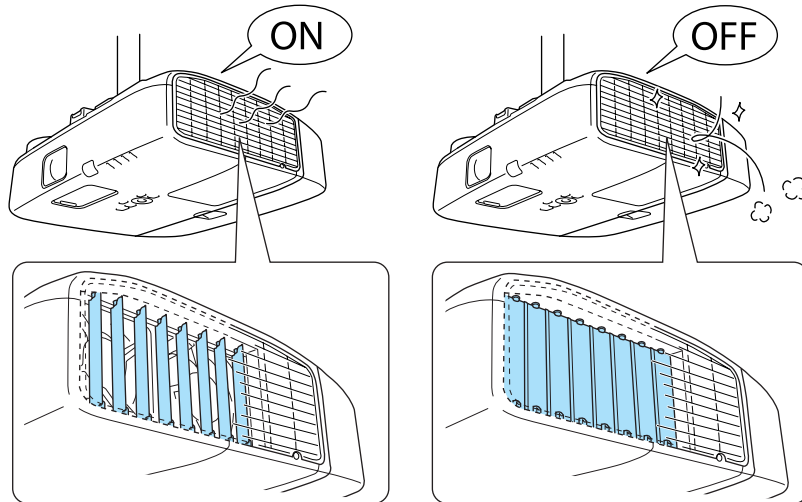

- Large filter to increase dust resistance.
- Built-in function to notify you when it is time to clean the filter.
- Turn the projector on and off by simply plugging in or unplugging.

## Projection Functions

### Projecting two images simultaneously (Split Screen)

You can project two types of image source simultaneously. This increases the range of applications, such as when holding a video conference while projecting presentation materials.

☛ "Projecting Two Images Simultaneously (Split Screen)" [p.43](#)



### Connecting to a network and projecting images from the computer's screen


You can connect the projector to a computer on a network and project the computer's screen using the supplied EasyMP Network Projection (application software).

☛ [EasyMP Network Projection Operation Guide](#)



## Easy connection to a computer with Quick Wireless

By simply connecting the optional Quick Wireless Connection USB Key to a computer, you can connect the projector and the computer using wireless communication and project images from the computer. (Windows computers only)

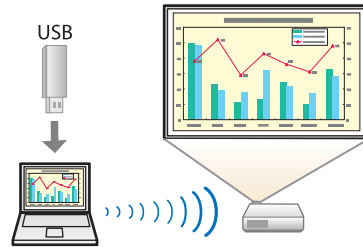


---


## Security Functions

- **Password Protect to restrict and manage users**
  - ☛ "Managing Users (Password Protect)" [p.57](#)
- **Control Panel Lock restricts button operation on the control panel**
  - ☛ "Restricting Operation (Control Panel Lock)" [p.59](#)
- **Equipped with various anti-theft devices**
  - ☛ "Anti-Theft Lock" [p.60](#)




## Front/Top

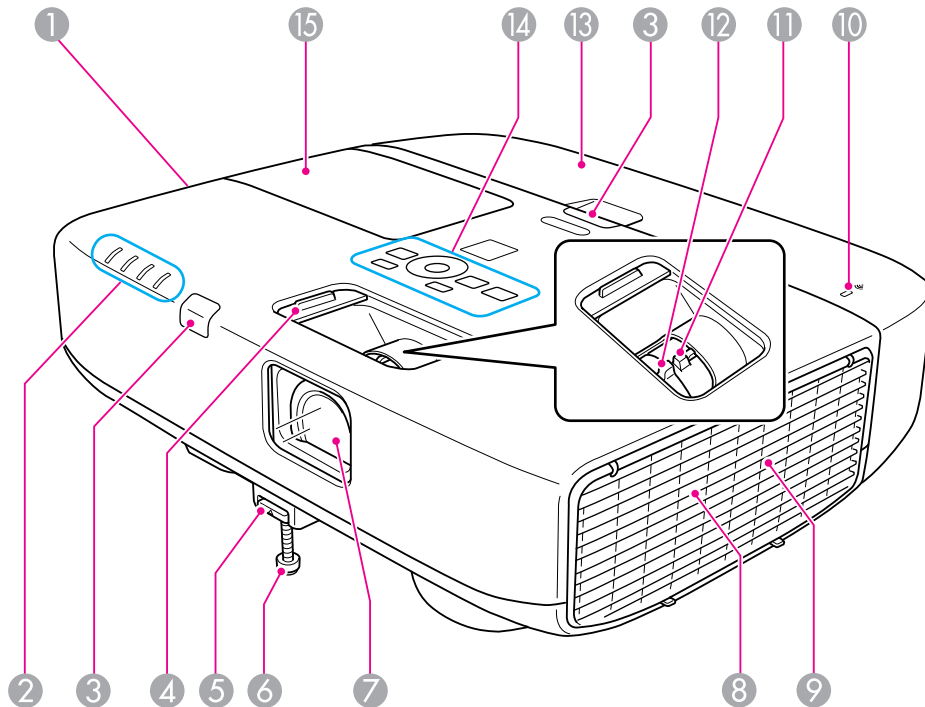

Name	Function
<b>1 Air exhaust vent (Air exhaust vent shutter)</b>	Exhaust vent for air used to cool the projector internally. <div style="border: 1px solid black; padding: 5px; margin-top: 10px;">  <b>Caution</b>                      While projecting, do not put your face or hands near the air exhaust vent, and do not place objects that may become warped or damaged by heat near the vent.                 </div>

Name	Function
<b>2 Indicators</b>	Indicates the projector's status. ☛ "Reading the Indicators" <a href="#">p.84</a>
<b>3 Remote receiver</b>	Receives signals from the remote control.
<b>4 Zoom/Focus ring cover</b>	Only slide this open when operating the zoom ring or the focus ring. This should normally be kept closed to prevent dust from entering the projector.
<b>5 Foot adjust lever</b>	Press the foot lever to extend and retract the front foot. ☛ "Adjusting the Image Position" <a href="#">p.36</a>
<b>6 Front adjustable foot</b>	When setup on a surface such as a desk, extend the foot to adjust the position of the image. ☛ "Adjusting the Image Position" <a href="#">p.36</a>
<b>7 Lens cover glass</b>	Protects the projector's lens.
<b>8 Speaker</b>	Outputs audio.
<b>9 Air intake vent (air filter)</b>	Takes in air to cool the projector internally. ☛ "Cleaning the Air Filter" <a href="#">p.99</a>
<b>10 Wireless LAN indicator</b>	Displays the access status of the optional Wireless LAN unit.
<b>11 Zoom ring</b>	Adjusts the image size. ☛ "Adjusting the Image Size" <a href="#">p.36</a>
<b>12 Focus ring</b>	Adjusts the image focus. ☛ "Correcting the Focus" <a href="#">p.36</a>
<b>13 Cable cover</b>	Cover for the rear interface cable connection section. ☛ "Attaching and Removing the Cable Cover" <a href="#">p.27</a>
<b>14 Control panel</b>	Operates the projector. ☛ "Control Panel" <a href="#">p.12</a>
<b>15 Lamp cover</b>	Open when replacing the projector's lamp. ☛ "Replacing the Lamp" <a href="#">p.102</a>

## Rear

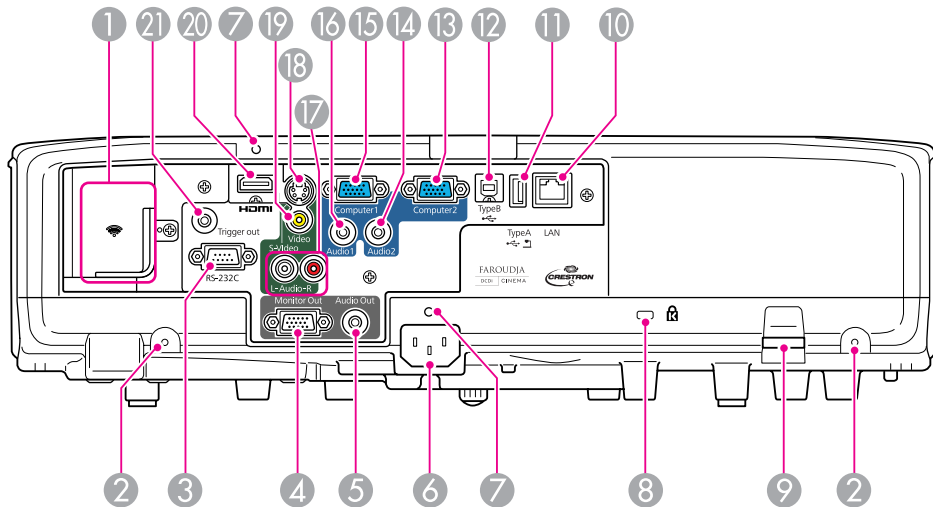


Name	Function
1 <b>Wireless LAN unit installation section</b>	Install the optional Wireless LAN unit here. Remove the stopper when installing. ☛ "Installing the Wireless LAN Unit" p.27
2 <b>Screw holes to fix the cable cover</b>	Screw holes to fix the cable cover in place. ☛ "Attaching and Removing the Cable Cover" p.27
3 <b>RS-232C port</b>	When controlling the projector from a computer, connect it to the computer with an RS-232C cable. This port is for control use and should not normally be used. ☛ "ESC/VP21 Commands" p.118
4 <b>Monitor Out port</b>	Outputs analog RGB signals input from the Computer1 port to an external monitor. You cannot output signals input from other ports or component video signals.
5 <b>Audio Out port</b>	Outputs the sound of the image currently being projected to external speakers.

Name	Function
6 <b>Power inlet</b>	Connects the power cable to the projector. ☛ "From Installation to Projection" p.30
7 <b>Cable Holder</b>	Insert the supplied cable clamp here to prevent the HDMI and power cables from falling out. See the following for more details on the installation procedure. ☛ <i>Quick Start Guide</i>
8 <b>Security slot</b>	The security slot is compatible with the Microsaver Security System manufactured by Kensington. ☛ "Anti-Theft Lock" p.60
9 <b>Security cable installation point</b>	A commercially available theft-prevention wire lock can be passed through the installation point to secure the projector to a desk or pillar. ☛ "Anti-Theft Lock" p.60
10 <b>LAN port</b>	Connects a LAN cable to connect to a network.
11 <b>USB (TypeA) port</b>	<ul style="list-style-type: none"> <li>Connects a USB memory device or a digital camera, and projects images as a Slideshow. ☛ "Projecting Without a Computer (Slideshow)" p.109</li> <li>Connects the optional Document Camera.</li> </ul>
12 <b>USB (TypeB) port</b>	Connects the projector to a computer via the commercially available USB cable to use the Wireless Mouse function. ☛ "Using the Remote Control to Operate the Mouse Pointer (Wireless Mouse)" p.50
13 <b>Computer2 port</b>	For analog RGB signals from a computer and component video signals from other video sources.
14 <b>Audio2 port</b>	Inputs audio from equipment connected to the Computer2 port.
15 <b>Computer1 port</b>	For analog RGB signals from a computer and component video signals from other video sources.


Name	Function
16 <b>Audio1 port</b>	Inputs audio from equipment connected to the Computer1 port.
17 <b>Audio-L/R port</b>	Inputs audio from equipment connected to the S-Video port or the Video port.
18 <b>S-Video port</b>	For S-video signals from video sources.
19 <b>Video port</b>	Inputs composite video signals from video sources.
20 <b>HDMI port</b>	Inputs video signals from HDMI compatible video equipment and computers. This projector is compatible with <a href="#">HDCP</a> signals.
21 <b>Trigger out port</b>	When the projector is turned on, a DC 12 V signal is output from this port. When the projector is turned off, or if it enters an abnormal status, 0 V is output from this port. This informs external devices whether the projector is on or off. To enable trigger output, set <b>Trigger Out</b> from the Configuration menu to <b>On</b> . ☛ <a href="#">Extended - Operation p.69</a>

## Base

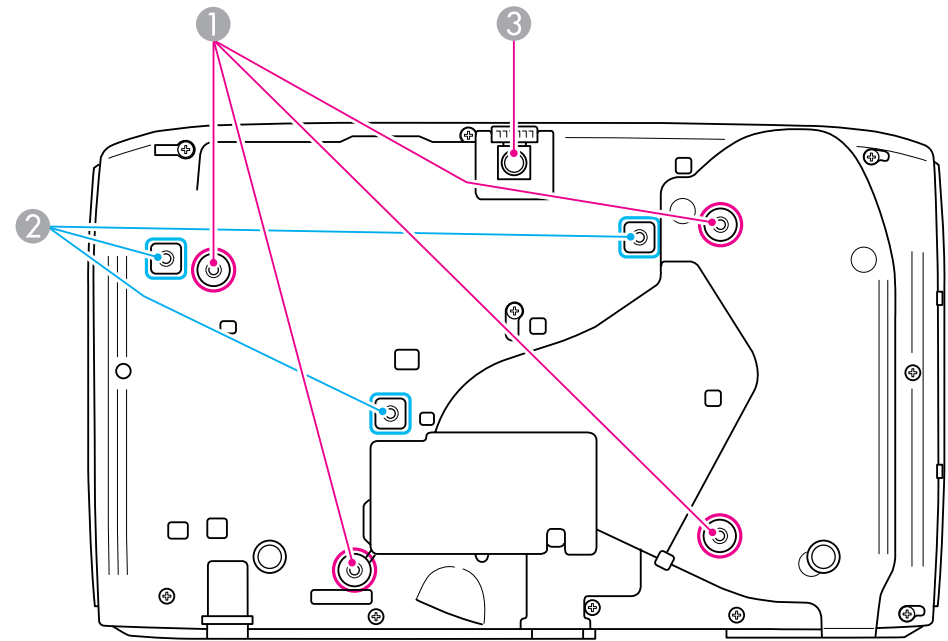

Name	Function
1 <b>Ceiling mount fixing points (For Ceiling mount ELPMB22: four points)</b>	Attach the optional ceiling mount here when suspending the projector from a ceiling. ☛ "Installing the Projector" <a href="#">p.18</a> ☛ "Optional Accessories" <a href="#">p.124</a>
2 <b>Ceiling mount fixing points (For Ceiling mount ELPMB23: three points)</b>	
3 <b>Front adjustable foot</b>	When setup on a surface such as a desk, extend the foot to adjust the position of the image. ☛ "Adjusting the Image Position" <a href="#">p.36</a>


## Control Panel

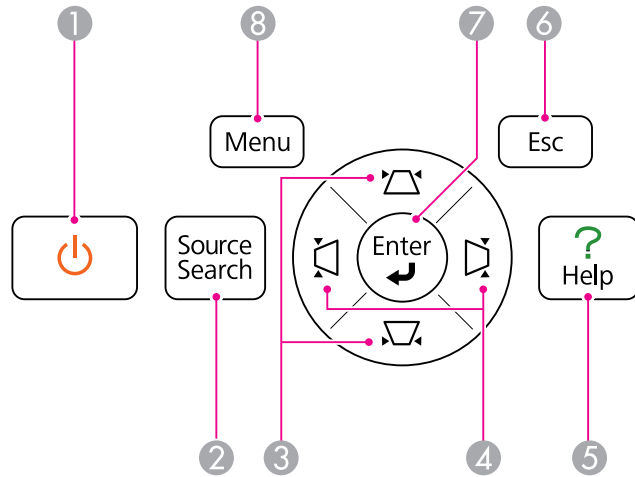


Name	Function
① [⏻] button	Turns the projector power on or off. ☛ "From Installation to Projection" p.30
② [Source Search] button	Switches to the image from the input port where video signals are being input. ☛ "Automatically Detect Input Signals and Change the Projected Image (Source Search)" p.31
③ [△][▽] buttons	<ul style="list-style-type: none"> <li>Performs vertical keystone correction. ☛ "Correcting keystone distortion in vertical directions" p.33</li> <li>If pressed when the Configuration menu or the Help screen is displayed, these buttons select menu items and setting values. ☛ "Using the Configuration Menu" p.62 ☛ "Using the Help" p.83</li> </ul>

Name	Function
④ [←][→] buttons	<ul style="list-style-type: none"> <li>Performs horizontal keystone correction. ☛ "Correcting keystone distortion in horizontal directions" p.33</li> <li>If pressed when the Configuration menu or the Help screen is displayed, these buttons select menu items and setting values. ☛ "Using the Configuration Menu" p.62 ☛ "Using the Help" p.83</li> </ul>
⑤ [Help] button	Displays and closes the Help screen which shows you how to deal with problems if they occur. ☛ "Using the Help" p.83
⑥ [Esc] button	<ul style="list-style-type: none"> <li>Stops the current function.</li> <li>If pressed when the Configuration menu is displayed, it moves to the previous menu level. ☛ "Using the Configuration Menu" p.62</li> </ul>
⑦ [Enter] button	<ul style="list-style-type: none"> <li>When the Configuration menu or the Help screen is displayed, it accepts and enters the current selection and moves to the next level.</li> <li>If pressed while projecting analog RGB signals from Computer1 port or Computer2 port, you can automatically optimize <b>Tracking</b>, <b>Sync.</b>, and <b>Position</b>.</li> </ul>
⑧ [Menu] button	Displays and closes the Configuration menu. ☛ "Using the Configuration Menu" p.62

## Remote Control

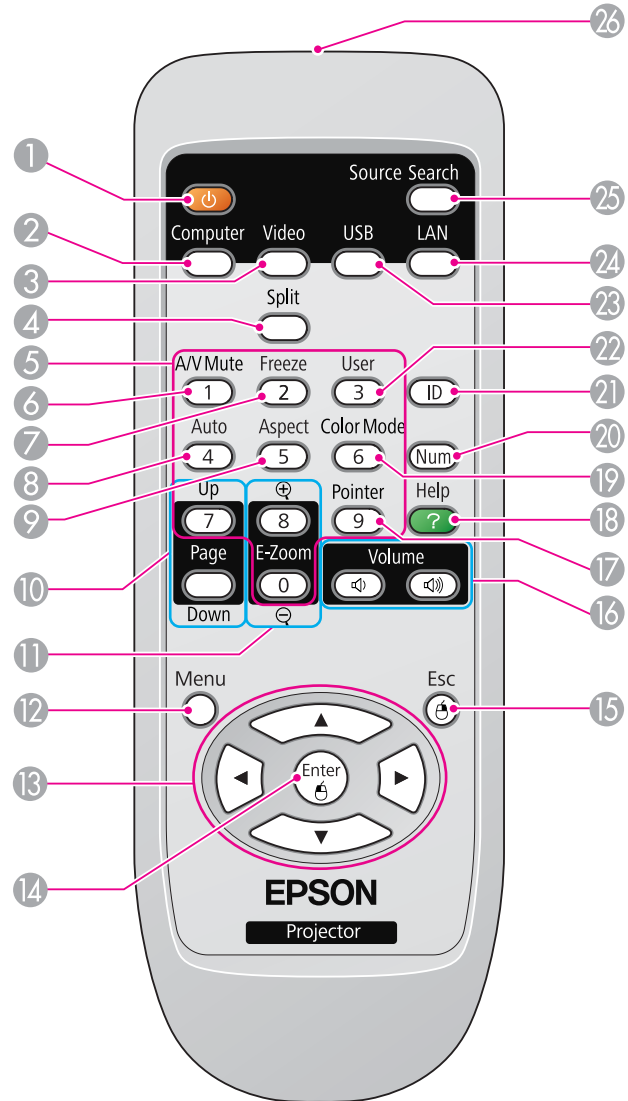

Name	Function
① [Power] button	Turns the projector power on or off. ☛ "From Installation to Projection" p.30
② [Computer] button	Each time you press the button, the input changes between images from the Computer1 port and the Computer2 port.
③ [Video] button	Each time the button is pressed, the image cycles through the S-Video, Video, and HDMI ports.
④ [Split] button	Press this button to split the screen in two and project two images simultaneously. ☛ "Projecting Two Images Simultaneously (Split Screen)" p.43
⑤ Numeric buttons	<ul style="list-style-type: none"> <li>Use this button to enter passwords and set the remote control ID. ☛ "Setting the remote control ID" p.53 ☛ "Setting Password Protect" p.57</li> <li>Use this button to enter numbers in <b>Network</b> settings from the Configuration menu.</li> </ul>
⑥ [A/V Mute] button	Turns the video and audio on or off. ☛ "Hiding the Image and Sound Temporarily (A/V Mute)" p.47
⑦ [Freeze] button	Images are paused or unpaused. ☛ "Freezing the Image (Freeze)" p.48
⑧ [Auto] button	If pressed while projecting analog RGB signals from Computer1 port or Computer2 port, you can automatically optimize <b>Tracking</b> , <b>Sync.</b> , and <b>Position</b> .
⑨ [Aspect] button	The aspect ratio changes each time the button is pressed. ☛ "Changing the Aspect Ratio" p.39

 Name	Function
⑩ [Page] buttons [Up] [Down]	<p>Changes pages in files such as PowerPoint files when using the following projection methods.</p> <ul style="list-style-type: none"> <li>When using the Wireless Mouse function <ul style="list-style-type: none"> <li>"Using the Remote Control to Operate the Mouse Pointer (Wireless Mouse)" p.50</li> </ul> </li> <li>When connecting to a network</li> </ul> <p>When projecting images using Slideshow, pressing these buttons displays the previous/next image.</p>
⑪ [E-Zoom] buttons [+] [-]	<p>Enlarges or reduces the image without changing the projection size.</p> <ul style="list-style-type: none"> <li>"Enlarging Part of the Image (E-Zoom)" p.49</li> </ul>
⑫ [Menu] button	<p>Displays and closes the Configuration menu.</p> <ul style="list-style-type: none"> <li>"Using the Configuration Menu" p.62</li> </ul>
⑬  buttons	<ul style="list-style-type: none"> <li>When the Configuration menu or Help screen is displayed, pressing these buttons selects menu items and setting values. <ul style="list-style-type: none"> <li>"Using the Configuration Menu" p.62</li> </ul> </li> <li>When projecting a Slideshow, pressing these buttons displays the previous/next image, rotates the image, and so on. <ul style="list-style-type: none"> <li>"Slideshow operating methods" p.109</li> </ul> </li> <li>During Wireless Mouse function, the mouse pointer moves in the direction of the button that was pushed. <ul style="list-style-type: none"> <li>"Using the Remote Control to Operate the Mouse Pointer (Wireless Mouse)" p.50</li> </ul> </li> </ul>
⑭ [Enter] button	<ul style="list-style-type: none"> <li>When the Configuration menu or the Help screen is displayed, it accepts and enters the current selection and moves to the next level. <ul style="list-style-type: none"> <li>"Using the Configuration Menu" p.62</li> </ul> </li> <li>Acts as a mouse's left button when using the Wireless Mouse function. <ul style="list-style-type: none"> <li>"Using the Remote Control to Operate the Mouse Pointer (Wireless Mouse)" p.50</li> </ul> </li> </ul>

Name	Function
⑮ [Esc] button	<ul style="list-style-type: none"> <li>Stops the current function.</li> <li>If pressed when the Configuration menu is displayed, it moves to the previous level. <ul style="list-style-type: none"> <li>"Using the Configuration Menu" p.62</li> </ul> </li> <li>Acts as a mouse's right button when using the Wireless Mouse function. <ul style="list-style-type: none"> <li>"Using the Remote Control to Operate the Mouse Pointer (Wireless Mouse)" p.50</li> </ul> </li> </ul>
⑯ [Volume] buttons [<] [>]	<p>[&lt;] Decreases the volume. [&gt;] Increases the volume.</p> <ul style="list-style-type: none"> <li>"Adjusting the Volume" p.37</li> </ul>
⑰ [Pointer] button	<p>Displays the on-screen pointer.</p> <ul style="list-style-type: none"> <li>"Pointer Function (Pointer)" p.48</li> </ul>
⑱ [Help] button	<p>Displays and closes the help screen which shows you how to deal with problems if they occur.</p> <ul style="list-style-type: none"> <li>"Using the Help" p.83</li> </ul>
⑲ [Color Mode] button	<p>Each time the button is pressed, the Color Mode changes.</p> <ul style="list-style-type: none"> <li>"Selecting the Projection Quality (Selecting Color Mode)" p.37</li> </ul>
⑳ [Num] button	<p>Hold down this button and press the numeric buttons to enter passwords and numbers.</p> <ul style="list-style-type: none"> <li>"Setting Password Protect" p.57</li> </ul>
㉑ [ID] button	<p>Hold down this button and press the numeric buttons to set the remote control ID.</p> <ul style="list-style-type: none"> <li>"Setting the remote control ID" p.53</li> </ul>
㉒ [User] button	<p>Select any frequently used item from the five available Configuration menu items, and assign it to this button. By pressing the User button, the assigned menu item selection/adjustment screen is displayed, allowing you to make one-touch settings/adjustments.</p> <ul style="list-style-type: none"> <li>"Settings Menu" p.68</li> </ul> <p><b>Test Pattern</b> is assigned as the default setting.</p>

Name	Function
23 [USB] button	Changes to the following image. Images from the device connected to the USB (TypeA) port
24 [LAN] button	Changes to the images projected with EasyMP Network Projection. When projecting using the optional Quick Wireless Connection USB Key, this button switches to that image.
25 [Source Search] button	Switches to the image from the input port where video signals are being input. ☛ "Automatically Detect Input Signals and Change the Projected Image (Source Search)" p.31
26 Remote control light-emitting area	Outputs remote control signals.

## Replacing the remote control batteries

If delays in the responsiveness of the remote control occur or if it does not operate after it has been used for some time, it probably means that the batteries are becoming flat. When this happens, replace them with new batteries. Have two AA size manganese or alkaline batteries ready. You cannot use other batteries except for the AA size manganese or alkaline.


### Attention

Make sure you read the following manual before handling the batteries.


☛ *Safety Instructions*

#### 1 Remove the battery cover.

While pushing the battery compartment cover catch, lift the cover up.

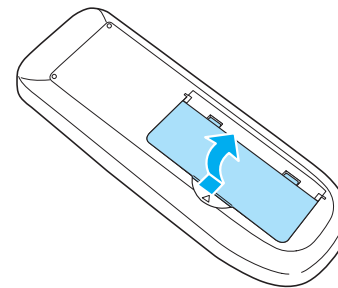

#### 2 Replace the old batteries with new batteries.

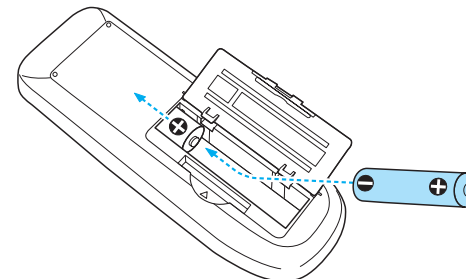




## Caution

Check the positions of the (+) and (-) marks inside the battery holder to ensure the batteries are inserted the correct way.


**3**

Replace the battery cover.

Press the battery compartment cover until it clicks into place.

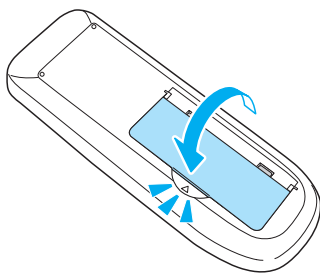

## Remote control operating range

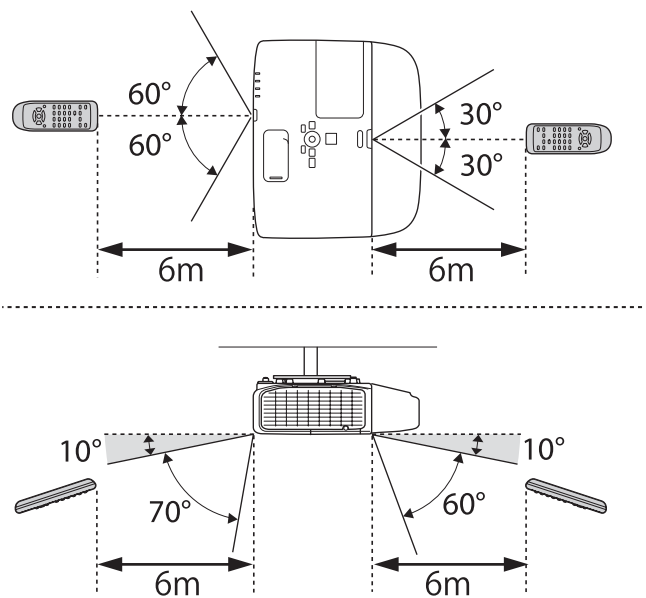






# Preparing the Projector

This chapter explains how to install the projector and connect projection sources.


## Installation Methods

The projector supports the following four different projection methods. Install the projector according to the conditions of the installation location.


- Project images from in front of the screen. (Front projection)

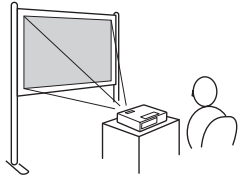


- Project images from behind a translucent screen. (Rear projection)

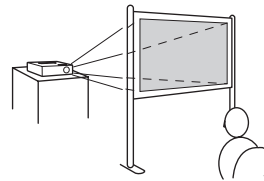

- Suspend the projector from the ceiling and project images from in front of a screen. (Front/Ceiling projection)

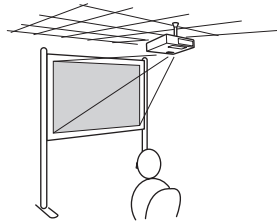

- Suspend the projector from the ceiling and project images from behind a translucent screen. (Rear/Ceiling projection)

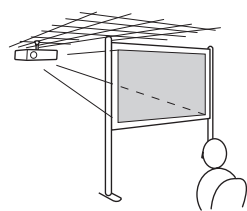

### Warning

- A special method of installation is required when suspending the projector from a ceiling (ceiling mount). If it is not installed correctly, it could fall causing an accident and injury.
- If you use adhesives on the Ceiling mount fixing points to prevent the screws from loosening, or if you use things such as lubricants or oils on the projector, the projector case may crack causing it to fall from its ceiling mount. This could cause serious injury to anyone under the ceiling mount and could damage the projector.  
When installing or adjusting the ceiling mount, do not use adhesives to prevent the screws from loosening and do not use oils or lubricants and so on.

### Attention


- Do not use the projector on its side. This may cause malfunctions to occur.
- Do not cover the projector's air intake vent or air exhaust vent. If either of the vents are covered, the internal temperature could rise and cause a fire.



- An optional Ceiling mount is required when suspending the projector from a ceiling.  
☛ "Optional Accessories" [p.124](#)
- You can change the setting as follows by pressing down the [A/V Mute] button on the remote control for about five seconds.  
**Front ↔ Front/Ceiling**  
Set **Rear** or **Rear/Ceiling** from the Configuration menu.  
☛ **Extended - Projection** [p.69](#)

## How to install

Install the projector so that it is parallel to the screen.

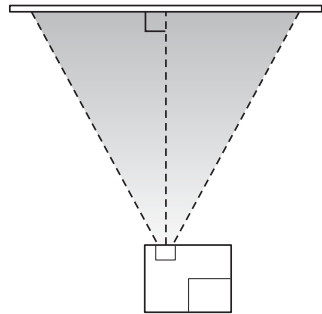

If the projector is installed at an angle to the screen, keystone distortion occurs in the projected image. See the following for more information on correcting keystone distortion.

☛ "Correcting Keystone Distortion" [p.33](#)



Place the projector on a level surface, so that it is not tilted.

## Screen Size and Approximate Projection Distance

Projection size is determined by the distance from the projector to the screen. See the following illustrations to select the best position according to the screen size. The illustrations show the approximate shortest distance at maximum zoom. See the following for more information on the projection distance.


☛ "Screen Size and Projection Distance" [p.125](#)



When you correct keystone distortion, the projected image may be reduced.


### EB-D6155W

#### 16:10 Screen Size

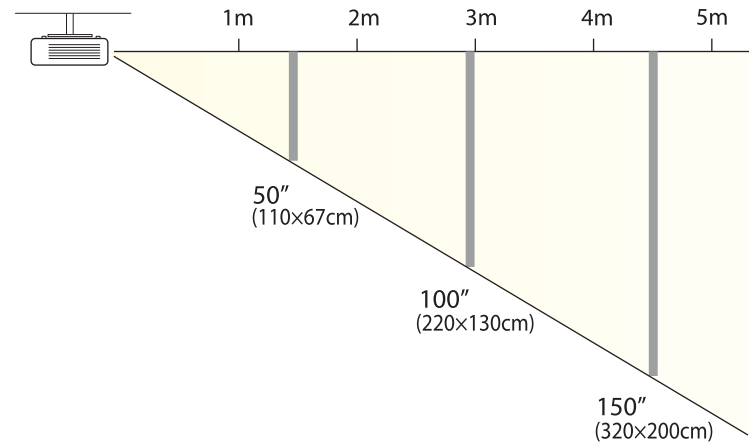

### EB-D6250/EB-D6150

#### 4:3 Screen Size

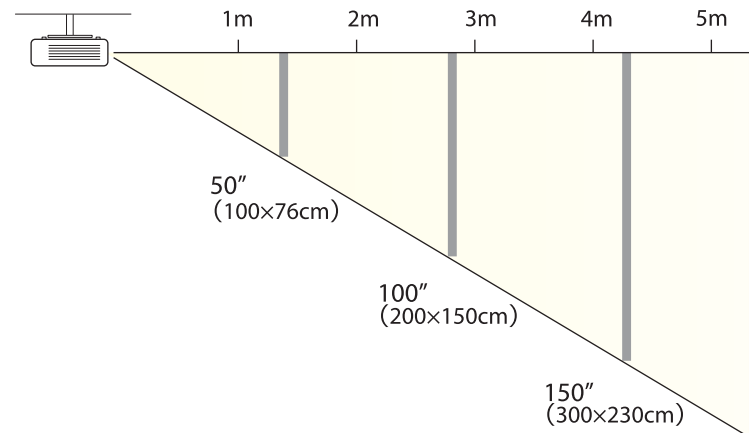


The port name, location, and connector orientation differ depending on the source being connected.

## Connecting a Computer

To project images from a computer, connect the computer using one of the following methods.


- 1 2 When using the supplied computer cable**  
Connect the computer's display output port to the projector's Computer1 or Computer2 port.
- 3 When using a commercially available HDMI cable**  
Connect the computer's HDMI port to the projector's HDMI port.

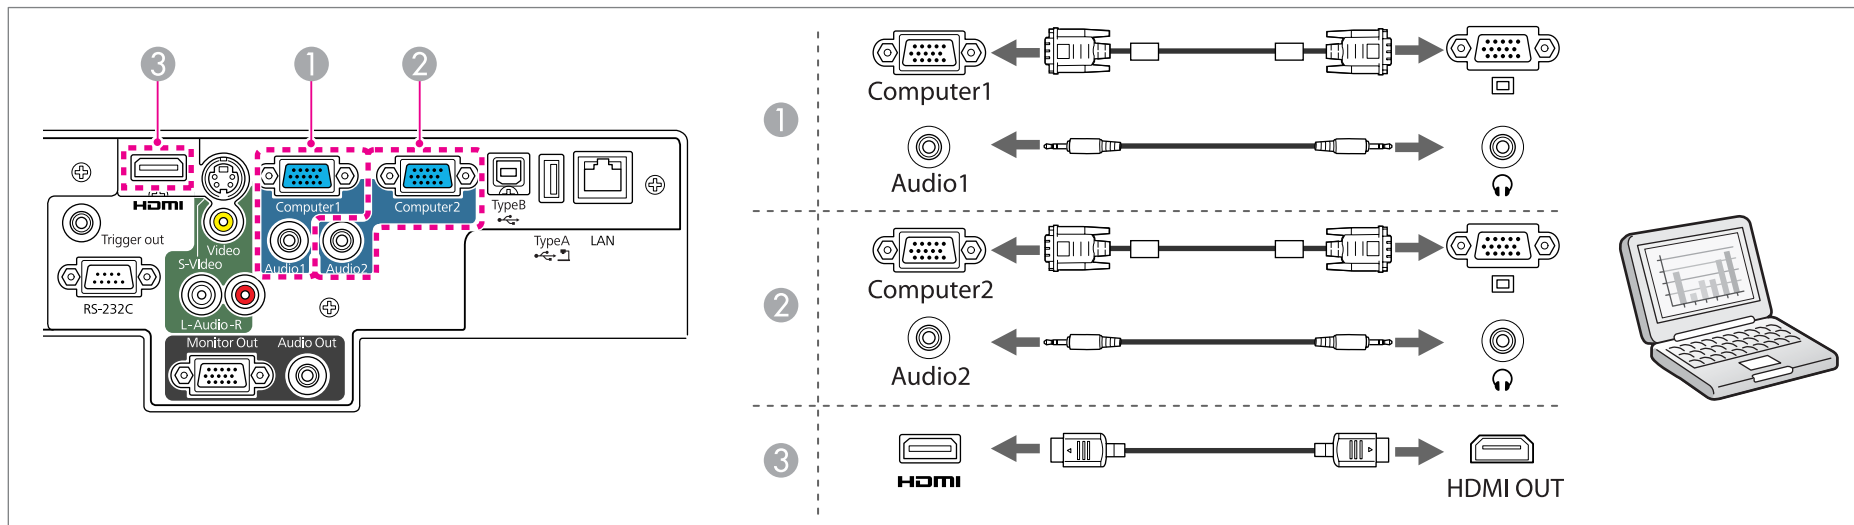


To output audio from the projector's speaker, you need to connect a commercially available audio cable.

## Connecting Image Sources

To project images from DVD players or VHS video and so on, connect to the projector using one of the following methods.

- ① **When using a commercially available video cable**  
Connect the video output port on the image source to the projector's Video port using a commercially available video cable.
- ② **When using a commercially available S-video cable**  
Connect the video output port on the image source to the projector's S-Video port using a commercially available video cable.
- ③ ④ **When using the optional component video cable**  
 "Optional Accessories" [p.124](#)  
Connect the component output port on the image source to the projector's Computer1 or Computer2 port.
- ⑤ **When using a commercially available HDMI cable**  
Connect the HDMI port on the image source to the projector's HDMI port using a commercially available HDMI cable.

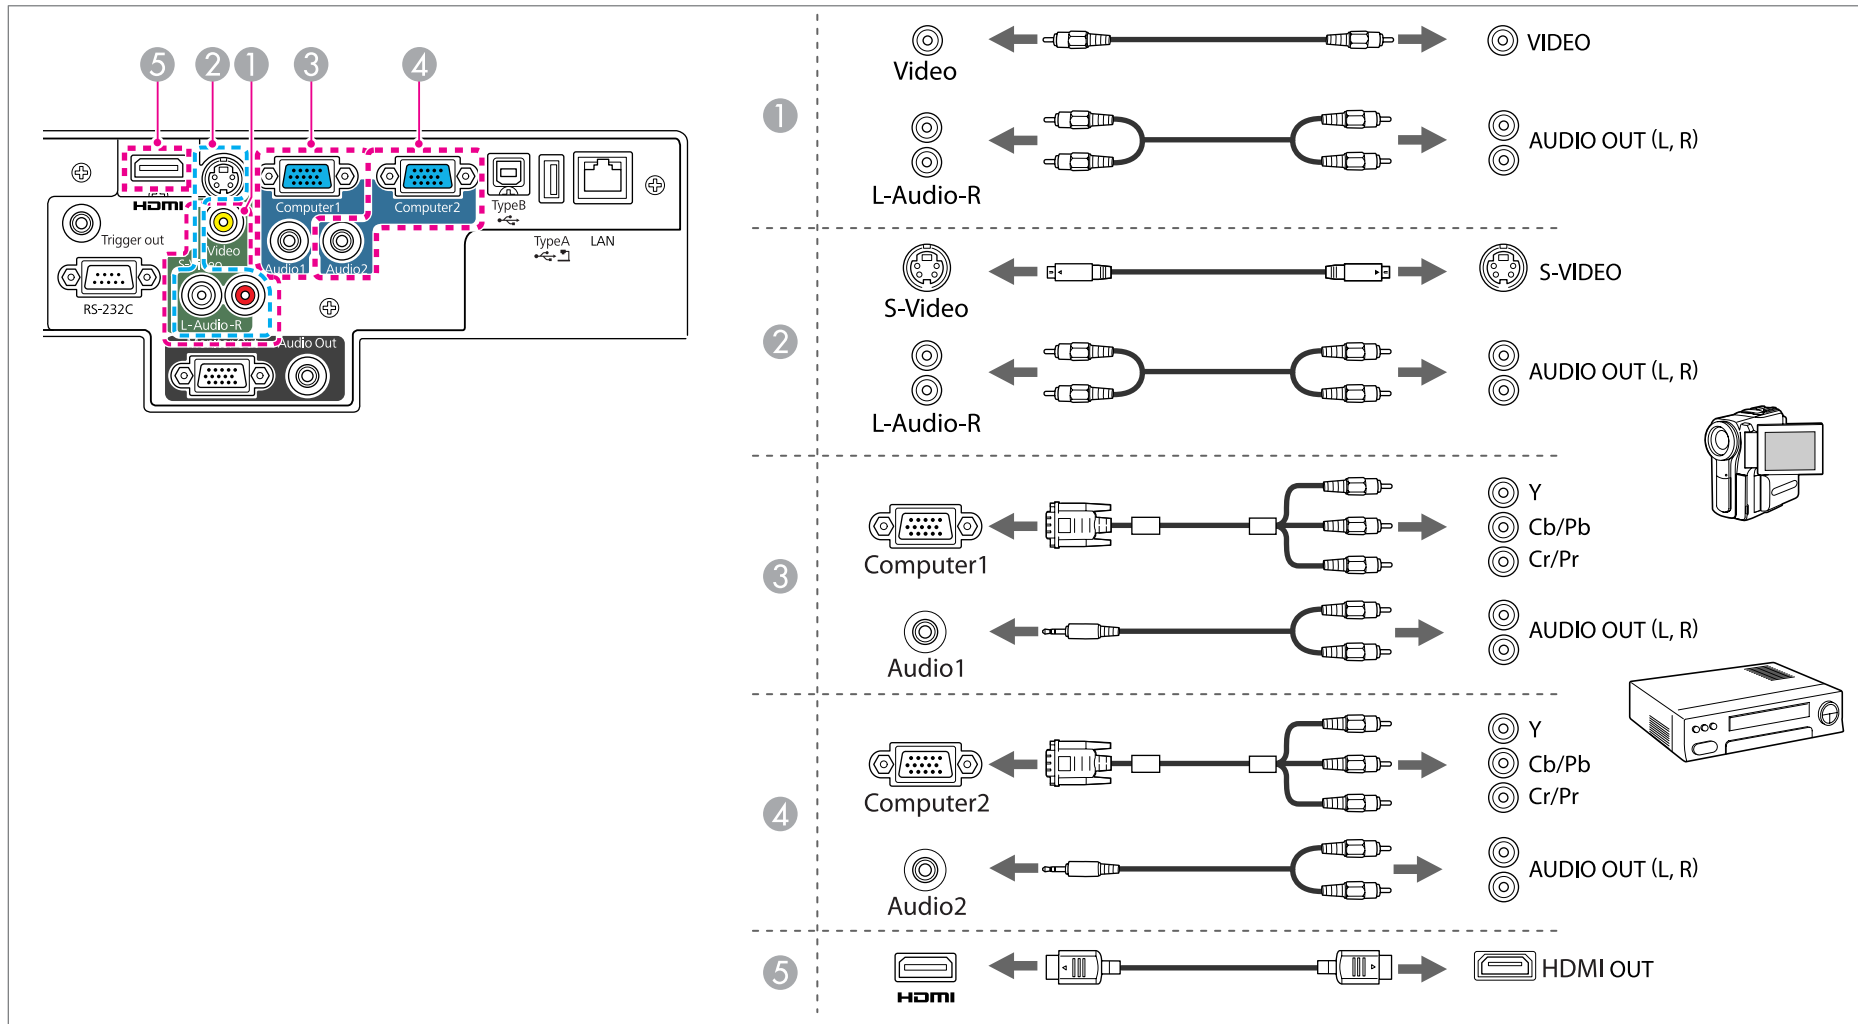

### Attention

- If the input source is on when you connect it to the projector, it could cause a malfunction.
- If the orientation or shape of the plug differs, do not try to force it in. The device could be damaged or could malfunction.




- To output audio from the projector's speaker, you need to connect a commercially available audio cable.
- If the source you want to connect to has an unusually shaped port, use the cable supplied with the device or an optional cable to connect to the projector.
- When using a commercially available 2RCA(L/R)/stereo mini-pin audio cable, make sure it is labeled "No resistance".

## Connecting USB Devices

You can connect devices such as USB memory, the optional Document Camera, and USB compatible hard disks and digital cameras.

Using the USB cable supplied with the USB device, connect the USB device to the USB (TypeA) port on the projector.

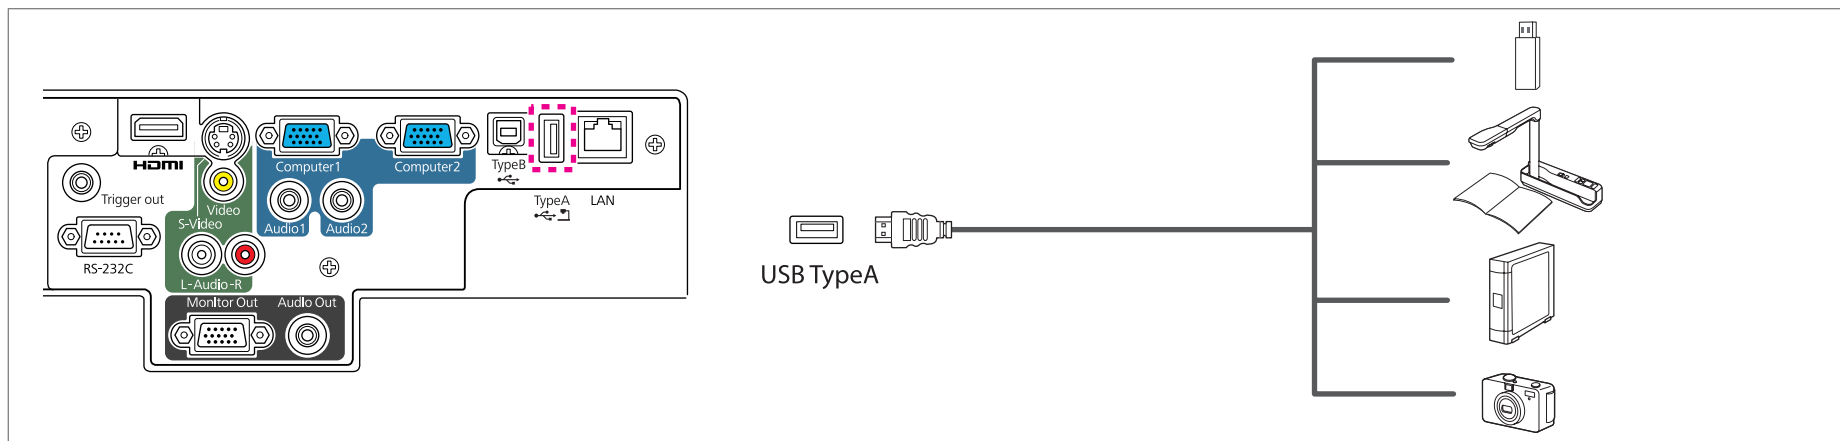

When the USB device is connected, you can project image files on the USB memory or digital camera using Slideshow.

☛ "Slideshow" [p.109](#)

If the Document Camera is connected while projecting images from another input port, press the [USB] button on the remote control, or the [Source Search] button on the control panel, to switch to images from the Document Camera.

☛ "Automatically Detect Input Signals and Change the Projected Image (Source Search)" [p.31](#)



While projecting images from a USB device, if you want to connect an audio output device, connect it to the Audio2 port.

### Attention

- If you use a USB hub, the connection may not operate correctly. Devices such as digital cameras and USB devices should be connected to the projector directly.
- When connecting and using a USB-compatible hard disk, make sure you connect the AC adaptor supplied with the hard disk.
- Connect a digital camera or hard disk to the projector using a USB cable supplied with or specified for use with the device.
- Use a USB cable less than 3 m in length. If the cable exceeds 3 m, Slideshow may not function correctly.



## Removing USB devices

After finishing projecting, remove USB devices from the projector. For devices such as digital cameras or hard disks, turn off the device and then remove it from the projector.

## Connecting External Devices


You can output images and audio by connecting an external monitor or speaker.

### ① When outputting images to an external monitor

Connect the external monitor to the projector's Monitor Out port using the cable supplied with the external monitor.

### ② When outputting audio to an external speaker

Connect the external speaker to the projector's Audio Out port using a commercially available audio cable.

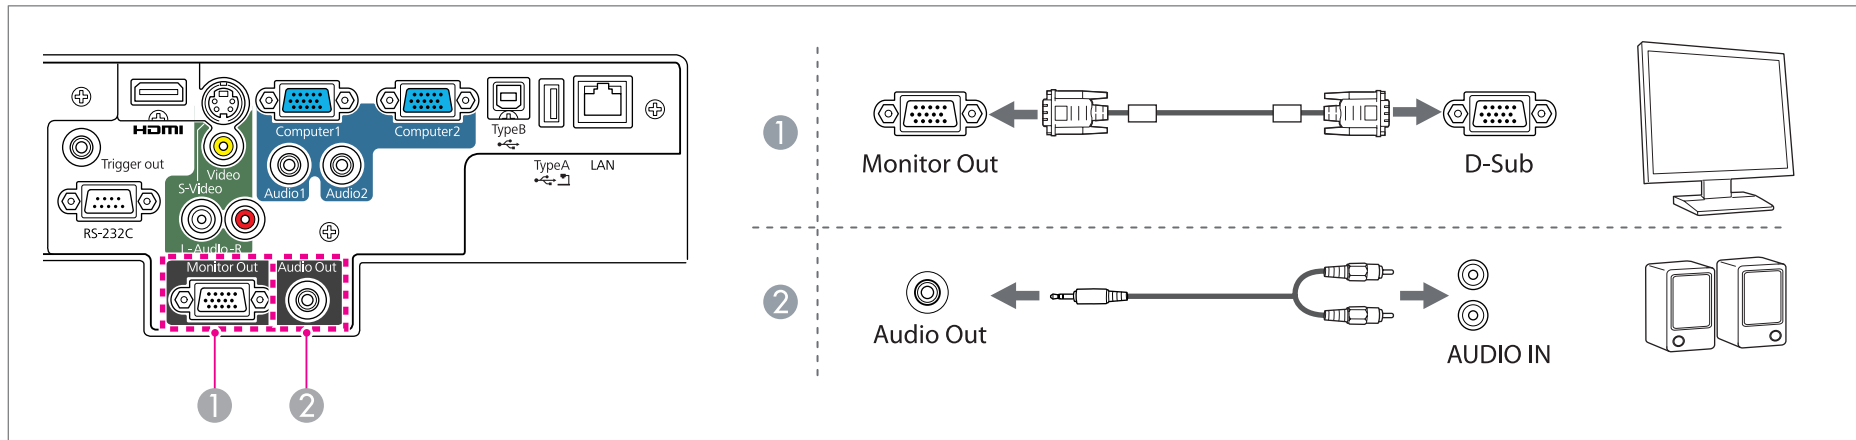




- If you set **Standby Mode** to **Communication On**, you can perform the following operation even if the projector is in standby mode.
  - Outputting images to an external monitor
  - ☛ **Extended - Standby Mode** p.69
- Only analog RGB signals from the Computer1 port can be output to an external monitor. You cannot output signals input from other ports or component video signals.
- Setting gauges for functions such as Keystone, Configuration menu, or Help screens are not output to the external monitor.
- When the audio cable jack is inserted into the Audio Out port, audio stops being output from the projector's internal speakers and switches to external output.

## Connecting a LAN Cable


Connect a LAN port on network hubs or other equipment to the projector's LAN port with a commercially available 100BASE-TX or 10BASE-T LAN cable.

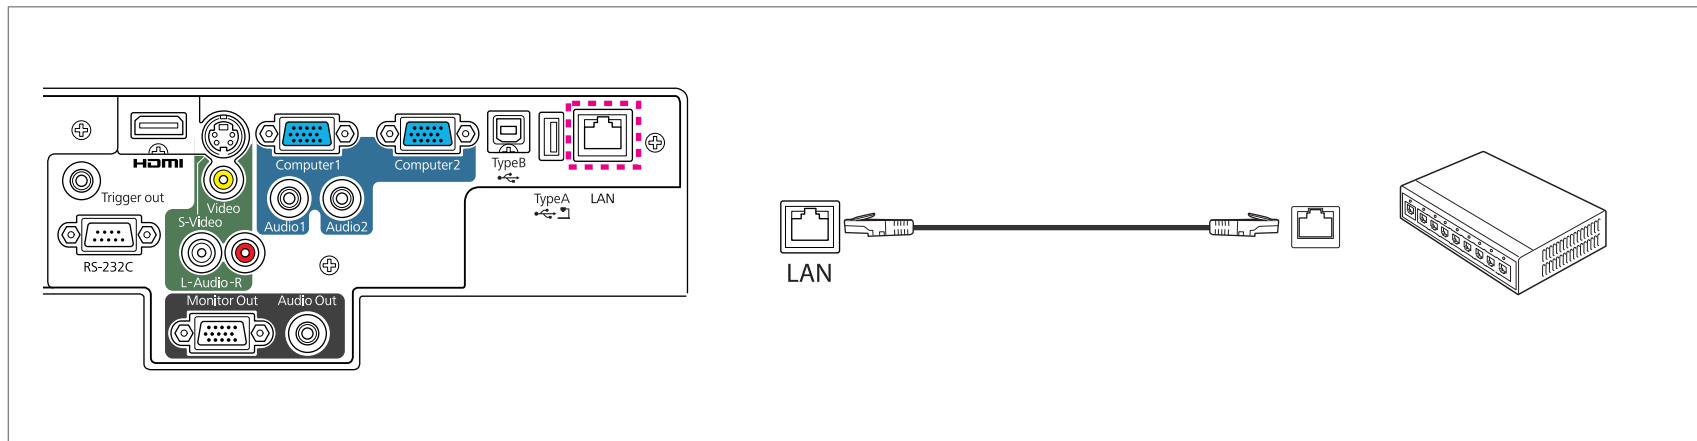


To prevent malfunctions, use a category 5 shielded LAN cable.

## Installing the Wireless LAN Unit


- 1 Remove the stopper fixing screw, and then remove the wireless LAN unit's stopper.

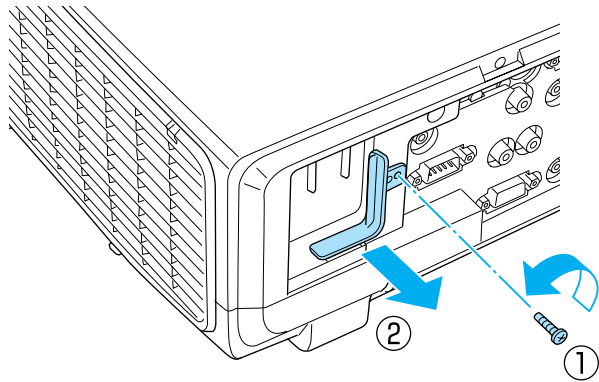

- 2 Install the Wireless LAN unit.

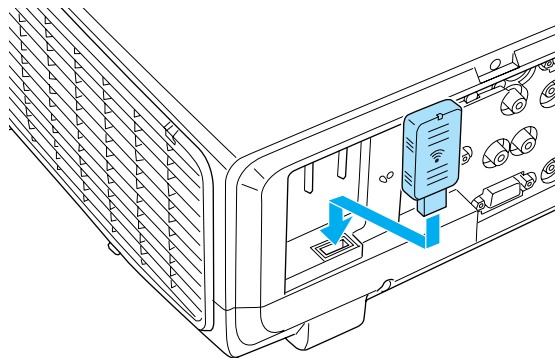

- 3 To avoid losing the wireless LAN unit, secure the stopper using the stopper fixing screw.

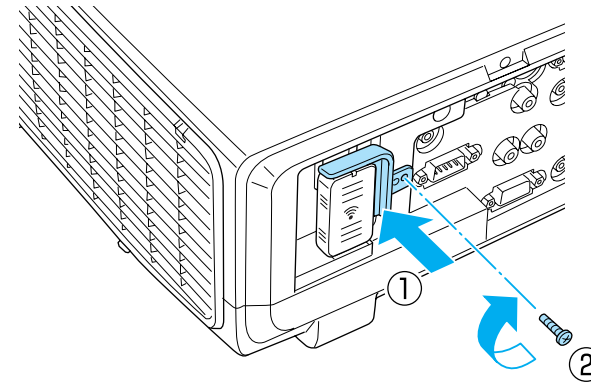


## Attaching and Removing the Cable Cover


By attaching the cable cover, disordered cables can be tidied away (the illustration shows a projector suspended from the ceiling).

### Attaching


- 1 Bundle the cables with a commercially available band.

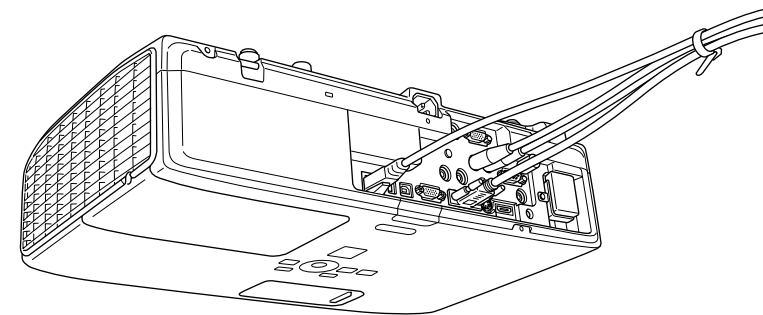

- 2 Place the cable cover on the rear of the projector.

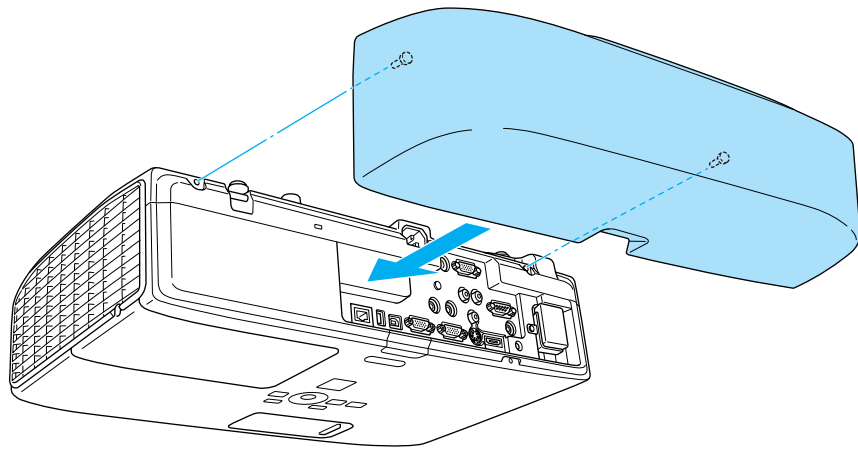

**3** Tighten the two cable cover screws.

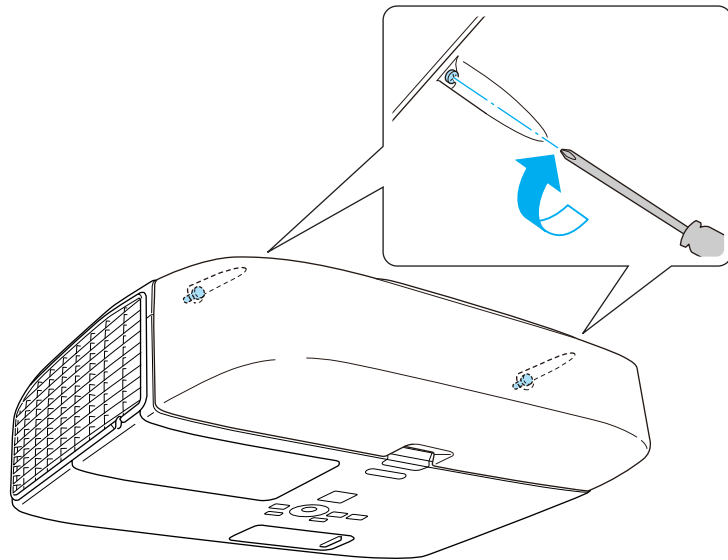

## Removing

Loosen the two cable cover screws and then remove the cable cover.




## Basic Usage

This chapter explains how to project and adjust images.

## From Installation to Projection

This section explains the procedure for connecting the projector to a computer with the supplied computer cable and projecting images.

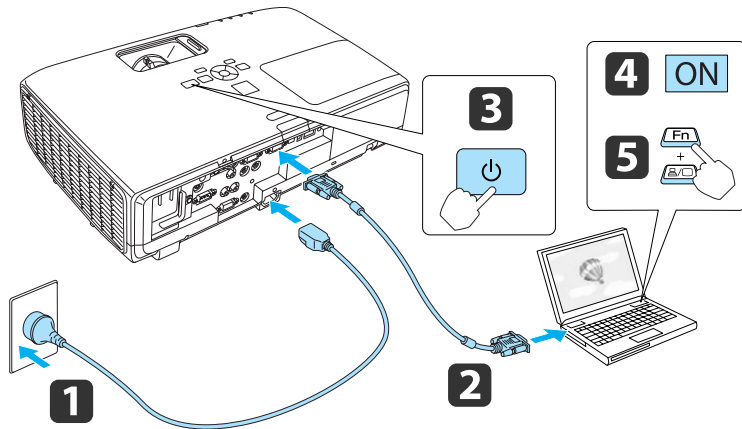

- 1** Connect the projector to an electrical outlet with the power cable.
- 2** Connect the projector to your computer with the computer cable.
- 3** Turn on the projector.
- 4** Turn on your computer.
- 5** Change the computer's screen output.

When using a laptop computer, you need to change the screen output from the computer.

Hold down the Fn key (function key), and press the  key.



The method for changing differs depending on the computer being used. See the documentation supplied with the computer.

If the image is not projected, you can change the projected image using one of the following methods.

- Press the [Source Search] button on the control panel or the remote control.
  - ☛ "Automatically Detect Input Signals and Change the Projected Image (Source Search)" [p.31](#)
- Press the button for the target port on the remote control.
  - ☛ "Switching to the Target Image by Remote Control" [p.32](#)



After projecting the image, adjust the image if necessary.


- ☛ "Correcting Keystone Distortion" [p.33](#)
- ☛ "Correcting the Focus" [p.36](#)

## Automatically Detect Input Signals and Change the Projected Image (Source Search)


Press the [Source Search] button to project images from the port currently receiving an image.

Because only images from ports receiving an image are projected, you can quickly project the image you want.

Using the remote control

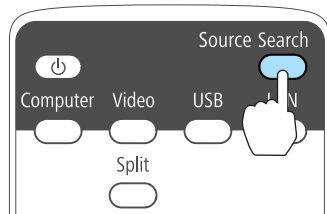

Using the control panel

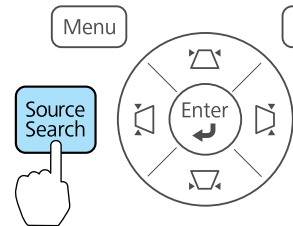


When two or more pieces of equipment are connected, press the [Source Search] button until the target image is projected.

When your video equipment is connected, start playback before beginning this operation.




The following screen remains displayed when only the image that the projector is currently displaying is available, or when no image signal can be found. You can select the input port where the connected equipment you want to use is projecting. If no operation is performed after about 10 seconds, the screen closes.

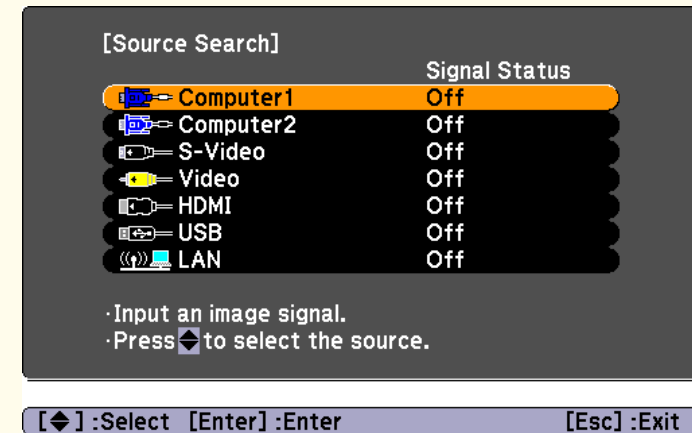

## Switching to the Target Image by Remote Control

You can change directly to the target image by pressing the following buttons on the remote control.

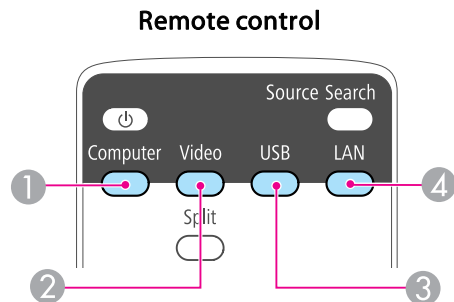


- ① Each time the button is pressed, it cycles through the following images:
  - Computer1 port
  - Computer2 port
- ② Each time the button is pressed, it cycles through the following images:
  - S-Video port
  - Video port
  - HDMI port
- ③ Changes to the following image.
  - Images from the device connected to the USB (TypeA) port
- ④ Changes to the images projected with EasyMP Network Projection. When projecting using the optional Quick Wireless Connection USB Key, this button switches to that image.




## Correcting Keystone Distortion


You can correct keystone distortion using one of the following methods.

- H/V-Keystone  
Manually correct distortion in the horizontal and vertical directions independently. This function allows you to make easy corrections.

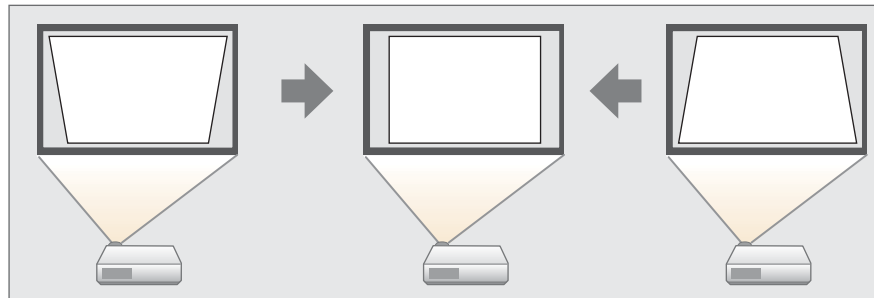

- Quick Corner  
Manually correct the four corners independently. This function allows you to make more accurate keystone correction.

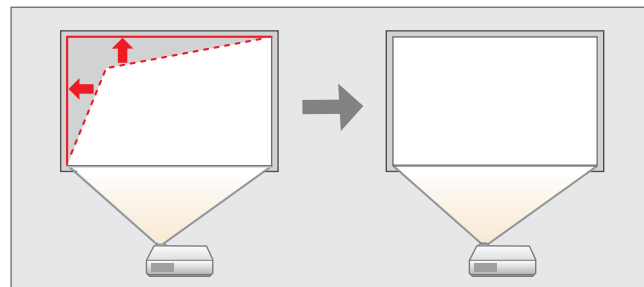



 When you correct keystone distortion, the projected image may be reduced.




## H/V-Keystone

Manually correct distortion in the horizontal and vertical directions independently.

### Correcting keystone distortion in vertical directions


Vertical keystone can be corrected to a vertical projector tilt of up to 30° against the screen.

Press the [

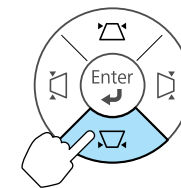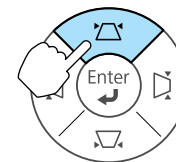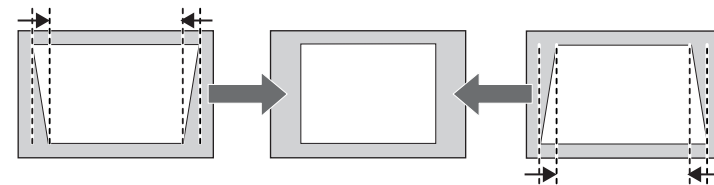



### Correcting keystone distortion in horizontal directions

Horizontal keystone can be corrected to a horizontal projector tilt of up to 30°.

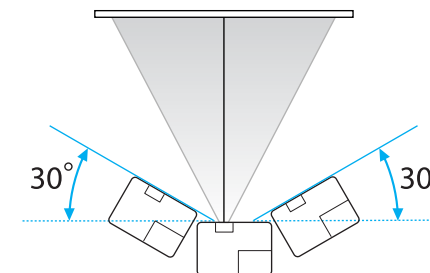

Press the  buttons on the control panel.

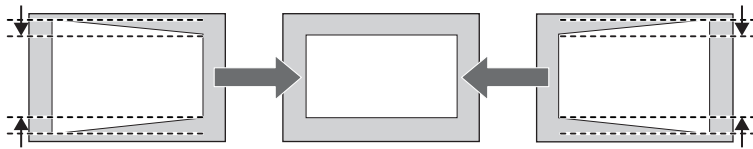


 You can set H/V-Keystone from the Configuration menu.  
 ● Settings - Keystone - H/V-Keystone p.68

## Quick Corner


This allows you to manually correct each of the four corners of the projected image separately.

- 1 Press the [Menu] button while projecting.  
 ● "Using the Configuration Menu" p.62


Using the remote control

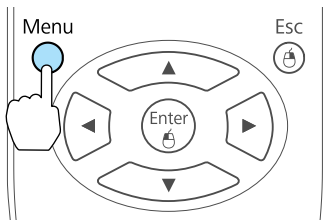

Using the control panel

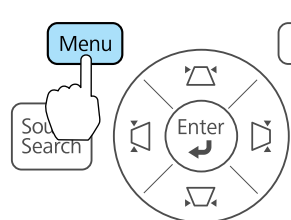


- 2 Select **Keystone** from **Settings**.

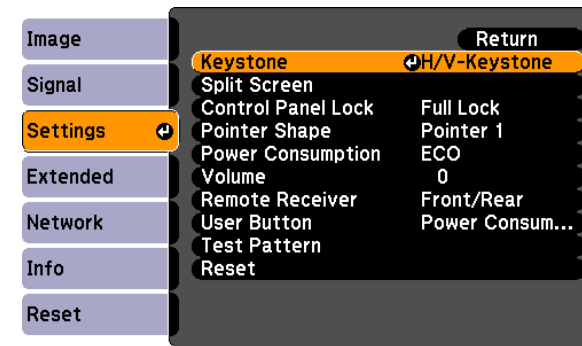


[Esc]:Return [◆]:Select [Enter]:Enter [Menu]:Exit

- 3 Select **Quick Corner**, and then press the [Enter] button.

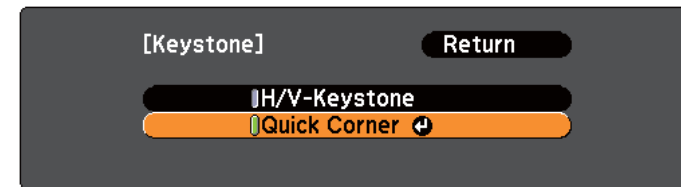


[Esc]:Return [◆]:Select [Enter]:Enter [Menu]:Exit

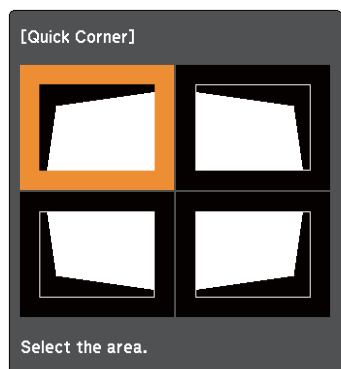

[◆ / ◀] : Select  
 [Enter] : Enter  
 [Esc] : Return (press for 2 seconds to reset/switch)


- 4** Using the [▲], [▼], [◀], and [▶] buttons on the remote control, or the [↶], [↷], [↸], and [↹] buttons on the control panel, select the corner to correct, and then press the [Enter] button.

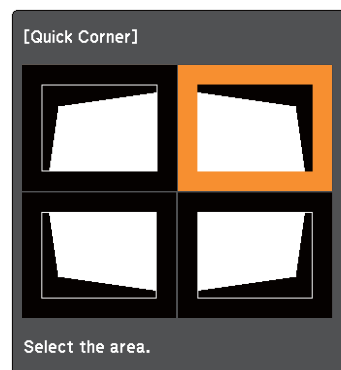

- 5** Using the [▲], [▼], [◀], and [▶] buttons on the remote control, or the [↶], [↷], [↸], and [↹] buttons on the control panel, correct the position of the corner.

When you press the [Enter] button, the screen shown in step 4 is displayed.

If the triangle in the direction you are adjusting the shape turns gray, as shown in the screenshot below, you cannot adjust the shape any further in that direction.

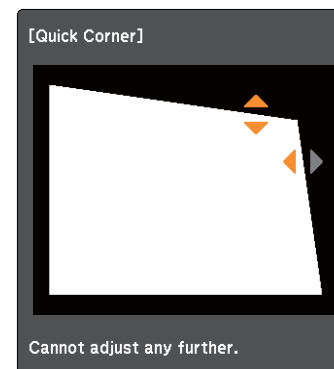

- 6** Repeat procedures 4 and 5 as needed to adjust any remaining corners.
- 7** When you are done, press the [Esc] button to exit the correction menu.

Because **Keystone** was changed to **Quick Corner**, the corner selection screen from step 3 is displayed when you press the [↶], [↷], [↸], and [↹] buttons on the control panel next time.


Change **Keystone** to **H/V-Keystone** if you want to perform

horizontal and vertical correction using the [↔], [↕], [↶], and [↷] buttons on the control panel.

☛ **Settings - Keystone - H/V-Keystone** p.68



If the [Esc] button is held down for about two seconds while correcting with Quick Corner, the following screen is displayed.

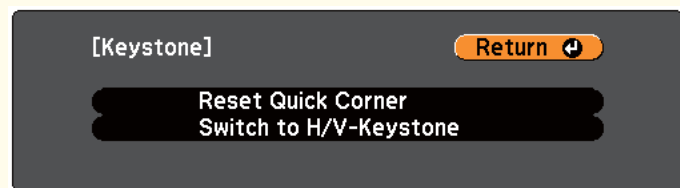

[Esc] / [Enter] : Return [◆] : Select [Menu] : Exit


**Reset Quick Corner:** Resets the result of Quick Corner corrections.  
**Switch to H/V-Keystone:** Switches the correction method to H/V-Keystone.

☛ "Settings Menu" p.68

## Adjusting the Image Size


Turn the zoom ring to adjust the size of the projected image.

The zoom ring is under the sliding cover.

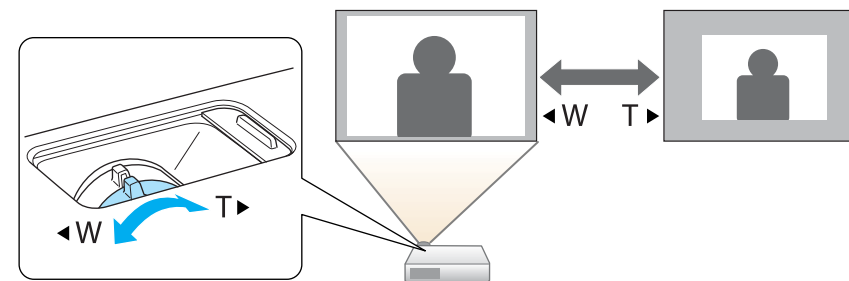

## Adjusting the Image Position

Press the foot lever to extend and retract the front foot. You can adjust the position of the image by tilting the projector up to 10 degrees.

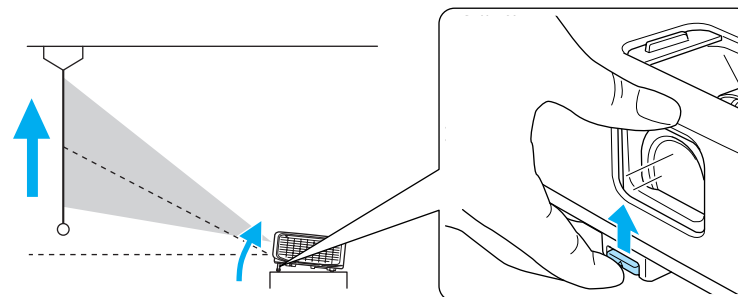


The larger the angle of tilt, the harder it becomes to focus. Install the projector so that it only needs to be tilted at a small angle.

## Correcting the Focus

You can correct the focus using the focus ring.

The focus ring is under the sliding cover.

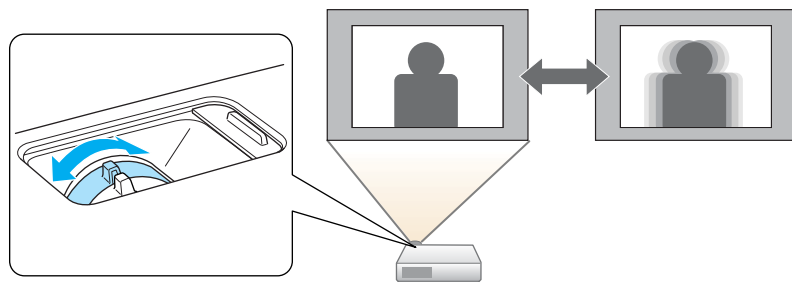


## Adjusting the Volume

You can adjust the volume using one of the following methods.

- Press the [Volume] buttons on the remote control to adjust the volume.

### Remote control

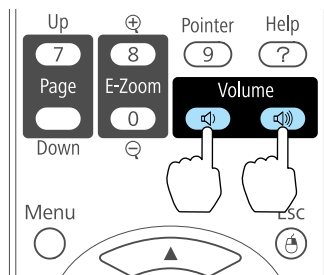

[<img alt="Volume down icon" data-bbox="254 496 275 519"/>>] Decreases the volume.

[<img alt="Volume up icon" data-bbox="254 519 275 540"/>>] Increases the volume.

- Adjust the volume from the Configuration menu.  
 ● Settings - Volume p.68

### Caution

Do not start at high volume.  
 A sudden excessive volume may cause loss of hearing. Always lower the volume before powering off, so that you can power on and then gradually increase the volume.

## Selecting the Projection Quality (Selecting Color Mode)

You can easily obtain the optimum image quality simply by selecting the setting that best corresponds to your surroundings when projecting. The brightness of the image varies depending on the mode selected.


Mode	Application
<b>Dynamic</b>	Ideal for use in a bright room. This is the brightest mode, and reproduces shadow tones well.
<b>Presentation</b>	Ideal for making presentations using color materials in a bright room.
<b>Theatre</b>	Ideal for watching films in a dark room. Gives images a natural tone.
<b>Photo*1</b>	Ideal for projecting still pictures, such as photos, in a bright room. The images are vivid and brought into contrast.
<b>Sports*2</b>	Ideal for watching TV programmes in a bright room. The images are vivid and brought to life.
<b>sRGB</b>	Ideal for images that conform to the <u>sRGB</u> color standard.
<b>Blackboard</b>	Even if you are projecting onto a blackboard (greenboard), this setting gives your images a natural tint, just like when projecting onto a screen.
<b>Whiteboard</b>	Ideal for making presentations using a whiteboard.
<b>Customized</b>	Select <b>Customized</b> if you want to adjust the <b>R, G, B, C, M, and Y</b> settings in the <b>Color Adjustment</b> submenu of the Configuration menu.


\*1 This selection is only available when the input signal is RGB or when the source is USB or LAN.

\*2 This can be selected when inputting component video signals, S-video signals, or composite video signals.

Each time you press the [Color Mode] button, the Color Mode name is displayed on the screen and the Color Mode changes.

### Remote control

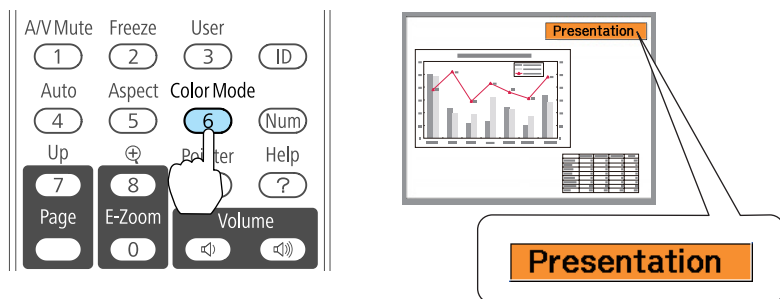

 You can set Color Mode from the Configuration menu.  
 ➔ **Image - Color Mode** [p.65](#)


## Setting Auto Iris

By automatically setting the luminance according to the brightness of the displayed image, it lets you enjoy deep and rich images.


**1** Press the [Menu] button.

➔ "Using the Configuration Menu" [p.62](#)


### Using the remote control

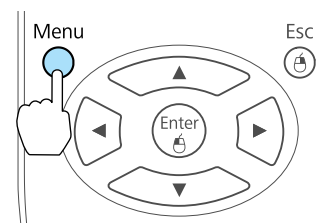

### Using the control panel

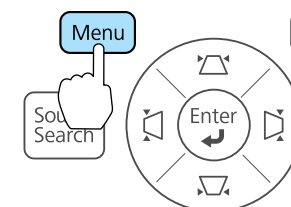

**2** Select **Auto Iris** from **Image**.

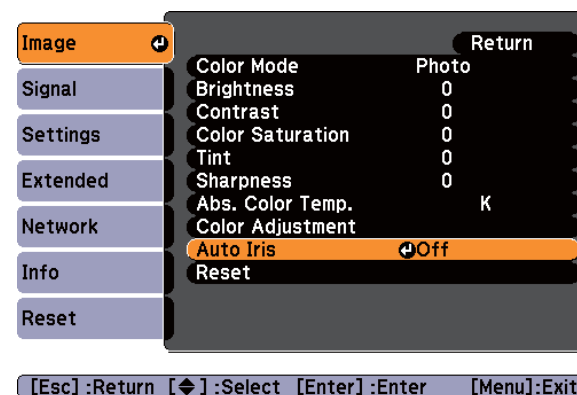

**3** Select **On**.

The setting is stored for each Color Mode.

**4** Press the [Menu] button to end the setting procedure.



Auto Iris can be set only when the **Color Mode** is **Dynamic**, **Theatre**, or **Customized**.

## Changing the Aspect Ratio

Change the Aspect Ratio when video equipment is connected so that images that have been recorded in digital video or onto DVDs can be viewed in 16:9 wide-screen format. Change the aspect ratio when projecting computer images at full size.



Available Aspect Modes vary depending on the image signal currently being projected.

The changing methods and the types of Aspect Modes are as follows.

### Changing methods

Each time you press the [Aspect] button, the Aspect Mode name is displayed on the screen and the aspect ratio changes.

#### Remote control

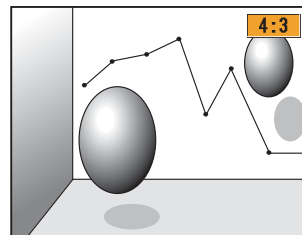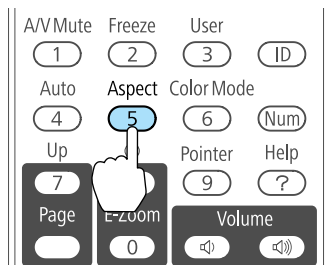


You can set the aspect ratio from the Configuration menu.

➔ **Signal - Aspect** p.66

## Changing the aspect mode (EB-D6155W only)

Projecting images from video equipment or from the HDMI port

Each time the [Aspect] button on the remote control is pressed, the aspect mode changes in the order **Normal** or **Auto**, **16:9**, **Full**, **Zoom**, and **Native**.

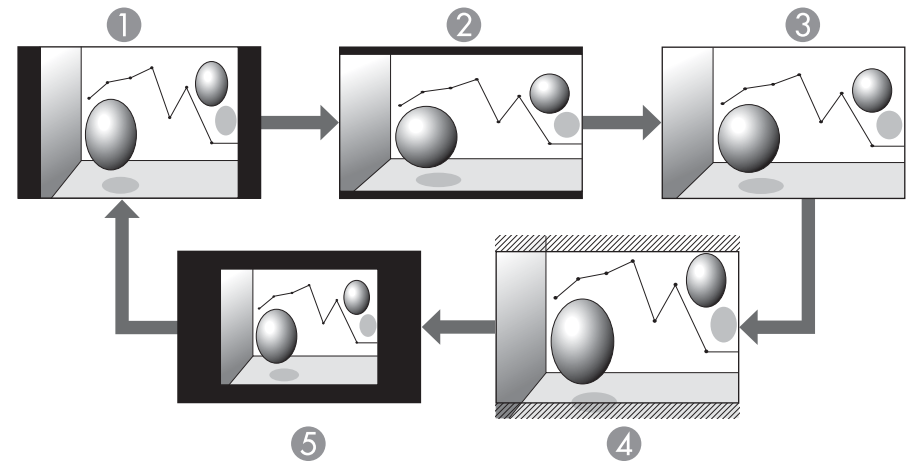

- ① Normal or Auto
- ② 16:9
- ③ Full
- ④ Zoom
- ⑤ Native

Projecting images from a computer

The following shows projection examples for each aspect mode.

Aspect Mode	Input Signal	
	XGA 1024x768 (4:3)	WXGA 1280x800 (16:10)
Normal/Auto*		
16:9		
Full		
Zoom		
Native		

\* Only available when the source is HDMI.



If parts of the image are missing, set the **Resolution** setting to **Wide** or **Normal** from the Configuration menu, according to the size of the computer panel.


🖱️ **Signal - Resolution** [p.66](#)

## Changing the aspect mode (EB-D6250/EB-D6150 only)

Projecting images from video equipment

Each time the [Aspect] button on the remote control is pressed, the aspect mode changes in the order **4:3** and **16:9**.

When inputting a 720p/1080i signal and the aspect mode is set to **4:3**, a 4:3 zoom is applied (the right and left sides of the image are cut off).

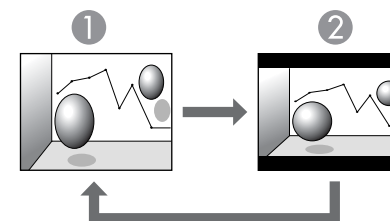


- ① 4:3
- ② 16:9

Projecting images from the HDMI port

Each time the [Aspect] button on the remote control is pressed, the aspect mode changes in the order **Auto**, **4:3**, and **16:9**.



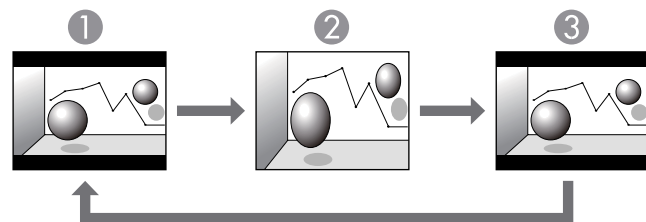

- ① Auto
- ② 4:3
- ③ 16:9

## Projecting images from a computer

Each time the [Aspect] button on the remote control is pressed, the aspect mode changes in the order **Normal** or **Auto**, **4:3**, and **16:9**.

The following shows projection examples for each aspect mode.

Aspect Mode	Input Signal	
	XGA 1024x768 (4:3)	WXGA 1280x800 (16:10)
<b>Normal/Auto*</b>		
<b>4:3</b>		

Aspect Mode	Input Signal	
	XGA 1024x768 (4:3)	WXGA 1280x800 (16:10)
<b>16:9</b>		

\* Only available when the source is **HDMI**.



If parts of the image are missing, set the **Resolution** setting to **Wide** or **Normal** from the Configuration menu, according to the size of the computer panel.

👉 **Signal - Resolution** [p.66](#)




# Useful Functions

This chapter explains useful tips for giving presentations, and the Security functions.

## Projecting Two Images Simultaneously (Split Screen)

A Split Screen can be used to divide the screen into a left screen (A) and a right screen (B) and simultaneously project two images.

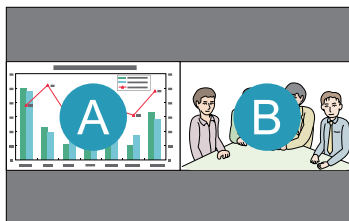

### Input sources for Split Screen projection

The combinations of input sources that can be projected on the left screen and on the right screen are listed below.


	Com-puter1	Com-puter2	S-Vid-eo	Video	HDMI	USB	LAN
Com-puter1	-	-	✓	✓	✓	✓	✓
Com-puter2	-	-	✓	✓	✓	✓	✓
S-Vid-eo	✓	✓	-	-	✓	✓	✓
Video	✓	✓	-	-	✓	✓	✓
HDMI	✓	✓	✓	✓	-	✓	✓
USB	✓	✓	✓	✓	✓	-	-
LAN	✓	✓	✓	✓	✓	-	-

## Projecting on a Split Screen

Press the [Split] button on the remote control while the projector is projecting.

The input source selected when you start Split Screen is displayed on the left screen.

The image from the input source used in the previous Split Screen combination is displayed on the right screen.

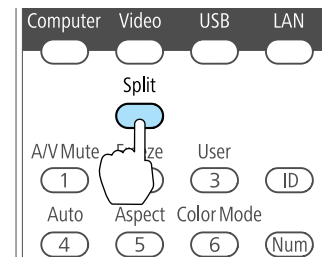

The split screen can also be started from **Split Screen** on the Configuration menu.


🖱️ **Settings - Split Screen** [p.68](#)

## Changing the Projected Image


**1** Press the [Menu] button during Split Screen projection.

☛ "Using the Configuration Menu" p.62

### Using Remote Control

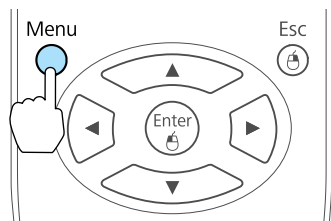

### Using the Control Panel

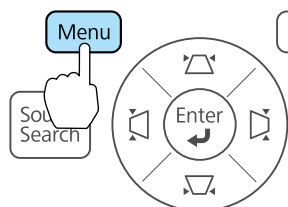


Split Screen Setup is displayed.



The **Source** screen (step 3) is displayed when the [Source Search] button is pressed on the remote control or control panel or when a source button is pressed on the remote control.


**2** Select **Source**.

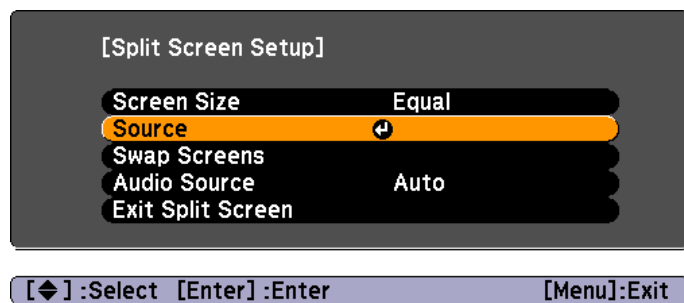

**3** Select the source for **Left** and **Right**.

See the following for combinations of input sources that can be projected.


☛ "Input sources for Split Screen projection" p.43

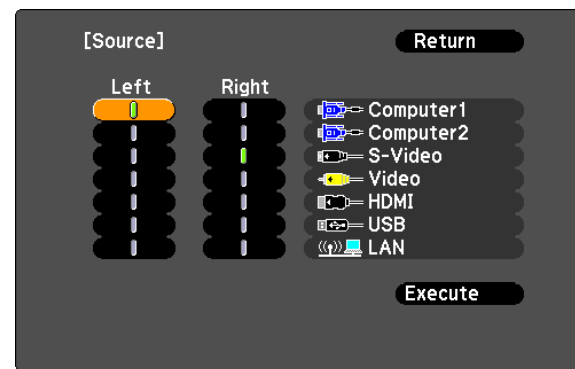

[Esc]:Return [Left/Right]:Select [Enter]:Set [Menu]:Exit


**4** Select **Execute**, and then press the [Enter] button.

## Switching the left and right screens

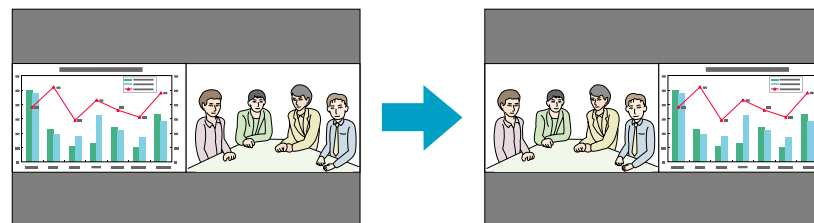


- 1 Press the [Menu] button during Split Screen projection.  
 ☛ "Using the Configuration Menu" p.62


### Using Remote Control

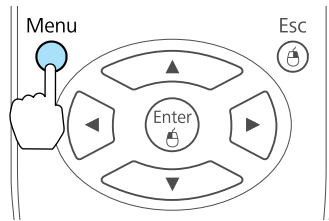

### Using the Control Panel

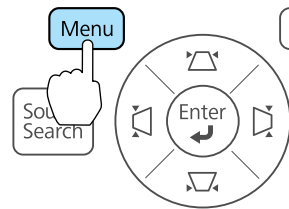

- 2 Select **Swap Screens**, and then press the [Enter] button.  
 The images on the left and right screens will be swapped.

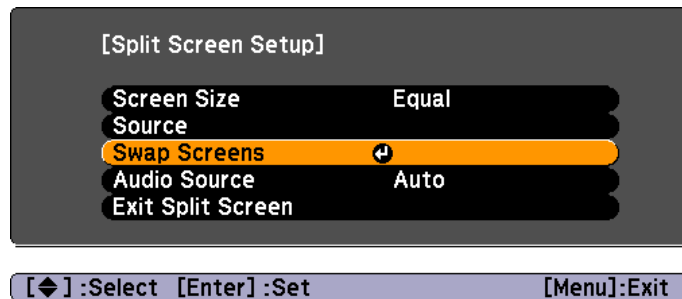


- 3 Press the [Menu] button to end the setting procedure.


## Switching the left and right image sizes

- 1 Press the [Menu] button during Split Screen projection.  
 ☛ "Using the Configuration Menu" p.62


### Using Remote Control

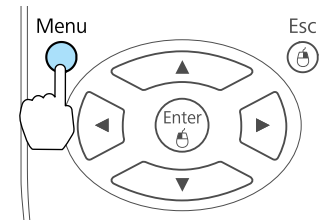


### Using the Control Panel

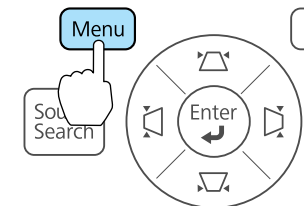

- 2 Select **Screen Size**.

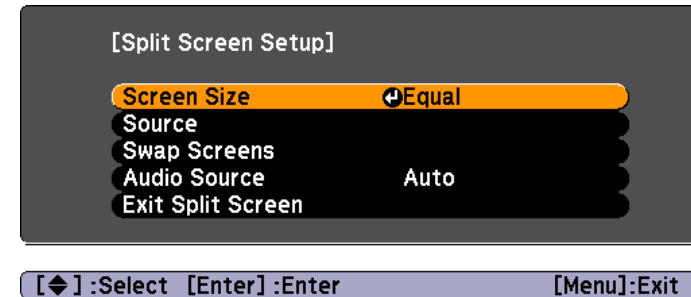

- 3 Select the image size to display and then press the [Enter] button.

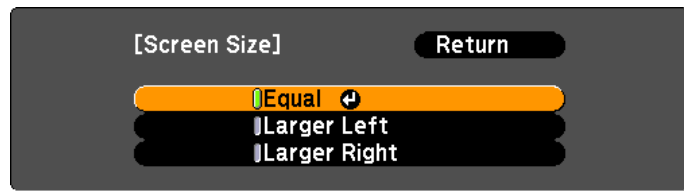

[Esc]:Return [◀]:Select [Enter]:Set [Menu]:Exit


Equal



Larger Left



Larger Right

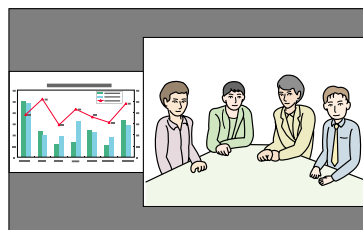

**4** Press the [Menu] button to end the setting procedure.




- You cannot enlarge both the left screen and right screen images at the same time.
- When one image is enlarged, the other image is reduced.
- Depending on the video signals that are input, the images on the left and right may not appear to be the same size even if **Equal** is set.


## Changing the Audio

**1** Press the [Menu] button during Split Screen projection.  
 ☞ "Using the Configuration Menu" p.62


### Using Remote Control

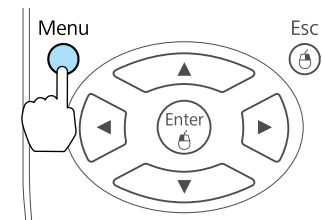

### Using the Control Panel

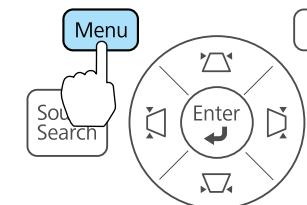


**2** Select **Audio Source**.

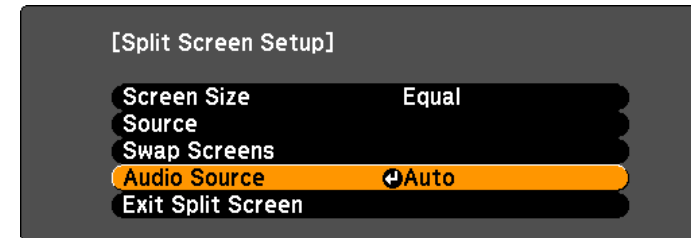

[◀]:Select [Enter]:Enter [Menu]:Exit

**3** Select the audio output, and then press the [Enter] button.  
 When **Auto** is selected, audio is output from the largest screen.  
 If the screen sizes are the same, audio is output from the screen on the left.

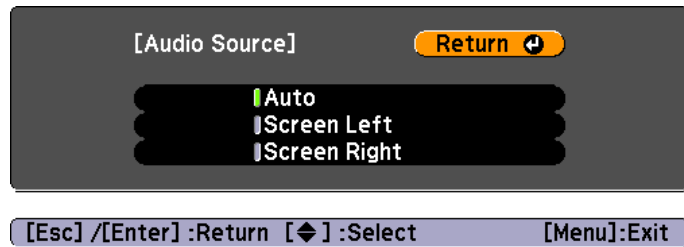

**4** Press the [Menu] button to end the setting procedure.

## Ending Split Screen

Use one of the following operations to end Split Screen.

- Press the [Split] button on the remote control.
- Select **Exit Split Screen** in the **Split Screen Setup** and then press the [Enter] button.
- Press the [Esc] button on the remote control or the control panel.

## Restrictions during Split Screen Projection

### Operating restrictions

The following operations cannot be performed during Split Screen projection.


- Setting the Configuration menu
- E-Zoom
- Changing the aspect mode
- Operations using the [User] button on the remote control
- Help can be displayed only when image signals are not input or when an error or warning notification is displayed.
- The User's Logo is not displayed.

### Restriction relating to images

- The default values for the **Image** menu are applied to the image on the right screen. However, the settings for the image projected on the left screen are applied to the image on the right screen for the **Color Mode**, **Abs. Color Temp.**, and **Color Adjustment**.
- **Auto Iris** does not function.
  - ☞ "Image Menu" p.65


## Hiding the Image and Sound Temporarily (A/V Mute)

You can use this when you want to focus the audience's attention on what you are saying, or if you do not want to show details such as when you are changing between files during presentations from a computer.

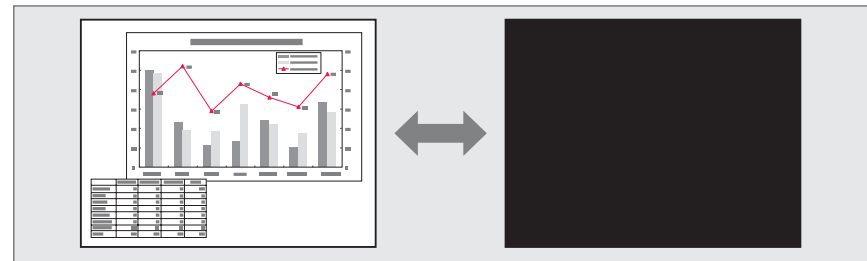

Each time you press the [A/V Mute] button, A/V Mute turns on or off.

### Remote control

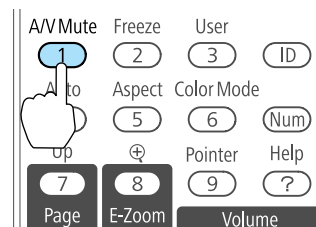



- If you use this function when projecting moving images, the images and sound continue to be played back by the source, and you cannot return to the point where A/V Mute was activated.
- You can select the screen displayed when the [A/V Mute] button is pressed from the Configuration menu.
  - ☛ **Extended - Display - A/V Mute p.69**
- The lamp is still lit during A/V Mute, so the lamp hours continue to accumulate.




- Audio does not stop.
- For moving images, the images continue to play back while the screen is frozen, so it is not possible to resume projection from the point where the screen was frozen.
- If the [Freeze] button is pressed while the Configuration menu or the Help screen is displayed, the menu or the Help screen that is displayed is closed.
- Freeze still works while E-Zoom is being used.

## Freezing the Image (Freeze)

When Freeze is activated on moving images, the frozen image continues to project on the screen, so you can project a moving image one frame at a time like a still photo. Also, you can perform operations such as changing between files during presentations from a computer without projecting any images if the Freeze function is activated beforehand.


Each time you press the [Freeze] button, Freeze turns on or off.

### Remote control

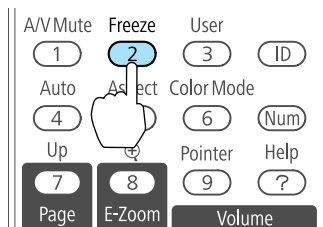

## Pointer Function (Pointer)


This allows you to move a Pointer icon on the projected image, and helps you draw attention to the area you are talking about.

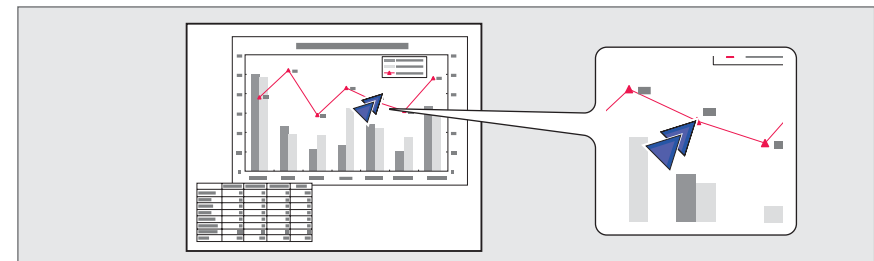

### 1 Display the Pointer.

Each time you press the [Pointer] button, the pointer appears or disappears.


### Remote control

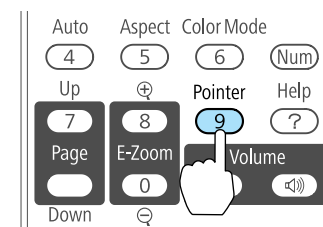



## 2 Move the Pointer icon (↗).

### Remote control

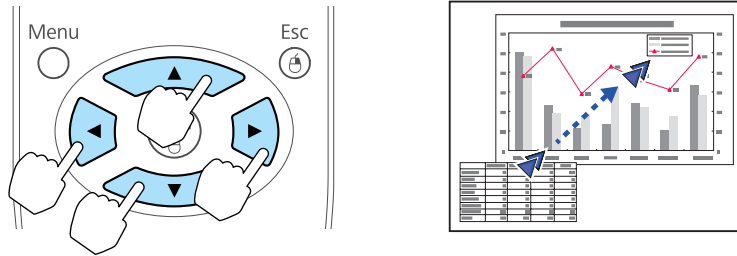

When pressed in conjunction with the adjacent [↶], [↷], [↵], and [↷] buttons, the pointer can be moved diagonally.




You can use **Pointer Shape** to set the shape of the pointer icon.

🖱️ **Settings - Pointer Shape** [p.68](#)

## Enlarging Part of the Image (E-Zoom)


This is useful when you want to expand images to see them in greater detail, such as graphs and tables.

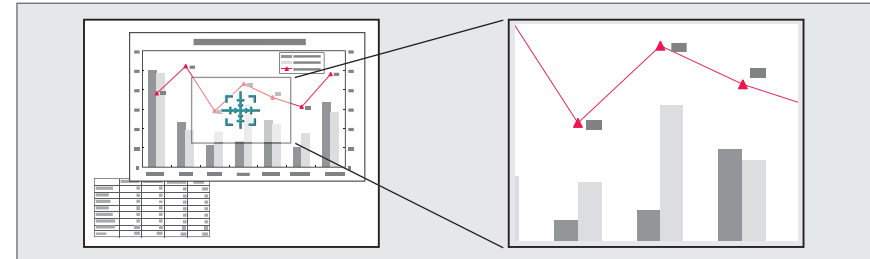


### 1 Start E-Zoom.

Press the [⊕] button to display the Cross (⊕).

### Remote control

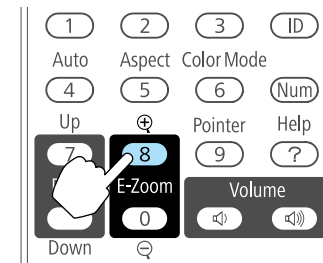


- 2 Move the Cross (⊕) to the area of the image that you want to enlarge.

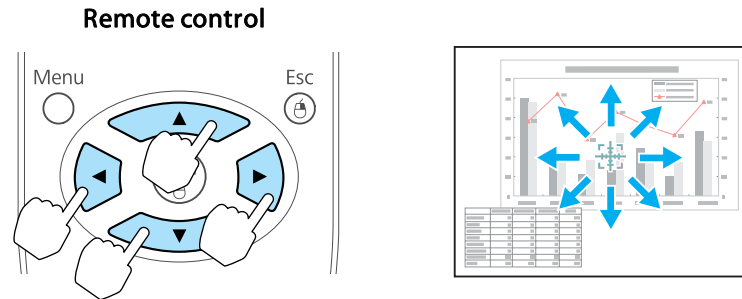

When pressed in conjunction with the adjacent [⬆], [⬇], [⬅], and [➡] buttons, the pointer can be moved diagonally.

- 3 Enlarge.

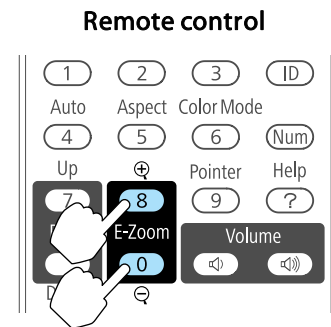

[⊕] button: Expands the area each time it is pressed. You can expand quickly by holding the button down.

[⊖] button: Reduces images that have been enlarged.


[Esc] button: Cancels E-Zoom.



- The enlargement ratio appears on the screen. The selected area can be enlarged to between 1 to 4 times in 25 incremental steps.
- During enlarged projection, press the [⬆], [⬇], [⬅], and [➡] buttons to scroll the image.

## Using the Remote Control to Operate the Mouse Pointer (Wireless Mouse)

When the USB port of a computer and the USB (TypeB) port on the projector are connected with a commercially available USB cable, you can use the remote control to control the computer's mouse pointer.

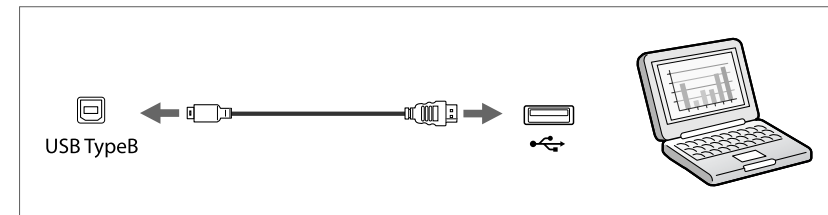

This is available when projecting images from a computer connected to the Computer1, Computer2, or HDMI ports.


The following operating systems are compatible with Wireless Mouse.

	Windows	Mac OS
<b>OS</b>	Windows 98 Windows 98SE Windows Me Windows 2000 Windows XP Windows Vista Windows 7	Mac OS X 10.3.x Mac OS X 10.4.x Mac OS X 10.5.x Mac OS X 10.6.x

It may not be possible to use the Wireless Mouse function under some versions of the operating systems.


Once the connection has been made, the mouse pointer can be operated as follows.

## Moving the mouse pointer

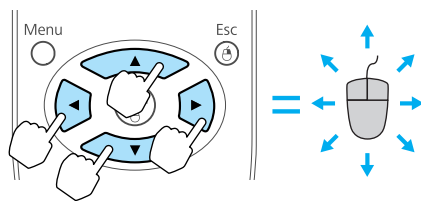

[Up] [Down] [Left] [Right] buttons:  
Moves the mouse pointer.


## Mouse clicks

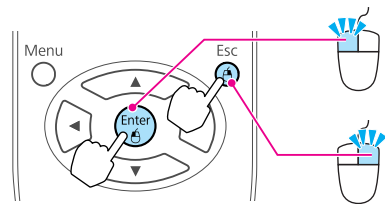

[Enter] button: Left click. Press quickly twice to double-click.

[Esc] button: Right click.


## Drag and drop

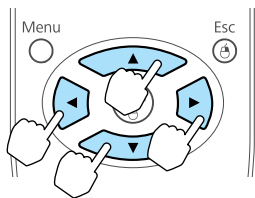

While holding down the [Enter] button, press the [Up], [Down], [Left], and [Right] buttons.

Release the [Enter] button to drop at the desired location.

## Page Up/Down

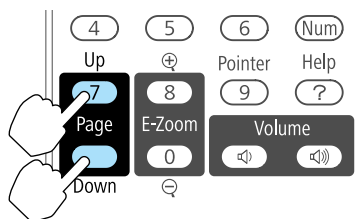

[Up] button: Moves to the previous page.

[Down] button: Moves to the next page.











- When pressed in conjunction with the adjacent [Up], [Down], [Left], and [Right] buttons, the pointer can be moved diagonally.
- If the mouse button settings are set to reverse on the computer, the operation of the remote control buttons will also be reversed.
- The Wireless Mouse function cannot be used while the following functions are being used.
  - While the Configuration menu is being displayed
  - While a help menu is being displayed
  - While the E-Zoom function is being used
  - While a user's logo is being captured
  - While a pointer function is being used
  - While adjusting sound volume
  - While displaying a Test Pattern
  - While Color Mode is being set
  - While Color Mode name is being displayed
  - While the Source name is being displayed
  - While switching input source
  - While Message Broadcasting is being displayed

## Setting the ID and Using the Remote Control

   
When an ID is set for the projector and the remote control, you can use the remote control to operate only the projector with a matching ID. This is useful when managing multiple projectors.

You can set an ID for the projector within a range of "1" to "9". The default value is Off.


You can set an ID for the remote control within a range of "0" to "9". The default value is "0". The following table shows the possible combinations of Projector ID and remote control ID.

Operation	Combinations		Descriptions
Possible		Projector ID: 1	The projector ID and the remote control ID are identical, therefore you can operate the projector with the remote control.
		Remote control ID: 1	
Possible		Projector ID: Off	When the Projector ID is Off, you can operate with the remote control regardless of the remote control ID setting.
		Remote control ID: 1	
Possible		Projector ID: 1	When the remote control ID is "0", you can operate with the remote control regardless of the Projector ID setting.
		Remote control ID: 0	
Not possible		Projector ID: 1	The Projector ID and the remote control ID do not match, therefore you cannot operate the projector with the remote control.
		Remote control ID: 3	


## Setting the Projector ID

- 1 Press the [Menu] button while projecting.  
 "Using the Configuration Menu" [p.62](#)


### Using Remote Control

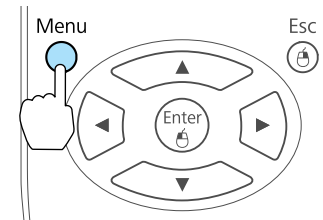


### Using the Control Panel

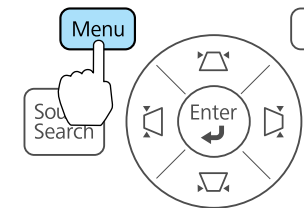

- 2 Select **Projector ID** from **Extended**.

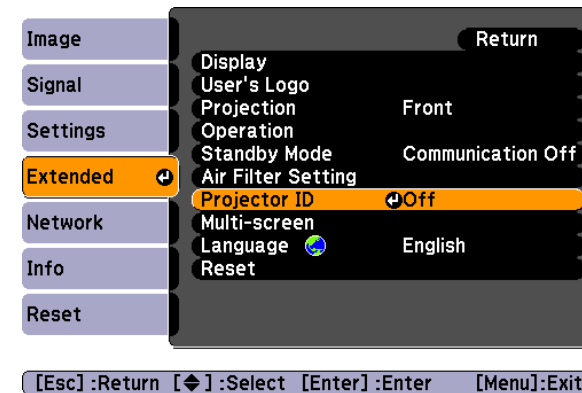

- 3 Choose the ID you want to set and press the [Enter] button.

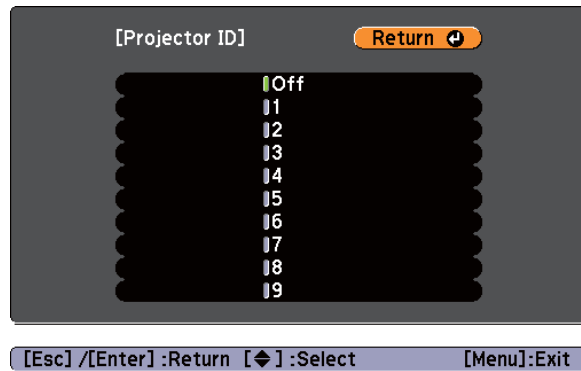


- 4 Press the [Menu] button to end the setting procedure.


## Setting the remote control ID

Set the ID on the remote control each time you switch the projector power on. When the projector is turned on, the remote control ID is set to "0" (that is, you can operate the projector with the remote control regardless of the projector ID).

- 1 Point the remote control at the remote receiver of the target projector and press the [ID] button on the remote control.  
When you press the ID button, the current Projector ID is displayed on the projection screen. It disappears in about three seconds.

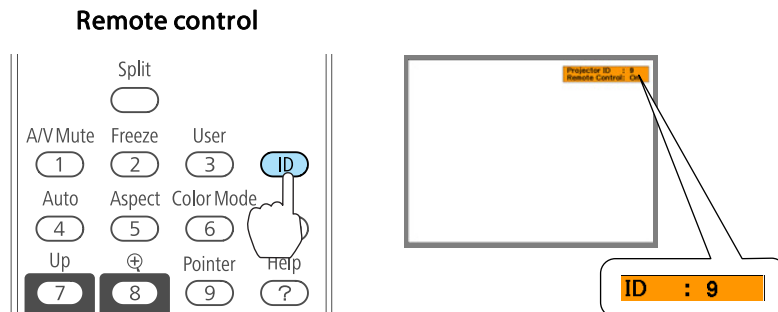

- 2 While holding the [ID] button, press the number button that matches the ID of the projector you want to operate.

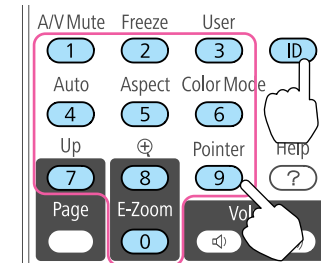

Once this setting has been made, the projector that can be operated by the remote control is limited.



When you power off the projector, the remote control ID is reset to "0" (that is, you can operate the projector with the remote control regardless of the projector ID).

## Correcting Color when Projecting from Multiple Projectors

When multiple projectors are lined up and projecting images, you can correct the brightness and color tone of each projector's image with multi-screen color adjustment so that the colors of images from each projector match closely.



In some cases the brightness and color tone may not match completely even after correction.

## Summary of correction procedure

When multiple projectors are set up and you need to make corrections, use the following procedure to correct one projector at a time.

### 1. Set the projector ID and the remote control ID.

Set a projector ID for the target projector, then set the same ID for the remote control, so that you can limit the operation to one target projector.

☛ "Setting the ID and Using the Remote Control" p.51

### 2. Correct the color difference.

You can carry out color correction when projecting from multiple projectors. You can adjust from black to white in five stages called levels 1 to 5, and in each of these 5 levels you can adjust the following two points.

- Correcting brightness  
You can correct the image brightness to make them all equal.
- Correcting color  
You can correct the image color so that they match closely.


## Correcting

After setting up the projectors, correct the brightness and tone for each projector to reduce the differences.

### 1 Press the [Menu] button.

☛ "Using the Configuration Menu" p.62

### 2 Select **Multi-screen** from **Extended**.

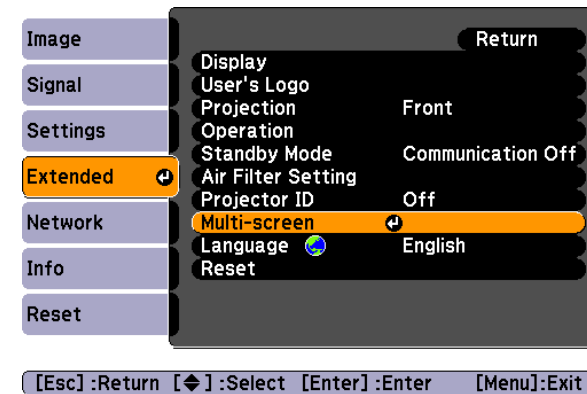

### 3 Select the level to be corrected in **Adjustment Level**.

- Each time a level is selected, the pattern of the level selected is displayed.
- You can start correcting from any level, usually you can make it darker or lighter by correcting 1 to 5 or 5 to 1.

### 4 Correct the brightness with **Brightness Correct**.

- When you select **Level 5**, all the images are adjusted to the darkest image from multiple projectors.
- When you select **Level 1**, all the images are adjusted to the brightest image from multiple projectors.
- When you select **Level 2** to **Level 4**, all the images are adjusted to the mid-range brightness image from multiple projectors.
- Because each time the [Enter] button is pressed the image displayed changes between the pattern display and the actual image, you can check the correction results and make corrections in the actual image.

### 5 Correct the **Color Correct. (G/R)** and **Color Correct. (B/Y)** settings.

### 6 Repeat procedures 3 to 5 until corrections are finished.

- When all corrections are finished, press the [Menu] button to finish making settings.

## Saving a User's Logo

You can save the image that is currently being projected as a User's Logo.




Once a User's Logo has been saved, the logo cannot be returned to the factory default.


- Project the image you want to save as the User's Logo, and then press the [Menu] button.

☛ "Using the Configuration Menu" p.62


### Using the remote control

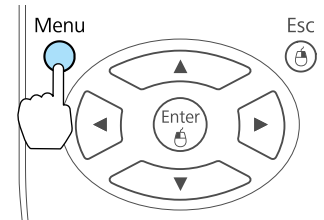

### Using the control panel

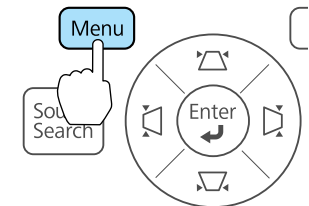

- Select **User's Logo** from **Extended**.

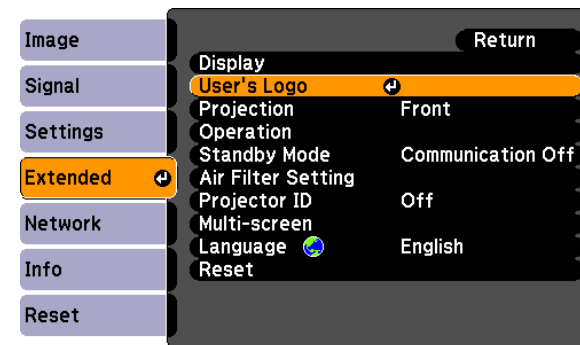

[Esc]:Return [◆]:Select [Enter]:Enter [Menu]:Exit



- When **User's Logo Protect** from **Password Protect** is set to **On**, a message is displayed and the User's Logo cannot be changed. You can make changes after setting **User's Logo Protect** to **Off**.
  - ☛ "Managing Users (Password Protect)" p.57
- If **User's Logo** is selected when Keystone, E-Zoom, or Aspect are being performed, the function currently being performed is cancelled.

**3** When the message "Choose this image as the User's Logo?" is displayed, select **Yes**.





When you press the [Enter] button on the remote control or the control panel, the screen size may change depending on the signal to match the actual resolution of the image signal.

**4** Move the box to select the part of the image to use as the User's Logo.

You can perform the same operations from the projector's control panel.


Remote control

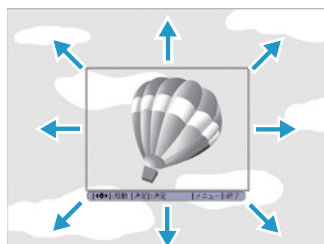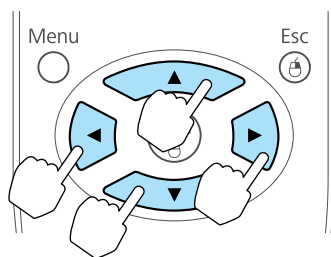

You can save at 400x300 dots in size.

**5** When you press the [Enter] button and the message "Select this image?" is displayed, select **Yes**.

**6** Select the zoom factor from the zoom setting screen.

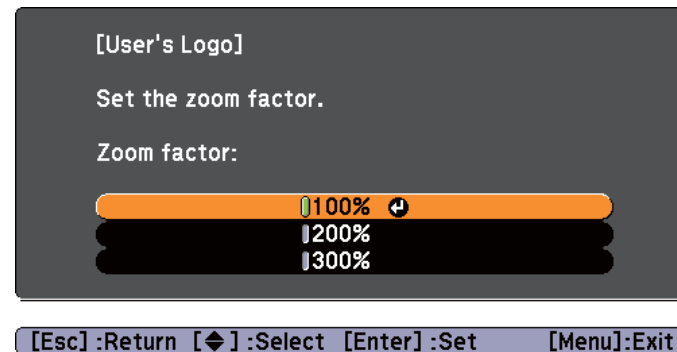

**7** When the message "Save this image as the User's Logo?" is displayed, select **Yes**.

The image is saved. After the image has been saved, the message "Completed." is displayed.



- When a User's Logo is saved, the previous User's Logo is erased.
- Saving the User's Logo may take approximately 15 seconds. Do not operate the projector or any connected equipment while it is saving, otherwise malfunctions may occur.



The projector has the following enhanced security functions.

- **Password Protect**  
You can limit who can use the projector.
- **Control Panel Lock**  
You can prevent people changing the settings on the projector without permission.  
☛ "Restricting Operation (Control Panel Lock)" [p.59](#)
- **Anti-Theft Lock**  
The projector is equipped with the following anti-theft security device.  
☛ "Anti-Theft Lock" [p.60](#)

## Managing Users (Password Protect)

When Password Protect is activated, people who do not know the password cannot use the projector to project images even if the projector power is on. Furthermore, the user's logo that is displayed when you turn on the projector cannot be changed. This acts as an anti-theft device as the projector cannot be used even if it is stolen. At the time of purchase, Password Protect is not activated.

### Kinds of Password Protect

The following three kinds of Password Protect settings can be made according to how the projector is being used.

- **Power On Protect**  
When **Power On Protect** is **On**, you need to enter a preset password after the projector is plugged in and turned on (this also applies to Direct Power On). If the correct password is not entered, projection does not start.

- **User's Logo Protect**

Even if someone tries to change the User's Logo set by the owner of the projector, it cannot be changed. When **User's Logo Protect** is set to **On**, the following setting changes for the User's Logo are prohibited.

- Capturing a User's Logo
- Setting **Display Background**, **Startup Screen**, or **A/V Mute** from **Display**  
☛ **Extended - Display** [p.69](#)

- **Network Protect**

When **Network Protect** is set to **On**, changing the settings for **Network** is prohibited.


- ☛ "Network Menu" [p.71](#)

## Setting Password Protect

Use the following procedure to set Password Protect.

- 1** During projection, hold down the [Freeze] button for about five seconds.


The Password Protect setting menu is displayed.

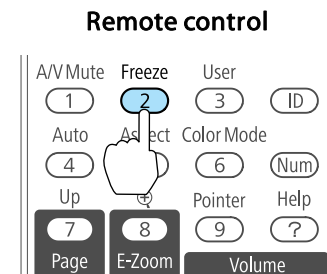



- If Password Protect is already activated, you must enter the password.  
If the Password is entered correctly, the Password Protect setting menu is displayed.
- "Entering the Password" p.58
- When the password is set, stick the supplied password protect sticker in a visible position on the projector as a further theft deterrent.

**2** Select the type of Password Protect you want to set, and then press the [Enter] button.

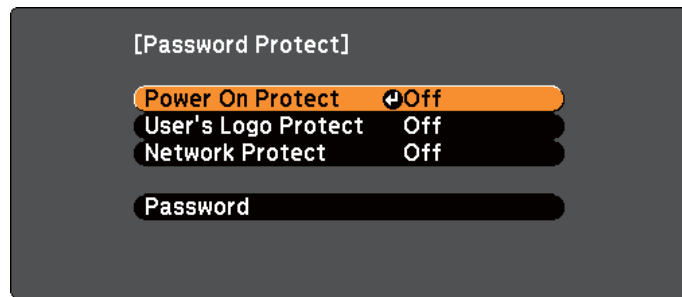

[◀]:Select [Enter]:Enter [Menu]:Exit


**3** Select **On**, and then press the [Enter] button.  
Press the [Esc] button, the screen displayed in step 2 is displayed again.

**4** Set the password.

- (1) Select **Password**, and then press the [Enter] button.
- (2) When the message "Change the password?" is displayed, select **Yes** and then press the [Enter] button. The default password is set to "0000". Change this to your own desired Password. If you select **No**, the screen displayed in step 2 is displayed again.

(3) While holding down the [Num] button, enter a four digit number using the numeric buttons. The number entered is displayed as "\*\*\*\*". When you enter the fourth digit, the confirmation screen is displayed.

### Remote control

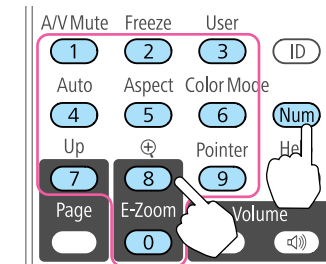


(4) Re-enter the password.  
"Password accepted." is displayed.  
If you enter the password incorrectly, a message is displayed prompting you to re-enter the password.

## Entering the Password

When the password entry screen is displayed, enter the password using the numeric buttons on the remote control.

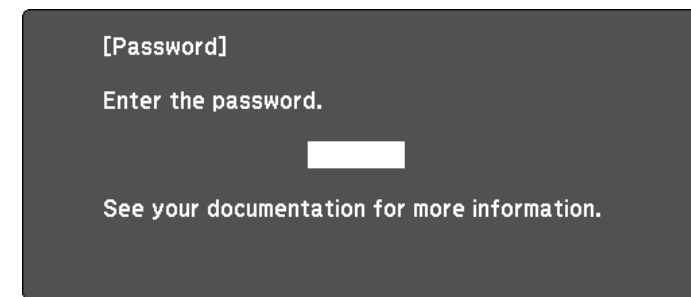

While holding down the [Num] button, enter the password by pressing the numeric buttons.



[0-9]:Enter

When you enter the correct password, Password Protect is temporarily released.

### Attention


- If an incorrect password is entered three times in succession, the message "The projector's operation will be locked." is displayed for approximately five minutes, and then the projector switches to standby mode. If this happens, disconnect the power plug from the electrical outlet and then reinsert it and turn the projector's power back on. The projector displays the password entry screen again so that you can enter the correct password.
- If you have forgotten the password, make a note of the "Request Code: xxxxx" number that appears on the screen and contact the nearest address provided in the Epson Projector Contact List.  
 [Epson Projector Contact List](#)
- If you continue to repeat the above operation and input the wrong Password thirty times in succession, the following message is displayed and the projector does not accept any more Password entries. "The projector's operation will be locked." "Contact Epson as described in your documentation."  
 [Epson Projector Contact List](#)


## Restricting Operation (Control Panel Lock)

Perform one of the following to lock the operation buttons on the control panel.


- Full Lock  
All of the buttons on the control panel are locked. You cannot perform any operations from the control panel, including turning the power on or off.
- Partial Lock  
All of the buttons on the control panel, except for the [⏻] button, are locked.

This is useful at events or shows when you want to deactivate all buttons during projection or at schools when you want to limit button operation. The projector can still be operated using the remote control.


- 1 Press the [Menu] button while projecting.  
 "Using the Configuration Menu" [p.62](#)

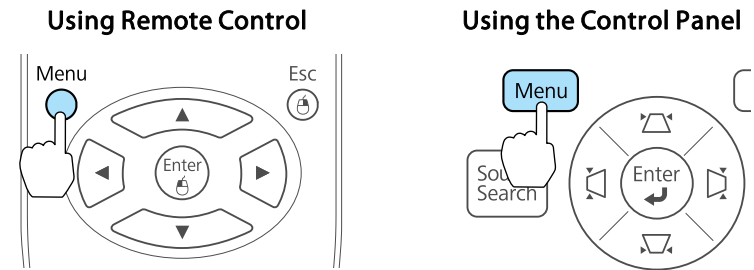

- 2 Select **Control Panel Lock** from **Settings**.

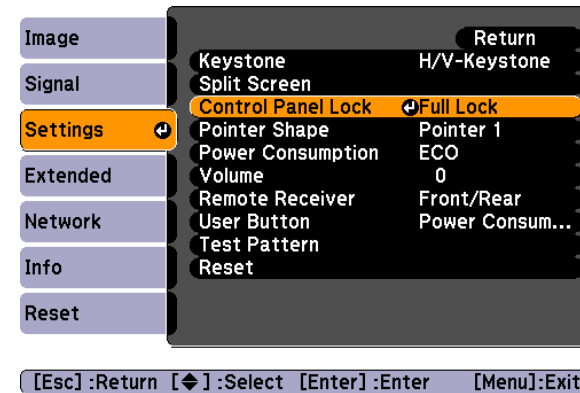

- 3 Select either **Full Lock** or **Partial Lock** according to your purpose.

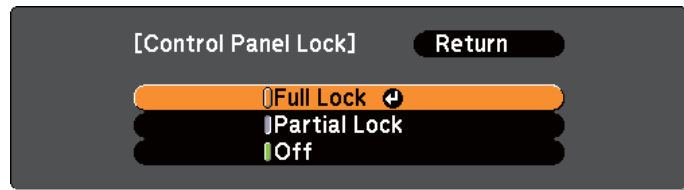


[Esc]:Return [◆]:Select [Enter]:Set [Menu]:Exit

- 4** Select **Yes** when the confirmation message is displayed.  
The control panel buttons are locked according to the setting you chose.




You can release the control panel lock by one of the following two methods.

- Select **Off** from **Control Panel Lock**.  
 **Settings - Control Panel Lock** p.68
- Hold down the [Enter] button on the control panel for about seven seconds, a message is displayed and the lock is released.

## Anti-Theft Lock


The projector is equipped with the following types of anti-theft security devices.

- Security slot  
The security slot is compatible with the Microsaver Security System manufactured by Kensington.  
See the following for more details on the Microsaver Security System.  
 <http://www.kensington.com/>
- Security cable installation point  
A commercially available theft-prevention wire lock can be passed through the installation point to secure the projector to a desk or pillar.

### Installing the wire lock

Pass an anti-theft wire lock through the installation point.

See the documentation supplied with the wire lock for locking instructions.

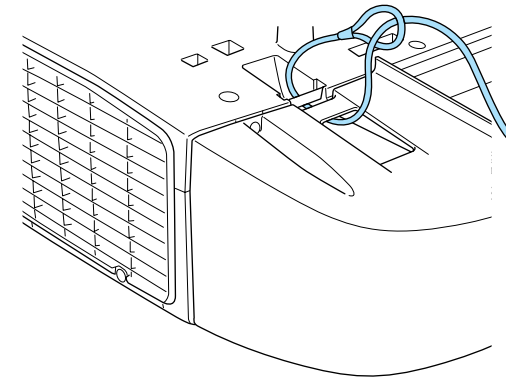




# Configuration Menu

This chapter explains how to use the Configuration menu and its functions.


This section explains how to use the Configuration menu.

Although steps are explained using the remote control as an example, you can perform the same operations from the control panel. Check the guide under the menu for the available buttons and their operations.


## 1 Display the Configuration menu screen.

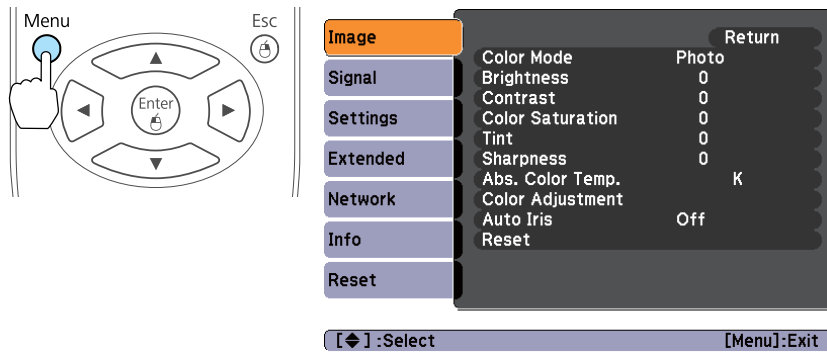


## 2 Select a top menu item.

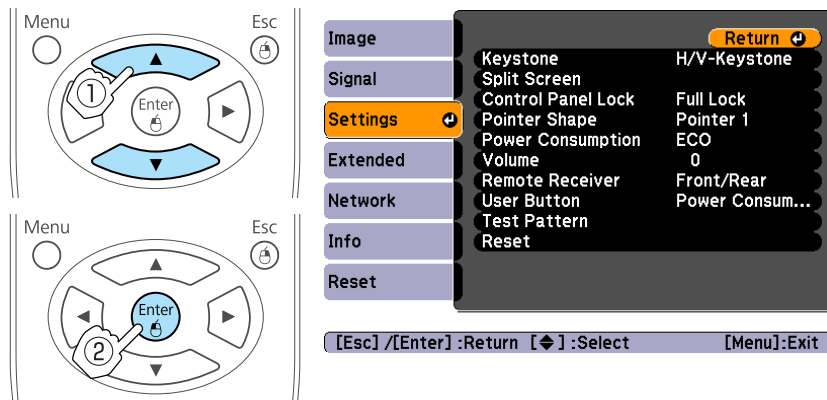

## 3 Select a submenu item.

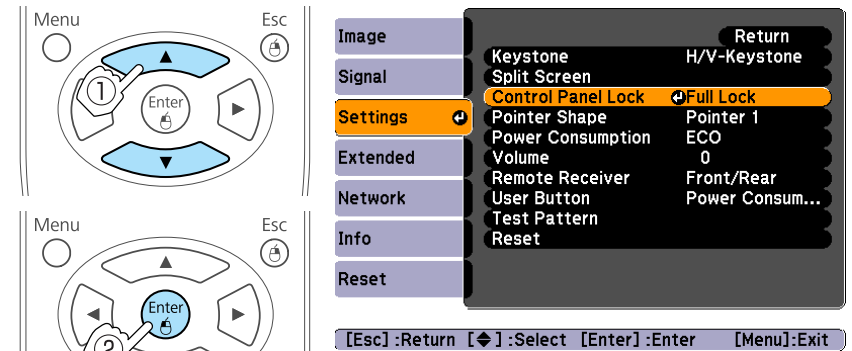

## 4 Change settings.

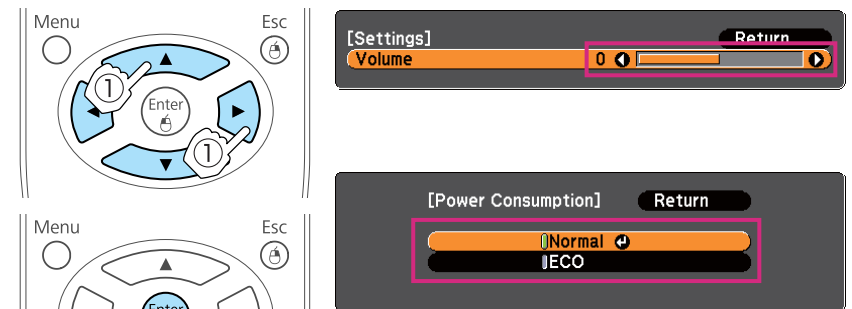

## 5 Press the [Menu] button to finish making settings.

## Configuration Menu Table

Settable items vary depending on the model being used and the image signal and source being projected.

Top Menu Name	Submenu Name	Setting Values
Image menu ☛ p.65	Color Mode	Dynamic, Presentation, Theatre, Photo, sRGB, Blackboard, Whiteboard, and Customized
	Brightness	-24 - 24
	Contrast	-24 - 24
	Color Saturation	-32 - 32
	Tint	-32 - 32
	Sharpness	-5 - 5
	Abs. Color Temp.	5000K to 10000K
	Color Adjustment	Red: -16 to 16 Green: -16 to 16 Blue: -16 to 16 R: -64 to 64 G: -64 to 64 B: -64 to 64 C: -64 to 64 M: -64 to 64 Y: -64 to 64
	Auto Iris	On and Off
Signal menu ☛ p.66	Auto Setup	On and Off
	Resolution	Auto, Wide, and Normal
	Tracking	Varies depending on the input signal.
	Sync.	0 - 31
	Position	Up, Down, Left, and Right

Top Menu Name	Submenu Name	Setting Values
	Progressive	Off, Video, and Film/Auto
	Noise Reduction	Off, NR1, and NR2
	HDMI Video Range	Auto, Normal, and Expanded
	Input Signal	Auto, RGB, and Component
	Video Signal	Auto, NTSC, NTSC4.43, PAL, M-PAL, N-PAL, PAL60, and SECAM
	Aspect	Normal, Auto, 4:3, 16:9, Full, Zoom, and Native
	Overscan	Auto, Off, 4%, and 8%
Settings menu ☛ p.68	Keystone	H/V-Keystone and Quick Corner
	Split Screen	-
	Control Panel Lock	Full Lock, Partial Lock, and Off
	Pointer Shape	Pointer 1, Pointer 2, Pointer 3
	Power Consumption	Normal and ECO
	Volume	0 - 20
	Remote Receiver	Front/Rear, Front, Rear and Off
	User Button	Power Consumption, Info, Progressive, Test Pattern, Multi-screen, and Resolution
	Test Pattern	-
Extended menu ☛ p.69	Display	Messages, Display Background, Startup Screen, and A/V Mute
	User's Logo	-
	Projection	Front, Front/Ceiling, Rear, and Rear/Ceiling
	Operation	Direct Power On, Sleep Mode, Sleep Mode Timer, Trigger Out, and High Altitude Mode

Top Menu Name	Submenu Name	Setting Values
	Standby Mode	Communication On and Communication Off
	Air Filter Setting	Clean Notice, Clean Notice Timing
	Projector ID	Off and 1 to 9
	Multi-screen	Adjustment Level, Brightness Correct., Color Correct. (G/R), and Color Correct. (B/Y)
	Language	14 or 34 languages*
Network menu ☛ p.71	Net. Info. - Wireless LAN	-
	Net. Info. - Wired LAN	-
	Network Configuration	Basic ☛ p.73 Wireless LAN ☛ p.74 Security ☛ p.75 Wired LAN ☛ p.77 Mail ☛ p.78 Others ☛ p.78 Reset ☛ p.79
Info menu ☛ p.80	Lamp Hours	-
	Source	-
	Input Signal	-
	Resolution	-
	Video Signal	-
	Refresh Rate	-
	Sync Info	-
	Status	-
	Serial Number	-
Event ID	-	

Top Menu Name	Submenu Name	Setting Values
Reset menu ☛ p.81	Reset All	-
	Reset Lamp Hours	-


\* The number of supported languages differs depending on the region where the projector is used.



## Image Menu

Settable items vary depending on the image signal and source currently being projected. Setting details are saved for each image signal.

☛ "Automatically Detect Input Signals and Change the Projected Image (Source Search)" [p.31](#)

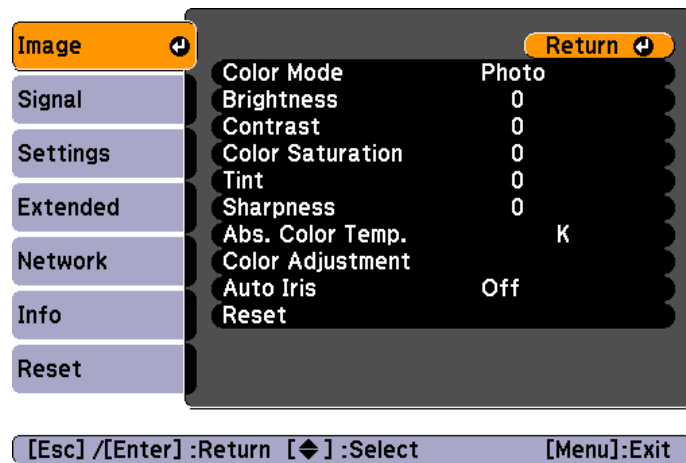

Submenu	Function
<b>Color Mode</b>	You can select the quality of the image to suit your surroundings. ☛ "Selecting the Projection Quality (Selecting Color Mode)" <a href="#">p.37</a>
<b>Brightness</b>	You can adjust the image brightness.
<b>Contrast</b>	You can adjust the difference between light and dark in the images.
<b>Color Saturation</b>	(Adjustment is only possible when component video, composite video, or S-Video signals are being input.) You can adjust the color saturation for the images.


Submenu	Function
<b>Tint</b>	(Adjustment is possible when a component video signal is input. If a composite video or S-video signal is input, adjustment is only possible when NTSC signals are being input.) You can adjust the image tint.
<b>Sharpness</b>	You can adjust the image sharpness.
<b>Abs. Color Temp.</b>	(This item cannot be selected if <b>Color Mode</b> is set to <b>sRGB</b> .) You can adjust the overall tint of the image. You can adjust tints in 10 stages from 5000 K to 10000 K. The image is tinted blue when a high value is selected and tinted red when a low value is selected.
<b>Color Adjustment</b>	(This item cannot be selected if <b>Color Mode</b> is set to <b>sRGB</b> .) <ul style="list-style-type: none"> <li>When <b>Color Mode</b> is set to anything other than <b>Customized</b>: You can adjust the color strength for <b>Red</b>, <b>Green</b>, and <b>Blue</b> individually.</li> <li>When <b>Color Mode</b> is set to <b>Customized</b>: You can adjust the <b>Hue</b>, <b>Saturation</b>, and <b>Brightness</b> for <b>R</b> (red), <b>G</b> (green), <b>B</b> (blue), <b>C</b> (cyan), <b>M</b> (magenta), and <b>Y</b> (yellow) individually.</li> </ul>
<b>Auto Iris</b>	(This item can be set only if <b>Color Mode</b> is set to <b>Dynamic</b> , <b>Theatre</b> , or <b>Customized</b> .) Set to <b>On</b> to adjust the iris to obtain the optimum light for images being projected. The setting is stored for each Color Mode. ☛ "Setting Auto Iris" <a href="#">p.38</a>
<b>Reset</b>	You can reset all adjustment values for the <b>Image</b> menu to their default settings. See the following to return all menu items to their default settings. ☛ "Reset Menu" <a href="#">p.81</a>

## Signal Menu

Settable items vary depending on the image signal and source currently being projected. Setting details are saved for each image signal.

You cannot make settings in the Signal menu when the input source is USB or LAN.

☛ "Automatically Detect Input Signals and Change the Projected Image (Source Search)" [p.31](#)

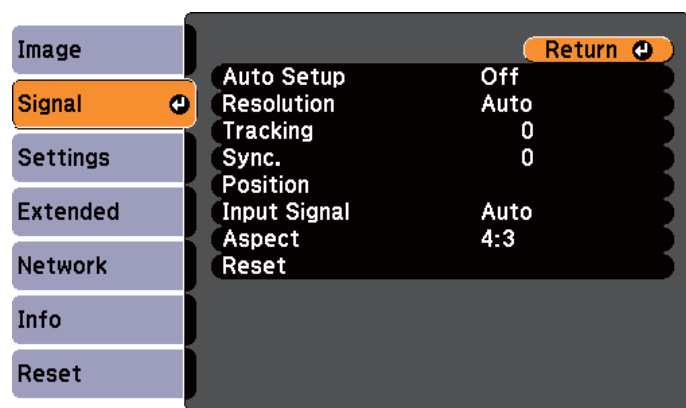

[Esc] / [Enter] : Return [↵] : Select [Menu] : Exit


Sub-menu	Function
<b>Auto Setup</b>	(Only available when a computer's analog RGB signal is input.) Set to <b>On</b> to automatically adjust the image to the optimum state when the input signal changes.
<b>Resolution</b>	(Only available when a computer's analog RGB signal is input.) Set to <b>Auto</b> to automatically identify the resolution of the input signal. If images are not projected correctly when set to <b>Auto</b> , for example if some of the image is missing, adjust to <b>Wide</b> for wide screens, or set to <b>Normal</b> for 4:3 or 5:4 screens depending on the connected computer.

Sub-menu	Function
<b>Tracking</b>	(Adjustment is only possible when a computer's analog RGB signal is input.) You can adjust computer images when vertical stripes appear in the images.
<b>Sync.</b>	(Adjustment is only possible when a computer's analog RGB signal is input.) You can adjust computer images when flickering, fuzziness, or interference appear in the images.
<b>Position</b>	(This setting is unavailable when the input source is HDMI) You can adjust the display position up, down, left, and right when a part of the image is missing so that the whole image is projected.
<b>Progressive</b>	(This can be set when composite video or S-video signals are being input. If a component video or RGB video signal is input, this can be set only when 480i/576i/1080i signals are being input.) <u>Interlace</u> (i) signal is converted to <u>Progressive</u> (p). (IP conversion) <b>Off:</b> Ideal for images with a large amount of movement. <b>Video:</b> This is ideal for viewing general video images. <b>Film/Auto:</b> This is ideal for movie films, computer graphics, and animation.
<b>Noise Reduction</b>	(This cannot be set when a digital RGB signal is input, or when an interlace signal is being displayed when <b>Progressive</b> is set to <b>Off</b> .) Smoothes out rough images. There are two modes. Select your favorite setting. It is recommended that this is set to <b>Off</b> when viewing image sources in which noise is very low, such as for DVDs.

Sub-menu	Function
<b>HDMI Video Range</b>	<p>(Available when the input source is HDMI)</p> <p>When the projector's HDMI port is connected to a DVD player, set the projector's video range according to the DVD player's video range setting.</p> <p>When set to <b>Auto</b>, the video range for the input signal is automatically determined. However, this only occurs when the HDMI port of the connected device is connected to the projector's HDMI port.</p>
<b>Input Signal</b>	<p>You can select the input signal from the Computer1 port or the Computer2 port.</p> <p>If set to <b>Auto</b>, the input signal is set automatically according to the connected device.</p> <p>If colors do not appear correctly when set to <b>Auto</b>, select the appropriate signal according to the connected device.</p>
<b>Video Signal</b>	<p>You can select the input signal from the S-Video port or the Video port. If set to <b>Auto</b>, video signals are recognized automatically. If interference appears in the image or a problem occurs such as no image is being projected when set to <b>Auto</b>, select the appropriate signal according to the connected equipment.</p>
<b>Aspect</b>	<p>You can set the <a href="#">Aspect Ratio</a> for projected images.</p> <p>☛ "Changing the Aspect Ratio" p.39</p>
<b>Overscan</b>	<p>(This can be set only when a component video signal or RGB video signal is being input.)</p> <p>Changes the output image ratio (the range of the projected image). You can set the cropping range to <b>Off</b>, <b>4%</b>, or <b>8%</b>. When the source is HDMI, <b>Auto</b> is available. When <b>Auto</b> is selected, it automatically changes to <b>Off</b> or <b>8%</b> according to the input signal. However, this only occurs when the HDMI port of the connected device is connected to the projector's HDMI port.</p>




Sub-menu	Function
<b>Reset</b>	<p>You can reset all adjustment values on the <b>Signal</b> menu to their default settings, except for <b>Input Signal</b>.</p> <p>See the following to return all menu items to their default settings.</p> <p>☛ "Reset Menu" p.81</p>
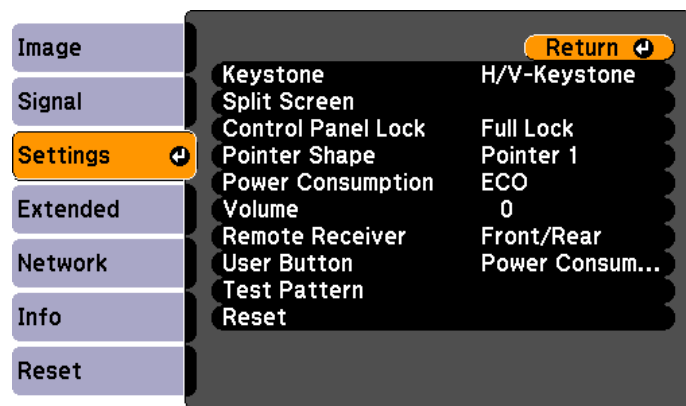
## Settings Menu



[Esc] / [Enter] : Return [◀] : Select [Menu] : Exit

Sub-menu	Function
<b>Keystone</b>	<p>You can correct keystone distortion.</p> <ul style="list-style-type: none"> <li>When <b>H/V-Keystone</b> is selected: Adjust <b>V-Keystone</b> and <b>H-Keystone</b> to correct horizontal and vertical keystone distortion.</li> <li>When <b>Quick Corner</b> is selected: Select and correct the four corners of the projected image. ☛ "Quick Corner" <a href="#">p.34</a></li> </ul>
<b>Split Screen</b>	<p>You can split the screen into two screens.</p> <p>☛ "Projecting Two Images Simultaneously (Split Screen)" <a href="#">p.43</a></p>
<b>Control Panel Lock</b>	<p>You can use this to restrict operation of the projector's control panel.</p> <p>☛ "Restricting Operation (Control Panel Lock)" <a href="#">p.59</a></p>

Sub-menu	Function
<b>Pointer Shape</b>	<p>You can select the shape of the pointer.</p> <p>Pointer 1: </p> <p>Pointer 2: </p> <p>Pointer 3: </p> <p>☛ "Pointer Function (Pointer)" <a href="#">p.48</a></p>
<b>Power Consumption</b>	<p>You can set the lamp brightness to one of two settings. Select <b>ECO</b> if the images being projected are too bright, such as when projecting images in a dark room or onto a small screen. When <b>ECO</b> is selected, the power consumption is changed as follows, and fan rotation noise during projection is reduced. Electrical consumption: about 18 - 25% decrease</p>
<b>Volume</b>	<p>You can adjust the volume. Setting values are saved for each source.</p>
<b>Remote Receiver</b>	<p>You can limit the reception of the operation signal from the remote control.</p> <p>When set to <b>Off</b>, you cannot perform any operations from the remote control. If you want to make operations from the remote control, hold down the [Menu] button on the remote control or the control panel for at least 15 seconds to reset the setting to its default value.</p>
<b>User Button</b>	<p>You can select an item from the Configuration menu to assign to the remote control's [User] button. By pressing the [User] button the assigned menu item selection/adjustment screen is displayed, allowing you to make one-touch settings/adjustments. You can assign one of the following items to the [User] button.</p> <p><b>Power Consumption, Info, Progressive, Test Pattern, Multi-screen, and Resolution</b></p>

Sub-menu	Function
<b>Test Pattern</b>	When the projector is setup, a test pattern is displayed so that you can adjust the projection without connecting other equipment. While the test pattern is displayed, you can perform keystone correction, zoom adjustment, and focus adjustment. To cancel the Test Pattern, press the [Esc] button on the remote control or the control panel.
<b>Reset</b>	You can reset all adjustment values on the <b>Settings</b> menu to their default settings, except for <b>User Button</b> . See the following to return all menu items to their default settings. ☛ "Reset Menu" <a href="#">p.81</a>

Sub-menu	Function
<b>Display</b>	You can make settings related to the projector's display. <b>Messages:</b> When set to <b>Off</b> , the following items will not be displayed. Item names when the Source, Color Mode, or Aspect Ratio are changed, messages when no signal is being input, and warnings such as High Temp Warning. <b>Display Background*1:</b> You can set the screen background to <b>Black</b> , <b>Blue</b> , or <b>Logo</b> when no image signal is available. <b>Startup Screen*1:</b> Set to <b>On</b> to display the <b>User's Logo</b> when projection starts. <b>A/V Mute*1:</b> You can set the screen displayed when the remote control's [A/V Mute] button is pressed to <b>Black</b> , <b>Blue</b> , or <b>Logo</b> .
<b>User's Logo*1</b>	You can change the user's logo that is displayed as a background during Display Background, A/V Mute, and so on. ☛ "Saving a User's Logo" <a href="#">p.55</a>
<b>Projection</b>	Select from one of the following projection methods depending on how the projector is installed. <b>Front</b> , <b>Front/Ceiling</b> , <b>Rear</b> , and <b>Rear/Ceiling</b> You can change the setting as follows by pressing down the [A/V Mute] button on the remote control for about five seconds. <b>Front ↔ Front/Ceiling</b> <b>Rear ↔ Rear/Ceiling</b> ☛ "Installation Methods" <a href="#">p.18</a>

## Extended Menu



[Esc] / [Enter] : Return [↵] : Select [Menu] : Exit

Sub-menu	Function
<b>Operation</b>	<p><b>Direct Power On:</b> Set to <b>On</b> to turn on the projector simply by plugging it in. When the power cable is plugged in, note that the projector turns on automatically in cases such as a power outage being restored.</p> <p><b>Sleep Mode:</b> When this is set to <b>On</b>, the power is turned off automatically when no image signal is input and no operation is performed within a certain amount of time.</p> <p><b>Sleep Mode Timer:</b> When <b>Sleep Mode</b> is set to <b>On</b>, you can set the time before the projector automatically turns off within a range of 1 to 30 minutes.</p> <p><b>Trigger Out:</b> When this is set to <b>On</b>, the trigger out signal (DC 12 V) is output. External devices are then informed whether the projector is on or off.</p> <p><b>High Altitude Mode:</b> Set this to <b>On</b> when using the projector at an altitude of 1500 m or above.</p>
<b>Standby Mode</b>	<p>If you set <b>Communication On</b>, you can perform the following operations even if the projector is in standby mode.</p> <ul style="list-style-type: none"> <li>Monitoring and controlling the projector via a network. ☛ "Monitoring and Controlling" p.114</li> <li>Outputting images to an external monitor.</li> </ul>
<b>Air Filter Setting</b>	<p><b>Clean Notice:</b> When set to <b>On</b>, a message is displayed when it is time to clean the air filter.</p> <p><b>Clean Notice Timing:</b> Set the timing for the air filter cleaning notification.</p>
<b>Projector ID</b>	<p>Set the ID to a number between <b>1</b> and <b>9</b>. <b>Off</b> indicates that no ID is set.</p> <p>☛ "Setting the Projector ID" p.52</p>

Sub-menu	Function
<b>Multi-screen</b>	<p>You can adjust the hue and brightness of each projected image when multiple projectors are lined up and projecting.</p> <p><b>Adjustment Level:</b> You can adjust from black to white in five stages called Level 1 to 5, and in each of these 5 levels, you can adjust Brightness Correct. and Color Correct.</p> <p><b>Brightness Correct.:</b> Corrects the difference in the brightness of each projector.</p> <p><b>Color Correct. (G/R) / Color Correct. (B/Y):</b> You can correct the difference in the color of each projector.</p> <p>☛ "Correcting Color when Projecting from Multiple Projectors" p.53</p>
<b>Language</b>	You can set the language for messages and menus.
<b>Reset</b>	<p>You can reset <b>Display</b>*1, <b>Operation</b>*2, and <b>Air Filter Setting</b> from the <b>Extended</b> menu to their default settings. See the following to return all menu items to their default settings.</p> <p>☛ "Reset Menu" p.81</p>

\*1 When **User's Logo Protect** is set to **On** in **Password Protect**, settings related to user's logo cannot be changed. You can make changes after setting **User's Logo Protect** to **Off**.


☛ "Managing Users (Password Protect)" p.57

\*2 Except for High Altitude Mode.

## Network Menu

When **Network Protect** is set to **On** in **Password Protect**, a message is displayed and the network settings cannot be changed. Turn **Network Protect Off** and then configure the network.

☛ "Setting Password Protect" [p.57](#)

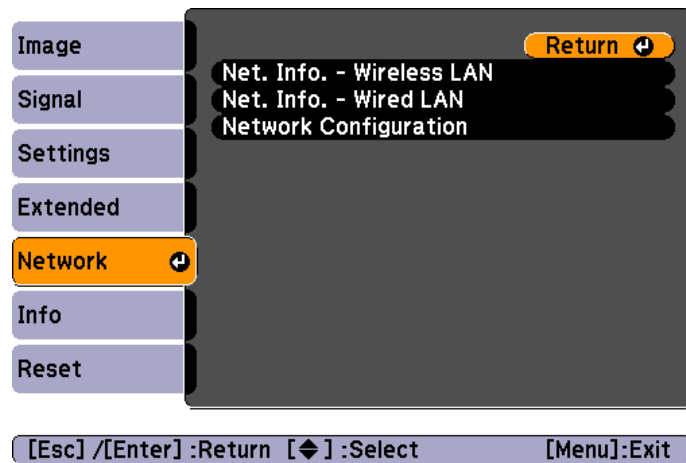

Sub-menu	Function
<b>Net. Info. - Wireless LAN</b>	Displays the following network setting status information. <ul style="list-style-type: none"> <li>• Connection Mode</li> <li>• Antenna Level</li> <li>• Projector Name</li> <li>• SSID</li> <li>• DHCP</li> <li>• IP Address</li> <li>• Subnet Mask</li> <li>• Gateway Address</li> <li>• MAC Address</li> <li>• Region Code*</li> </ul>

Sub-menu	Function
<b>Net. Info. - Wired LAN</b>	Displays the following network setting status information. <ul style="list-style-type: none"> <li>• Projector Name</li> <li>• DHCP</li> <li>• IP Address</li> <li>• Subnet Mask</li> <li>• Gateway Address</li> <li>• MAC Address</li> </ul>
<b>Network Configuration</b>	The following menus are available for setting Network items. <b>Basic, Wireless LAN, Security, Wired LAN, Mail, Others, Reset, and Setup complete</b>

\* Displays available region information for the Wireless LAN unit being used. For more details, contact your local dealer or the nearest address provided in the Epson Projector Contact List.

☛ [Epson Projector Contact List](#)




By using a Web browser of a computer connected to the projector on a network, you can set functions and control the projector. This function is called Web Control. You can easily enter text using a keyboard to make settings for Web Control such as Security settings.

☛ "Changing Settings Using a Web Browser (Web Control)" [p.114](#)

### Notes on operating the Network menu

Selecting from the top menu and sub menus, and changing selected items is the same as making operations from the Configuration menu.

When done, make sure you go to the **Setup complete** menu, and select one of **Yes**, **No**, or **Cancel**. When you select **Yes** or **No**, you return to the Configuration menu.

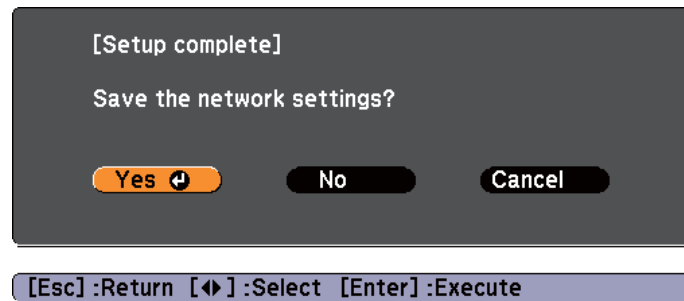


**Yes:** Saves the settings and exits the Network menu.

**No:** Does not save the settings and exits the Network menu.

**Cancel:** Continues displaying the Network menu.

### Soft keyboard operations


The Network menu contains items that require input of alphanumerics during setup. In this case, the following software keyboard is displayed. Use the [▲], [▼], [◀], and [▶] buttons on the remote control or the [↶], [↷], [↸], and [↹] buttons on the control panel to move the cursor to the desired key, and then press the [Enter] button to enter the alphanumeric character. Enter figures by holding down the [Num] button on the remote control, and pressing the numeric buttons. After inputting, press **Finish** on the keyboard to confirm your input. Press **Cancel** on the keyboard to cancel your input.

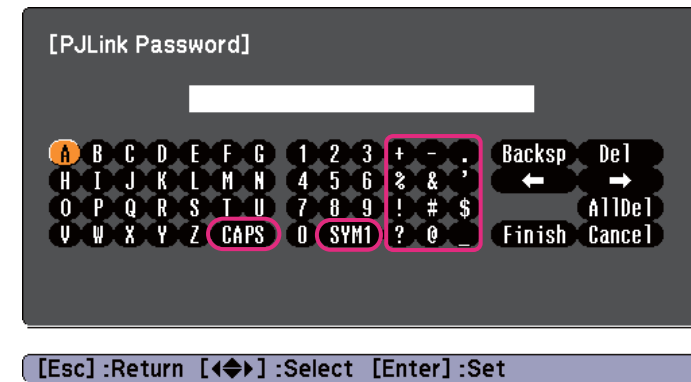


- Each time the **CAPS** key is selected and the [Enter] button is pressed, it sets and changes between upper case and lower case letters.
- Each time the **SYM1/2** key is selected and the [Enter] button is pressed, it sets and changes the symbol keys for the section enclosed by the frame.




## Basic menu

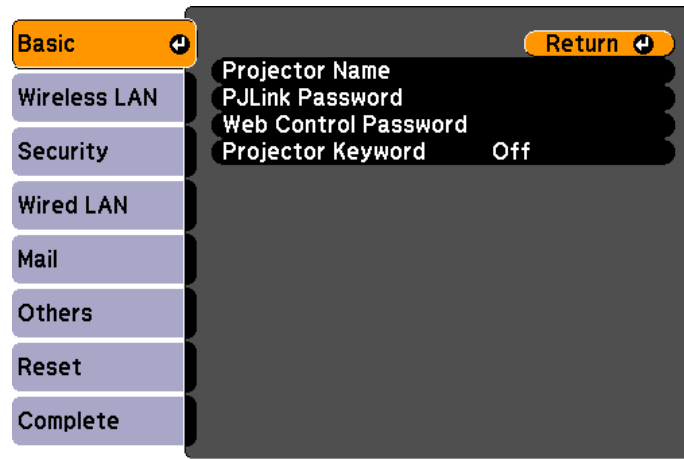


[Esc] / [Enter] : Return [◆] : Select

Sub-menu	Function
<b>Projector Name</b>	Displays the projector name used to identify the projector when connected to a network. When editing, you can enter up to 16 single-byte alphanumeric characters.
<b>PJLink Password</b>	Set a password to use when you access the projector using compatible PJLink software. You can enter up to 32 single-byte alphanumeric characters.
<b>Web Control Password</b>	Set a password to use when making settings and controlling the projector using Web Control. Enter no more than eight single-byte alphanumeric characters. Web Control is a computer function that allows you to set up and control the projector by using the Web browser on a computer connected on a Network.  "Changing Settings Using a Web Browser (Web Control)" <a href="#">p.114</a>

Sub-menu	Function
<b>Projector Keyword</b>	When set to <b>On</b> , you have to enter the keyword when you try to connect the projector to a computer on a network. As a result, you can prevent presentations from being interrupted by connections from other computers. Normally this should be set to <b>On</b> .  <a href="#">EasyMP Network Projection Operation Guide</a>

## Wireless LAN menu

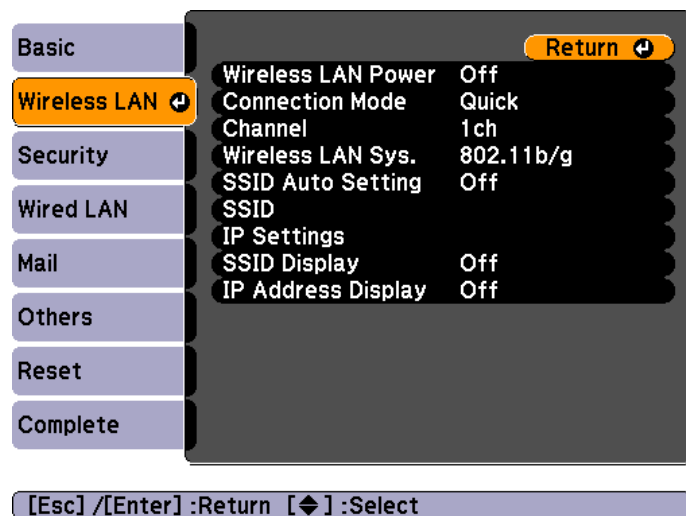


Submenu	Function
<b>Wireless LAN Power</b>	Turn <b>On</b> when connecting the projector to the computer over wireless LAN. If you do not want to connect via wireless LAN, turn it <b>Off</b> to prevent unauthorized access by others. This is set to <b>On</b> by default.
<b>Connection Mode</b>	Select <b>Quick</b> when connecting a computer directly to the projector. Select <b>Advanced</b> when connecting a computer to the projector via an access point. Set to <b>Advanced</b> when connecting to multiple computers or when controlling the projector via a network. This is set to <b>Quick</b> by default. ☛ "Monitoring and Controlling" p.114

Submenu	Function
<b>Channel</b>	(This can only be set if <b>Connection Mode</b> is set to <b>Quick</b> .) Select the frequency band used by the wireless LAN from <b>1ch</b> , <b>6ch</b> , or <b>11ch</b> . This is set to <b>11ch</b> by default.
<b>Wireless LAN Sys.</b>	Set the wireless LAN system to either <b>802.11b/g</b> or <b>802.11b/g/n</b> . The default value is <b>802.11b/g/n</b> .
<b>SSID Auto Setting</b>	Set to <b>On</b> to reduce the projector search time when connecting to a network using <b>Quick</b> from <b>Connection Mode</b> . Set to <b>Off</b> when connecting to multiple projectors at the same time. This is set to <b>On</b> by default.
<b>SSID</b>	Enter an <b>SSID</b> ☛. When an SSID is provided for the wireless LAN system in which the projector participates, enter the SSID. You can enter up to 32 single-byte alphanumeric characters.
<b>IP Settings</b>	You can make network settings. <b>DHCP</b> : Set to <b>On</b> to make network settings using <b>DHCP</b> ☛. If this is set to <b>On</b> , you cannot set any more addresses. <b>IP Address</b> : You can input the <b>IP Address</b> ☛ assigned to the projector. You can input a number from 0 to 255 in each field of the address. However, the following IP addresses cannot be used. 0.0.0.0, 127.x.x.x, 224.0.0.0 to 255.255.255.255 (where x is a number from 0 to 255) <b>Subnet Mask</b> : You can input the <b>Subnet Mask</b> ☛ for the projector. You can input a number from 0 to 255 in each field of the address. However, the following subnet masks cannot be used. 0.0.0.0, 255.255.255.255 <b>Gateway Address</b> : You can input the IP address for the gateway for the projector. You can input a number from 0 to 255 in each field of the address. However, the following <b>Gateway addresses</b> ☛ cannot be used. 0.0.0.0, 127.x.x.x, 224.0.0.0 to 255.255.255.255 (where x is a number from 0 to 255)

Submenu	Function
<b>SSID Display</b>	To prevent the <u>SSID</u> from being displayed on the LAN Standby screen, set this to <b>Off</b> .
<b>IP Address Display</b>	To prevent the <u>IP Address</u> from being displayed on the LAN Standby screen, set this to <b>Off</b> .

## Security menu

Only available when the optional Wireless LAN unit is installed.

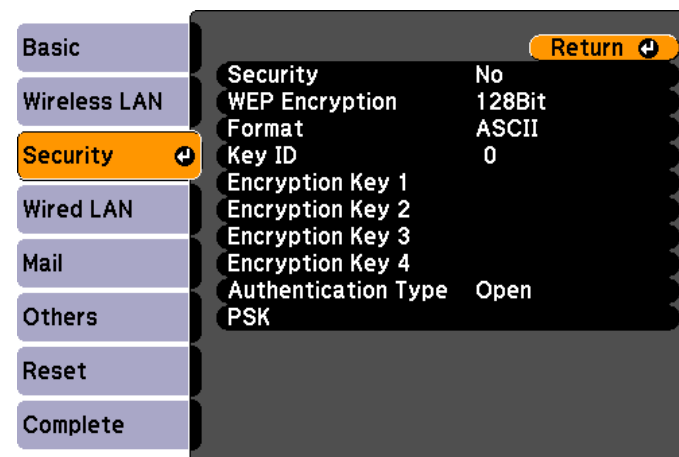

[Esc] / [Enter] : Return [◆] : Select

Sub-menu	Function
<b>Security</b>	Select the security type from the items that are displayed. When setting up Security, follow the instructions from the administrator of the network system you are about to access.
<b>WEP Encryption</b>	You can set the encryption for WEP encryption. <b>128Bit</b> : Uses 128 (104) bit encoding. <b>64Bit</b> : Uses 64 (40) bit encoding.
<b>Format</b>	You can set the input method for the WEP encryption key. <b>ASCII</b> : Input text. <b>HEX</b> : Input in hexadecimal.
<b>Key ID</b>	Selects the WEP encryption ID key.

Sub-menu	Function
<b>Encryption Key</b> <b>1/Encryption Key</b> <b>2/Encryption Key</b> <b>3/Encryption Key</b> <b>4</b>	<p>You can enter the key used for WEP encryption. Enter the key in single-byte characters following instructions from the network administrator for the network in which the projector participates. The type of character and the number that can be entered differ according to the <b>WEP Encryption</b> and <b>Format</b> settings.</p> <p><b>128Bit - ASCII:</b> Single-byte alphanumerics, 13 characters.</p> <p><b>64Bit - ASCII:</b> Single-byte alphanumerics, 5 characters.</p> <p><b>128Bit - HEX:</b> 0 to 9 and A to F, 26 characters.</p> <p><b>64Bit - HEX:</b> 0 to 9 and A to F, 10 characters.</p>
<b>Authentication Type</b>	<p>Set the WEP authentication type.</p> <p><b>Open:</b> Uses open system authentication.</p> <p><b>Shared:</b> Uses shared key authentication.</p>
<b>PSK</b>	<p>(This can only be set when <b>WPA-PSK</b> or <b>WPA2-PSK</b> are selected from <b>Security</b>.)</p> <p>You can enter a Pre-Shared Key (encrypted key) in single-byte alphanumeric characters. Enter at least 8 and up to 32 characters.</p>

### Type of security

When the optional wireless LAN unit is installed and being used in Advanced connection mode, it is strongly recommended that you set security. Select one of the following security methods.

- **WEP**

Data is encrypted with a code key (WEP key). This mechanism prevents communication unless the encrypted keys for the access point and the projector match.

- **WPA**


This is an encryption standard that improves security which is a weak point of WEP. Although there are multiple kinds of WPA encryption methods, this projector uses TKIP and AES.

WPA also includes user authentication functions. WPA authentication provides two methods: using an authentication server, or authenticating between a computer and an access point without using a server. This projector supports the latter method, without a server.



For setting details, follow the directions from the network administrator of your network.

## Wired LAN Menu

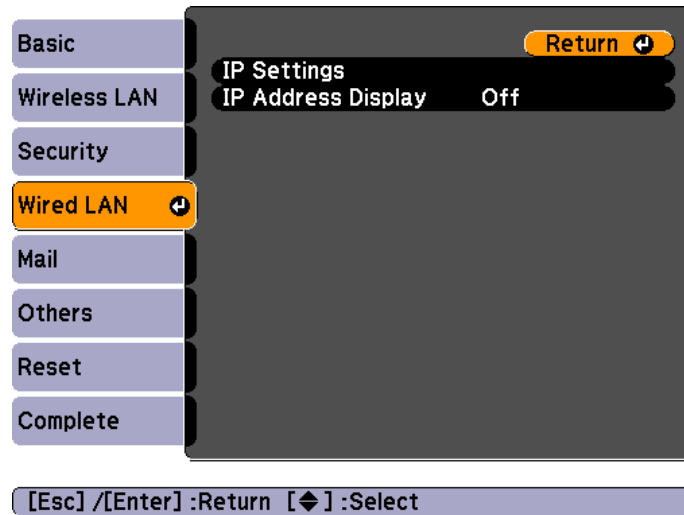


Sub-menu	Function
IP Settings	<p>You can make settings related to the following addresses.</p> <p><b>DHCP</b>: Set to <b>On</b> to configure the network using DHCP. If this is set to <b>On</b>, you cannot set any more addresses.</p> <p><b>IP Address</b>: You can input the IP address assigned to the projector. You can input a number from 0 to 255 in each field of the address. However, the following IP addresses cannot be used. 0.0.0.0, 127.x.x.x, 224.0.0.0 to 255.255.255.255 (where x is a number from 0 to 255)</p> <p><b>Subnet Mask</b>: You can input the subnet mask for the projector. You can input a number from 0 to 255 in each field of the address. However, the following subnet masks cannot be used. 0.0.0.0, 255.255.255.255</p> <p><b>Gateway Address</b>: You can input the IP address for the gateway for the projector. You can input a number from 0 to 255 in each field of the address. However, the following gateway addresses cannot be used. 0.0.0.0, 127.x.x.x, 224.0.0.0 to 255.255.255.255 (where x is a number from 0 to 255)</p>
IP Address Display	To prevent the IP address from being displayed on Network Info in the Network Menu and on the LAN Standby screen, set this to <b>Off</b> .

## Mail menu

When this is set, you receive an email notification if a problem or warning occurs in the projector.


☛ "Using the Mail Notification Function to Report Problems" p.116

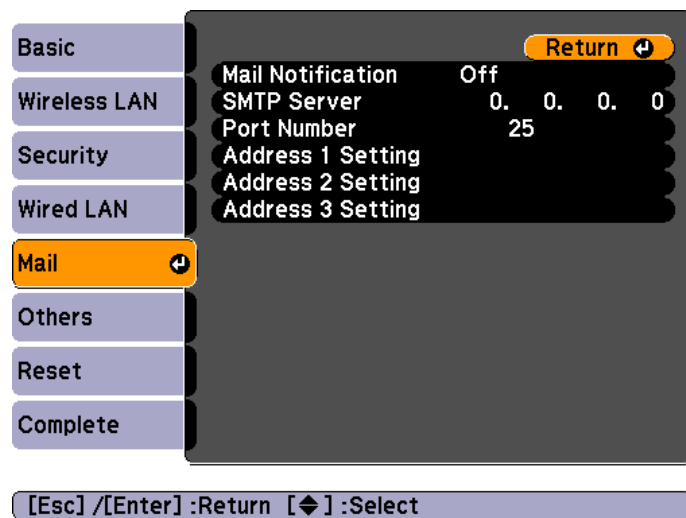


Sub-menu	Function
<b>Mail Notification</b>	Set to <b>On</b> to send an email to the preset addresses when a problem or warning occurs with a projector.
<b>SMTP Server</b>	You can input the <u>IP Address</u> for the SMTP server for the projector. You can input a number from 0 to 255 in each field of the address. However, the following IP addresses cannot be used. 127.x.x.x, 224.0.0.0 to 255.255.255.255 (where x is a number from 0 to 255)
<b>Port Number</b>	You can input the port number for the SMTP server. The default value is 25. You can input numbers between 1 to 65535.

Sub-menu	Function
<b>Address 1 Setting/Address 2 Setting/Address 3 Setting</b>	You can input the email address of the destination to send the notification email to. You can register up to three destinations. You can enter up to 32 single-byte alphanumeric characters for the email addresses.  You can select the problems or warnings to be notified about by email. When the selected problem or warning occurs in the projector, an email is sent to the specified destination address notifying that a problem or warning has occurred. You can select multiple items from the displayed items.

## Others menu

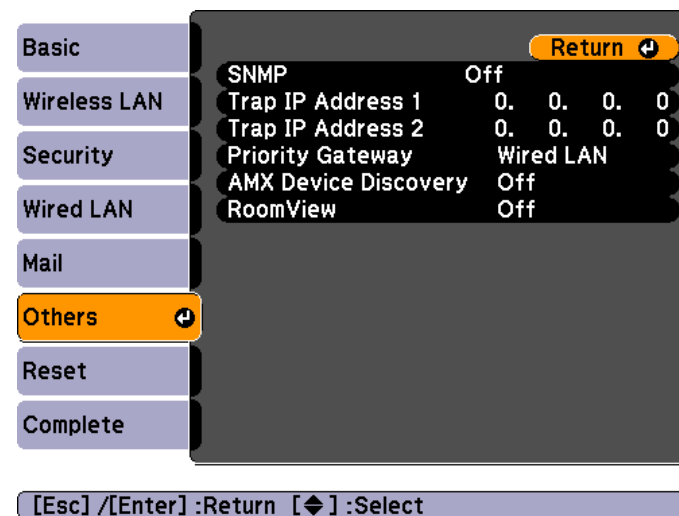


Sub-menu	Function
<b>SNMP</b>	Set to <b>On</b> to monitor the projector using SNMP. To monitor the projector, you need to install the SNMP manager program on your computer. SNMP should be managed by a network administrator. The default value is <b>Off</b> .

Sub-menu	Function
<b>Trap IP Address 1/Trap IP Address 2</b>	You can register up to two IP addresses for the SNMP trap notification destination. You can input a number from 0 to 255 in each field of the address. However, the following IP addresses cannot be used. 127.x.x.x, 224.0.0.0 to 255.255.255.255 (where x is a number from 0 to 255)
<b>Priority Gateway</b>	You can set the priority gateway to a <b>Wired LAN</b> or <b>Wireless LAN</b> .
<b>AMX Device Discovery</b>	When the projector is connected to a network, set this to <b>On</b> to allow the projector to be detected by <a href="#">AMX Device Discovery</a> . Set this to <b>Off</b> if you are not connected to an environment controlled with a controller from AMX or AMX Device Discovery.
<b>RoomView</b>	Set this to <b>On</b> only when monitoring or controlling the projector over the network using Crestron RoomView®. Otherwise, set this to <b>Off</b> .  "About Crestron RoomView®" <a href="#">p.120</a> When this is set to <b>On</b> , the following functions are not available. <ul style="list-style-type: none"> <li>• Web Control</li> <li>• Message Broadcasting (EasyMP Monitor Plug-in)</li> </ul>

## Reset Menu

Resets all of the network settings.

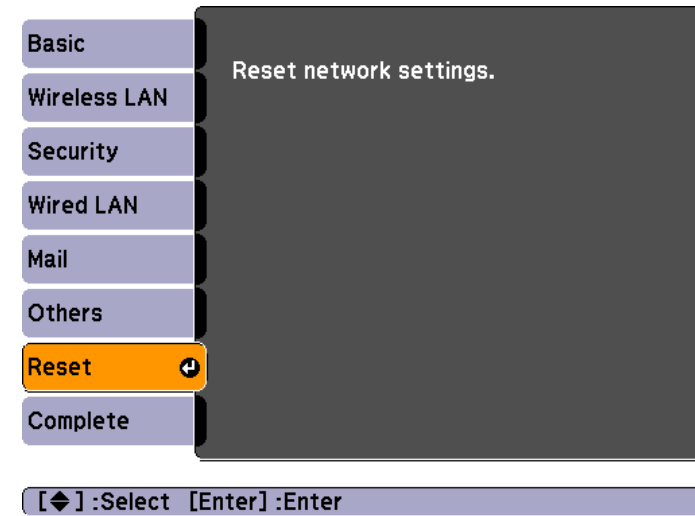


Sub-menu	Function
<b>Reset network settings.</b>	To reset all of the Network settings, select <b>Yes</b> .

## Info Menu (Display Only)

Lets you check the status of the image signals being projected and the status of the projector. Items that can be displayed vary depending on the source currently being projected. Depending on the model used, some input sources are not supported.

☛ "Automatically Detect Input Signals and Change the Projected Image (Source Search)" [p.31](#)

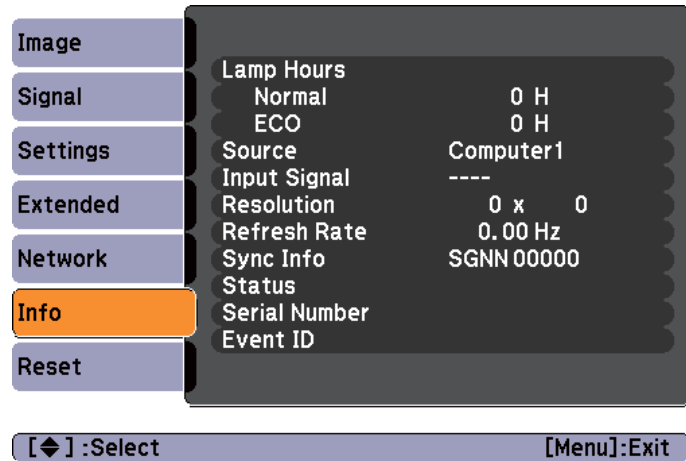


Sub-menu	Function
<b>Lamp Hours</b>	You can display the cumulative lamp operating time*. When it reaches the lamp warning time, the characters are displayed in yellow.
<b>Source</b>	You can display the source name for the connected equipment currently being projected.
<b>Input Signal</b>	You can display the content of <b>Input Signal</b> set in the <b>Signal</b> menu according to the Source.
<b>Resolution</b>	You can display the resolution.
<b>Video Signal</b>	You can display the settings for <b>Video Signal</b> in the <b>Signal</b> menu.

Sub-menu	Function
<b>Refresh Rate</b>	You can display the <a href="#">Refresh Rate</a> ▶▶.
<b>Sync Info</b>	You can display the image signal information. This information may be needed if service is required.
<b>Status</b>	This is information about errors that have occurred on the projector. This information may be needed if service is required.
<b>Serial Number</b>	Displays the projector's serial number.
<b>Event ID</b>	Displays the application error log. ☛ "About Event ID" <a href="#">p.97</a>

\* The cumulative use time is displayed as "0H" for the first 10 hours. 10 hours and above is displayed as "10H", "11H", and so on.



## Reset Menu

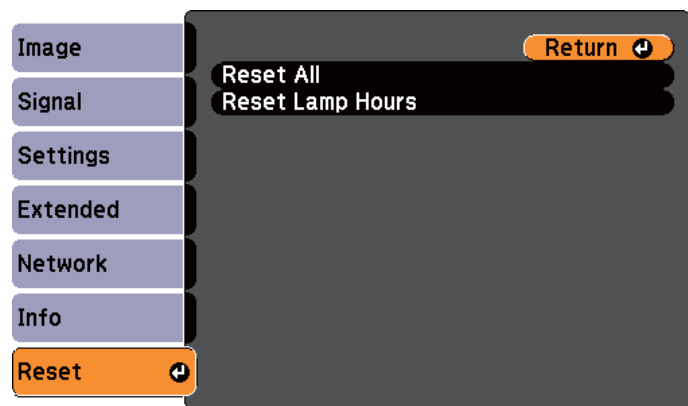

[Esc] / [Enter] : Return [◆] : Select [Menu] : Exit

Sub-menu	Function
<b>Reset All</b>	You can reset all items in the Configuration menu to their default settings. The following items are not reset to their defaults: <b>Input Signal</b> , <b>User's Logo</b> , all items for <b>Network</b> menus, <b>Lamp Hours</b> , <b>Language</b> , <b>Password</b> , <b>User Button</b> , and <b>Multi-screen</b> .
<b>Reset Lamp Hours</b>	Clears the cumulative lamp hours use time. Reset when you replace the lamp.




# Troubleshooting

This chapter explains how to identify problems and what to do if a problem is found.


If a problem occurs with the projector, the Help screen is displayed to assist you by pressing the Help button. You can solve problems by answering the questions.

- 1 Press the [Help] button.  
The Help screen is displayed.


### Using the remote control

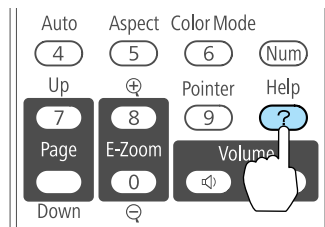

### Using the control panel

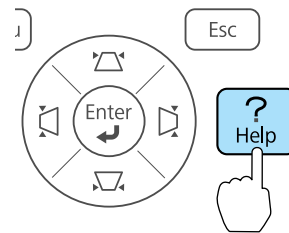


- 2 Select a menu item.

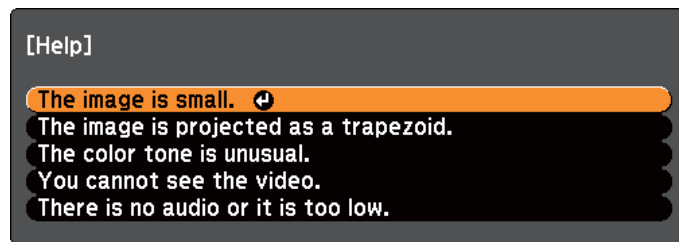


[◀▶] :Select [Enter] :Enter [Help] :Exit

### Using Remote Control

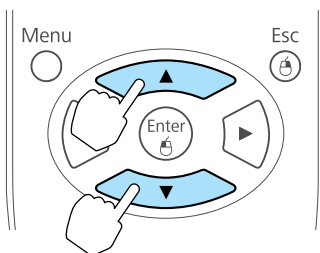


### Using the Control Panel

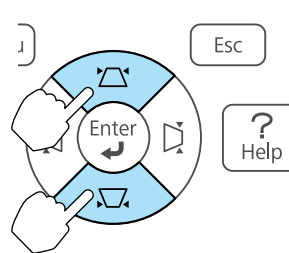


- 3 Confirm the selection.


### Using the remote control

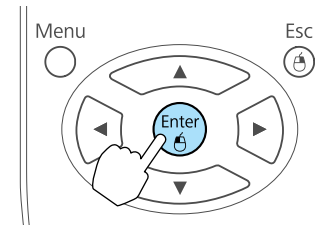

### Using the control panel

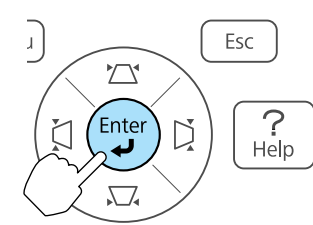

Questions and solutions are displayed as shown on the screen below. Press the [Help] button to exit the Help.

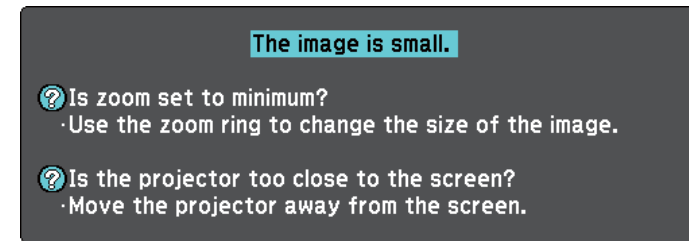

[Esc] :Return [Help] :Exit



See the following if the Help function does not provide a solution to the problem.


☞ "Problem Solving" p.84

If you are having a problem with the projector, first check the projector's indicators and refer to "Reading the Indicators" below. See the following if the indicators do not show clearly what the problem might be.

☛ "When the Indicators Provide No Help" [p.88](#)



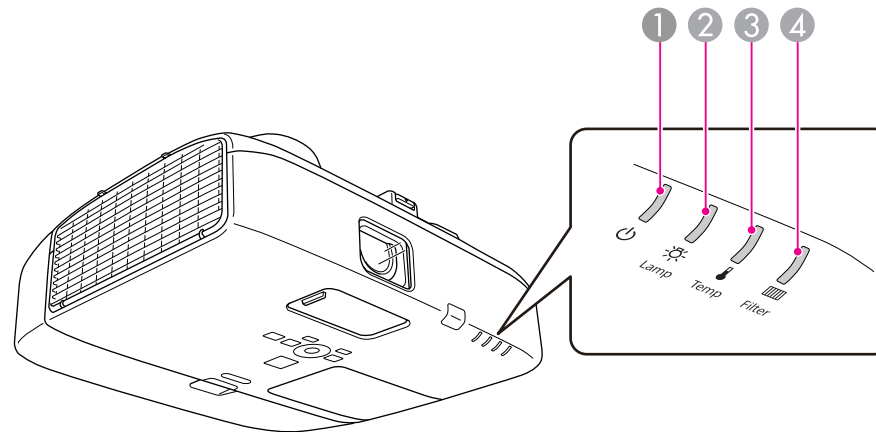

## Reading the Indicators

The projector is provided with the following four indicators that indicate the operating status of the projector.



### ① Power indicator

Indicates the operating status.

-  Standby condition  
When the [⏻] button is pressed in this condition, projection starts.
-  Preparing for network monitoring or cool down in progress  
All buttons are disabled while the indicator is flashing.
-  Warming up  
Warm-up time is about 30 seconds. After warm-up is complete, the indicator stops flashing.  
The [⏻] button is disabled during warm-up.
-  Projecting

### ② Lamp indicator

Indicates the projection lamp status.

### ③ Temp indicator

 
Indicates the internal temperature status.

## 4 Filter Indicator













 








 
















Indicates the air filter status.






 



 


Refer to the following table to see what the indicators mean and how to remedy problems that they indicate.




 













 


If all indicators are off, check that the power cable is connected correctly and that the power is being supplied normally.

Sometimes, when the power cable is unplugged, the  indicator remains lit for a short period, but this is not a fault.

 : Lit  : Flashing  : Off  : Varies according to the projector status

Status	Cause	Remedy or Status
       	Internal Error	Stop using the projector, disconnect the power cable from the electrical outlet, and contact your local dealer or the nearest address provided in the Epson Projector Contact List.  <a href="#">Epson Projector Contact List</a>
       	Fan Error Sensor Error	Stop using the projector, disconnect the power cable from the electrical outlet, and contact your local dealer or the nearest address provided in the Epson Projector Contact List.  <a href="#">Epson Projector Contact List</a>
       	High Temp Error (overheating)	The lamp turns off automatically and projection stops. Wait for about five minutes. After about five minutes the projector switches to standby mode, so check the following two points. <ul style="list-style-type: none"> <li>• Check that the air filter and air exhaust vent are clear, and that the projector is not positioned against a wall.</li> <li>• If the air filter is clogged, clean or replace it.                             <ul style="list-style-type: none"> <li> <a href="#">"Cleaning the Air Filter" p.99</a>, <a href="#">"Replacing the Air Filter" p.105</a></li> </ul> </li> </ul> If the error continues after checking the points above, stop using the projector, remove the power plug from the electrical outlet, and contact your local dealer or the nearest address provided in the Epson Projector Contact List.  <a href="#">Epson Projector Contact List</a>
       	Lamp Error Lamp Failure	Check the following two points. <ul style="list-style-type: none"> <li>• Take out the lamp and check if it is cracked.                             <ul style="list-style-type: none"> <li> <a href="#">"Replacing the Lamp" p.102</a></li> </ul> </li> <li>• Clean the air filter.                             <ul style="list-style-type: none"> <li> <a href="#">"Cleaning the Air Filter" p.99</a></li> </ul> </li> </ul>

Status	Cause	Remedy or Status
		<p><b>If it is not cracked:</b> Reinstall the lamp and turn on the power.</p> <p><b>If the error continues:</b> Replace the lamp with a new one and then turn on the power.</p> <p><b>If the error continues:</b> Stop using the projector, disconnect the power cable from the electrical outlet, and contact your local dealer or the nearest address provided in the Epson Projector Contact List.</p> <p>☛ <a href="#">Epson Projector Contact List</a></p> <hr/> <p><b>If it is cracked:</b> Contact your local dealer or the nearest address provided in the Epson Projector Contact List. (Images cannot be projected until the lamp is replaced.)</p> <p>☛ <a href="#">Epson Projector Contact List</a></p> <hr/> <p>When using at an altitude of 1500 m or more, set <b>High Altitude Mode</b> to <b>On</b>.</p> <p>☛ "Extended Menu" <a href="#">p.69</a></p>
   	<p>Auto Iris Error Power Err. (Ballast) Exhaust vent shutter Error</p>	<p>Stop using the projector, disconnect the power cable from the electrical outlet, and contact your local dealer or the nearest address provided in the Epson Projector Contact List.</p> <p>☛ <a href="#">Epson Projector Contact List</a></p> <hr/> <p>The air exhaust vent shutter is defective if it does not open when the projector is turned on, or if it does not close when the projector is turned off. Stop using the projector, disconnect the power cable from the electrical outlet, and contact your local dealer or the nearest address provided in the Epson Projector Contact List.</p> <p>☛ <a href="#">Epson Projector Contact List</a></p>
   	<p>Air Flow Sensor Err.</p>	<p>The air flow sensor is defective. Stop using the projector, disconnect the power cable from the electrical outlet, and contact your local dealer or the nearest address provided in the Epson Projector Contact List.</p> <p>☛ <a href="#">Epson Projector Contact List</a></p>
   	<p>Filter Airflow Error</p>	<p>Check the following two points.</p> <ul style="list-style-type: none"> <li>• Check that the air filter and air exhaust vent are not blocked, and that the projector is not positioned against a wall.</li> <li>• If the air filter is clogged, clean or replace it.             <ul style="list-style-type: none"> <li>☛ "Cleaning the Air Filter" <a href="#">p.99</a>, "Replacing the Air Filter" <a href="#">p.105</a></li> </ul> </li> </ul> <p><b>If the error continues after checking the points above,</b> stop using the projector, remove the power plug from the electrical outlet, and contact your local dealer or the nearest address provided in the Epson Projector Contact List.</p> <p>☛ <a href="#">Epson Projector Contact List</a></p>

Status	Cause	Remedy or Status
   	High Temp Warning	(This is not an abnormality. However, if the temperature rises too high again, projection stops automatically.) <ul style="list-style-type: none"> <li>• Check that the air filter and air exhaust vent are clear, and that the projector is not positioned against a wall.</li> <li>• If the air filter is clogged, clean or replace it.                             <ul style="list-style-type: none"> <li>☛ "Cleaning the Air Filter" p.99, "Replacing the Air Filter" p.105</li> </ul> </li> </ul>
   	Replace Lamp	Replace it with a new lamp. <ul style="list-style-type: none"> <li>☛ "Replacing the Lamp" p.102</li> </ul> If you continue to use the lamp after the replacement period has passed, the possibility that the lamp may explode increases. Replace it with a new lamp as soon as possible.
   	Low Air Flow	Check the following two points. <ul style="list-style-type: none"> <li>• Check that the air filter and air exhaust vent are not blocked, and that the projector is not positioned against a wall.</li> <li>• If the air filter is clogged, clean or replace it.                             <ul style="list-style-type: none"> <li>☛ "Cleaning the Air Filter" p.99, "Replacing the Air Filter" p.105</li> </ul> </li> </ul> <p><b>If the error continues after checking the points above,</b> stop using the projector, remove the power plug from the electrical outlet, and contact your local dealer or the nearest address provided in the Epson Projector Contact List.</p> <ul style="list-style-type: none"> <li>☛ <a href="#">Epson Projector Contact List</a></li> </ul>
   	No Air Filter	Check that the air filter is securely installed. <ul style="list-style-type: none"> <li>☛ "Replacing the Air Filter" p.105</li> </ul>
   	Air Filter Notice	"Time to clean the air filter. Clean or replace the air filter." is displayed. Clean the air filter. <ul style="list-style-type: none"> <li>☛ "Cleaning the Air Filter" p.99</li> </ul> The indicators or messages regarding Air Filter Notice are displayed only when <b>Clean Notice</b> is set to <b>On</b> in <b>Air Filter Setting</b> from the Configuration menu. <ul style="list-style-type: none"> <li>☛ <b>Extended - Air Filter Setting</b>p.69</li> </ul>













- See the following if the projector is not operating properly, even though the indicators are all showing normal.
  - ☛ "When the Indicators Provide No Help" p.88
- If the error is not indicated in this table, stop using the projector, disconnect the power cable from the electrical outlet, and contact your local dealer or the nearest address provided in the Epson Projector Contact List.
  - ☛ [Epson Projector Contact List](#)

## When the Indicators Provide No Help

If any of the following problems occur and the indicators do not offer a solution, refer to the pages given for each problem.


### Problems Relating to Images




<ul style="list-style-type: none"> <li>• <b>No images appear</b> Projection does not start, the projection area is completely black, or the projection area is completely blue.</li> </ul>	 <a href="#">p.89</a>
<ul style="list-style-type: none"> <li>• <b>Moving images are not displayed</b> Moving images being projected from a computer appear black and nothing is projected.</li> </ul>	 <a href="#">p.89</a>
<ul style="list-style-type: none"> <li>• <b>Projection stops automatically</b></li> </ul>	 <a href="#">p.90</a>
<ul style="list-style-type: none"> <li>• <b>The message "Not supported" is displayed</b></li> </ul>	 <a href="#">p.90</a>
<ul style="list-style-type: none"> <li>• <b>The message "No Signal" is displayed</b></li> </ul>	 <a href="#">p.90</a>
<ul style="list-style-type: none"> <li>• <b>Images are fuzzy, out of focus, or distorted</b></li> </ul>	 <a href="#">p.91</a>
<ul style="list-style-type: none"> <li>• <b>Interference or distortion appear in images</b></li> </ul>	 <a href="#">p.91</a>
<ul style="list-style-type: none"> <li>• <b>The image is truncated (large) or small, or the aspect ratio is not suitable</b> Only part of the image is displayed, or the height and width ratios of the image are not correct.</li> </ul>	 <a href="#">p.92</a>
<ul style="list-style-type: none"> <li>• <b>Image colors are not right</b> The whole image appears purplish or greenish, images are black &amp; white, or colors appear dull.</li> </ul>	 <a href="#">p.93</a>
<ul style="list-style-type: none"> <li>• <b>Images appear dark</b></li> </ul>	 <a href="#">p.93</a>

### Problems when projection starts

<ul style="list-style-type: none"> <li>• <b>The projector does not turn on</b></li> </ul>	 <a href="#">p.94</a>
---	--

### Other Problems

<ul style="list-style-type: none"> <li>• <b>No sound can be heard or the sound is faint</b></li> </ul>	 <a href="#">p.94</a>
--	--

<ul style="list-style-type: none"> <li>• <b>The remote control does not work</b></li> </ul>	 <a href="#">p.95</a>
<ul style="list-style-type: none"> <li>• <b>I want to change the language for messages and menus</b></li> </ul>	 <a href="#">p.96</a>
<ul style="list-style-type: none"> <li>• <b>Mail is not received even if an error occurs with the projector</b></li> </ul>	 <a href="#">p.96</a>



## Problems Relating to Images


### No images appear

Check	Remedy
Did you press the [⏻] button?	Press the [⏻] button to turn the power on.
Are the indicators switched off?	The power cable is not connected correctly or power is not being supplied. Connect the projector's power cable correctly. ☛ "From Installation to Projection" p.30 Check that your electrical outlet or power source is functioning correctly.
Is A/V Mute active?	Press the [A/V Mute] button on the remote control to cancel A/V Mute. ☛ "Hiding the Image and Sound Temporarily (A/V Mute)" p.47
Are the Configuration menu settings correct?	Reset all of the settings. ☛ <b>Reset - Reset All</b> p.81
Is the image to be projected completely black? (Only when projecting computer images)	Some input images, such as screen savers, may be completely black.
Is the image signal format setting correct? (Only when projecting images from a video source)	Change the setting according to the signal for the connected equipment. ☛ <b>Signal - Video Signal</b> p.66
Is Windows Media Center displayed in full screen? (Only during a network connection)	When Windows Media Center is displayed at full screen, you cannot project using network connection. Reduce the screen size.
Is an application using the Windows DirectX function displayed? (Only during a network connection)	Applications using the Windows DirectX function may not display images correctly.



### Moving images are not displayed (only the moving image portion turns black)

Check	Remedy
Is the computer's image signal being output to the LCD and the monitor? (Only when projecting images from a laptop computer or a computer with a built-in LCD screen)	Change the image signal from the computer to external output only. Check your computer's documentation, or contact the computer's manufacturer.





## Projection stops automatically

Check	Remedy
Is <b>Sleep Mode</b> set to <b>On</b> ?	Press the [⏻] button to turn the power on. If you do not want to use Sleep Mode, change the setting to <b>Off</b> .  <b>Extended - Operation - Sleep Mode</b> <a href="#">p.69</a>

## The message "Not supported" is displayed.

Check	Remedy
Is the image signal format setting correct? (Only when projecting images from a video source)	Change the setting according to the signal for the connected equipment.  <b>Signal - Video Signal</b> <a href="#">p.66</a>
Do the image signal resolution and the refresh rate correspond to the mode? (Only when projecting computer images)	Refer to the computer's documentation for how to change the image signal resolution and the refresh rate output from the computer.  "Supported Monitor Displays" <a href="#">p.128</a>

## The message "No Signal" is displayed.

Check	Remedy
Are the cables connected correctly?	Check that all the cables required for projection are securely connected.  "From Installation to Projection" <a href="#">p.30</a>
Is the correct port selected?	Change the image by pressing the [Source Search] button on the remote control or the control panel.  "Automatically Detect Input Signals and Change the Projected Image (Source Search)" <a href="#">p.31</a>
Is the power for the computer or video source turned on?	Turn the power on for the equipment.
Are the image signals being output to the projector? (Only when projecting images from a laptop computer or a computer with a built-in LCD screen)	If the image signals are only being output to the computer's LCD monitor or to the accessory monitor, you need to change the output to an external destination as well as the computer's own monitor. For some computer models, when the image signals are output externally, they no longer appear on the LCD monitor or accessory monitor. If the connection is made while the power of the projector or computer is already turned on, the Fn key (Function key) that changes the computer's image signal to external output may not work. Turn the power for the computer and the projector off and then back on again.  "From Installation to Projection" <a href="#">p.30</a>  Computer's documentation

## Images are fuzzy, out of focus, or distorted

Check	Remedy
Is the keystone adjusted correctly?	Adjust the projected image. ☛ "H/V-Keystone" p.33, "Quick Corner" p.34
Is the focus adjusted correctly?	Turn the focus ring to adjust the focus. ☛ "Correcting the Focus" p.36
Is the projector at the correct distance?	Is it projecting outside of the recommended projection distance range? Setup within the recommended range. ☛ "Screen Size and Projection Distance" p.125
Is the Keystone adjustment value large?	Lower the projection angle to reduce the amount of keystone correction. ☛ "Adjusting the Image Position" p.36
Has condensation formed on the lens?	If the projector is suddenly taken from a cold environment to a warm environment, or if sudden ambient temperature changes occur, condensation may form on the surface of the lens, and this may cause the images to appear fuzzy. Set the projector up in the room about one hour before it is used. If condensation forms on the lens, turn the projector off and wait for the condensation to disappear.

## Interference or distortion appear in images

Check	Remedy
Is the image signal format setting correct? (Only when projecting images from a video source)	Change the setting according to the signal for the connected equipment. ☛ <b>Signal - Video Signal</b> p.66
Are the cables connected correctly?	Check that all the cables required for projection are securely connected. ☛ "Connecting Equipment" p.20
Is an extension cable being used?	If an extension cable is used, electrical interference may affect the signals. Use the cables supplied with the projector to check if the cables you are using may be causing the problem.
Is the correct resolution selected? (Only when projecting computer images)	Set the computer so that the signals being output are compatible with the projector. ☛ "Supported Monitor Displays" p.128 ☛ Computer's documentation

Check	Remedy
<p>Are the <a href="#">Sync</a> and <a href="#">Tracking</a> settings adjusted correctly? (Only when projecting computer images)</p>	<p>Press the [Auto] button on the remote control or the [Enter] button on the control panel to perform automatic adjustment. If the images are not adjusted correctly even after performing automatic adjustment, you can also make adjustments from the Configuration menu.</p> <p>☛ <a href="#">Signal - Tracking, Sync. p.66</a></p>

## The image is truncated (large) or small, or the aspect is not suitable

Check	Remedy
<p>Is a wide panel computer image being projected? (Only when projecting computer images)</p>	<p>Change the setting according to the signal for the connected equipment.</p> <p>☛ <a href="#">Signal - Resolution p.66</a></p>
<p>Is the image still being enlarged by E-Zoom?</p>	<p>Press the [Esc] button on the remote control to cancel E-Zoom.</p> <p>☛ "Enlarging Part of the Image (E-Zoom)" <a href="#">p.49</a></p>
<p>Is the image position adjusted correctly?</p>	<p>Press the [Auto] button on the remote control or the [Enter] button on the control panel to perform automatic adjustment of the computer image being projected. If the images are not adjusted correctly even after performing automatic adjustment, you can also make adjustments from the Configuration menu.</p> <p>Apart from computer image signals, you can adjust other signals while projecting from the Configuration menu.</p> <p>☛ <a href="#">Signal - Position p.66</a></p>
<p>Is the computer set for dual display? (Only when projecting computer images)</p>	<p>If dual display is activated in the <b>Display Properties</b> of the computer's Control Panel, only about half of the image on the computer screen is projected. To display the entire image on the computer screen, turn off the dual display setting.</p> <p>☛ Computer video driver documentation</p>
<p>Is the correct resolution selected? (Only when projecting computer images)</p>	<p>Set the computer so that the signals being output are compatible with the projector.</p> <p>☛ "Supported Monitor Displays" <a href="#">p.128</a></p> <p>☛ Computer's documentation</p>

## Image colors are not right

Check	Remedy
Do the input signal settings match the signals from the connected device?	Change the following settings according to the signal for the connected equipment. <ul style="list-style-type: none"> <li>• When the image is from a device connected to the Computer1 or Computer2 port.                             <ul style="list-style-type: none"> <li>☛ <b>Signal - Input Signal</b> p.66</li> </ul> </li> <li>• When the image is from a device connected to the S-Video or Video port.                             <ul style="list-style-type: none"> <li>☛ <b>Signal - Video Signal</b> p.66</li> </ul> </li> </ul>
Is the image brightness adjusted correctly?	Adjust the <b>Brightness</b> setting from the Configuration menu. <ul style="list-style-type: none"> <li>☛ <b>Image - Brightness</b> p.65</li> </ul>
Are the cables connected correctly?	Check that all the cables required for projection are securely connected. <ul style="list-style-type: none"> <li>☛ "Connecting Equipment" p.20</li> </ul>
Is the <u>Contrast</u> adjusted correctly?	Adjust the <b>Contrast</b> setting from the Configuration menu. <ul style="list-style-type: none"> <li>☛ <b>Image - Contrast</b> p.65</li> </ul>
Is the color adjustment set correctly?	Adjust the <b>Color Adjustment</b> setting from the Configuration menu. <ul style="list-style-type: none"> <li>☛ <b>Image - Color Adjustment</b> p.65</li> </ul>
Are the color saturation and tint adjusted correctly? (Only when projecting images from a video source)	Adjust the <b>Color Saturation</b> and <b>Tint</b> settings from the Configuration menu. <ul style="list-style-type: none"> <li>☛ <b>Image - Color Saturation, Tint</b> p.65</li> </ul>

## Images appear dark

Check	Remedy
Is the image brightness set correctly?	Adjust the <b>Brightness</b> and <b>Power Consumption</b> settings from the Configuration menu. <ul style="list-style-type: none"> <li>☛ <b>Image - Brightness</b> p.65</li> <li>☛ <b>Settings - Power Consumption</b> p.68</li> </ul>
Is the <u>Contrast</u> adjusted correctly?	Adjust the <b>Contrast</b> setting from the Configuration menu. <ul style="list-style-type: none"> <li>☛ <b>Image - Contrast</b> p.65</li> </ul>
Is it time to replace the lamp?	When the lamp is nearly ready for replacement, the images become darker and the color quality becomes poorer. When this happens, replace the lamp with a new lamp. <ul style="list-style-type: none"> <li>☛ "Replacing the Lamp" p.102</li> </ul>

## Problems when Projection Starts

### The projector does not turn on

Check	Remedy
Did you press the [⏻] button?	Press the [⏻] button to turn the power on.
Are the indicators switched off?	The power cable is not connected correctly or power is not being supplied. Disconnect and then reconnect the power cable. ☛ "From Installation to Projection" p.30 Check that your electrical outlet or power source is functioning correctly.
Do the indicators turn on and off when the power cable is touched?	There is probably a poor contact in the power cable, or the power cable may be defective. Reinsert the power cable. If this does not solve the problem, stop using the projector, disconnect the power cable from the electrical outlet, and contact your local dealer or the nearest address provided in the Epson Projector Contact List. ☛ <a href="#">Epson Projector Contact List</a>
Is the <b>Control Panel Lock</b> set to <b>Full Lock</b> ?	Press the [⏻] button on the remote control. If you do not want to use <b>Control Panel Lock</b> , change the setting to <b>Off</b> . ☛ <a href="#">Settings - Control Panel Lock p.68</a>
Is the correct setting for the remote receiver selected?	Check the <b>Remote Receiver</b> from the Configuration menu. ☛ <a href="#">Settings - Remote Receiver p.68</a>
Was the power cable plugged back in or was the breaker turned on immediately after Direct Power Off?	If the operation to the left is performed when <b>Direct Power On</b> is set to <b>On</b> , the power may not turn back on. Press the [⏻] button to turn the power back on.

## Other Problems

### No sound can be heard or the sound is faint

Check	Remedy
Check that the audio/video cable is securely attached to both the projector and audio source.	Disconnect the cable from the Audio port, and then reconnect the cable.
Is the volume adjusted to the minimum setting?	Adjust the volume so that sound can be heard. ☛ <a href="#">Settings - Volume p.68</a> ☛ "Adjusting the Volume" p.37

Check	Remedy
Is A/V Mute active?	Press the [A/V Mute] button on the remote control to cancel A/V Mute. ☛ "Hiding the Image and Sound Temporarily (A/V Mute)" <a href="#">p.47</a>
Is the audio cable's specification "No resistance"?	When using a commercially available audio cable, make sure it is labeled "No resistance".
Is it connected with an HDMI cable?	If no audio is output when connecting via an HDMI cable, set the connected equipment to PCM output.

## The remote control does not work

Check	Remedy
Is the remote control light-emitting area pointing towards the remote receiver on the projector during operation?	Point the remote control towards the remote receiver. ☛ "Remote control operating range" <a href="#">p.16</a>
Is the remote control too far from the projector?	The operating range for the remote control is about 6 m. ☛ "Remote control operating range" <a href="#">p.16</a>
Is direct sunlight or strong light from fluorescent lamps shining onto the remote receiver?	Set the projector up in a location where strong light does not shine onto the remote receiver. Or set the remote receiver to <b>Off</b> from <b>Remote Receiver</b> in the Configuration menu. ☛ <a href="#">Settings - Remote Receiver p.68</a>
Is the correct setting for the <b>Remote Receiver</b> selected?	Check the <b>Remote Receiver</b> from the Configuration menu. ☛ <a href="#">Settings - Remote Receiver p.68</a>
Are the batteries dead or have the batteries been inserted correctly?	Make sure the batteries are inserted correctly or replace the batteries with new ones if necessary. ☛ "Replacing the remote control batteries" <a href="#">p.15</a>
Are the remote control ID and the Projector ID matched?	Make sure the ID for the projector you want to operate and the ID for the remote control match. To operate all projectors by remote control regardless of the ID setting, set the remote control ID to "0". ☛ "Setting the remote control ID" <a href="#">p.53</a>

## Nothing appears on the external monitor

Check	Remedy
Are images input from a port other than the Computer1 port?	The only images that can be displayed on an external monitor are analog RGB signals from the Computer1 port.

## I want to change the language for messages and menus

Check	Remedy
Change the Language setting.	Adjust the Language setting from the Configuration menu. ☛ <a href="#">Extended - Language p.69</a>




## Mail is not received even if an error occurs with the projector

Check	Remedy
Is <b>Standby Mode</b> set to <b>Communication On</b> ?	To use the Mail Notification function when the projector is in standby, set <b>Communication On</b> in <b>Standby Mode</b> from the Configuration menu. ☛ <a href="#">Extended - Standby Mode p.69</a>
Did a fatal abnormality occur and the projector come to a sudden stop?	If the abnormal state continues, contact your local dealer or the nearest address provided in the Epson Projector Contact List. ☛ <a href="#">Epson Projector Contact List</a>
Is power being supplied to the projector?	Check that your electrical outlet or power source is functioning correctly.
Is Mail Notification function set correctly in the Configuration menu?	An error notification email is sent according to the <b>Mail</b> settings in the Configuration menu. Check if it is set correctly. ☛ "Mail menu" <a href="#">p.78</a>



Check the numbers and then apply the following countermeasures. If the problem cannot be solved, contact the network administrator or one of the following contact addresses.

 [Epson Projector Contact List](#)

Event ID	Cause	Remedy
0432 0435	Failed to startup EasyMP Network Projection.	Restart the projector.
0434 0482 0484 0485	Network communication is unstable.	Check the network communication status, and reconnect after waiting for a while.
0433	Cannot play transferred images.	Restart EasyMP Network Projection.
0481	Communication was disconnected from the computer.	
0483 04FE	EasyMP Network Projection ended unexpectedly.	Check the network communication status, and then restart the projector.
0479 04FF	A system error occurred in the projector.	Restart the projector.
0891	Cannot find an access point with the same SSID.	Set the computer, the access point, and the projector to the same SSID.
0892	The WPA/WPA2 authentication type does not match.	Check that the wireless LAN security settings are correct.
0893	The WEP/TKIP/AES encryption type does not match.	 <a href="#">Security p.75</a>
0894	Communication was disconnected because the projector connected to an unauthorized access point.	Contact your network administrator for more information.
0898	Failed to acquire DHCP.	Check that the DHCP server is operating correctly. If you are not using DHCP, turn off the DHCP setting.  <a href="#">Wireless LAN - IP Settings p.74</a>
0895 0899	Other communication errors	If restarting the projector or EasyMP Network Projection does not solve the problem, contact your local dealer or the nearest address provided in the following list.  <a href="#">Epson Projector Contact List</a>



# Maintenance

This chapter provides information on maintenance procedures to ensure the best level of performance from the projector for a long time to come.

You should clean the projector if it becomes dirty or if the quality of projected images starts to deteriorate.

### Attention

Turn off the projector's power before cleaning.

---

## Cleaning the Projector's Surface

Clean the projector's surface by wiping it gently with a soft cloth.

If the projector is particularly dirty, moisten the cloth with water containing a small amount of neutral detergent, and then firmly wring the cloth dry before using it to wipe the projector's surface.

### Attention

Do not use volatile substances such as wax, alcohol, or thinner to clean the projector's surface. The quality of the case may change or become discolored.

---

## Cleaning the Lens Cover Glass

Use a commercially available cloth for cleaning glasses to gently wipe off dirt from the lens cover glass.

### Warning

Do not use sprays that contain flammable gas to remove dirt and dust from the lens cover glass. The projector may catch fire due to the high internal temperature of the lamp.

### Attention

Do not rub the lens cover glass with harsh materials or subject the lens cover glass to shocks, as it can easily become damaged.

---

## Cleaning the Air Filter

Clean the air filter or the air intake vent if one of the following messages is displayed, or if the filter indicator flashes green.

"Time to clean the air filter. Clean or replace the air filter."

"The projector is overheating. Make sure nothing is blocking the air vent, and clean or replace the air filter."

"The air filter is clogged. Clean or replace the air filter."

### Attention


- If dust collects on the air filter, it can cause the internal temperature of the projector to rise, and this can lead to problems with operation and shorten the optical engine's service life. Clean the air filter immediately when the message is displayed.
- Do not rinse the air filter in water. Do not use detergents or solvents.
- When using a brush for cleaning, use one with long soft bristles, and brush it lightly. If it is brushed too strongly, dust will be ground into the air filter and cannot be removed.

## How to clean the air filter


The air filter can be replaced even when the projector is suspended from a ceiling.

- 1** After you turn off the projector's power and the confirmation buzzer beeps twice, disconnect the power cable.


- 2** Open the air filter cover.  
Press the tabs on the air filter cover and open the cover.

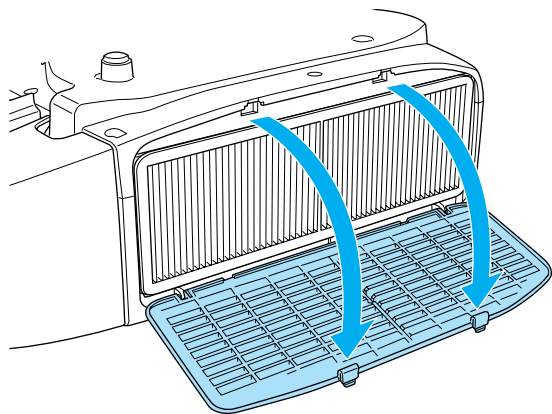

- 3** Remove the air filter.  
Grip the tab in the center of the air filter, and pull the air filter straight out.

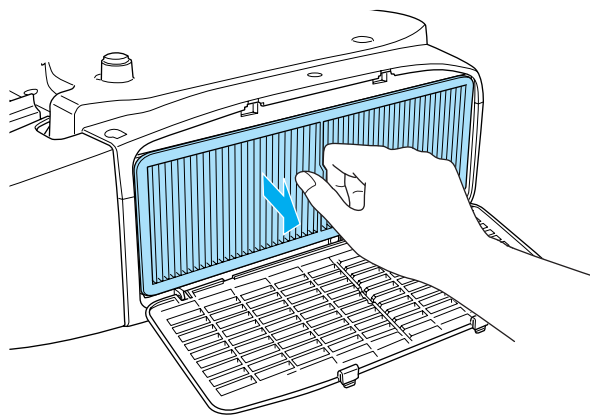


- 4** With the front (the side with tabs) of the air filter facing down, tap the air filter four or five times to shake off the dust.  
Turn it over and tap the other side in the same way.

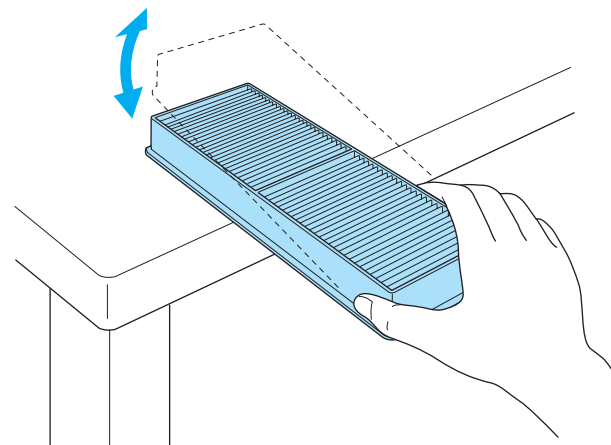


**Attention**

If the air filter is hit too hard, it may become unusable due to deformities and cracks.

- 5** Remove any dust remaining on the air filter by using a vacuum cleaner from the front side.

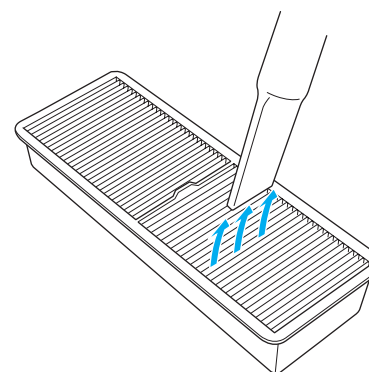

- 6** Install the air filter.

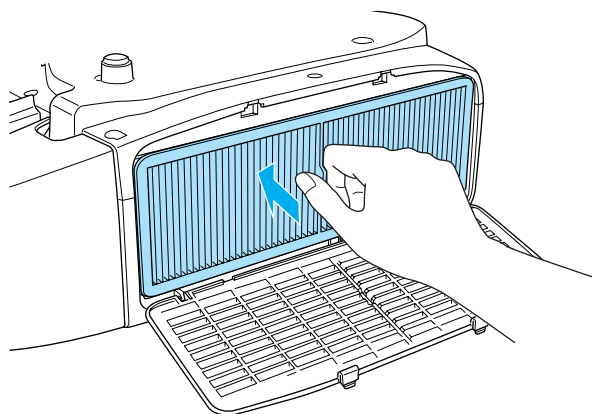

- 7** Close the air filter cover.  
Push the tabs until you hear them click into place.



- If a message is frequently displayed, even after cleaning, it is time to replace the air filter. Replace it with a new air filter.  
☛ "Replacing the Air Filter" [p.105](#)
- It is recommended that you clean these parts at least once every three months. Clean them more often than this if using the projector in a particularly dusty environment.
- The indicators or messages regarding Air Filter Notice are displayed only when **Clean Notice** is set to **On** in **Air Filter Setting** from the Configuration menu.  
☛ **Extended - Air Filter Setting** [p.69](#)


This section explains how to replace the lamp and the air filter.

## Replacing the Lamp

### Lamp replacement period

It is time to replace the lamp when:

- The following message is displayed.  
"It is time to replace your lamp. Please contact your Epson projector reseller or visit [www.epson.com](http://www.epson.com) to purchase."  
The message is displayed for 30 seconds.
- The lamp indicator flashes orange.

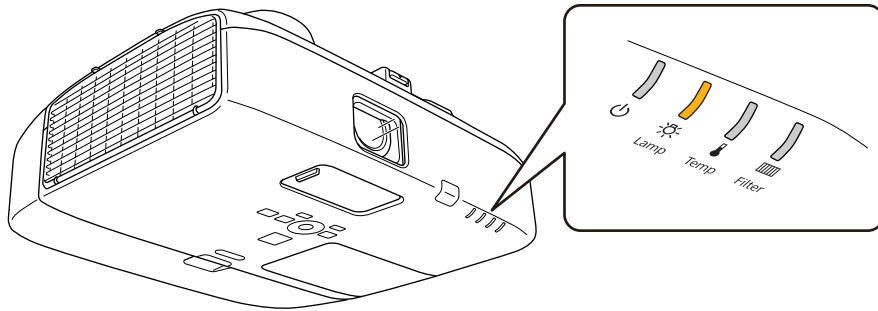

- The projected image gets darker or starts to deteriorate.

### Attention

- The lamp replacement message is set to appear after the following time periods in order to maintain the initial brightness and quality of the projected images.  
EB-D6150:  
When **Power Consumption** is set to **Normal**: About 3900 hours  
When **Power Consumption** is set to **ECO**: About 5900 hours  
EB-D6250/EB-D6155W:  
When **Power Consumption** is set to **Normal**: About 2900 hours  
When **Power Consumption** is set to **ECO**: About 3900 hours
- If you continue to use the lamp after the replacement period has passed, the possibility that the lamp may explode increases. When the lamp replacement message appears, replace the lamp with a new one as soon as possible, even if it is still working.
- Do not repeatedly turn off the power and immediately back on. Turning the power on and off frequently may shorten the lamp's operating life.
- Depending on the characteristics of the lamp and the way it has been used, the lamp may become darker or stop working before the lamp warning message appears. You should always have a spare lamp unit ready in case it is needed.



We recommend that you clean the air filter whenever you replace the lamp.

👉 "Cleaning the Air Filter" [p.99](#)

### How to replace the lamp

The lamp can be replaced even when the projector is suspended from a ceiling.


## Warning

- When replacing the lamp because it has stopped illuminating, there is a possibility that the lamp may be broken. If replacing the lamp of a projector which has been installed on the ceiling, you should always assume that the lamp is cracked, and you should stand to the side of the lamp cover, not underneath it. Remove the lamp cover gently.
- Never disassemble or remodel the lamp. If a modified or disassembled lamp is installed in the projector and used, it could cause a fire, electric shock, or an accident.

## Caution

Wait until the lamp has cooled down sufficiently before removing the lamp cover. If the lamp is still hot, burns or other injuries may result. It takes about one hour after the power has been turned off for the lamp to be cool enough.


- 1** After you turn off the projector's power and the confirmation buzzer beeps twice, disconnect the power cable.
- 2** Wait until the lamp has sufficiently cooled down, and then remove the lamp cover at the top of the projector.  
Loosen the lamp cover fixing screw with the screwdriver supplied with the new lamp unit or a + head screwdriver.

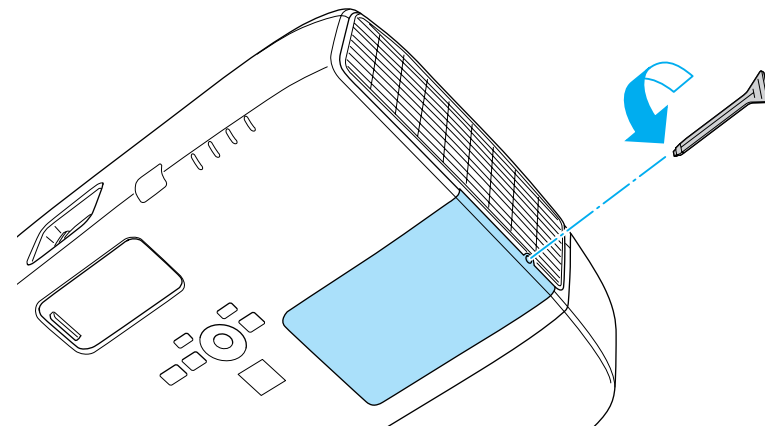


Slide the lamp cover straight forward and remove it.

## **Attention**

When replacing the lamp while the projector is suspended from the ceiling, support the lamp cover with your hand so that it does not fall, and carefully remove it.

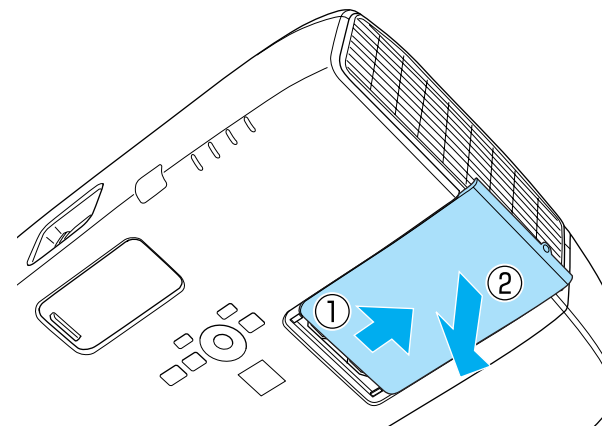


- 3** Loosen the two lamp fixing screws.

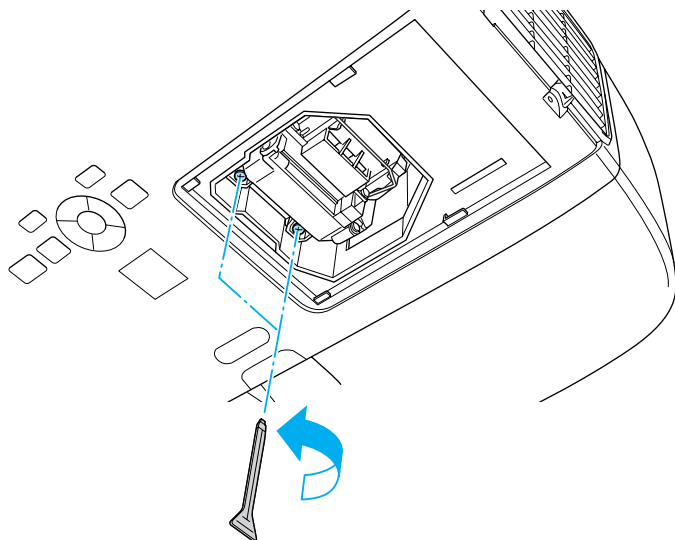


- 4** Hold the lamp by its handle to take out the lamp.  
If the lamp is cracked, contact your local dealer or the nearest address provided in the Epson Projector Contact List.

☛ [Epson Projector Contact List](#)

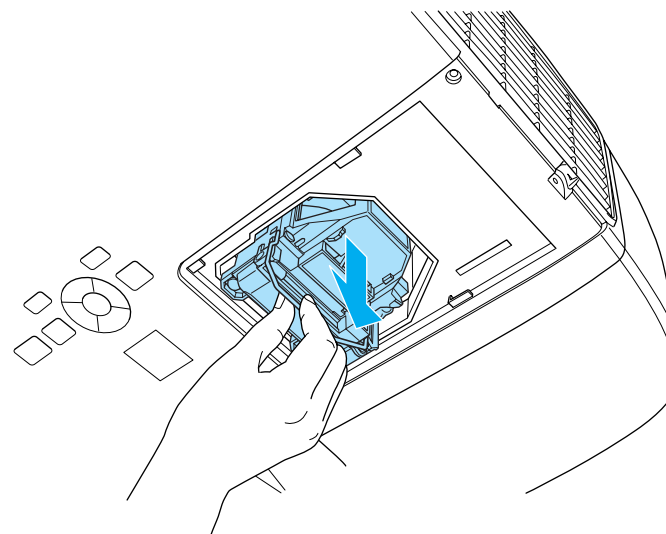


- 5** Install the new lamp.  
Insert the new lamp along the guide rails in the correct direction so that it fits, and push it firmly into place.

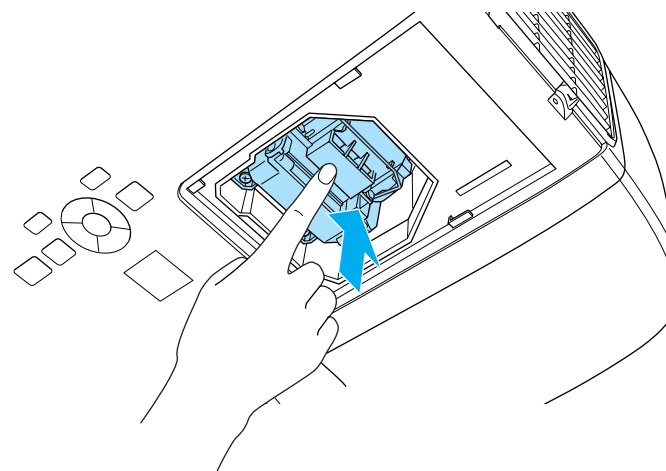


- 6** Tighten the two lamp fixing screws.



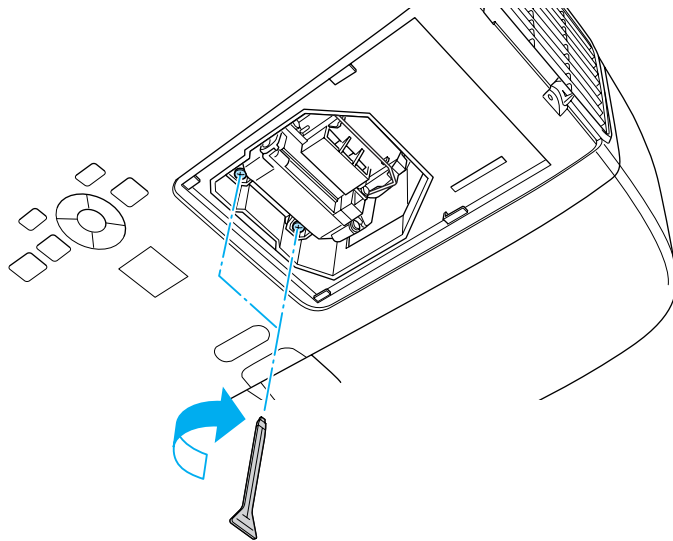

- 7** Replace the lamp cover.  
Slide the cover back into place. Tighten the lamp cover fixing screw.

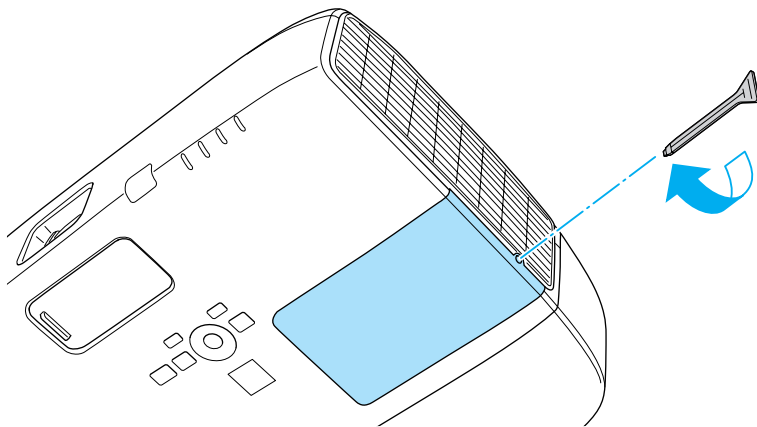

### Attention

- Make sure you install the lamp securely. If the lamp cover is removed, the power turns off automatically as a safety precaution. If the lamp or the lamp cover is not installed correctly, the power does not turn on.
- This product includes a lamp component that contains mercury (Hg). Please consult your local regulations regarding disposal or recycling. Do not dispose of it with normal waste.

### Resetting the lamp hours

The projector records how long the lamp is turned on and a message and indicator notify you when it is time to replace the lamp. After replacing the lamp, reset the time accumulated for **Lamp Hours** in the Configuration menu.

☛ "Reset Menu" [p.81](#)



Only reset **Lamp Hours** after the lamp has been replaced. Otherwise the lamp replacement period is not indicated correctly.

## Replacing the Air Filter

### Air filter replacement period

It is time to replace the air filter when:

- The message is displayed even though the air filter has been cleaned.




The messages regarding Air Filter Notice are displayed only when **Clean Notice** is set to **On** in **Air Filter Setting** from the Configuration menu.

☛ **Extended - Air Filter Setting** [p.69](#)


## How to replace the air filter

The air filter can be replaced even when the projector is suspended from a ceiling.


- 1** After you turn off the projector's power and the confirmation buzzer beeps twice, disconnect the power cable.
- 2** Open the air filter cover.  
Press the tabs on the air filter cover and open the cover.

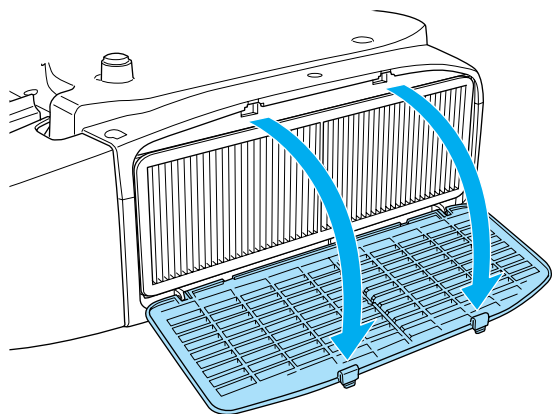

- 3** Remove the air filter.  
Grip the tab in the center of the air filter, and pull the air filter straight out.

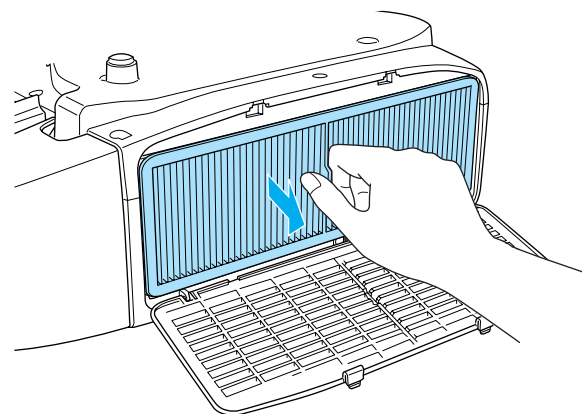

- 4** Install the new air filter.

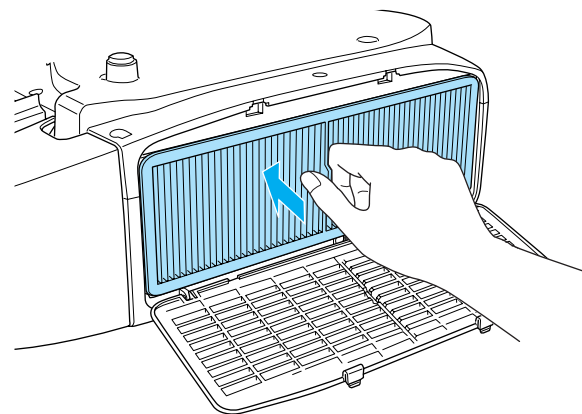

- 5** Close the air filter cover.  
Push the tabs until you hear them click into place.



- Make sure you install an air filter. If you use the projector without an air filter installed, a message is displayed and the projector automatically turns off after about one minute.
- Dispose of used air filters properly in accordance with your local regulations.

Material of the frame part: Polypropylene

Material of the filter part: Polypropylene



# Appendix

## Projecting Without a Computer (Slideshow)

By connecting a USB storage device such as a USB memory or a USB hard disk to the projector, you can project the files stored on the device without using a computer. This function is called Slideshow.



- You may not be able to use USB storage devices that incorporate security functions.
- You cannot correct keystone distortion while projecting a Slideshow, even if you press the [◀], [▶], [↶], and [↷] buttons on the control panel.

## Specifications for files that can be projected using Slideshow


Type	File Type (Extension)	Notes
Image	.jpg	The following cannot be projected. - CMYK color mode formats - Progressive formats - Images with a resolution greater than 8192x8192 Due to the characteristics of JPEG files, images may not be projected clearly if the compression ratio is too high.
	.bmp	Cannot project images with a resolution greater than 1280x800.
	.gif	<ul style="list-style-type: none"> <li>• Cannot project images with a resolution greater than 1280x800.</li> <li>• Cannot project animated GIFs.</li> </ul>
	.png	Cannot project images with a resolution greater than 1280x800.



- When connecting and using a USB-compatible hard disk, make sure you connect the AC adaptor supplied with the hard disk.
- The projector does not support some file systems, so use media that has been formatted in Windows.
- Format the media in FAT16/32.

## Slideshow examples

### Projecting images stored on USB storage

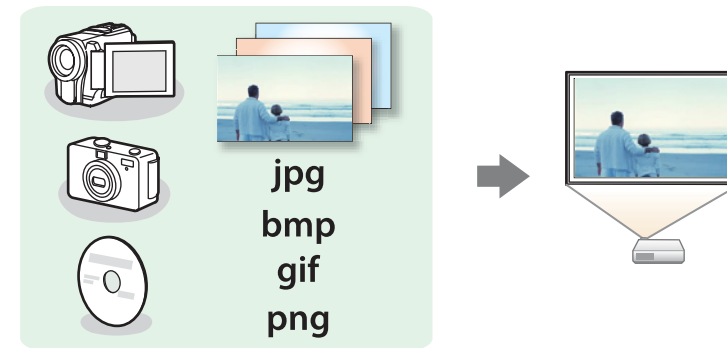

- ☛ "Projecting the selected image" [p.111](#)
- ☛ "Projecting image files in a folder in sequence (Slideshow)" [p.112](#)

## Slideshow operating methods

Although the following steps are explained based on the remote control, you can perform the same operations from the control panel.

### Starting Slideshow

**1**

Change the source to USB.





- ☛ "Switching to the Target Image by Remote Control" [p.32](#)

## 2 Connect the USB storage device or digital camera to the projector.

☛ "Connecting USB Devices" p.24

Slideshow starts and the file list screen is displayed.


- JPEG files are displayed as thumbnails (file contents are displayed as small images).
- Other files or folders are displayed as icons as shown in the following table.

Icon	File	Icon	File
	JPEG files*		BMP files
	GIF files		PNG files

\* When it cannot be displayed as a thumbnail, it is displayed as an icon.



- You can also insert a memory card into a USB card reader and then connect the reader to the projector. However, some commercially available USB card readers may not be compatible with the projector.
- If the following screen (Select Drive screen) is displayed, press the [▲], [▼], [◀], and [▶] buttons to select the drive you want to use, and then press the [Enter] button.

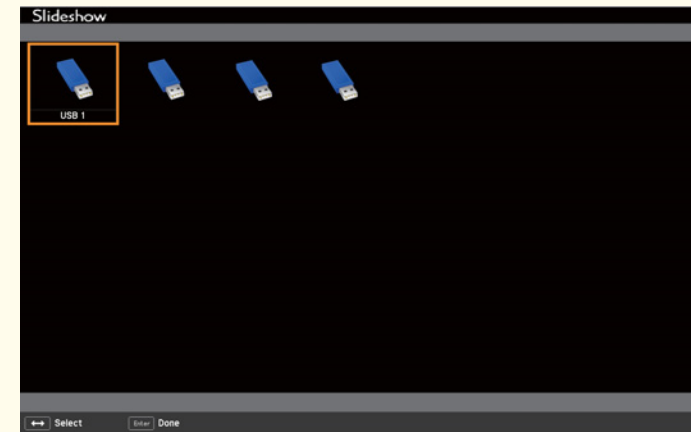

- To display the Select Drive screen, position the cursor on **Select Drive** at the top of the file list screen, and then press the [Enter] button.

### Projecting images

## 1

Use the [▲], [▼], [◀], and [▶] buttons to select the file or folder you want to project.



If not all of the files and folders are displayed on the current screen, press the [Down] button on the remote control, or position the cursor on **Next Page** at the bottom of the screen and press the [Enter] button.

To return to the previous screen, press the [Up] button on the remote control, or position the cursor on **Previous Page** at the top of the screen and press the [Enter] button.

**2** Press the [Enter] button.

The selected image is displayed.


When a folder is selected, the files in the selected folder are displayed. To return to the previous screen, position the cursor on **Back to Top** and press the [Enter] button.

## Rotating images

You can rotate the played images in 90° increments. The rotating function is also available during Slideshow.

**1** Play images, or run Slideshow.

**2** While projecting, press the [] or [] button.

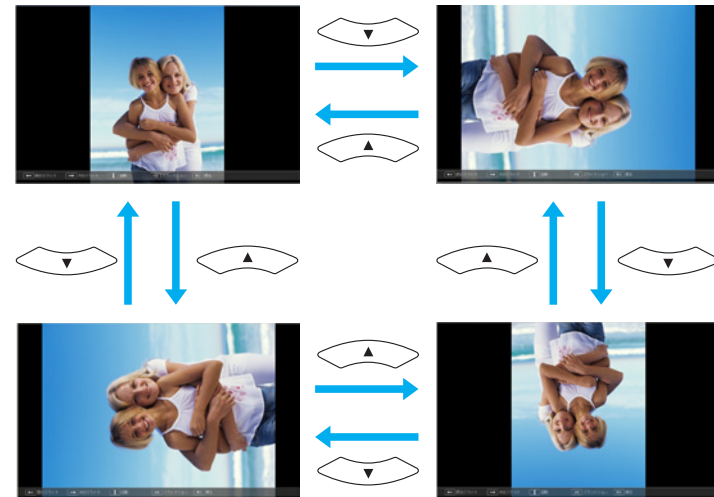

## Stopping Slideshow

To close Slideshow, disconnect the USB device from the USB port on the projector. For digital cameras, hard disks, and so on, turn off the power to the device and then remove.

## Projecting the selected image





### Attention

Do not disconnect the USB storage device while it is being accessed. Slideshow may not operate correctly.

**1** Start Slideshow.

The file list screen is displayed.



 
☛ "Starting Slideshow" [p.109](#)

- 2** Press the [  ], [  ], [  ], and [  ] buttons to select the image file you want to project.



- 3** Press the [Enter] button.  
The image is displayed.



 Press the [  ] [  ] buttons to move to the next or previous image file.




 
- 4** Press the [Esc] button to return to the file list screen.

## Projecting image files in a folder in sequence (Slideshow)

You can project the image files in a folder in sequence, one at a time. This function is called Slideshow. Use the following procedure to run Slideshow.




To change files automatically when you run Slideshow, set **Screen Switching Time** from **Option** in Slideshow to anything other than **No**. The default setting is 3 Sec..

- 1** Start Slideshow.  
The file list screen is displayed.  
☛ "Starting Slideshow" [p.109](#)
- 2** Use the [  ] [  ] [  ] [  ] buttons to position the cursor over the folder for the Slideshow that you want to run and press the [Enter] button.
- 3** Select **Slideshow** at the bottom right of the file list screen, and then press the [Enter] button.  
Slideshow starts, and the image files in the folder are automatically projected in sequence, one at a time.  
When the last file is projected, the file list is displayed again automatically. If you set **Continuous Play** to **On** in the Option window, projection starts again from the beginning when it reaches the end.  
☛ "Image file display settings and Slideshow operation settings" [p.113](#)  
You can proceed to the next screen, return to the previous screen, or stop playback while projecting a Slideshow.









If **Screen Switching Time** on the Option screen is set to **No**, files do not change automatically when you select Play Slideshow. Press the  button, the [Enter] button, or the [Down] button on the remote control to continue to the next file.


You can use the following functions when projecting an image file with Slideshow.

- Freeze
  - ☛ "Freezing the Image (Freeze)" [p.48](#)
- A/V Mute
  - ☛ "Hiding the Image and Sound Temporarily (A/V Mute)" [p.47](#)
- E-Zoom
  - ☛ "Enlarging Part of the Image (E-Zoom)" [p.49](#)




 
### Image file display settings and Slideshow operation settings

You can set the file display order and Slideshow operations on the Option screen.

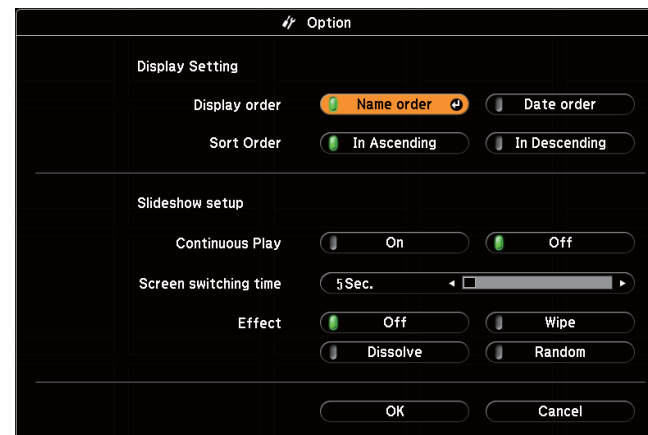- 1** Press the     buttons to position the cursor over the folder where you want to set display conditions and press the [Esc] button. Select **Option** from the submenu displayed, then press the [Enter] button.
- 2** When the following Option screen is displayed, set each of the items.  
 Enable settings by positioning the cursor on the target item and pressing the [Enter] button.  
 The following table shows the details for each item.



<b>Display Order</b>	You can select to display the files in <b>Name Order</b> or <b>Date Order</b> .
<b>Sort Order</b>	You can select to sort the files <b>In Ascending</b> or <b>In Descending</b> order.
<b>Continuous Play</b>	You can set whether to repeat the Slideshow.
<b>Screen Switching Time</b>	You can set the time for a single file to be displayed in Play Slideshow. You can set a time between <b>No</b> (0) to 60 Sec.. When you set <b>No</b> , auto play is disabled.
<b>Effect</b>	You can set the screen effects when changing slides.

- 3** When you have finished making settings, use the , , , and  buttons to position the cursor over **OK** and press [Enter].  
 The settings are applied.  
 If you do not want to apply the settings, position the cursor on **Cancel** and press the [Enter] button.

## About EasyMP Monitor

EasyMP Monitor lets you carry out operations such as checking the status of multiple Epson projectors that are connected to a network at a computer monitor, and controlling the projectors from the computer.

You can download EasyMP Monitor from the following Web site.

<http://www.epson.com>

The following provides brief descriptions of the monitoring and control functions that can be carried out using EasyMP Monitor.

- **Registering projectors for monitoring and control**

Projectors on the network can be searched for automatically, and you can then select which projectors you want to register from the projectors that are detected.

You can register target projectors by entering their IP addresses.

- **Registered projectors can also be assigned to groups so that they can be monitored and controlled in groups.**

- **Monitoring the status of registered projectors**

You can check the power status (ON/OFF) for projectors and problems or warnings that require attention by using the icons.

You can select groups of projectors or a single projector and then check the cumulative lamp operating time or information such as input sources, problems, and warnings for the projectors.

- **Controlling registered projectors**

Projectors can be selected in groups or as single projectors, and you can then carry out operations for the selected projectors such as turning the power on and off and switching their input sources.

You can use Web Control functions to change the settings in the projector's Configuration menu.

If there are certain control actions which are carried out regularly at particular times or on particular days, you can use Timer Settings to register timer settings.

- **Mail Notification settings**

You can set e-mail addresses to which notifications are sent if a status that requires attention, such as a problem, occurs with a registered projector.

- **Sending messages to registered projectors**

The Message Broadcasting plugin for EasyMP Monitor can be used to send JPEG files to registered projectors.

Download the Message Broadcasting plugin from the Web site address provided at the beginning of this chapter.

## Changing Settings Using a Web Browser (Web Control)

By using a Web browser of a computer connected to the projector on a network, you can make settings and control the projector. This function allows you to perform setup and control operations remotely. In addition, since you can use the computer's keyboard, entering characters required for the setup is easier.

Use Microsoft Internet Explorer 6.0 or later as the Web browser. If using a Mac OS, use Safari or Firefox.



If you set **Standby Mode to Communication On**, you can use a Web browser to make settings and perform control even if the projector is in standby mode (when the power is off).

☛ **Extended - Standby Mode** [p.69](#)

## Projector setup

In a Web browser, you can set items that are usually set in the projector's Configuration menu. The settings are reflected in the Configuration menu. There are also items that can only be set in a Web browser.

Items in the Configuration menu that cannot be set by a Web browser

- Settings menu - Keystone - Quick Corner
- Settings menu - Pointer Shape
- Settings menu - Test Pattern
- Settings menu - User Button
- Extended menu - User's Logo
- Extended menu - Language
- Extended menu - Operation - High Altitude Mode
- Reset menu - Reset All and Reset Lamp Hours

The settings for items on each menu are the same as the projector's Configuration menu.

☛ "Configuration Menu" [p.61](#)

Items that can only be set with a Web browser

- SNMP Community Name
- Monitor Password

## Displaying the Web Control screen

Use the following procedure to display the Web Control screen.

Make network settings on the computer and projector and put them into network connection status. When communicating with a wireless LAN, connect in Advanced connection mode.

☛ [Wireless LAN - Connection Mode](#) [p.74](#)



If your Web browser is set up to connect via a proxy server, the Web Control screen cannot be displayed. To display Web Control, you need to make settings so that a proxy server is not used for a connection.

**1** Start a Web browser on the computer.

**2** Enter the IP address of the projector in the address input box of the Web browser, and press the Enter key on the computer's keyboard.

The Web Control screen is displayed.


When Web Control Password is set in the Network menu from the projector's Configuration menu, the password entry screen is displayed.

## Displaying the Web Remote screen


The Web Remote function allows you to perform projector remote control operations with a Web browser.

**1** Display the Web Control screen.

**2** Click **Web Remote**.

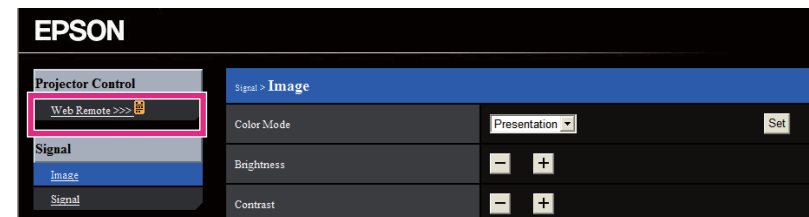

**3** The Web Remote screen is displayed.

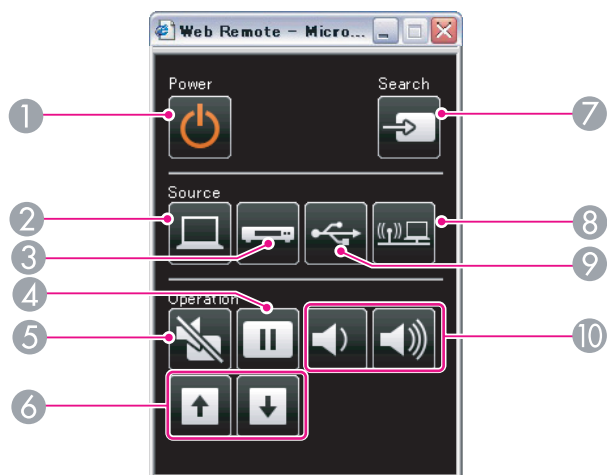

Name	Function
① [Power] button	Turns the projector power on or off. ☛ "From Installation to Projection" p.30
② [Computer] button	Each time you press the button, the input changes between images from the Computer1 port and the Computer2 port.
③ [Video] button	Each time the button is pressed, the image cycles through Video, S-Video, and HDMI ports.
④ [Freeze] button	Images are paused or unpaused. ☛ "Freezing the Image (Freeze)" p.48
⑤ [A/V Mute] button	Turns the video and audio on or off. ☛ "Hiding the Image and Sound Temporarily (A/V Mute)" p.47

Name	Function
⑥ [Page] buttons [Up] [Down]	Changes pages in files such as PowerPoint files when using the following projection methods. <ul style="list-style-type: none"> <li>• When using the Wireless Mouse function                             <ul style="list-style-type: none"> <li>☛ "Using the Remote Control to Operate the Mouse Pointer (Wireless Mouse)" p.50</li> </ul> </li> <li>• When connecting to a network</li> </ul> When projecting images using Slideshow, pressing these buttons displays the previous/next image file.
⑦ [Source Search] button	Switches to the image from the input port where video signals are being input. ☛ "Automatically Detect Input Signals and Change the Projected Image (Source Search)" p.31
⑧ [LAN] button	Changes to the images projected with EasyMP Network Projection. When projecting using the optional Quick Wireless Connection USB Key, this button switches to that image. ☛ "Switching to the Target Image by Remote Control" p.32
⑨ [USB] button	Changes to the following image. <ul style="list-style-type: none"> <li>• Images from the device connected to the USB (TypeA) port</li> </ul> ☛ "Switching to the Target Image by Remote Control" p.32
⑩ [Volume] buttons [Left] [Right]	[Left] Decreases the volume. [Right] Increases the volume. ☛ "Adjusting the Volume" p.37

## Using the Mail Notification Function to Report Problems

When you set Mail Notification, notification messages are sent to the preset email addresses when a problem or warning occurs with a projector. This

will enable the operator to be notified of problems with projectors even at locations away from the projectors.

☛ **Network - Mail - Mail Notification** [p.78](#)



- Up to a maximum of three notification destinations (addresses) can be registered, and notification messages can be sent to all three destinations at once.
- If a projector develops a critical problem and suddenly stops working, it may not be able to send a message notifying an operator of the problem.
- Controlling is possible if **Standby Mode** is set to **Communication On**, even if the projector is in standby state (when the power is off).

☛ **Extended - Standby Mode** [p.69](#)

### Reading Error Notification Mail

When the Mail Notification function is set to On and a problem or warning occurs in the projector, the following email will be sent.

Subject: EPSON Projector

Line 1: The projector name where the problem has occurred

Line 2: The IP address set for the projector where the problem has occurred.

Line 3 and on: Details of the problem

The details of the problem are listed line by line. The main message contents are listed below.

- Internal error (Internal Error)
- Fan related error (Fan Error)
- Sensor error (Sensor Error)
- Lamp timer failure (Lamp Failure)

- Lamp out (Lamp Error)
- Lamp replacement notification (Replace Lamp)
- Internal temperature error (High Temp Error/overheating)
- High-speed cooling in progress (High Temp Warning)
- Clean Air Filter (Air Filter Notice)
- Low Air Flow (Low Air Flow)
- Low Air Flow Error (Filter Airflow Error)
- Air Flow Sensor Error (Air Flow Sensor Err.)
- No Air Filter (No Air Filter)
- No-signal (No Signal)  
No Signal is input to the projector. Check the connection status or check that the power for the signal source is turned on.
- Exhaust vent shutter Error (Exhaust vent shutter Error)
- Auto Iris Error (Auto Iris Error)
- Power Err. (Ballast) (Power Err. (Ballast))

See the following to deal with problems or warnings.

☛ "Reading the Indicators" [p.84](#)

---

### Management Using SNMP

By setting **SNMP** to **On** in the Configuration menu, notification messages are sent to the specified computer when a problem or warning occurs. This will enable the operator to be notified of problems with projectors even at locations away from the projectors.

☛ **Network - Others - SNMP** [p.78](#)



- SNMP should be managed by a network administrator or someone who is familiar with the network.
- To use the SNMP function to monitor the projector, you need to install the SNMP manager program on your computer.
  - ☛ **Wireless LAN - Connection Mode** p.74
- The managing function using SNMP cannot be used via Wireless LAN in Quick connection mode.
- Up to two destination IP addresses can be saved.

## ESC/VP21 Commands

You can control the projector from an external device using ESC/VP21.

### Command list

When the power ON command is transmitted to the projector, the power turns on and it enters warm-up mode. When the projector's power has turned on, a colon ":" (3Ah) is returned.

When a command is input, the projector executes the command and returns a ":", and then accepts the next command.

If the command being processed terminates abnormally, an error message is output and a ":" is returned.

The main contents are listed below.

Item		Command	
Power ON/OFF	On	PWR ON	
	Off	PWR OFF	
Signal selection	Computer1	Auto	SOURCE 1F
		RGB	SOURCE 11
		Component	SOURCE 14
	Computer2	Auto	SOURCE 2F

Item		Command
	RGB	SOURCE 21
	Component	SOURCE 24
	HDMI	SOURCE 30
	Video	SOURCE 41
	S-Video	SOURCE 42
	USB	SOURCE 52
	LAN	SOURCE 53
A/V Mute On/Off	On	MUTE ON
	Off	MUTE OFF

Add a Carriage Return (CR) code (0Dh) to the end of each command and transmit.

For more details, contact your local dealer or the nearest address provided in the Epson Projector Contact List.



☛ [Epson Projector Contact List](#)

### Cable layouts

#### Serial connection

- Connector shape: D-Sub 9-pin (male)

- Projector input port name: RS-232C

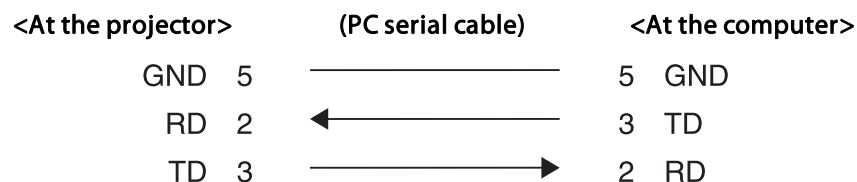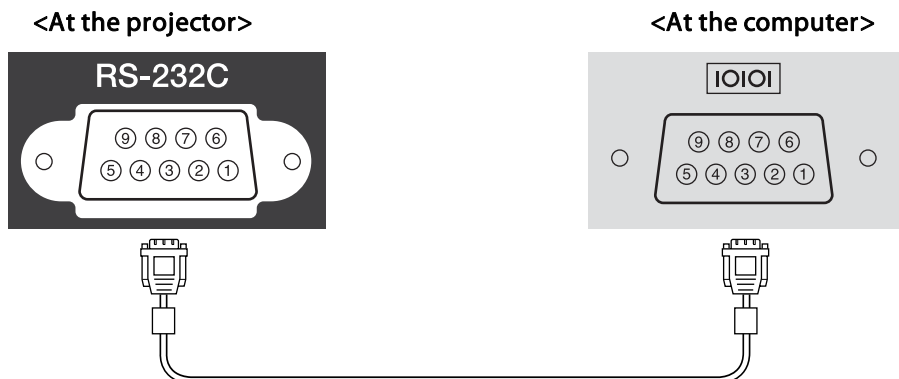

Signal Name	Function
GND	Signal wire ground
TD	Transmit data
RD	Receive data

## Communications protocol

- Default baud rate setting: 9600 bps
- Data length: 8 bit
- Parity: None
- Stop-bit: 1 bit
- Flow control: None

## About PJLink

PJLink Class1 was established by the JBMIA (Japan Business Machine and Information System Industries Association) as a standard protocol for controlling network-compatible projector's as part of their efforts to standardize projector control protocols.

The projector complies with the PJLink Class1 standard established by the JBMIA.

See the following for more information on network settings related to PJLink.

☛ "Network Menu" p.71

It complies with all commands except for the following commands defined by PJLink Class1, and agreement was confirmed by the PJLink standard adaptability verification.

URL:<http://pjlink.jbmia.or.jp/english/>

- Non-compatible commands

	Function	PJLink Command
Mute settings	Image muting set	AVMT 11
	Audio muting set	AVMT 21

- Input names defined by PJLink and corresponding projector sources

Source	PJLink Command
Computer1	INPT 11
Computer2	INPT 12
Video	INPT 21
S-Video	INPT 22
HDMI	INPT 32
USB	INPT 41

Source	PJLink Command
LAN	INPT 52

- Manufacturer name displayed for "Manufacture name information query"  
EPSON
- Model name displayed for "Product name information query"  
EB-D6250  
EB-D6155W  
EB-D6150

## About Crestron RoomView®

Crestron RoomView® is an integrated control system provided by Crestron®. It can be used to monitor and control multiple devices connected on a network.

The projector supports the control protocol, and can therefore be used in a system built with Crestron RoomView®.

Visit the Crestron® Web site for details on Crestron RoomView®. (Only English-language displays are supported.)

<http://www.crestron.com>

The following provides an overview of Crestron RoomView®.

### • Remote operation using a Web browser

You can operate a projector from your computer just like using a remote control.

### • Monitoring and control with application software

You can use Crestron RoomView® Express or Crestron RoomView® Server Edition provided by Crestron® to monitor devices in the system, to communicate with the help desk, and to send emergency messages. See the following Web site for details.

<http://www.crestron.com/getroomview>

This manual describes how to perform operations on your computer using a Web browser.



- You can only enter single-byte alphanumeric characters and symbols.
- The following functions cannot be used while using Crestron RoomView®.
  - ☛ "Changing Settings Using a Web Browser (Web Control)" [p.114](#)
  - Message Broadcasting (EasyMP Monitor plug-in)
- Controlling is possible if **Standby Mode** is set to **Communication On**, even if the projector is in standby state (when the power is off).
  - ☛ **Extended - Standby Mode** [p.69](#)

## Operating a projector from your computer

Displaying the operation window

Check the following before carrying out any operations.

- Make sure the computer and projector are connected to the network. When communicating with a wireless LAN, connect in Advanced connection mode.
  - ☛ **Wireless LAN - Connection Mode** [p.74](#)
- Set **RoomView** to **On** from the **Network** menu.
  - ☛ **Network - Others - RoomView** [p.78](#)



- 1 Start a Web browser on the computer.
- 2 Enter the IP address of the projector in the address field of the Web browser, and press the Enter key on the keyboard.  
The operation window is displayed.

Using the operation window



 
- 1 You can perform the following operations when you click the buttons.

Button	Function
<b>Power</b>	Turns the projector power on or off.
<b>Vol-/Vol+</b>	Adjusts the volume.

Button	Function
<b>A/V Mute</b>	Turns the video and audio on or off. ☛ "Hiding the Image and Sound Temporarily (A/V Mute)" <a href="#">p.47</a>

- 2 Switch to the image from the selected input source. To display input sources that are not shown in Source List, click (a) or (b) to scroll up or down.  
You can change the source name if necessary.
- 3 You can perform the following operations when you click the buttons. To display buttons that are not shown in the window, click (c) or (d) to scroll left or right.

Button	Function
<b>Freeze</b>	Images are paused or unpaused. ☛ "Freezing the Image (Freeze)" <a href="#">p.48</a>
<b>Contrast</b>	Adjusts the difference between light and shade in the images.
<b>Brightness</b>	Adjusts the image brightness.
<b>Color</b>	Adjusts the color saturation for the images.
<b>Sharpness</b>	Adjusts the image sharpness.
<b>Zoom</b>	Click the [⊕] button to enlarge the image without changing the projection size. Click the [⊖] button to reduce an image that was enlarged with the [⊕] button. Click the [▲], [▼], [◀], or [▶] button to change the position of an enlarged image. ☛ "Enlarging Part of the Image (E-Zoom)" <a href="#">p.49</a>

- 4 The [▲], [▼], [◀], or [▶] buttons perform the same operations as the  buttons on the remote control. You can perform the following operations when you click the other buttons.


Button	Function
<b>OK</b>	Performs the same operation as the [Enter] button on the remote control. ☛ "Remote Control" p.13
<b>Menu</b>	Displays and closes the Configuration menu.
<b>Auto</b>	If clicked while projecting analog RGB signals from Computer1 port or Computer2 port, automatically optimizes the image by adjusting the Tracking, Sync., and Position.
<b>Search</b>	Switches to the image from the input port where video signals are being input. ☛ "Automatically Detect Input Signals and Change the Projected Image (Source Search)" p.31
<b>Esc</b>	Performs the same operation as the [Esc] button on the remote control. ☛ "Remote Control" p.13

5 You can perform the following operations when you click the tabs.

Tab	Function
<b>Contact IT Help</b>	Displays the Help Desk window. Used to send messages to, and receive messages from, the administrator using Crestron RoomView® Express.
<b>Info</b>	Displays information on the projector that is currently connected.
<b>Tools</b>	Changes settings in the projector that is currently connected. See the next section.

Using the tools window

The following window is displayed when you click the **Tools** tab on the operation window. You can use this window to change settings in the projector that is currently connected.

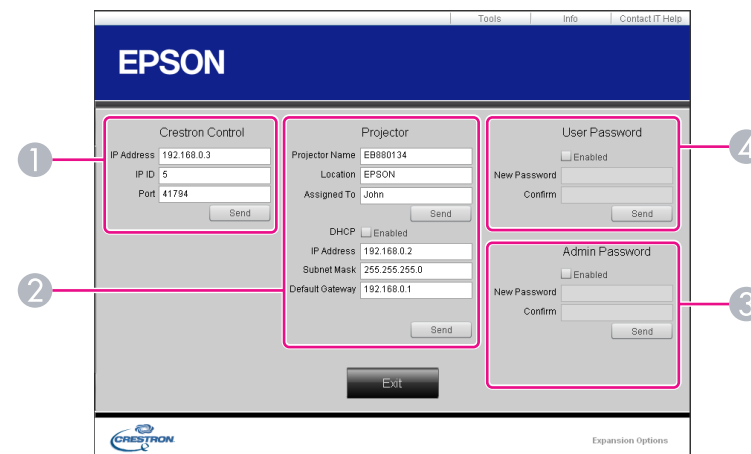

- 1 **Crestron Control**  
Make settings for Crestron® central controllers.
- 2 **Projector**  
The following items can be set.

Item	Function
<b>Projector Name</b>	Enter a name to differentiate the projector that is currently connected from other projectors on the network. (The name can contain up to 15 single-byte alphanumeric characters.)
<b>Location</b>	Enter an installation location name for the projector that is currently connected on the network. (The name can contain up to 32 single-byte alphanumeric characters and symbols.)
<b>Assigned To</b>	Enter a user name for the projector. (The name can contain up to 32 single-byte alphanumeric characters and symbols.)

Item	Function
<b>DHCP</b>	Select the <b>Enabled</b> check box to use DHCP. You cannot enter an IP address if DHCP is enabled.
<b>IP Address</b>	Enter the IP address to assign to the currently connected projector.
<b>Subnet Mask</b>	Enter a subnet mask for the currently connected projector.
<b>Default Gateway</b>	Enter the gateway address for the currently connected projector.
<b>Send</b>	Click this button to confirm the changes made to the <b>Projector</b> .

Item	Function
<b>New Password</b>	Enter the new password when changing the password to open the operation window. (The password can contain up to 26 single-byte alphanumeric characters.)
<b>Confirm</b>	Enter the same password as you entered in <b>New Password</b> . If the passwords are not the same, an error is displayed.
<b>Send</b>	Click this button to confirm the changes made to the <b>User Password</b> .

### 3 Admin Password

Select the **Enable** check box to require a password to open the Tools window. The following items can be set.

Item	Function
<b>New Password</b>	Enter the new password when changing the password to open the Tools window. (The password can contain up to 26 single-byte alphanumeric characters.)
<b>Confirm</b>	Enter the same password as you entered in <b>New Password</b> . If the passwords are not the same, an error is displayed.
<b>Send</b>	Click this button to confirm the changes made to the <b>Admin Password</b> .

### 4 User Password

Select the **Enable** check box to require a password to open the operation window on the computer. The following items can be set.

The following optional accessories and consumables are available. Please purchase these products as and when needed. The following list of optional accessories and consumables is current as of: December 2010. Details of accessories are subject to change without notice and availability may vary depending on the country of purchase.

## Optional Accessories

### 50" portable screen ELPSC06

A compact screen that can be carried easily. ([Aspect Ratio](#)▶▶ 4:3)

### 70" portable screen ELPSC23

### 80" portable screen ELPSC24

### 90" portable screen ELPSC25

Portable roll-type screens. (aspect ratio 16:10)

### 60" portable screen ELPSC27

### 80" portable screen ELPSC28

### 100" screen ELPSC29

Portable roll-type screens. (aspect ratio 4:3)

### Computer cable ELPKC02

(1.8 m - for mini D-Sub15-pin/mini D-Sub 15pin)

This is the same as the computer cable supplied with the projector.

### Computer cable ELPKC09

(3 m - for mini D-Sub15-pin/mini D-Sub 15pin)

### Computer cable ELPKC10

(20 m - for mini D-Sub15-pin/mini D-Sub 15pin)

Use one of these longer cables if the computer cable supplied with the projector is too short.

### Component video cable ELPKC19

(3 m - for mini D-Sub 15-pin/RCA male×3)

Use to connect a [Component Video](#)▶▶ source.

### Document Camera ELPDC06/ELPDC11

Use when projecting images such as books, OHP documents, or slides.

### Interactive Unit ELPIU01

Use when operating the computer screen on the projection surface.

### Wireless LAN unit ELPAP07

Use when connecting the projector to a computer wirelessly and projecting.

### Quick Wireless Connection USB Key ELPAP08

Use when you want to quickly establish one-to-one connection between the projector and a computer with Windows installed.

### Ceiling pipe (450 mm)\* ELFPF13

### Ceiling pipe (700 mm)\* ELFPF14

Use when installing the projector on a high ceiling.

### Ceiling mount\* ELPMB22 or ELPMB23

Use when installing the projector on a ceiling.

\* Special expertise is required to suspend the projector from a ceiling. Contact your local dealer or the nearest address provided in the Epson Projector Contact List.

 [Epson Projector Contact List](#)

## Consumables

### Lamp unit (for EB-D6150) ELPLP61



### Lamp unit (for EB-D6250/EB-D6155W) ELPLP64

Use as a replacement for used lamps.

### Air filter ELPAF30

Use as a replacement for used air filters.

## Projection Distance for EB-D6155W

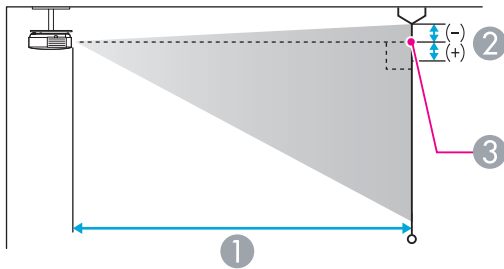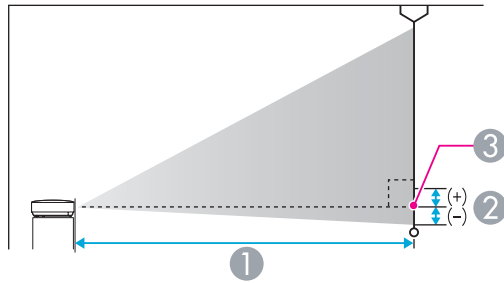

- ① Projection distance
- ② Distance from the center of the lens to the base of the screen  
(or to the top of the screen, if suspended from a ceiling)
- ③ Center of lens

Unit: cm

4:3 Screen Size		①	②
		Minimum (Wide) to Maximum (Tele)	
30"	61x46	99 - 163	-1
40"	81x61	133 - 218	-2
50"	100x76	168 - 274	-2

4:3 Screen Size		①	②
		Minimum (Wide) to Maximum (Tele)	
60"	120x91	202 - 330	-2
80"	160x120	270 - 441	-3
100"	200x150	339 - 552	-4
120"	240x180	407 - 663	-5
150"	300x230	510 - 830	-6
200"	410x300	682 - 1107	-8
250"	510x380	853 - 1385	-10



Unit: cm

16:9 Screen Size		①	②
		Minimum (Wide) to Maximum (Tele)	
30"	66x37	90 - 148	+1
40"	89x50	121 - 198	+1
50"	110x62	152 - 248	+2
60"	130x75	183 - 299	+2
80"	180x100	245 - 400	+3
100"	220x120	307 - 501	+3
120"	270x150	370 - 601	+4
150"	330x190	463 - 753	+5
200"	440x250	618 - 1005	+7
250"	550x310	774 - 1257	+9
275"	610x340	852 - 1383	+10

Unit: cm

16:10 Screen Size		①	②
		Minimum (Wide) to Maximum (Tele)	
30"	65x40	87 - 143	-1
40"	86x54	117 - 193	-1
50"	110x67	148 - 242	-2
60"	130x81	178 - 291	-2
80"	170x110	238 - 389	-3
100"	220x130	299 - 487	-3
120"	260x160	359 - 585	-4
150"	320x200	450 - 732	-5
200"	430x270	602 - 978	-7
250"	540x340	753 - 1223	-8
280"	600x370	844 - 1370	-9

## Projection Distance for EB-D6250/EB-D6150

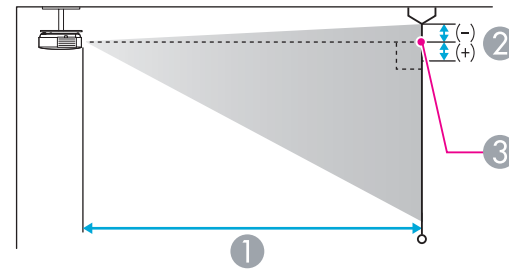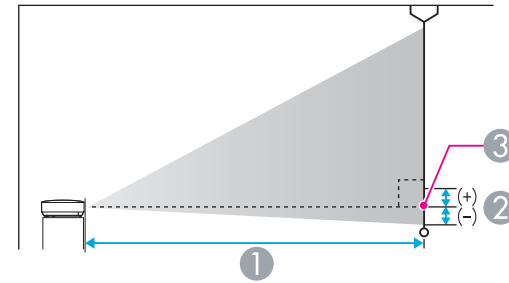

- ① Projection distance
- ② Distance from the center of the lens to the base of the screen (or to the top of the screen, if suspended from a ceiling)
- ③ Center of lens

Unit: cm

4:3 Screen Size		①	②
		Minimum (Wide) to Maximum (Tele)	
30"	61x46	82 - 135	-5
40"	81x61	111 - 181	-6
50"	100x76	139 - 228	-8

4:3 Screen Size		①	②
		Minimum (Wide) to Maximum (Tele)	
60"	120x91	168 - 274	-10
80"	160x120	225 - 367	-13
100"	200x150	282 - 459	-16
120"	240x180	339 - 552	-19
150"	300x230	425 - 691	-24
200"	410x300	567 - 922	-32
250"	510x380	710 - 1154	-40
300"	610x460	853 - 1385	-48

Unit: cm

16:9 Screen Size		①	②
		Minimum (Wide) to Maximum (Tele)	
30"	66x37	90 - 148	+1
40"	89x50	121 - 198	+1
50"	110x62	152 - 248	+2
60"	130x75	183 - 299	+2
80"	180x100	245 - 400	+3
100"	220x120	307 - 501	+3
120"	270x150	370 - 601	+4
150"	330x190	463 - 753	+5
200"	440x250	618 - 1005	+7
250"	550x310	774 - 1257	+9
275"	610x340	852 - 1383	+10

## Supported Resolutions

### Computer signals (analog RGB)

Signal	Refresh Rate (Hz)	Resolution (dots)
VGA	60/72/75/85	640x480
SVGA	56/60/72/75/85	800x600
XGA	60/70/75/85	1024x768
WXGA	60	1280x768
	60	1360x768
	60/75/85	1280x800
WXGA+	60/75/85	1440x900
SXGA	70/75/85	1152x864
	60/75/85	1280x1024
	60/75/85	1280x960
SXGA+	60/75	1400x1050
WSXGA+*1*2	60	1680x1050
UXGA	60	1600x1200
MAC13"	67	640x480
MAC16"	75	832x624
MAC19"	75	1024x768
	59	1024x768
MAC21"	75	1152x870

\*1 EB-D6155W only

\*2 Only compatible when **Wide** is selected as the **Resolution** from the Configuration menu.

Even when signals other than those mentioned above are input, it is likely that the image can be projected. However, not all functions may be supported.

### Component Video

Signal	Refresh Rate (Hz)	Resolution (dots)
SDTV (480i)	60	720x480
SDTV (576i)	50	720x576
SDTV (480p)	60	720x480
SDTV (576p)	50	720x576
HDTV (720p)	50/60	1280x720
HDTV (1080i)	50/60	1920x1080

### Composite video

Signal	Refresh Rate (Hz)	Resolution (dots)
TV (NTSC)	60	720x480
TV (SECAM)	50	720x576
TV (PAL)	50/60	720x576

### Input signal from the HDMI port

Signal	Refresh Rate (Hz)	Resolution (dots)
VGA	60	640x480
SVGA	60	800x600
XGA	60	1024x768
WXGA	60	1280x800
SXGA	60	1280x960
	60	1280x1024
SXGA+	60	1400x1050
UXGA	60	1600x1200





Signal	Refresh Rate (Hz)	Resolution (dots)
SDTV (480i)	60	720x480
SDTV (576i)	50	720x576
SDTV (480p)	60	720x480
SDTV (576p)	50	720x576
HDTV (720p)	50/60	1280x720
HDTV (1080i)	50/60	1920x1080
HDTV (1080p)	24/30/50/60	1920x1080

## Projector General Specifications


<b>Product name</b>		EB-D6250	EB-D6155W	EB-D6150
<b>Dimensions</b>		450 (W) x 114 (H) x 274 (D) mm (not including raised section)		
<b>LCD panel size</b>		0.63"	0.59" Wide	0.63"
<b>Display method</b>		Polysilicon TFT active matrix		
<b>Resolution</b>		786,432 pixels XGA (1024 (W) x 768 (H) dots)x 3	1,024,000 pixels WXGA (1280 (W)x 800 (H) dots)x 3	786,432 pixels XGA (1024 (W) x 768 (H) dots)x 3
<b>Focus adjustment</b>		Manual		
<b>Zoom adjustment</b>		Manual (1 to 1.6)		
<b>Lamp</b>		UHE lamp, 275 W Model No.: ELPLP64	UHE lamp, 275 W Model No.: ELPLP64	UHE lamp, 230 W Model No.: ELPLP61
<b>Max. audio output</b>		5 W monaural		
<b>Speaker</b>		1		
<b>Power supply</b>		110 to 240 V AC $\pm$ 10%, 50/60 Hz 3.6 - 1.8 A	110 to 240 V AC $\pm$ 10%, 50/60 Hz 3.6 - 1.8 A	110 to 240 V AC $\pm$ 10%, 50/60 Hz 3.0 - 1.5 A
<b>Power consumption</b>	<b>110 to 120 V area</b>	Operating: 395 W Standby power consumption (Communication On): 6.0 W Standby power consumption (Communication Off): 0.29 W	Operating: 395 W Standby power consumption (Communication On): 6.0 W Standby power consumption (Communication Off): 0.29 W	Operating: 328 W Standby power consumption (Communication On): 6.0 W Standby power consumption (Communication Off): 0.29 W
	<b>220 to 240 V area</b>	Operating: 380 W Standby power consumption (Communication On): 6.5 W Standby power consumption (Communication Off): 0.38 W	Operating: 380 W Standby power consumption (Communication On): 6.5 W Standby power consumption (Communication Off): 0.38 W	Operating: 316 W Standby power consumption (Communication On): 6.5 W Standby power consumption (Communication Off): 0.38 W
<b>Operating altitude</b>		Altitude 0 to 3000 m		
<b>Operating temperature</b>		0 to +40°C (No condensation)		
<b>Storage temperature</b>		-10 to +60°C (No condensation)		

Mass			Approx. 4.4 kg	Approx. 4.4 kg	Approx. 4.2 kg
Con- nec- tors	Computer1 port	1		Mini D-Sub15-pin (female) blue	
	Computer2 port	1		Mini D-Sub15-pin (female) blue	
	Video port	1		RCA pin jack	
	S-Video port	1		Mini DIN 4-pin	
	Audio1 port	1		Stereo mini jack	
	Audio2 port	1		Stereo mini jack	
	Audio-L/R port	1		RCA pin jack x 2 (L-R)	
	Audio Out port	1		Stereo mini jack	
	Monitor Out port	1		Mini D-Sub15-pin (female) black	
	HDMI port	1		HDMI (Audio is only supported by PCM)	
	USB (TypeA) port*	1		USB connector (Type A)	
	USB (TypeB) port*	1		USB connector (Type B)	
	USB port (dedicated Wireless LAN unit)	1		USB connector (Type A)	
	LAN port	1		RJ-45	
	RS-232C port	1		Mini D-Sub 9-pin (male)	
Trigger out port	1		3.5 mm mini jack DC 12 V, maximum 200 mA		

\* Supports USB 2.0. However, USB ports are not guaranteed to operate all devices that support USB.

This product is also designed for IT power distribution system with phase-to-phase voltage 230V.

Angle of tilt

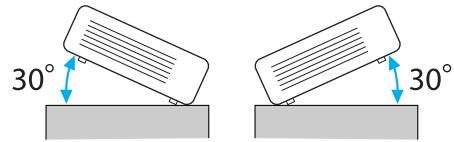

If you use the projector tilted at an angle of more than 30° it could be damaged and cause an accident.

## DECLARATION of CONFORMITY

According to 47CFR, Part 2 and 15

Class B Personal Computers and Peripherals; and/or  
CPU Boards and Power Supplies used with Class B Personal Computers

We: Epson America, Inc.  
Located at: 3840 Kilroy Airport Way  
MS: 3-13  
Long Beach, CA 90806  
Tel: 562-290-5254

Declare under sole responsibility that the product identified herein, complies with 47CFR Part 2 and 15 of the FCC rules as a Class B digital device. Each product marketed, is identical to the representative unit tested and found to be compliant with the standards. Records maintained continue to reflect the equipment being produced can be expected to be within the variation accepted, due to quantity production and testing on a statistical basis as required by 47CFR 2.909. Operation is subject to the following two conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Trade Name: EPSON  
Type of Product: LCD Projector  
Model: H395C/H396C/H397C

## FCC Compliance Statement For United States Users


This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio and television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



### WARNING

The connection of a non-shielded equipment interface cable to this equipment will invalidate the FCC Certification or Declaration of this device and may cause interference levels which exceed the limits established by the FCC for this equipment. It is the responsibility of the user to obtain and use a shielded equipment interface cable with this device. If this equipment has more than one interface connector, do not leave cables connected to unused interfaces. Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Units: mm

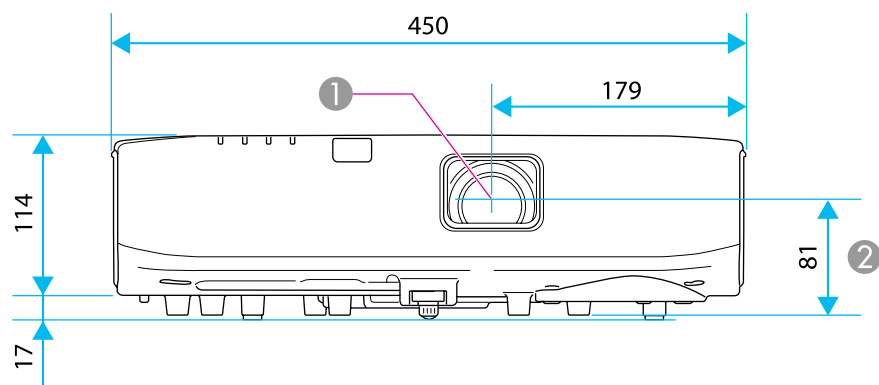

- ① Center of lens
- ② Distance from center of lens to suspension bracket fixing point

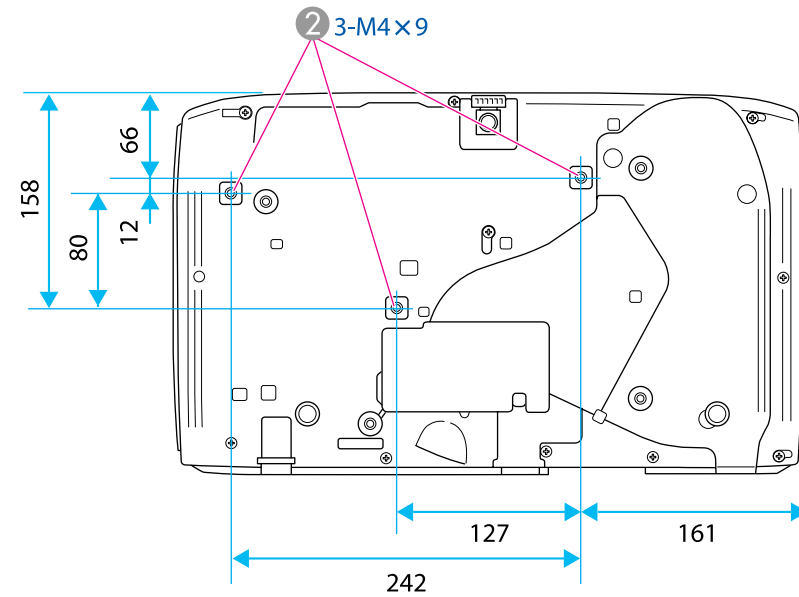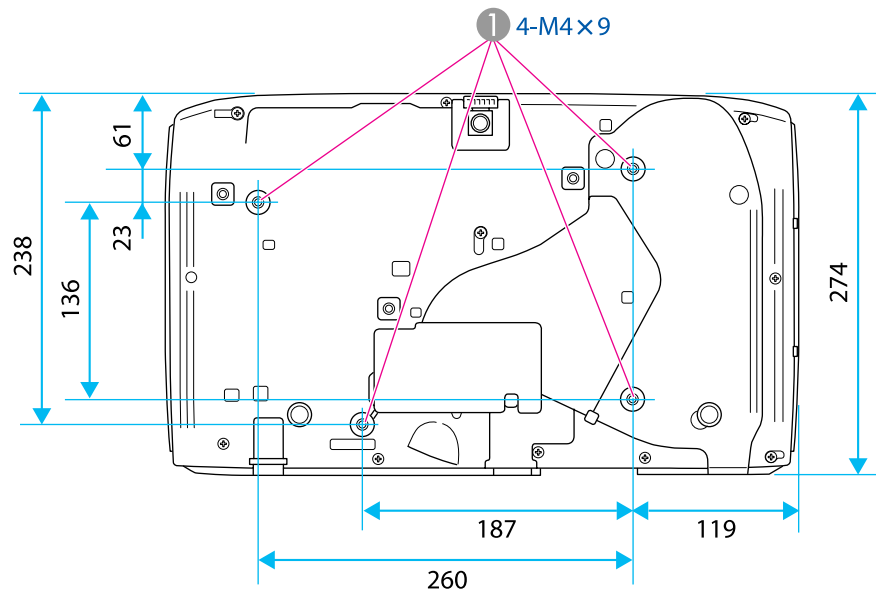

- ① Ceiling mount fixing points for ELPMB22
- ② Ceiling mount fixing points for ELPMB23

This section briefly explains the difficult terms that are not explained in the text of this guide. For details, refer to other commercially available publications.

<b>AMX Device Discovery</b>	AMX Device Discovery is a technology developed by AMX to facilitate AMX control systems for easy operation of the target equipment. Epson have implemented this protocol technology, and have provided a setting to enable the protocol function (ON). See the AMX Web site for more details. URL <a href="http://www.amx.com/">http://www.amx.com/</a>
<b>Aspect Ratio</b>	The ratio between an image's length and its height. Screens with a horizontal:vertical ratio of 16:9, such as HDTV screens, are known as wide screens. SDTV and general computer displays have an aspect ratio of 4:3.
<b>Component Video</b>	A method that separates the video signal into a luminance component (Y), and a blue minus luminance (Cb or Pb) and a red minus luminance (Cr or Pr).
<b>Composite video</b>	A method that combines the video signal into a luminance component and a color component for transmission down a single cable.
<b>Contrast</b>	The relative brightness of the light and dark areas of an image can be increased or decreased to make text and graphics stand out more clearly, or to make them appear softer. Adjusting this particular property of an image is called contrast adjustment.
<b>DHCP</b>	An abbreviation of Dynamic Host Configuration Protocol, this protocol automatically assigns an <a href="#">IP Address</a> to equipment connected to a network.
<b>Gateway Address</b>	This is a server (router) for communicating across a network (subnet) divided according to <a href="#">Subnet Mask</a> .
<b>HDCP</b>	HDCP is an abbreviation for High-bandwidth Digital Content Protection. It is used to prevent illegal copying and protect copyrights by encrypting digital signals sent over DVI and HDMI ports. Because the HDMI port on this projector supports HDCP, it can project digital images protected by HDCP technology. However, the projector may not be able to project images protected with updated or revised versions of HDCP encryption.
<b>HDTV</b>	An abbreviation for High-Definition Television that refers to high-definition systems which satisfy the following conditions. <ul style="list-style-type: none"> <li>• Vertical resolution of 720p or 1080i or greater (p = <a href="#">Progressive</a>, i = <a href="#">Interlace</a>)</li> <li>• Screen <a href="#">Aspect Ratio</a> of 16:9</li> </ul>
<b>Interlace</b>	Transmits information needed to create one screen by sending every other line, starting from the top of the image and working down to the bottom. Images are more likely to flicker because one frame is displayed every other line.
<b>IP Address</b>	A number to identify a computer connected to a network.
<b>Progressive</b>	Projects information to create one screen at a time, displaying the image for one frame. Even though the number of scan lines is the same, the amount of flicker in images decreases because the volume of information has doubled compared with an interlace system.
<b>SDTV</b>	An abbreviation for Standard Definition Television that refers to standard television systems which do not satisfy the conditions for <a href="#">HDTV</a> High-Definition Television.
<b>SNMP</b>	An abbreviation for Simple Network Management Protocol, which is the protocol for monitoring and controlling devices such as routers and computers connected to a TCP/IP network.



<b>sRGB</b>	An international standard for color intervals that was formulated so that colors that are reproduced by video equipment can be handled easily by computer operating systems (OS) and the Internet. If the connected source has an sRGB mode, set both the projector and the connected signal source to sRGB.
<b>SSID</b>	SSID is identification data for connecting to another device on a wireless LAN. Wireless communication is possible between devices that correspond to SSID.
<b>Subnet Mask</b>	This is a numerical value that defines the number of bits used for the network address on a divided network (subnet) from the IP address.
<b>SVGA</b>	A screen size standard with a resolution of 800 (horizontal) x 600 (vertical) dots.
<b>S-Video</b>	A method that separates the video signal into a luminance component (Y) and a color component (C).
<b>SXGA</b>	A screen size standard with a resolution of 1,280 (horizontal) x 1,024 (vertical) dots.
<b>Sync.</b>	The signals output from computers have a specific frequency. If the projector frequency does not match this frequency, the resulting images are not of a good quality. The process of matching the phases of these signals (the relative position of the crests and the troughs in the signal) is called Synchronization. If the signals are not synchronized, flickering, blurriness, and horizontal interference occur.
<b>Tracking</b>	The signals output from computers have a specific frequency. If the projector frequency does not match this frequency, the resulting images are not of a good quality. The process of matching the frequency of these signals (the number of crests in the signal) is called Tracking. If Tracking is not carried out correctly, wide vertical stripes appear in the signal.
<b>Trap IP Address</b>	This is the <a href="#">IP Address</a> for the destination computer used for error notification in SNMP.
<b>VGA</b>	A screen size standard with a resolution of 640 (horizontal) x 480 (vertical) dots.
<b>XGA</b>	A screen size standard with a resolution of 1,024 (horizontal) x 768 (vertical) dots.