



User's Guide

Multimedia Projector

EB-L25000U

ProSelecta

View :: Compare :: Select - www.ProSelecta.com

Notations Used in This Guide

- **Safety indications**

The documentation and the projector use graphical symbols to show how to use the projector safely.

The indications and their meaning are as follows. Make sure you understand them properly before reading the guide.

| | |
|--|--|
|  Warning | This symbol indicates information that, if ignored, could possibly result in personal injury or even death due to incorrect handling. |
|  Caution | This symbol indicates information that, if ignored, could possibly result in personal injury or physical damage due to incorrect handling. |

- **General information indications**

| | |
|---|---|
| Attention | Indicates procedures which may result in damage or injury if sufficient care is not taken. |
|  | Indicates additional information and points which may be useful to know regarding a topic. |
|  | Indicates a page where detailed information regarding a topic can be found. |
|  | Indicates that an explanation of the underlined word or words in front of this symbol appears in the glossary of terms. See the "Glossary" section of the "Appendix".  "Glossary" p.223 |
| [Name] | Indicates the name of the buttons on the remote control or the control panel. Example: [Esc] button |
| Menu Name | Indicates Configuration menu items. Example: Select Brightness from Image . Image - Brightness |

Make sure you read the following before you use the projector.

☛ [Safety Instructions](#)

Warning and Cautions on Installation

Warning

- Do not use or install the projector where it may be subject to water or rain, or high humidity, such as outdoors, in a bathroom, or shower room, and so on. Otherwise, it could cause a fire or electric shock.
- Note the following points when installing on a ceiling (ceiling mount) or in a high location. If installation work is not carried out correctly, the projector could fall down. This may result in injury or accidents.
 - Since special techniques are required to install the projector on a ceiling and to handle the ceiling mount, make sure you contact a professional.
 - Secure the mount with bolts using the handle securing section (6 points) on the top or base of the projector.
 - To prevent the projector from falling, thread sufficiently strong wire rope and so on through the ceiling mount and secure to the ceiling.
- Do not cover the projector's air intake vent or air exhaust vent. If either of the vents is covered, the internal temperature could rise and cause a fire. For the installation requirements for air intake vent and air exhaust vent, see the *Transport and Installation Handbook* supplied.
- Do not place flammable objects in front of the lens. If you set the schedule to turn on the projector automatically, any flammable objects placed in front of the lens could cause a fire.
- Do not tie the power cord and other connection cables together. Otherwise, it could cause a fire.
- Only use the specified power-supply voltage. Otherwise, it could cause a fire or electric shock.

Warning

- Be careful when handling the power cord. Otherwise, it could cause a fire or electric shock. Note the following when handling the power cord.
 - Do not plug multiple power cords in a single electric outlet.
 - Do not plug in the power cord if there are any foreign substances, such as dust, stuck to it.
 - Make sure you insert the power cord all the way in.
 - Do not plug in or unplug the power cord with wet hands.
 - Do not pull the cord when unplugging the power cord. Make sure you hold it by the plug.
- Do not use a damaged power cord. Otherwise, it could cause a fire or electric shock. Note the following when handling the power cord.
 - Do not alter the power cord.
 - Do not place any heavy objects on the power cord.
 - Do not bend, twist, or pull the power cord forcibly.
 - Do not layout the power cord near a heating device.

Caution

Do not place the projector on an unstable surface, such as on an unstable table or tilted surface. Install the projector appropriately to prevent the projector from falling. Otherwise it may cause an injury.

Attention

- Do not install the projector in a location that is subject to vibration or shock.
- Do not install the projector near a high-voltage line or object that generates magnetism. Otherwise the projector may not work correctly.
- Do not use or store the projector in a location that is subject to extreme temperatures. Also, avoid sudden temperature changes.

Make sure you use or store the projector in a place that is within the operating or storage temperature ranges.

☛ "Projector General Specifications" [p.219](#)


- Do not install the projector in direct sunlight.
If the projector is in direct sunlight, the internal temperature increases, which could cause parts such as the surface of the projection lens or the built-in camera to deteriorate.
- When installing the projector in an environment in which a high-powered laser beam is being used, make sure it is installed so that the laser beam does not hit the surface of the projection lens.
- When using at an altitude that exceeds 1,500 m, set **High Altitude Mode** to **On**.
☛ **Extended - Operation - High Altitude Mode** [p.125](#)
- You may need dedicated installation mounts to tilt and install the projector. Contact a professional and prepare the mount.
 - Plan so that the mount does not fall.
 - Make sure the mount is strong enough to support the projector.
 - When attaching a mount to the projector, secure the mount with bolts using the handle securing section (6 points) on the top or base of the projector.

Attention


- Note the following points when installing a projector directly on top of another.
 - Do not stack three or more projectors.
 - Install the feet in the indentations on the top at the four corners.
 - Do not install the handle on the top of the projector installed underneath another projector.
- Except for the projector's parts, do not place anything on the projector.



- The projector can be installed at any angle. There is no vertical or horizontal limit to how the projector can be installed.

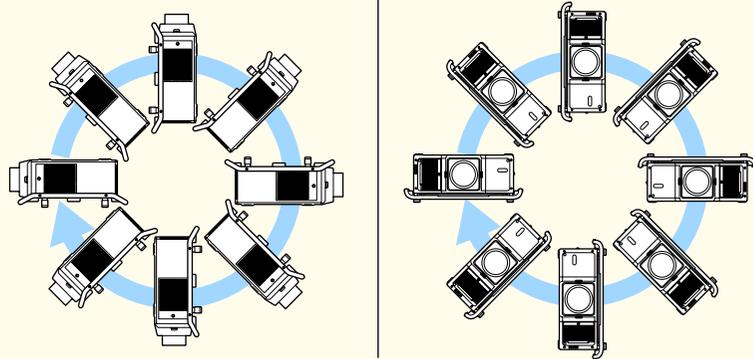

- We recommend setting the focus, zoom, and lens shift at least 20 minutes after you start the projection, because images are not stable right after turning on the projector.
- When using a projector with an air filter on the ceiling side, the air filter will become clogged frequently. Clean the air filter regularly.
 - ☛ "Cleaning the Air Filter" p.175
- You can install the projector in a portrait orientation by attaching the carrying handles to the top and bottom of the projector.
- You can remove the feet from the projector and attach them to the carrying handle.

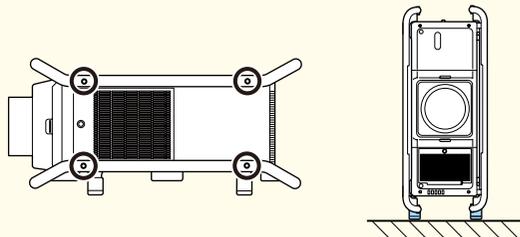

Warning and Cautions on Usage

Warning

- Do not cover the projector's air intake vent or air exhaust vent. If either of the vents is covered, the internal temperature could rise and cause a fire.
- Do not look into the lens while projecting. The powerful light emitted could cause damage to eyesight. Take particular care when there are children present. When turning on the projector at a distance using the remote control, make sure there is no one looking into the lens.
- During projection, do not block the light from the projector with the lens cover (removable) or a book and so on.

If the light from the projector is blocked, the area on which the light shines becomes hot which could cause it to melt, burn, or start a fire. Also, the lens may get hot due to the reflected light which could cause the projector to malfunction. To stop projection, use the Shutter function, or turn off the projector.
- Do not open the projector's case. Never disassemble or remodel the projector. There are high-voltage components inside the projector that could cause fire, electric shock, or an accident.
- If an error occurs, turn off the power immediately, disconnect the power cord from the electrical outlet, and contact your local dealer or the nearest address provided in the Epson Projector Contact List. If you continue using the projector as it is, it could cause an electric shock, fire, or even damage to eyesight.

☛ [Epson Projector Contact List](#)

Caution

Do not place objects that may become warped or otherwise affected by heat near the air exhaust vent and do not put your face or hands near the vent while projection is in progress.

Attention

- When you purchase the projector, a protective cap is installed in the lens unit installation section. Install the protective cap when you are not using the projector. If dust or dirt enter the projector, projection quality deteriorates and it could cause a malfunction.
- When a high-powered laser beams through the surface of the projection lens or the built-in camera, it can cause a malfunction. If the laser beams through the surface of the projection lens or the built-in camera, block the laser beam with non-permeable or incombustible aluminum foil or metal plates such as iron to protect the projection lens and the built-in camera.
- Try not to touch the lens section with your hand or fingers. If fingerprints or oils are left on the surface of the lens, projection quality deteriorates.
- Store the projector with the protective cap installed. If the projector is stored without the protective cap, dust and dirt may get inside the projector and cause malfunctions or lower the quality of projection.
- When storing, make sure you remove the batteries from the remote control. If the batteries are left in the remote control for an extended period of time, they may leak.
- When using the projector in smokey environments such as at events and so on, make sure you replace the air filter within 24 hours.
 - ☛ "Replacing the Air Filter" [p.179](#)



- About the LCD panel
 - The LCD panel may contain pixels that are missing or appear bright all the time. This is not a sign of an error.
 - When a high-powered laser beams through the surface of the projection lens, it can cause a malfunction in the LCD panel. If the laser can beam through the surface of the projection lens, block the laser beam with non-permeable or incombustible aluminum foil or metal plates such as iron to protect the projection lens.
- About the light source

The projector uses a laser as the light source. The laser has the following characteristics.

 - Depending on the surroundings, the brightness of the light source may decline. The brightness declines a lot when the temperature gets too high.
 - The brightness of the light source declines the longer it is used. You can change the relationship between usage time and decline in brightness in **Brightness Settings**.
 - ☛ "Relationship between Brightness Level and usage time" [p.69](#)
- About light source calibration
 - Every time the usage time reaches 100 hours, calibration starts automatically for the light source when the projector is turned off. However, light source calibration does not start automatically in the following situations.
 - Within 20 minutes of turning on the projector
 - When using the Shutter function
 - Within 20 minutes of releasing the Shutter function
 - When the projector is used continuously for over 24 hours
 - When using direct shutdown
 - When performing light source calibration, the difference between the white balance and the brightness level for the light source is corrected.

Warning and Cautions on the Laser


Warning

- Laser warning labels are attached to the projector.

Inside



Side

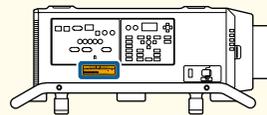

- Do not open the projector's case. The projector contains a high-powered laser.
- Possibly hazardous optical radiation emitted from this product. Do not look at operating light source. Eye injury may result.
- This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Caution

- This projector is a Class 1 laser product that complies with the IEC60825-1 international standard for lasers.
- Do not disassemble the projector when disposing of it. Dispose according to your local or national laws and regulations.

Notes on Carrying and Transporting

There are many glass parts and precision components inside the projector. To prevent damage due to impacts when carrying and transporting, handle the projector as follows.

Before carrying or transporting, make sure you read the supplied *Transport and Installation Handbook*.



Caution

The projector should not be carried by one person. At least four people are needed to unpack or carry the projector.

Attention

Prepare the following before carrying the projector. Check the *Transport and Installation Handbook* for more information.

- Turn off the power to the projector and disconnect all cables.
- When moving nearby without having to pack-up the projector, install the lens cap on the lens unit.
- When packing up and transporting the projector, remove the lens unit and install the protective cap on the lens unit installation section.



Notations Used in This Guide 2

Introduction

Part Names and Functions 14

| | |
|--|----|
| Front/Top | 14 |
| Rear/side | 15 |
| Interface | 16 |
| Control Panel | 17 |
| Remote Control | 19 |
| Handy remote control operations | 21 |
| Replacing the remote control batteries | 22 |
| Remote control operating range | 23 |
| Connecting a cable to the remote control | 23 |

Preparing the Projector

Installing the Projector 25

| | |
|---|----|
| Removing and Attaching the Projector Lens Unit | 25 |
| Attaching | 25 |
| Lens Calibration | 26 |
| Removing | 27 |
| Installation Settings | 27 |
| Changing the direction of the image (projection mode) | 27 |
| Screen Settings | 28 |
| Adjusting the position of the image on the projected screen | 29 |
| Displaying a Test Pattern | 29 |
| Adjusting the Position of the Projected Image (Lens Shift) | 31 |
| Adjusting the Image Size | 33 |
| Correcting the Focus | 34 |
| Correcting Distortion (Image Warping) | 34 |
| Registering and Loading Lens Adjustment Values | 35 |
| ID Settings | 37 |
| Set the projector ID | 37 |
| Checking the projector ID | 37 |

| | |
|--|----|
| Setting the remote control ID | 38 |
| Setting the Time | 38 |
| Other Settings | 40 |
| Settings related to basic operations | 40 |
| Settings related to display | 40 |

Connecting Equipment 42

| | |
|---|----|
| Connecting a Computer | 42 |
| Connecting Image Sources | 43 |
| Connecting to an External Monitor | 45 |
| Connecting a LAN Cable | 46 |
| Connecting an HDBaseT Transmitter | 47 |
| Installing the Wireless LAN Unit | 48 |

Basic Usage

Turning On the Projector 50

Turning Off the Projector 52

Projecting Images 53

| | |
|--|----|
| Automatically Detecting Input Signals and Changing the Projected Image (Source Search) | 53 |
| Switching to the Target Image | 54 |

Adjusting Projected Images 55

| | |
|---|----|
| Correcting Distortion in the Projected Image | 55 |
| H/V-Keystone | 56 |
| Quick Corner | 57 |
| Curved Surface | 58 |
| Corner Wall | 62 |
| Point Correction | 65 |
| Selecting the Projection Quality (Selecting Color Mode) | 67 |
| Setting the Brightness | 67 |
| Guide to Estimated Remains | 69 |
| Relationship between Brightness Level and usage time | 69 |
| Setting the Amount of Light for the Projected Image | 70 |
| Changing the Aspect Ratio of the Projected Image | 71 |



| | |
|--|----|
| Changing methods | 71 |
| Adjusting the Image | 73 |
| Hue, Saturation, and Brightness adjustment | 73 |
| Gamma adjustment | 74 |
| Frame Interpolation | 76 |
| Adjusting Image Resolution (Image Enhancement) | 77 |
| 4K Enhancement | 78 |
| Image Preset Mode | 79 |
| Noise Reduction | 79 |
| MPEG Noise Reduction | 79 |
| Super-resolution | 80 |
| Detail Enhancement | 80 |

Useful Functions

| | |
|---|-----------|
| Multi-Projection Function | 83 |
| Adjustment Procedure | 83 |
| Adjusting automatically online | 83 |
| Adjusting manually offline | 84 |
| Tiling | 84 |
| Performing tiling automatically | 85 |
| Performing tiling manually | 86 |
| Edge Blending | 87 |
| Black Level | 88 |
| Area Correction | 90 |
| Screen Matching | 92 |
| Operating conditions for auto adjustment functions | 92 |
| Automatically correct the brightness and tint for multiple projectors | 93 |
| Color Matching | 94 |
| Displaying a Scaled Image | 95 |
| Projection Functions | 97 |
| Projecting Two Images Simultaneously (Split Screen) | 97 |
| Input Sources for Split Screen Projection | 97 |
| Operating procedures | 97 |
| Restrictions during split screen projection | 100 |
| Hiding the Image Temporarily (Shutter) | 100 |

| | |
|-----------------------------|-----|
| Freezing the Image (Freeze) | 101 |
| Saving a User's Logo | 101 |

Memory Function 103

| | |
|---|-----|
| Saving/Loading/Erasing/Resetting the Memory | 103 |
|---|-----|

Scheduling Function 105

| | |
|-------------------|-----|
| Saving an Event | 105 |
| Setting an Event | 105 |
| Checking an Event | 106 |
| Editing an Event | 107 |

Security Functions 109

| | |
|--------------------------------------|-----|
| Managing Users (Password Protection) | 109 |
| Kinds of Password Protection | 109 |
| Setting Password Protection | 109 |
| Entering the password | 110 |
| Restricting Operation | 111 |
| Control Panel Lock | 111 |
| Lens Lock | 112 |
| Remote control button lock | 112 |
| Anti-Theft Lock | 113 |
| Installing the wire lock | 113 |

Configuration Menu

Using the Configuration Menu 116

List of Functions 117

| | |
|-------------------------------------|-----|
| Configuration Menu Table | 117 |
| Network menu | 118 |
| Image Menu | 119 |
| Signal Menu | 121 |
| Settings Menu | 123 |
| Extended Menu | 125 |
| Network Menu | 129 |
| Notes on operating the Network menu | 130 |
| Soft keyboard operations | 130 |



| | |
|---|------------|
| Basic menu | 131 |
| Wireless LAN menu | 131 |
| Wired LAN menu | 134 |
| Notifications menu | 134 |
| Others menu | 135 |
| Reset menu | 136 |
| Info Menu (Display Only) | 136 |
| Reset Menu | 137 |
| Batch Setup | 138 |
| Setup Using a USB Flash Drive | 138 |
| Saving settings to the USB flash drive | 138 |
| Reflecting saved settings to other projectors | 140 |
| Setup by Connecting the Computer and Projector with a USB Cable | 142 |
| Saving settings to a computer | 142 |
| Reflecting saved settings to other projectors | 143 |
| When Setup Fails | 145 |
| | |
| Troubleshooting | |
| <hr/> | |
| Using the Help | 147 |
| Reading the Indicators | 148 |
| Reading Status Monitor | 154 |
| Checking the Status | 154 |
| Understanding the screen | 155 |
| Setting the screen display (LCD) | 156 |
| Explanations of the Display Content | 157 |
| Problem Solving | 163 |
| Problems Relating to Images | 164 |
| No images appear | 164 |
| Moving images are not displayed | 164 |
| Projection stops automatically | 165 |
| Not supported. is displayed | 165 |
| No Signal. is displayed | 165 |
| Images are fuzzy, out of focus, or distorted | 166 |

| | |
|---|-----|
| Interference or distortion appear in images | 166 |
| The image is truncated (large) or small, the aspect is not suitable, or the image has been reversed | 167 |
| Image colors are not right | 167 |
| Images appear dark | 168 |
| Automatic adjustments are not performed correctly | 169 |
| Problems when Projection Starts | 169 |
| The projector does not turn on | 169 |
| Other Problems | 170 |
| The remote control does not work | 170 |
| Cannot control correctly using Art-Net | 171 |
| Nothing appears on the external monitor | 171 |
| I want to change the language for messages and menus | 172 |
| Email is not received even if a problem occurs in the projector | 172 |
| The battery that saves your clock settings is running low. is displayed | 172 |

About Event ID 173

Maintenance

| | |
|--|------------|
| Cleaning | 175 |
| Cleaning the Projector's Surface | 175 |
| Cleaning the Lens | 175 |
| Cleaning the Air Filter | 175 |
| Cleaning the air filter | 176 |
| Replacing Consumables | 179 |
| Replacing the Air Filter | 179 |
| Air filter replacement period | 179 |
| How to replace the air filter | 179 |
| Image Maintenance | 182 |
| Color Calibration | 182 |
| Panel Alignment | 183 |
| Color Uniformity | 184 |

Appendix

Monitoring and Controlling 188

| | |
|---|-----|
| About EasyMP Monitor | 188 |
| About Message Broadcasting | 188 |
| Changing Settings Using a Web Browser (Epson Web Control) | 188 |
| Displaying the Epson Web Control Screen | 188 |
| Basic Control Screen | 189 |
| OSD Control Pad Screen | 190 |
| Lens Control Screen | 190 |
| Status Information Screen | 192 |
| Using the Mail Notification Function to Report Problems | 193 |
| Reading error notification mail | 193 |
| Management Using SNMP | 194 |
| ESC/VP21 Commands | 194 |
| Command list | 194 |
| Cable layouts | 194 |
| About PLink | 195 |
| About Crestron RoomView® | 196 |
| Operating a projector from your computer | 196 |
| About Art-Net | 200 |
| Channel definitions | 200 |

Optional Accessories and Consumables 205

| | |
|----------------------------|-----|
| Optional Accessories | 205 |
| Consumables | 205 |

Screen Size and Projection Distance 206

| | |
|--------------------------------|-----|
| Projection Distance List | 206 |
| ELPLR05 | 206 |
| ELPLU05 | 207 |
| ELPLW07 | 207 |
| ELPLM12 | 208 |
| ELPLM13 | 209 |
| ELPLM14 | 209 |
| ELPLL09 | 210 |
| ELPLL10 | 211 |

Adjustment Range for Projected Images 212

| | |
|----------------------|-----|
| H/V-Keystone | 212 |
| Curved Surface | 212 |
| Corner Wall | 214 |

Supported Monitor Displays 217

| | |
|--|-----|
| Supported Resolutions | 217 |
| Computer signals (analog RGB) | 217 |
| Component video | 217 |
| Input signals from the DVI-D port, HDMI port, and HDBaseT port | 217 |
| Input signals from SDI input port | 218 |

Specifications 219

| | |
|--|-----|
| Projector General Specifications | 219 |
|--|-----|

Appearance 222

Glossary 223

General Notes 225

| | |
|---------------------------------|-----|
| About Notations | 225 |
| Trademarks and Copyrights | 226 |

List of Safety Symbols Compliant with IEC60950-1 A2 227

Index 229




Introduction

This chapter explains the names for each part.

Unless otherwise mentioned, the illustrations used in this guide show the projector with the lens unit (ELPLM12) installed,

Front/Top

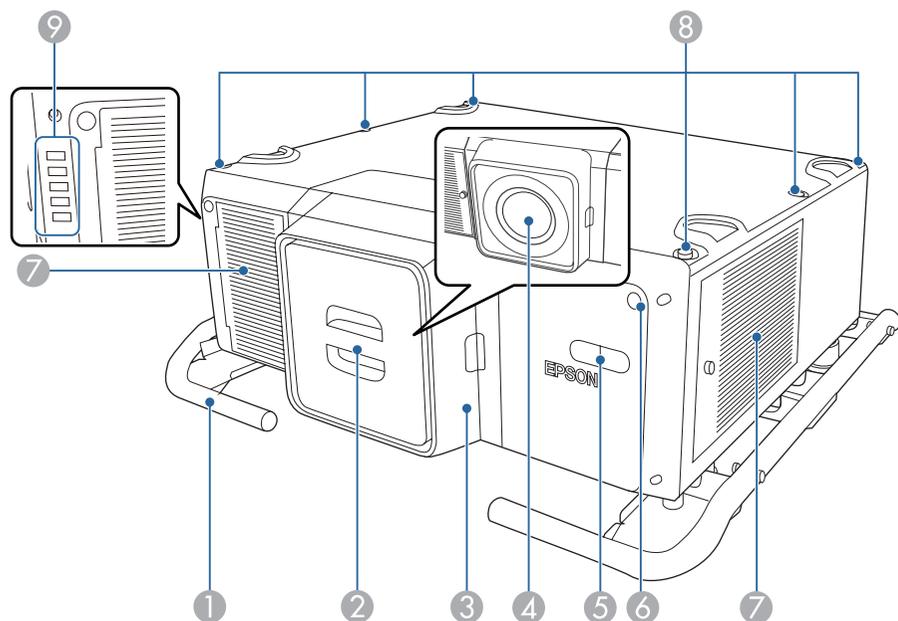


Here, the protective cap is installed.

| Name | Function |
|-------------------------|--|
| ① Handles | Use the handles on the left and right when carrying the projector. <div style="border: 1px solid black; padding: 5px;">  Caution Be careful not to trap your fingers between the handle and the installation surface. </div> |
| ② Protective cap | Install this when storing or transporting the projector. |


| Name | Function |
|---------------------------------|--|
| ③ Lens replacement cover | Remove when attaching or removing the lens.  "Removing and Attaching the Projector Lens Unit" p.25 <div style="border: 1px solid black; padding: 5px;">  Caution When moving the projector, do not hold the lens replacement cover. The lens replacement cover may be removed and the projector may fall, which could cause an injury. </div> |
| ④ Projection lens | Images are projected through here. <div style="border: 1px solid black; padding: 5px;">  Warning Do not look into the lens while projecting. This could cause damage to eyesight due to the powerful light emitted. </div> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;">  Caution When shifting the lens, do not put your hands near the lens unit. Your fingers may get caught between the lens unit and the projector, and cause an injury. </div> |
| ⑤ Built-in camera | This camera scans the image when correcting the projected image automatically. <div style="border: 1px solid black; padding: 5px;"> Attention Exposing the camera to bright light may cause a malfunction to occur. </div> |
| ⑥ Remote receiver | Receives signals from the remote control. |

| Name | Function |
|---|--|
| 7 Air intake vent (air filter) | <p>Takes in air to cool the projector internally. Be sure to clean the air filter regularly.</p> <ul style="list-style-type: none"> ☛ "Cleaning the Air Filter" p.175 ☛ "Replacing the Air Filter" p.179 |
| 8 Handle securing section (6 points) | <p>Installs the optional handle.</p> <ul style="list-style-type: none"> ☛ "Optional Accessories" p.205 <p>You can also use this for custom installation mounts designed by the customer.</p> |
| 9 Status indicators | <p>The color of the indicators and whether they are flashing or lit indicate the status of the projector.</p> <ul style="list-style-type: none"> ☛ "Reading the Indicators" p.148 |


Rear/side

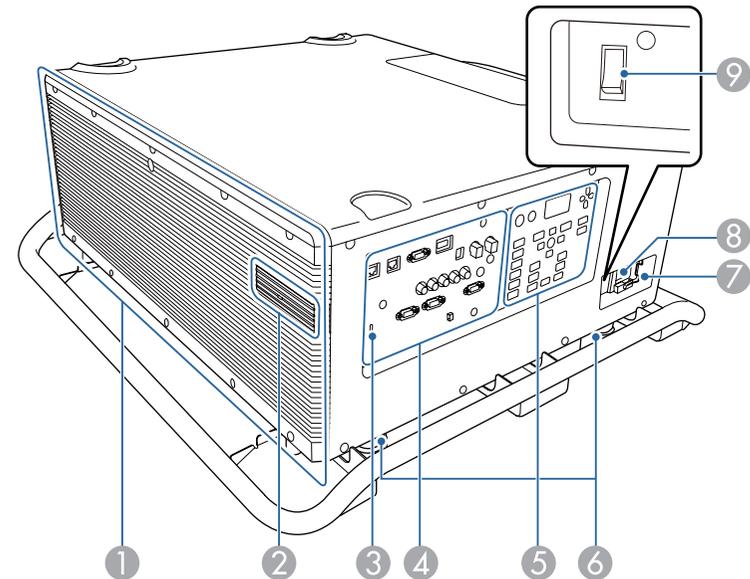


| Name | Function |
|---------------------------------------|---|
| 1 Air exhaust vent | <p>Exhaust vent for air used to cool the projector internally.</p> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p>⚠ Caution</p> <p>While projecting, do not put your face or hands near the air exhaust vent, and do not place objects that may become warped or damaged by heat near the air exhaust vent. Hot air from the air exhaust vent could cause burns, warping, or accidents to occur.</p> </div> |
| 2 Wireless LAN unit port cover | <ul style="list-style-type: none"> Remove this when connecting the optional wireless LAN unit. <ul style="list-style-type: none"> ☛ "Installing the Wireless LAN Unit" p.48 Remove this when using the batch setup function. <ul style="list-style-type: none"> ☛ "Batch Setup" p.138 |
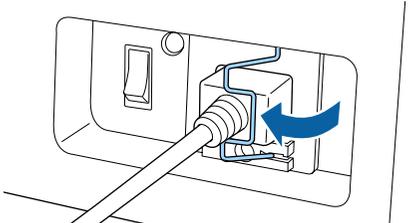
| Name | Function |
|---------------------|---|
| 3 Security slot | The security slot is compatible with the Microsaver Security System manufactured by Kensington. ☛ "Anti-Theft Lock" p.113 |
| 4 Interface | ☛ "Interface" p.16 |
| 5 Control panel | ☛ "Control Panel" p.17 |
| 6 Feet | You can remove these from the projector and attach them to the optional handle. |
| 7 Cable holder | Attaches to the power cord to prevent the cord from falling out.  |
| 8 Power inlet | Connects the power cord to the projector. |
| 9 Main power switch | Supplies power to the projector. |

Interface

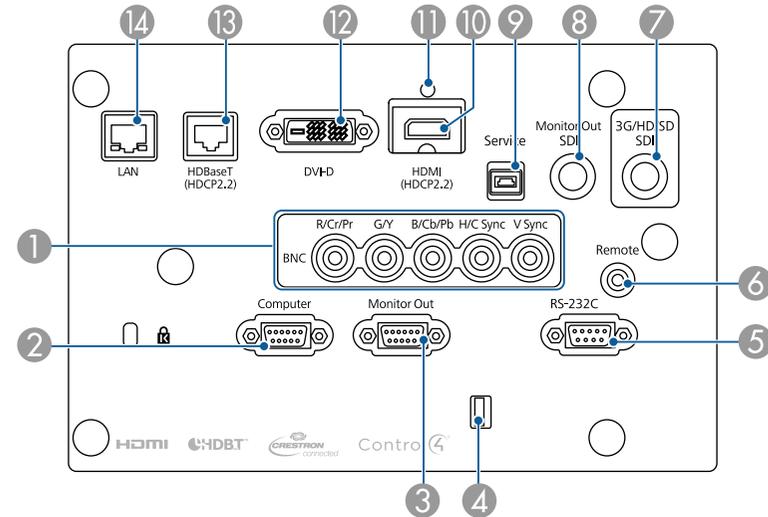


| Name | Function |
|--------------------|---|
| 1 BNC port | For analog RGB signals from a computer and component video signals from other video sources. |
| 2 Computer port | For analog RGB signals from a computer and component video signals from other video sources. |
| 3 Monitor Out port | Outputs to an external monitor the analog signal from the computer connected to the Computer port or the BNC port. You cannot output signals input from other ports or component video signals. |
| 4 Cable holder | Run a commercially available cable tie to secure cables. |
| 5 RS-232C port | When controlling the projector from a computer, connect it to the computer with an RS-232C cable. ☛ "ESC/VP21 Commands" p.194 |
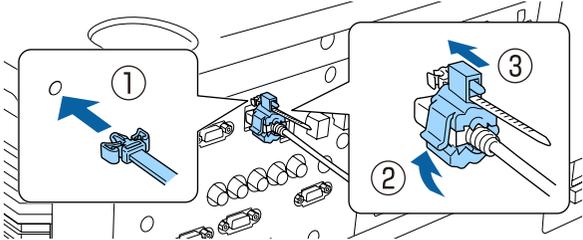
| Name | Function |
|------------------------|---|
| 6 Remote port | Connects the optional remote control cable set and inputs signals from the remote control. When the remote control cable is plugged into the Remote port, the remote receiver on the projector is disabled. ☛ "Optional Accessories" p.205 |
| 7 3G/HD/SD SDI port | Inputs SDI signals from video equipment. |
| 8 Monitor Out SDI port | Connects to an external monitor, and outputs SDI signals from video equipment being input to the 3G/HD/SD SDI port. |
| 9 Service port | This is used for batch settings. This port is for control use and should not normally be used. ☛ "Batch Setup" p.138 |
| 10 HDMI port | Inputs video signals from HDMI compatible video equipment and computers. |
| 11 Cable holder | Insert the supplied cable clamp here to prevent the HDMI cable from falling out.  |
| 12 DVI-D port | Inputs the computer DVI-D signals. |
| 13 HDBaseT port | Connects a LAN cable to the optional HDBaseT Transmitter. ☛ "Connecting an HDBaseT Transmitter" p.47 ☛ "Optional Accessories" p.205 The projector supports Art-Net. When using Art-Net to control the projector, set Art-Net to On from the Network menu. ☛ Network - Others - Art-Net p.135 |

| Name | Function |
|-------------|---|
| 14 LAN port | Connects a LAN cable to connect to a network. The projector supports Art-Net. When using Art-Net to control the projector, set Art-Net to On from the Network menu. ☛ Network - Others - Art-Net p.135 |

Control Panel

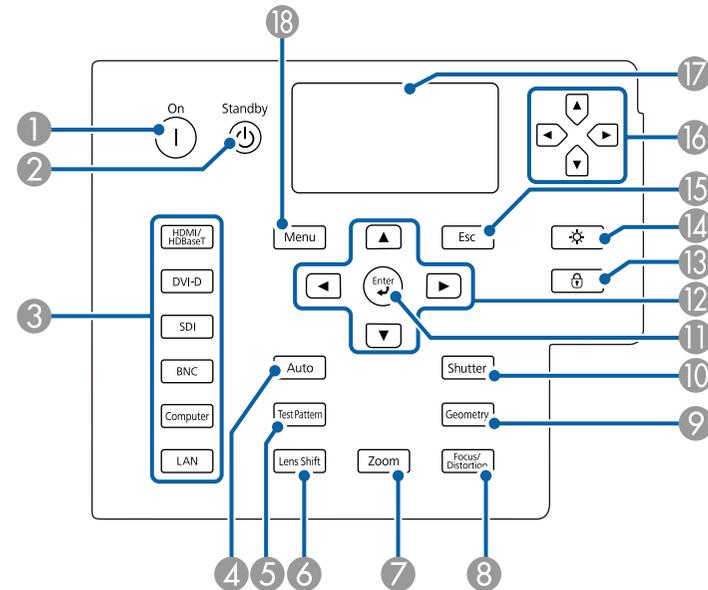


| Name | Function |
|------------------------|---|
| 1 [I] button | Turns the projector on. |
| 2 [P] button | Turns the projector off. |
| 3 Change input buttons | Changes to images from each input port. ☛ "Switching to the Target Image" p.54 |

| Name | Function |
|-----------------------------|--|
| ④ [Auto] button | If pressed while projecting analog RGB signals from the Computer port or the BNC port, you can automatically optimize Tracking, Sync., and Position. |
| ⑤ [Test Pattern] button | Displays a test pattern. ☛ "Displaying a Test Pattern" p.29 |
| ⑥ [Lens Shift] button | Press to adjust the lens shift. ☛ "Adjusting the Position of the Projected Image (Lens Shift)" p.31 If pressed for more than five seconds, the lens position moves to the home position. |
| ⑦ [Zoom] button | Press to adjust the zoom. ☛ "Adjusting the Image Size" p.33 |
| ⑧ [Focus/Distortion] button | Press this to adjust the focus or correct distortion. ☛ "Correcting the Focus" p.34 ☛ "Correcting Distortion (Image Warping)" p.34 |
| ⑨ [Geometry] button | Corrects distortion in the projected image. ☛ "Correcting Distortion in the Projected Image" p.55 |
| ⑩ [Shutter] button | Press to turn the image on or off temporarily. ☛ "Hiding the Image Temporarily (Shutter)" p.100 |
| ⑪ [↵] button | When the Configuration menu or the Help screen is displayed, it accepts and enters the current selection and moves to the next level. ☛ "Using the Configuration Menu" p.116 |
| ⑫ [▲][▼][◀][▶] buttons | <ul style="list-style-type: none"> Press to adjust focus, zoom, and lens shift. <ul style="list-style-type: none"> ☛ "Adjusting the Position of the Projected Image (Lens Shift)" p.31 ☛ "Adjusting the Image Size" p.33 ☛ "Correcting the Focus" p.34 If pressed when the Configuration menu or the Help screen is displayed, menu items and setting values are selected. <ul style="list-style-type: none"> ☛ "Using the Configuration Menu" p.116 |

| Name | Function |
|------------------------|--|
| ⑬ [🔒] button | Displays the Control Panel Lock screen allowing you to make settings to lock the control panel buttons. ☛ "Restricting Operation" p.111 |
| ⑭ [☀️] button | Press to turn on or off the buttons on the control panel and the status monitor. |
| ⑮ [Esc] button | <ul style="list-style-type: none"> Stops the current function. If pressed when the Configuration menu is displayed, it returns to the previous menu level. <ul style="list-style-type: none"> ☛ "Using the Configuration Menu" p.116 |
| ⑯ [⏴][⏵][⏶][⏷] buttons | Press to select the menu items and setting values for status monitor to monitor the projector's status. |
| ⑰ Status monitor | Displays the projector's status by character information. ☛ "Reading Status Monitor" p.154 |
| ⑱ [Menu] button | Displays and closes the Configuration menu. ☛ "Using the Configuration Menu" p.116 |

Remote Control

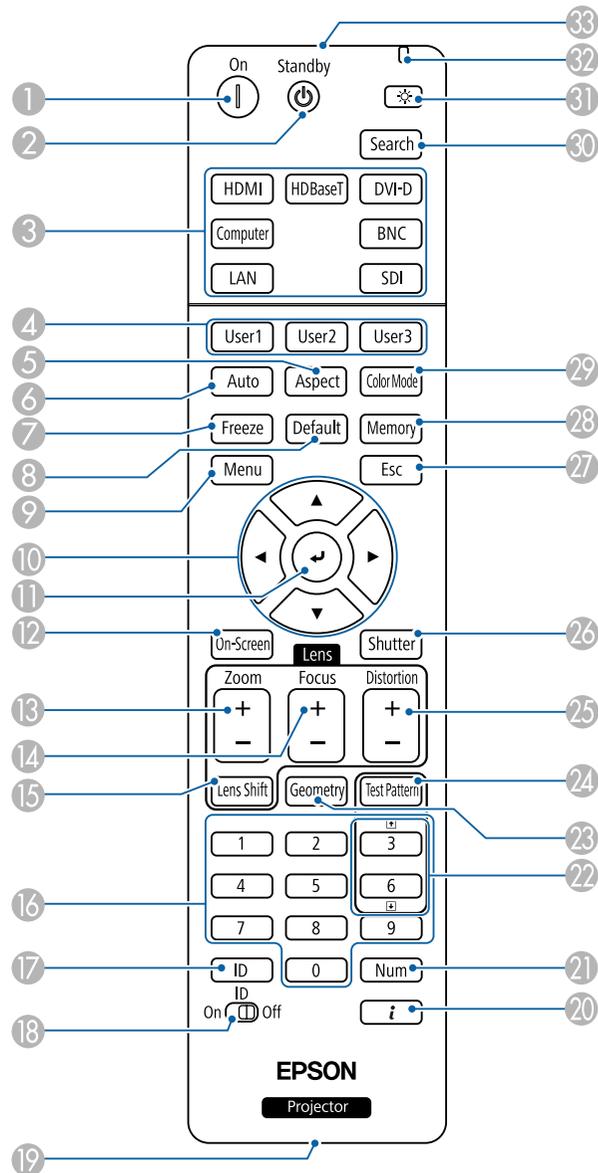

| | Name | Function |
|---|--|--|
| 1 | [On] button | Turns the projector on. |
| 2 | [Standby] button | Turns the projector off. |
| 3 | Change input buttons | Changes to images from each input port. ☛ "Switching to the Target Image" p.54 |
| 4 | [User1] button [User2] button [User3] button | Select any frequently used item from the Configuration menu items, and assign it to any of these buttons. By pressing the button, the assigned menu item selection/adjustment screen is displayed, allowing you to make one-touch settings/adjustments. ☛ "Settings Menu" p.123 |
| 5 | [Aspect] button | Each time the button is pressed, the aspect mode changes. ☛ "Changing the Aspect Ratio of the Projected Image" p.71 |
| 6 | [Auto] button | If pressed while projecting analog RGB signals from the Computer port or the BNC port, you can automatically optimize Tracking, Sync., and Position. |
| 7 | [Freeze] button | Images are paused or unpaused. ☛ "Freezing the Image (Freeze)" p.101 |
| 8 | [Default] button | Enabled when [Default]: Reset is displayed on the configuration menu guide. The settings being adjusted are returned to their default values. ☛ "Using the Configuration Menu" p.116 |
| 9 | [Menu] button | Displays and closes the Configuration menu. ☛ "Using the Configuration Menu" p.116 |

| Name | Function |
|------------------------|---|
| ⑩ [▲][▼][◀][▶] buttons | <ul style="list-style-type: none"> Adjust the lens shift. <ul style="list-style-type: none"> "Adjusting the Position of the Projected Image (Lens Shift)" p.31 When the Configuration menu or the Help screen is displayed, pressing these buttons selects menu items and setting values. <ul style="list-style-type: none"> "Using the Configuration Menu" p.116 When using the optional wireless mouse receiver, pressing these buttons moves the pointer. <ul style="list-style-type: none"> "Optional Accessories" p.205 |
| ⑪ [↵] button | <ul style="list-style-type: none"> When the Configuration menu or the Help screen is displayed, it accepts and enters the current selection and moves to the next level. <ul style="list-style-type: none"> "Using the Configuration Menu" p.116 Acts as a mouse's left button when using the optional wireless mouse receiver. <ul style="list-style-type: none"> "Optional Accessories" p.205 |
| ⑫ [On-Screen] button | Shows or hides the Configuration. |
| ⑬ [Zoom] button | Press to adjust the zoom. <ul style="list-style-type: none"> "Adjusting the Image Size" p.33 |
| ⑭ [Focus] button | Press to adjust the focus. <ul style="list-style-type: none"> "Correcting the Focus" p.34 |
| ⑮ [Lens Shift] button | Press to adjust the lens shift. <ul style="list-style-type: none"> "Adjusting the Position of the Projected Image (Lens Shift)" p.31 If pressed for more than five seconds, the lens position moves to the home position. |
| ⑯ Numeric buttons | <ul style="list-style-type: none"> Enter the Password. <ul style="list-style-type: none"> "Setting Password Protection" p.109 Use this button to enter numbers in Network settings from the Configuration menu. |

| Name | Function |
|-------------------------|---|
| ⑰ [ID] button | Hold down this button and press the numeric buttons to select the ID for the projector you want to operate using the remote control. <ul style="list-style-type: none"> "ID Settings" p.37 |
| ⑱ [ID] switch | Use this switch to enable (On)/disable (Off) ID settings for the remote control. <ul style="list-style-type: none"> "ID Settings" p.37 |
| ⑲ Remote port | Connects the optional remote control cable set and outputs signals from the remote control. <ul style="list-style-type: none"> "Optional Accessories" p.205 When the remote control cable is plugged into this remote port, the remote control light-emitting is disabled. |
| ⑳ [i] button | Displays the Info menu from the Configuration menu. <ul style="list-style-type: none"> "Info Menu (Display Only)" p.136 |
| ㉑ [Num] button | Hold down this button and press the numeric buttons to enter passwords and numbers. <ul style="list-style-type: none"> "Setting Password Protection" p.109 |
| ㉒ [↶][↷] buttons | <ul style="list-style-type: none"> Moves to the previous or next image file when projecting images from a computer connected via a network. When using the optional wireless mouse receiver, you can change the PowerPoint file page during projection by pressing the page up/page down buttons. |
| ㉓ [Geometry] button | Corrects distortion in the projected image. <ul style="list-style-type: none"> "Correcting Distortion in the Projected Image" p.55 |
| ㉔ [Test Pattern] button | Displays a test pattern. <ul style="list-style-type: none"> "Displaying a Test Pattern" p.29 |
| ㉕ [Distortion] button | Press to correct distortion. <ul style="list-style-type: none"> "Correcting Distortion (Image Warping)" p.34 |
| ㉖ [Shutter] button | Press to turn the image on or off temporarily. <ul style="list-style-type: none"> "Hiding the Image Temporarily (Shutter)" p.100 |

| Name | Function |
|---------------------------------------|--|
| 27 [Esc] button | <ul style="list-style-type: none"> Stops the current function. If pressed when the Configuration menu is displayed, it moves to the previous level. <ul style="list-style-type: none"> "Using the Configuration Menu" p.116 Acts as a mouse's right button when using the optional wireless mouse receiver. <ul style="list-style-type: none"> "Optional Accessories" p.205 |
| 28 [Memory] button | <p>Performs operations and makes settings for the memory function.</p> <ul style="list-style-type: none"> "Memory Function" p.103 |
| 29 [Color Mode] button | <p>Each time the button is pressed, the Color Mode changes.</p> <ul style="list-style-type: none"> "Selecting the Projection Quality (Selecting Color Mode)" p.67 |
| 30 [Search] button | <p>Changes to the next input source that is sending an image.</p> <ul style="list-style-type: none"> "Automatically Detecting Input Signals and Changing the Projected Image (Source Search)" p.53 |
| 31 [Light] button | <p>Illuminates the buttons on the remote control for approximately 15 seconds. This is useful when using the remote control in the dark.</p> |
| 32 Indicator | <p>A light is emitted when outputting remote control signals.</p> |
| 33 Remote control light-emitting area | <p>Outputs remote control signals.</p> |

Handy remote control operations

You can perform the following operations by simply pressing one of the buttons on the remote control.

| Operation | Set |
|--|---|
| <p>Reverse the projected image vertically. (Switch the Projection between Front and Front/Ceiling)</p> <ul style="list-style-type: none"> "Changing the direction of the image (projection mode)" p.27 | <p>Hold down the [Shutter] button for more than five seconds.</p> |
| <p>Selecting the password security settings.</p> <ul style="list-style-type: none"> "Managing Users (Password Protection)" p.109 | <p>Hold down the [Freeze] button for more than five seconds. The Password Protection screen is displayed, and you can select various settings.</p> |
| <p>Locking or unlocking some of the operation of the buttons on the remote control.</p> <ul style="list-style-type: none"> "Remote control button lock" p.112 | <p>Hold down the [i] button for more than five seconds.</p> |
| <p>Initializing the settings for the Remote Receiver in the Configuration menu. (Enables all Remote receiver for this projector.)</p> | <p>Hold down the [Menu] button for more than 15 seconds.</p> |
| <p>Displaying frequently used Configuration menu items.</p> | <p>Press the [User1], [User2], or [User3] button. You can set the menu item you want to assign to each button in User Button.</p> <ul style="list-style-type: none"> Settings - User Button p.123 <p>The following items can be assigned.</p> <p>Light Source Mode, Multi-Projection, Resolution, Image Processing, Display the QR Code, Image Enhancement, Frame Interpolation, Screen Matching, Color Calibration, Help, Split Screen</p> |

Replacing the remote control batteries

If delays in the responsiveness of the remote control occur or if it does not operate after it has been used for some time, it probably means that the batteries are becoming flat. When this happens, replace them with new batteries. Have two AA size alkaline or manganese batteries ready. You cannot use other batteries except for the AA size alkaline or manganese.


Attention

Make sure you read the following manual before handling the batteries.


 [Safety Instructions](#)

- 1** Remove the battery cover.

While pushing the battery compartment cover catch, lift the cover up.

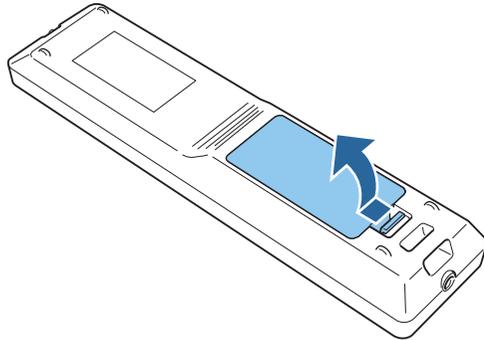

- 2** Replace the old batteries with new batteries.

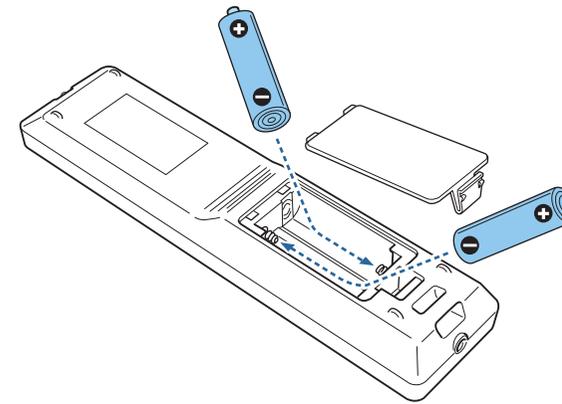


Caution

Check the positions of the (+) and (-) marks inside the battery holder to ensure the batteries are inserted the correct way.


If the batteries are not used correctly, they could explode or leak causing a fire, injury, or damage to the product.

- 3** Replace the battery cover.

Press the battery compartment cover until it clicks into place.

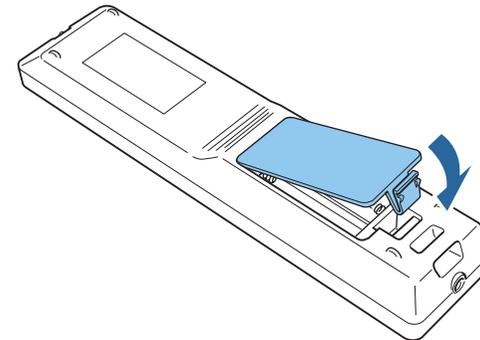

Remote control operating range

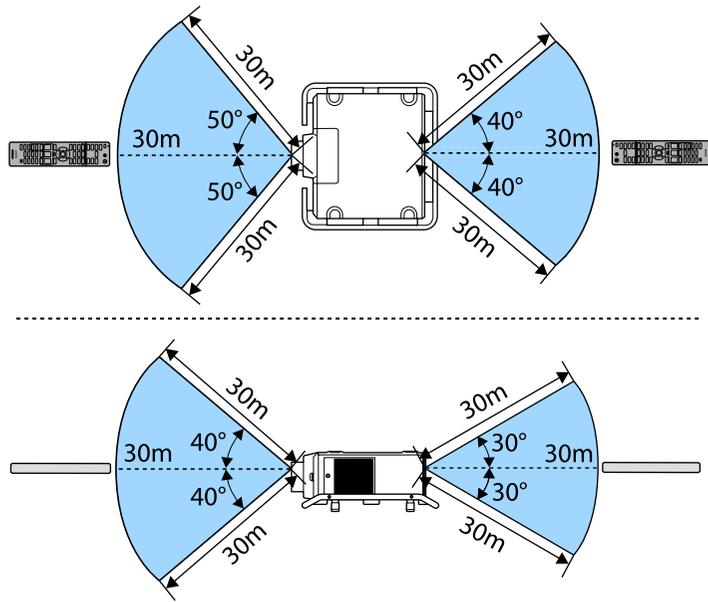



To restrict reception of the operation signals from the remote control, set **Remote Receiver**.

☛ **Settings - Remote Receiver** [p.123](#)

Connecting a cable to the remote control

You can make operations securely with the optional remote control cable set when you use multiple units of this projector in the same place or when there are obstacles around the remote receiver.

☛ "Optional Accessories" [p.205](#)

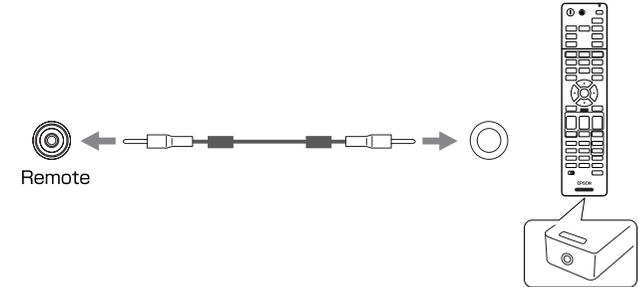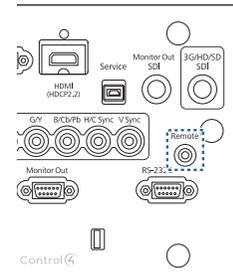

- When the remote control cable is plugged into the Remote port, the remote receiver on the projector is disabled.
- You can also connect the optional HDBaseT transmitter and remote control with the cable to control the projector.
☛ "Connecting an HDBaseT Transmitter" [p.47](#)



Preparing the Projector

This chapter explains how to install the projector and connect projection sources.

Removing and Attaching the Projector Lens Unit

Attaching


Attention

- When attaching the lens unit, remove the power plug from the electrical outlet first.
- Do not attach the lens unit when the projector's lens insertion section is facing up. Dust or dirt could enter the projector.
- Try not to touch the lens section with your hand or fingers. If fingerprints or oils are left on the surface of the lens, projection quality deteriorates.




The projector supports lens with the following model numbers.
ELPLR05/ELPLU05/ELPLW07/ELPLM12/ELPLM13/ELPLM14/
ELPLL09/ELPLL10


- 1** While pressing the tabs on both sides of the lens replacement cover, pull it towards you to remove it.

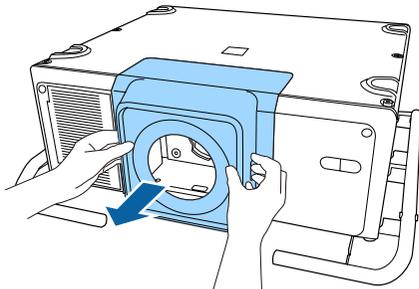

- 2** Turn the lock lever counterclockwise.

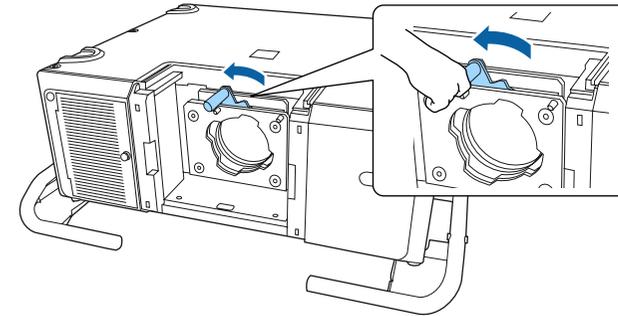


- 3** Insert the lens unit straight so that the protruding points on the lens fit through the holes (2 points) at the top of the lens unit.

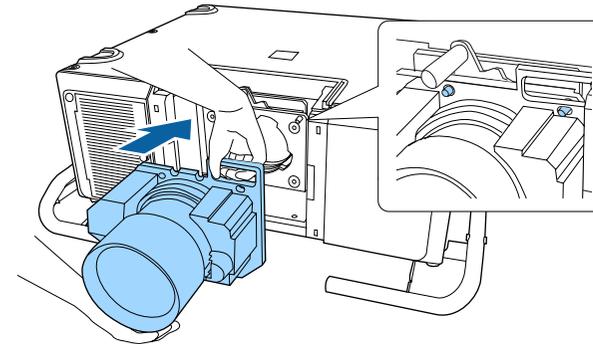


Attention


When attaching the lens unit, do not touch the motor covers shown in the following illustration (2 points). Otherwise, the lens unit may malfunction.

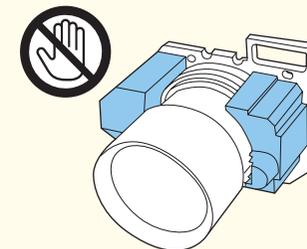

- 4** While holding the lens unit firmly, hold the lock lever and turn it clockwise until you hear it click to lock the lens unit.
Check that the lens cannot be detached.

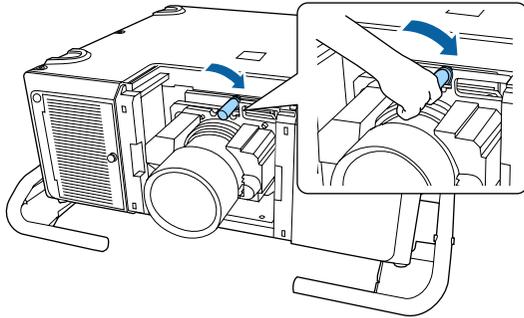

- 5** Attach the lens replacement cover.

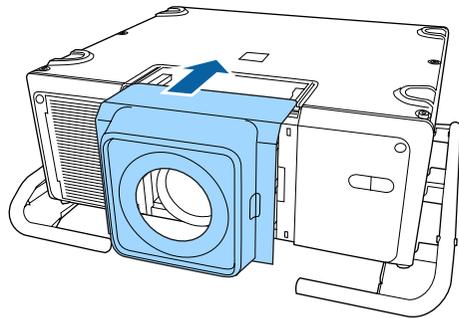

Lens Calibration

After replacing the lens unit, calibrate the lens so that the projector can correctly acquire the lens position and adjustment range.

After attaching a lens unit that differs from the previous one, a message is displayed when the projector is turned on.

Select **Yes** to calibrate the lens.

Lens calibration takes up to about 3 minutes until it is complete. When the calibration is finished the lens returns to the position before calibration was performed.

Attention

If the message "Lens Calibration failed." is displayed, stop using the projector, remove the power plug from the electrical outlet, and contact your local dealer or the nearest address provided in the Epson Projector Contact List.

 [Epson Projector Contact List](#)



- If you attach a lens unit that is the same as the previous one, perform lens calibration.
Use one of the following methods to perform lens calibration.
 - Hold down the [Default] button on the remote control for at least three seconds.
 - Configuration Menu
 -  **Extended - Operation - Lens Calibration** [p.125](#)
- If you do not calibrate the lens, the following functions may not operate correctly.
 - Lens Shift
 - Memory (Lens Position)
 - Zoom
 - Focus
 - Distortion

Removing

Attention


When replacing the lens unit, remove the power plug from the electrical outlet first. If the lens shift has been done, move the lens position to the home position before replacing the lens unit.

☛ "Adjusting the Position of the Projected Image (Lens Shift)" p.31




The projector uses a laser as the light source. As a safety measure, the light source turns off when the lens is removed. Attach the lens, and then press the [ⓘ] button to turn it back on.


- 1 While pressing the tabs on both sides of the lens replacement cover, pull it towards you to remove it.

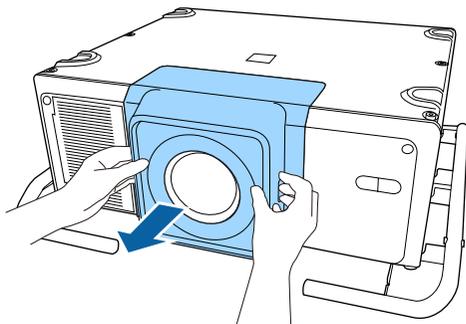

- 2 While holding the lens unit firmly, turn the lock lever counterclockwise until it is unlocked.

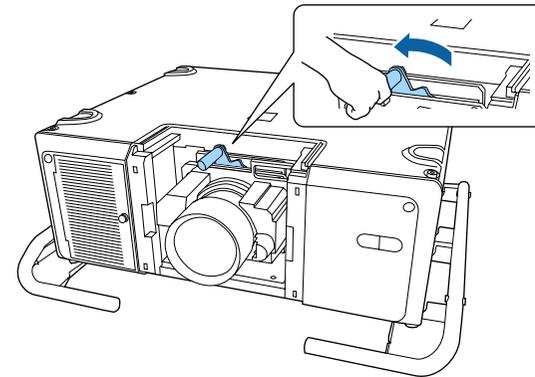

- 3 Pull the lens unit straight out.

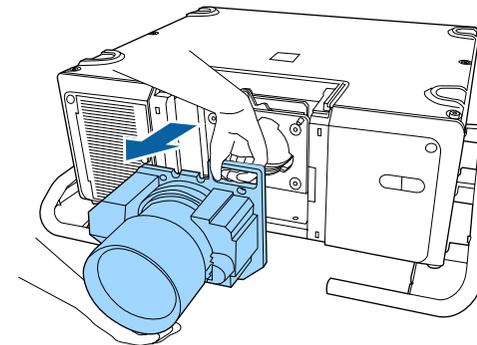

Installation Settings

Changing the direction of the image (projection mode)

You can change the direction of the image using **Projection** mode from the Configuration menu.

☛ **Extended - Projection** p.125

When Front is the standard, the image directions for each projection mode are as follows.

Front (default)



Rear

Front/Ceiling



Rear/Ceiling



- You can change the setting as follows by pressing down the [Shutter] button on the remote control for about five seconds.
Front ↔ Front/Ceiling
Rear ↔ Rear/Ceiling
- To rotate the menu display, set **OSD Rotation** in the Configuration menu.
☛ **Extended - Display - OSD Rotation** p.125
- When suspending the projector from a ceiling and projecting using the upside down function, set the **Inv Direction Button** to **On** so that the [▲], [▼], [◀], and [▶] buttons on the control panel operate in the correct direction.
☛ **Extended - Operation - Advanced - Inv Direction Button** p.125


Screen Settings

Set the Screen Type according to the aspect ratio of the screen being used. The area where the image is displayed matches the shape of the screen.



The setting for the **Screen Type** at the time of purchase is **16:10**.

- Press the [Menu] button while projecting.
☛ "Using the Configuration Menu" p.116
- Select **Display** from **Extended**.
- Select **Screen Type** from **Screen**.
- Select the screen's aspect ratio.
The shape of the background test pattern changes depending on the setting.

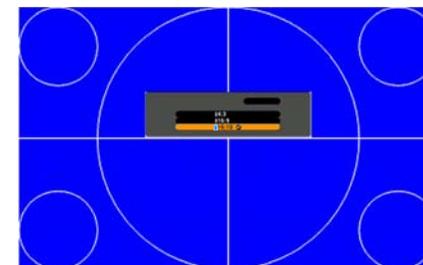

- Press the [Menu] button to finish making settings.




- When you change the Screen Type, adjust the aspect ratio for the projected image as well.
 - ☛ "Changing the Aspect Ratio of the Projected Image " [p.71](#)
- This function does not support Message Broadcasting (an EasyMP Monitor plugin).

Adjusting the position of the image on the projected screen

You can adjust the position of the image if there are margins between the edge of the image and the projected screen frame due to the Screen Type setting.

Example: When the **Screen Type** is set to 4:3

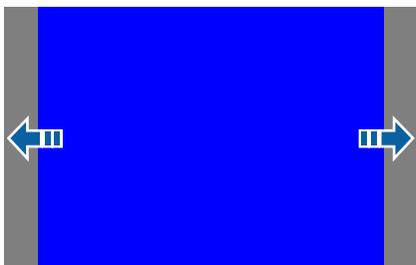


You can move the image to the left and right.

- 1** Press the [Menu] button while projecting.
 - ☛ "Using the Configuration Menu" [p.116](#)
- 2** Select **Display** from **Extended**.
- 3** Select **Screen Position** from **Screen**.

- 4** Use the [▲], [▼], [◀], and [▶] buttons to adjust the position of the image.

You can check the current display position by using the background test pattern.

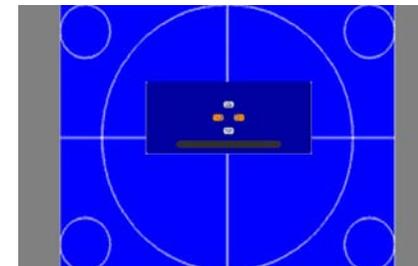

- 5** Press the [Menu] button to finish making settings.



When the **Screen Type** is set to 16:10, the **Screen Position** cannot be adjusted.

Displaying a Test Pattern

A test pattern can be displayed to adjust the projection status without connecting video equipment.


The shape of a test pattern is according to the setting of **Screen Type**. Set **Screen Type** first.

☛ "Screen Settings" [p.28](#)


- 1** Press the [Test Pattern] button of the remote control or the control panel while projecting.

2 Press the [◀][▶] buttons on the remote control or the [↵] button on the control panel to change the test pattern.

Using the remote control

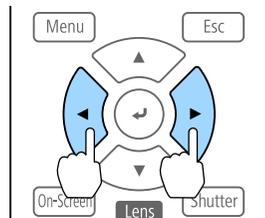

Using the control panel

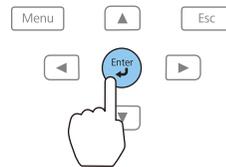


Standard




Grayscale

Cross-hatching

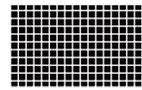

Gray Bars V

Color Bars V

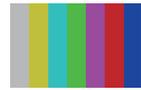

Gray Bars H

Color Bars H



Checkerboard 1



Checkerboard 2




White



Black



16:10Aspect Frame

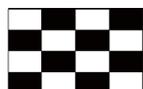

16:9Aspect Frame



4:3Aspect Frame



In addition to lens operations, the following image adjustments can be made while the test pattern is being displayed.

| Top Menu Name | Sub Menu/Items |
|---------------|------------------------------------|
| Image | Color Mode 🖱️ p.67 |
| | White Balance |

| Top Menu Name | Sub Menu/Items |
|-----------------|---|
| | Advanced - Gamma*1 🖱️ p.74 - RGBCMY 🖱️ p.73 |
| | Reset |
| Set | Geometry Correction 🖱️ p.55 Brightness Settings |
| Extended | Display*2 Color Calibration Multi-Projection*3 🖱️ p.83 |

*1 Except for custom settings of gamma

*2 Except for Screen, Panel Alignment, and Color Uniformity

*3 Except for Black Level, Scale, Color Uniformity, and Color Adjustment



- To set menu items that cannot be set while the test pattern is being displayed or to fine-tune the projected image, project an image from the connected device.
- During image adjustment, press the [↑][↓] buttons on the remote control to change the test pattern.
- You can also select a test pattern from the Configuration menu.
🖱️ **Settings - Test Pattern** [p.123](#)


3 Press the [Esc] button to close the test pattern.

Adjusting the Position of the Projected Image (Lens Shift)

The lens can be shifted to adjust the position of the projected image, for example, when the projector cannot be installed directly in front of the screen.

The ranges within which the image can be moved are shown below. The position of the projected image cannot be moved to both the horizontal and vertical maximum values.


When using the ELPLR05

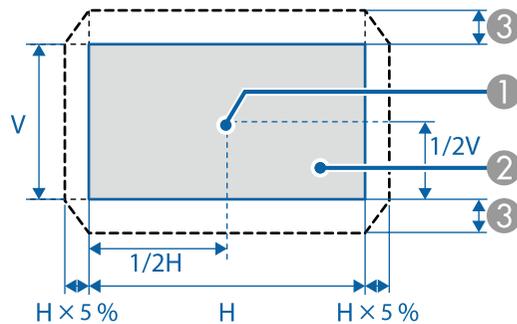

- ① Center of lens
- ② Projected image when the lens position is moved to the home position
- ③ Maximum motion range: $V \times 15\%^*$

* When the horizontal direction is at the maximum value, the image cannot be moved vertically.


When using the ELPLU05/ELPLL09/ELPLL10

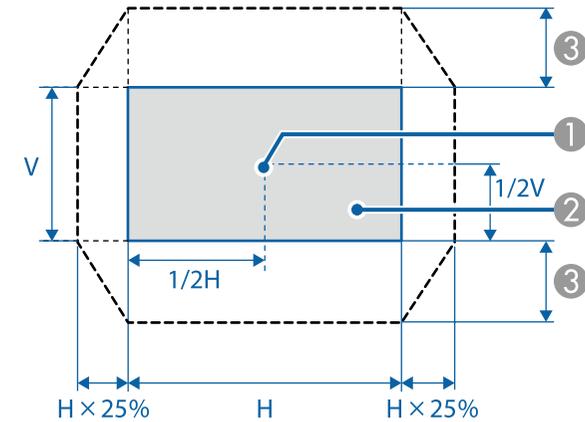

- ① Center of lens
- ② Projected image when the lens position is moved to the home position
- ③ Maximum motion range: $V \times 55\%^*$

* When the horizontal direction is at the maximum value, the image cannot be moved vertically.

When using the ELPLW07/ELPLM12/ELPLM13/ELPLM14

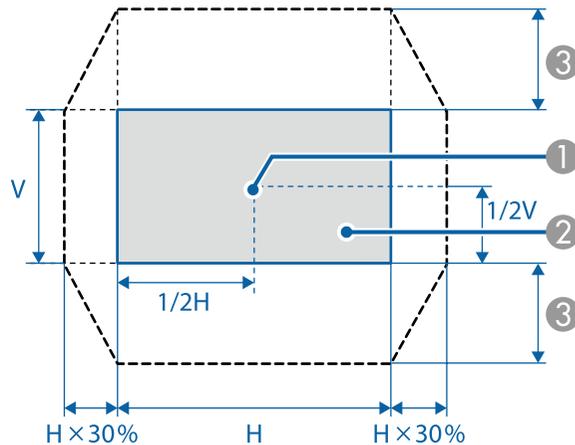

- ① Center of lens
- ② Projected image when the lens position is moved to the home position
- ③ Maximum motion range: $V \times 65\%^*$

* When performing screen matching: $V \times 60\%$ (ELPLM13)


* When the horizontal direction is at the maximum value, the image cannot be moved vertically.




- When adjusting the image height with the vertical lens shift, adjust by moving the image from the bottom to the top. If it is adjusted from the top to the bottom, the image position may move down slightly after adjusting.
- We recommend setting the focus, zoom, and lens shift at least 20 minutes after you start the projection, because images are not stable right after turning on the projector.
- The image will be clearest when the lens position is moved to the home position.
- If you hold down the [Lens Shift] button on the remote control or the control panel for at least three seconds, the lens position moves to the home position.
- If you set **A/V Output** to **Always On**, you can move the lens position to the home position even if the projector is in standby mode.
 - ☛ **Extended - A/V Settings - A/V Output p.125**

- 1 Press the [Lens Shift] button on the remote control or the control panel.

Using the remote control

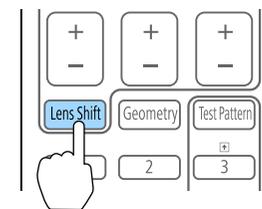


Using the control panel


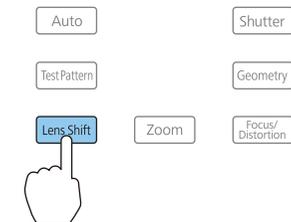


- 2 Press the [**▲**][**▼**][**◀**][**▶**] buttons to adjust the position of the projected image.

Using the remote control

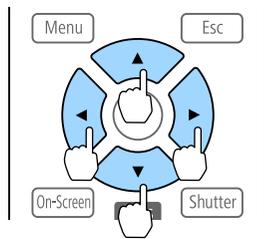

Using the control panel

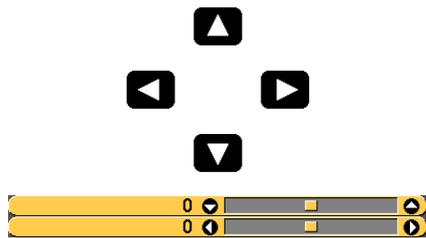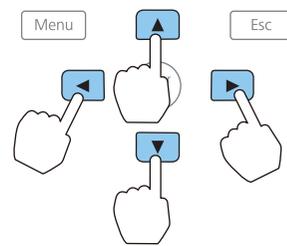

The displayed screen may differ depending on your lens.


- 3 Press the [Esc] button to finish the adjustment.

Adjusting the Image Size




This is not available for the ELPLR05.

- 1 Press the [Zoom] button on the control panel.

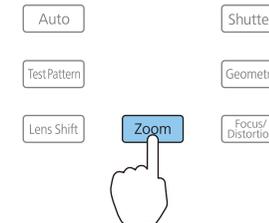

- 2 Press the [**◀**][**▶**] buttons to adjust.

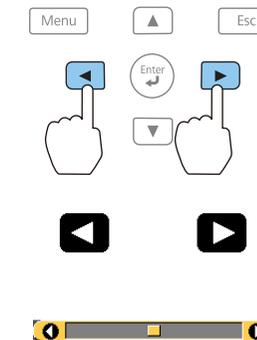

The displayed screen may differ depending on your lens.


- 3 Press the [Esc] button to finish the adjustment.




You can also use the [Zoom] buttons [+] [-] on the remote control to adjust the size of the image.

Correcting the Focus

- 1 Press the [Focus/Distortion] button on the control panel.
Press repeatedly until the focus adjustment screen is displayed.

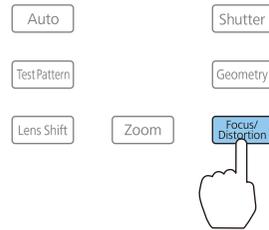

- 2 Press the [◀][▶] buttons to adjust.

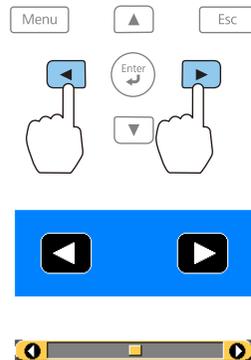

The displayed screen may differ depending on your lens.



When using the following lens, a message prompting you to adjust the distortion (image warping) is displayed. After adjusting the focus, adjust the distortion.

ELPLR05, ELPLU05

☞ "Correcting Distortion (Image Warping)" [p.34](#)

- 3 Press the [Esc] button to finish the adjustment.




- You can also use the [Focus] buttons [+] [-] on the remote control to adjust the focus.
- When projecting from several projectors and there is a difference in brightness, we recommend displaying the grayscale test pattern and adjusting the focus.
- If the focus is not correct even after adjusting the focus, hold down the [Default] button on the remote control for about three seconds to perform lens calibration. When lens calibration is complete, adjust the focus again.

Correcting Distortion (Image Warping)


When using the ELPLR05 or ELPLU05 and focusing at the center of the screen, the surrounding image may warp and be out of focus. Follow the steps below to correct the warping.

- 1 Press the [Focus/Distortion] button on the control panel.
Press repeatedly until the focus adjustment screen is displayed.
- 2 Press the [◀][▶] buttons to focus the image around the center of the lens.

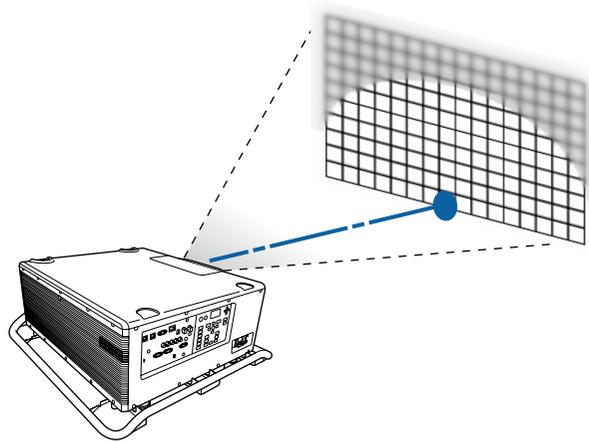

3 Press the [Focus/Distortion] button on the control panel again. Press repeatedly until the distortion adjustment screen is displayed.

4 Press the [◀][▶] button to adjust the focus of the surrounding area.

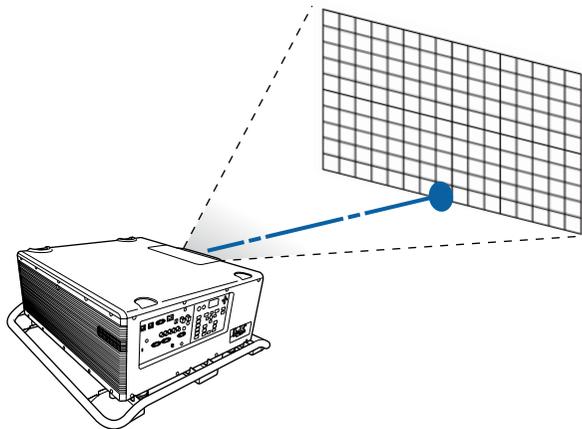

If the center is out of focus after adjusting the surrounding image, repeat steps 1 to 2.



You can also adjust distortion in images using the remote control. After adjusting the focus at the center of the image using the [Focus] button [+] [-], use the [Distortion] button [+] [-] to adjust the surrounding image.

Registering and Loading Lens Adjustment Values


You can register a lens position whose lens shift, zoom, focus, and distortion was adjusted in memory, and load it when necessary. You can register up to 10 values.



- If you did not calibrate your lens, a message is displayed when you save a memory. Select **Yes** to calibrate the lens.
- The lens position when a memory is loaded may not completely match the lens position when the memory was saved.
- If there is a large discrepancy between the lens position when a memory is loaded and the lens position when the memory was saved, calibrate the lens.

☞ **Extended - Operation - Lens Calibration** p.125


1 Press the [Memory] button while projecting.

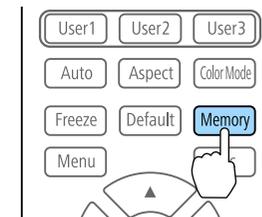


You can also operate from the Configuration menu.

☞ **Settings - Memory** p.123

2 Select **Lens Position**, and then press the [↵] button.

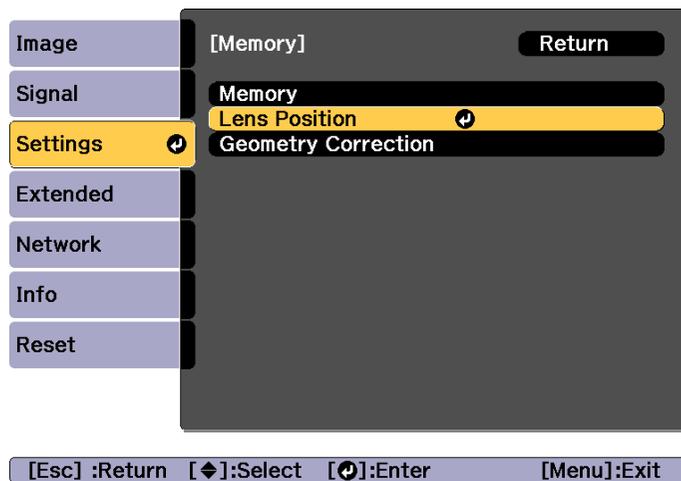

3 Select the function you want to perform, then press the [↵] button.

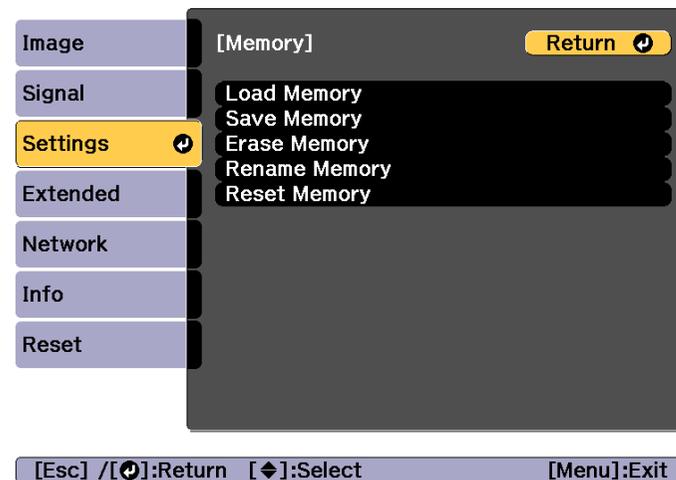

| Function | Explanation |
|----------------------|--|
| Load Memory | Loads the saved memory. When you select a memory name and press the [↵] button, the lens is automatically adjusted according to the settings of the selected memory. |
| Save Memory | Registers current settings in the memory. When you select a memory name and press the [↵] button, the settings are saved. |
| Erase Memory | Erases the registered memory. When you select a memory name and press the [↵] button, a message is displayed. Select Yes , and then press the [↵] button to erase the selected memory. |
| Rename Memory | Changes the memory name. Select the memory name you want to change, and then press the [↵] button. Enter the memory name using the soft keyboard.  "Soft keyboard operations" p.130 When you have finished, move the cursor over Finish , and then press the [↵] button. |

| Function | Explanation |
|---------------------|---|
| Reset Memory | Resets the name and settings of a saved memory. |



If the mark on the left of the memory name is turned blue, it means the memory has already been registered. When you select a registered memory, a message is displayed asking you to confirm that you want to overwrite the memory. If you select **Yes**, the previous settings are deleted and the current settings are registered.

ID Settings

When an ID is set for the projector and the remote control, you can use the remote control to operate only the projector with a matching ID. This is very useful when managing multiple projectors. You can set up to 30 IDs.




- Operation using the remote control is possible only for projectors that are within the operating range of the remote control.
 - ☛ "Remote control operating range" [p.23](#)
- IDs are ignored when the projector ID is set to **Off** or the remote control ID is set to **0**.
- If you use Epson Web Control, you can operate a specific projector from a mobile device.
 - ☛ "Changing Settings Using a Web Browser (Epson Web Control)" [p.188](#)

Set the projector ID

- 1 Press the [Menu] button while projecting.
 - ☛ "Using the Configuration Menu" [p.116](#)


- 2 Select **Multi-Projection** from **Extended**.
- 3 Select **Projector ID**, and then press the [↵] button.
- 4 Press the [◀][▶] buttons to select an ID number.

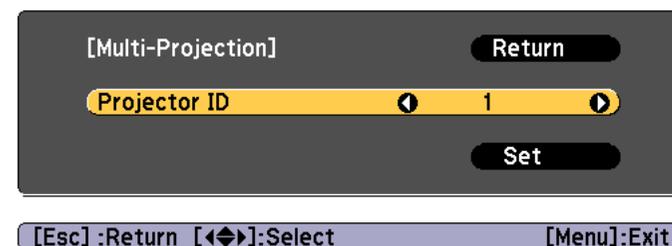

- 5 Select **Set**, and then press the [↵] button.
- 6 Press the [Menu] button to close the Configuration menu.

Checking the projector ID


During projection, press the [i] button while holding down the [ID] button on the remote control.

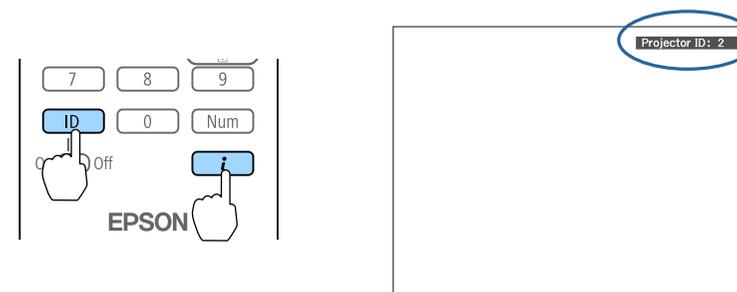

When you press the buttons, the current Projector ID is displayed on the projection screen. It disappears in about three seconds.

Setting the remote control ID


- 1 Set the remote control [ID] switch to On.

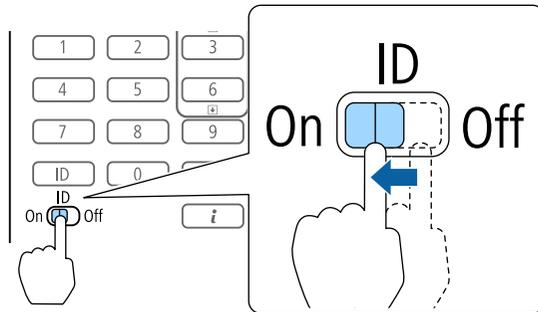

- 2 While holding the [ID] button, press a number button to select a number to match the ID of the projector you want to operate.

☛ "Checking the projector ID" p.37

Enter a two digit number (Example: 01 when the ID is 1).

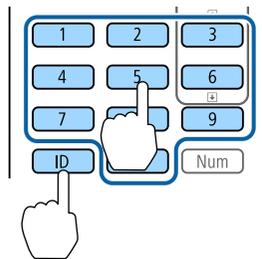

Once this setting has been made, the projector that can be operated by the remote control is limited.



The remote control ID setting is saved in the remote control. Even if the remote control batteries are removed to replace them and so on, the stored ID setting is retained. However, if the batteries are left out for a long time, it is reset to the default value (ID0).

Setting the Time

You can set the time for the projector. The set time is used for the schedule function.

☛ "Scheduling Function" p.105



- When you turn on the projector for the first time, the message "Do you want to set the time?" is displayed. When you select **Yes**, the screen from step 4 is displayed.
- When **Schedule Protection** is set to **On** in **Password Protection**, settings related to the date and time cannot be changed. You can make changes after setting **Schedule Protection** to **Off**.
 - ☛ "Managing Users (Password Protection)" p.109

- 1 Press the [Menu] button while projecting.

☛ "Using the Configuration Menu" p.116


- 2 Select **Operation** from **Extended**.

- 3 Select **Date & Time**, and then press the [↵] button.

- 4 Make settings for the date and time.

Use the soft keyboard to enter the date and time.

☛ "Soft keyboard operations" p.130

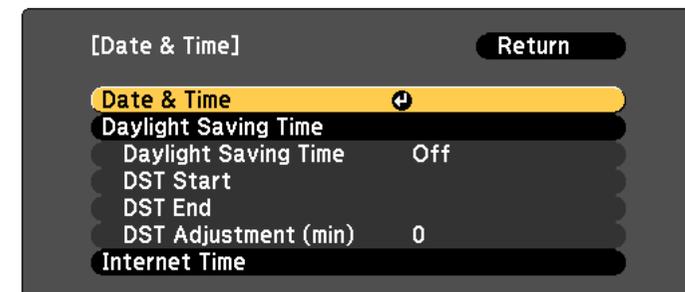

Date & Time

| Submenu | Function |
|------------------------------|--|
| Date | Set today's date. |
| Time | Set the current time. |
| Time Difference (UTC) | Set the time difference from Coordinated Universal Time. |
| Set | The settings made in Date & Time are applied. |

Daylight Saving Time

| Submenu | Function |
|-----------------------------|--|
| Daylight Saving Time | Set whether or not (On/Off) to activate the daylight saving time. DST Adjustment (min) adjusts the time difference between the standard time and daylight saving time. |
| DST Start | Set the date and time to start the daylight saving time. |
| DST End | Set the date and time to end the daylight saving time. |
| Set | The settings made in Daylight Saving Time are applied. |

Internet Time

| Submenu | Function |
|-----------------------------|--|
| Internet Time | Set to On to update the time automatically through an Internet time server. |
| Internet Time Server | Input the IP address for an Internet time server. |
| Set | The settings made in Internet Time are applied. |



When changing settings, make sure you select **Set**, and then press the [↵] button.

5 Press the [Menu] button to finish making settings.

Other Settings

Settings related to basic operations

| Purpose | Setting Methods |
|--|--|
| To start/stop projection by turning on/off the main power switch or plugging in or unplugging the power plug of the projector. | <ul style="list-style-type: none"> When Direct Power On is set to On, the projector can start projecting when power is supplied. (Default value: Off)  Extended - Operation - Direct Power On p.125 The projector can be powered off directly by the breaker because it supports the direct shutdown function. |
| To disable buzzer beeps generated when the projector is powered on/off. | Set Beep to Off . (Default value: On)  Extended - Operation - Advanced - Beep p.125 |
| To turn off the power by pressing the [⏻] button once. | Set Standby Confirmation to Off . (Default value: On)  Extended - Display - Standby Confirmation p.125 |

Settings related to display

| Purpose | Setting Methods |
|---|--|
| To change the menu position. | Change the settings of Menu Position .  Extended - Display - Menu Position p.125 |
| To change the menu direction. | Change the settings of OSD Rotation .  Extended - Display - OSD Rotation p.125 |
| To prevent the display of menus, messages, or warnings on the screen. | Each time you press the [On-Screen] button on the remote control, menus or messages and so on are shown or hidden. While menus are hidden, you cannot operate the Configuration menu (except switching the color mode and input source). |
| To disable the display of the message on the projection screen when switching the source. | Set Messages to Off . (Default value: On)  Extended - Display - Messages p.125 You can confirm warning by the display of the indicator.  "Reading the Indicators" p.148 Dialogs related to operations and behaviors, laser warnings, termination of Message Broadcasting, and projector ID are displayed. |
| To reduce the display delay of the image. | Set Image Processing to Fast 1 or Fast 2 .  Signal - Advanced - Image Processing p.121 |
| To register and save the settings of the projected image. | Set Memory .  "Memory Function" p.103 You can save the following settings. <ul style="list-style-type: none"> Memory: Some settings in the Configuration menu Lens Position: Adjustment values of the lens shift, zoom, focus, and distortion Geometry Correction: Adjustment value of the geometry correction |


| Purpose | Setting Methods |
|---|--|
| To change the screen displayed on the background. | <p>Change from Display. You can select from blue, black, and logo. If no logo is registered, the EPSON logo is displayed.</p> <p>Display Background: Set the screen display with no image signal input. (Default value: Blue)</p> <p>☛ Extended - Display - Display Background p.125</p> <p>Startup Screen: Set whether or not (On/Off) to display the user logo when the projector is turned on. (Default value: On)</p> <p>☛ Extended - Display - Startup Screen p.125</p> |

The port name, location, and connector orientation differ depending on the source being connected.

Connecting a Computer

To project images from a computer, connect the computer using one of the following methods.

- 1 When using a commercially available computer cable**
Connect the computer's display output port to the projector's Computer port.
- 2 When using a commercially available 5BNC cable**
Connect the computer's display output port to the projector's BNC port.
- 3 When using a commercially available HDMI cable**
Connect the HDMI port on the computer to the projector's HDMI port.
- 4 When using a commercially available DVI-D cable**
Connect the DVI-D port on the computer to the projector's DVI-D port.

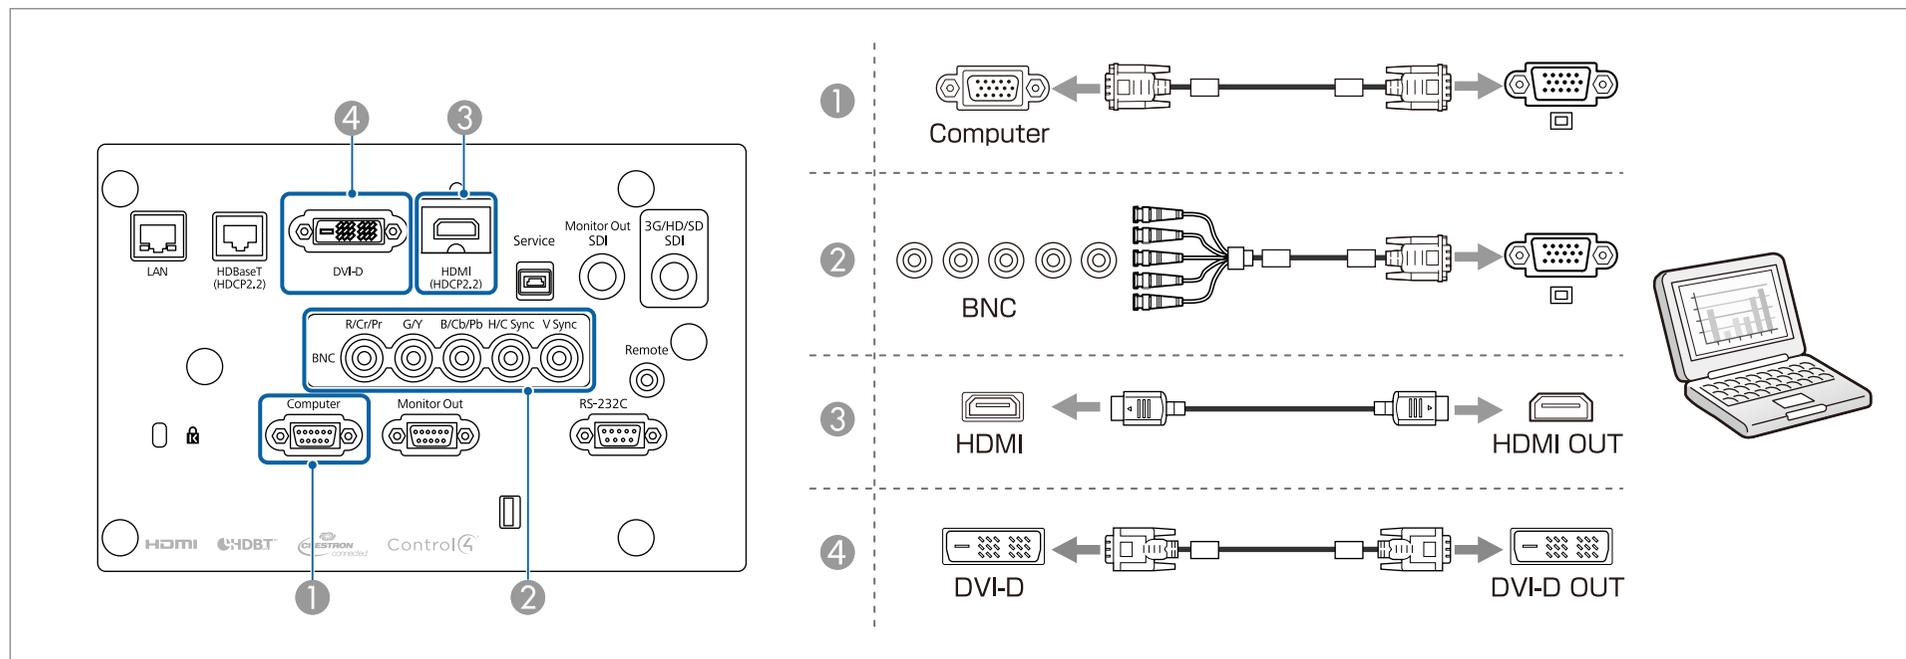

Connecting Image Sources

To project video images, connect to the projector using one of the following methods.

① **When using an optional component video cable (D-sub/component converter)**

☞ "Optional Accessories" [p.205](#)

Connect the component output port on the image source to the projector's Computer port.

② **When using a commercially available component video cable (RCA) and a BNC/RCA adapter**


Connect the component output port on the video equipment to the projector's BNC port (R/Cr/Pr, G/Y, B/Cb/Pb).

③ **When using a commercially available BNC video cable (SDI input)**

Connect the SDI port on the image source to the projector's SDI input port.

④ **When using a commercially available HDMI cable**

Connect the HDMI port on the image source to the projector's HDMI port.

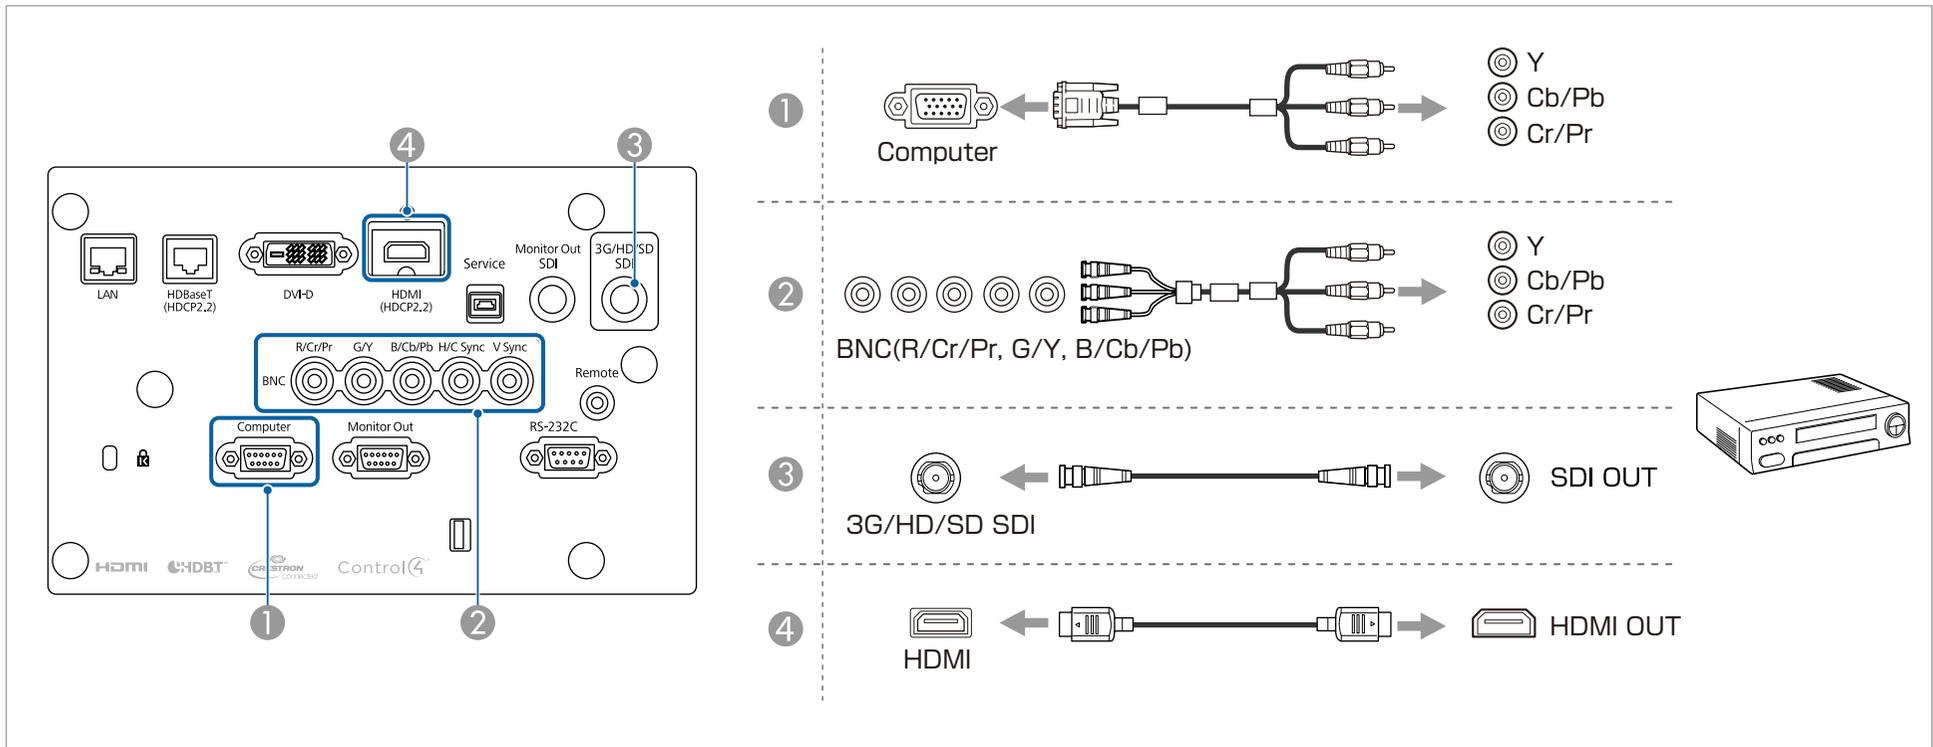

Attention


- If the input source is on when you connect it to the projector, it could cause a malfunction.
- If the orientation or shape of the plug differs, do not try to force it in. The device could be damaged or could malfunction.

 If the source you want to connect to has an unusually shaped port, use the cable supplied with the device or an optional cable to connect to the projector.

Connecting to an External Monitor

You can output images to an external monitor.

- ① **When you want to output images from equipment connected to the Computer port or the BNC port**
Connect the D-Sub port on the external monitor to the Monitor Out port on the projector.
- ② **When you want to output images from equipment connected to the 3G/HD/SD SDI port**
Connect the SDI OUT port on the external monitor to the Monitor Out SDI port on the projector.

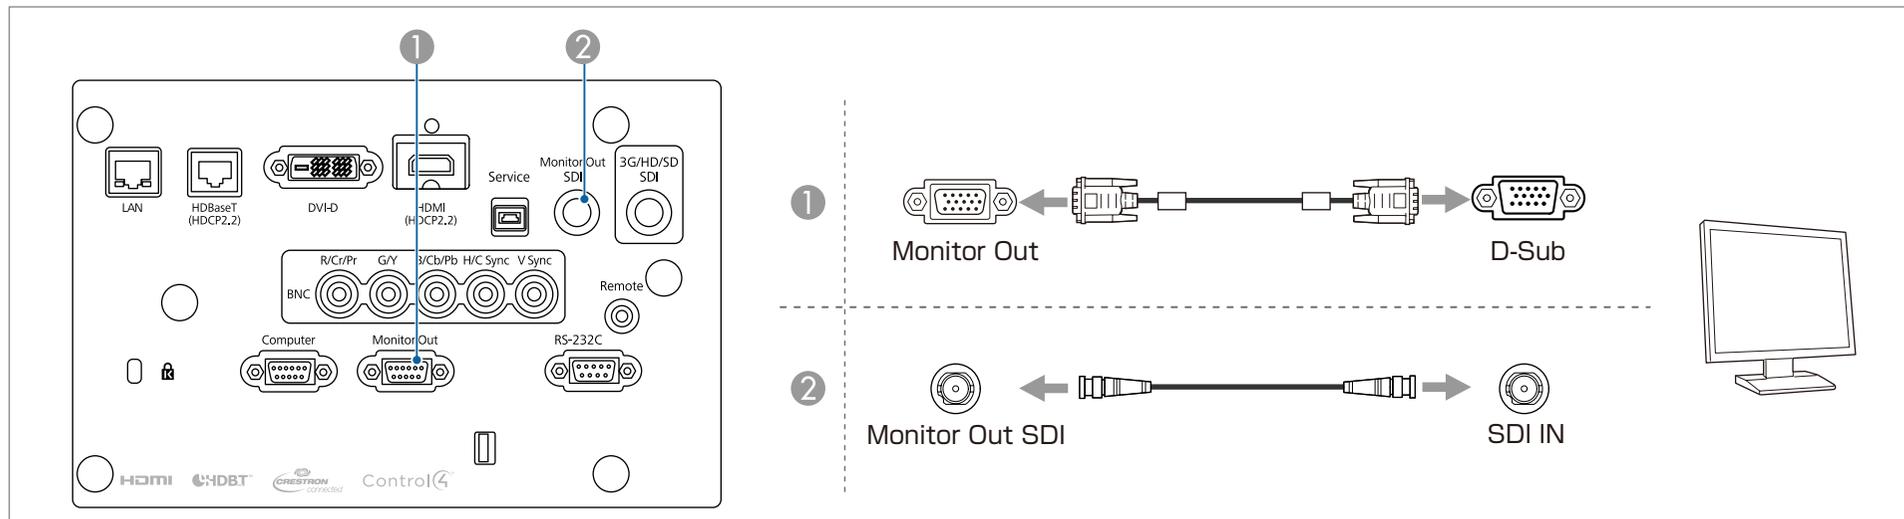


- Make the following settings to output image even when the projector is in standby mode.
 - Set **A/V Output** to **Always On**.
 - ☛ **Extended - A/V Settings - A/V Output** [p.125](#)
 - Set **Standby Mode** to **Communication On**.
 - ☛ **Extended - Standby Mode** [p.125](#)
- The Monitor Out port to which external monitors are connected can output analog RGB signals that are being input to the Computer port or the BNC port You can set which signals to output in **Monitor Out**.
 - ☛ **Extended - A/V Settings - Monitor Out** [p.125](#)

Connecting a LAN Cable

Connect a LAN port on network hubs or other equipment to the projector's LAN port with a commercially available 100BASE-TX or 10BASE-T LAN cable.

By connecting a computer to the projector over a network, you can project images and check the status of the projector.

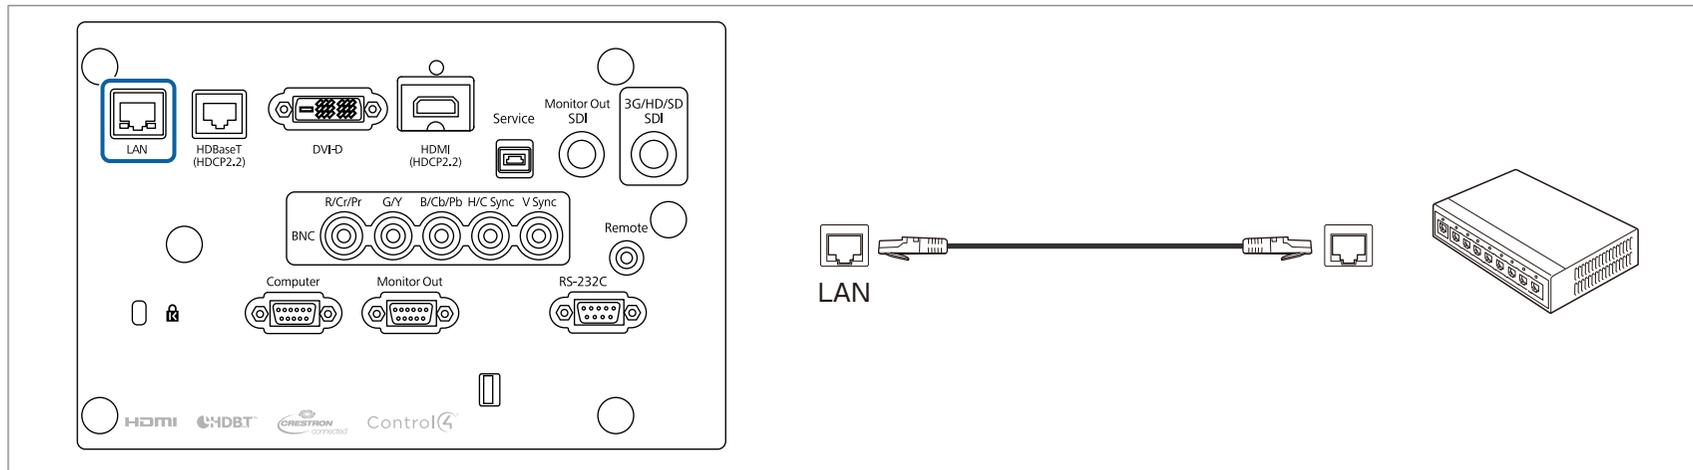


To prevent malfunctions, use a category 5 or higher shielded LAN cable.

Connecting an HDBaseT Transmitter

Connect the optional HDBaseT Transmitter with a commercially available 100BASE-TX LAN cable.

☛ "Optional Accessories" [p.205](#)

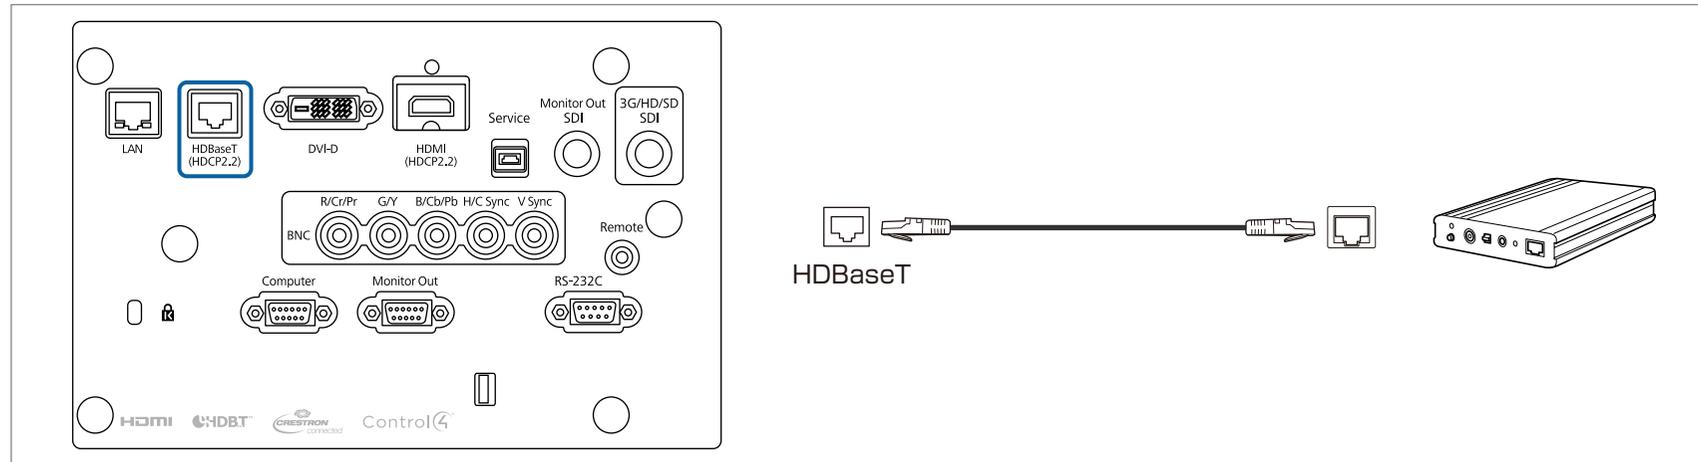


- Make sure you read the User's Guide supplied with the HDBaseT Transmitter carefully before use.
- For the LAN cable, use an HDBaseT Alliance-recommended STP cable (straight) of category 6 or higher. However, operation is not guaranteed for all input/output devices and environments.
- When connecting or disconnecting the LAN cable, make sure you turn off the power for the projector and the HDBaseT Transmitter.
- When performing Ethernet communication or serial communication, or when using the wired remote control via HDBaseT port, set **Control Communications** to **On** from the Configuration menu.
 - ☛ **Extended - HDBaseT - Control Communications** [p.125](#)


Note that when **Control Communications** is set to **On**, the projector's LAN port, RS-232C port, and Remote port are disabled.
- When using the Extron XTP transmitter or switcher, connect to the projector's HDBaseT port. Set **Extron XTP** to **On** (**Standby Mode** and **Control Communications** are automatically set to **On**).
 - ☛ **Extended - HDBaseT - Extron XTP** [p.125](#)

Installing the Wireless LAN Unit


- 1 Remove the screw for the wireless LAN unit port cover.

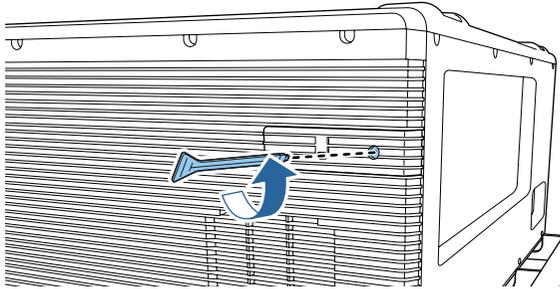


- 2 Remove the wireless LAN unit port cover.

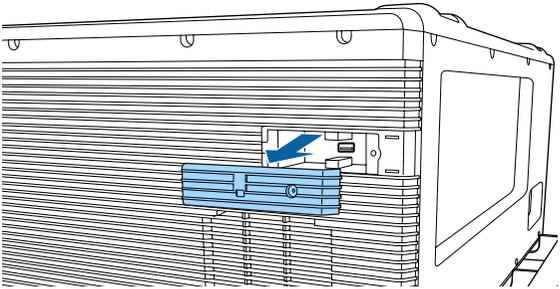


- 3 Install the Wireless LAN unit.

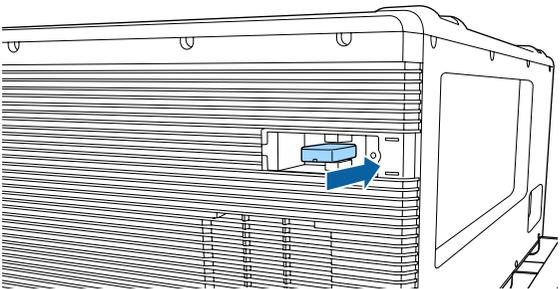

- 4 Install the wireless LAN unit port cover.

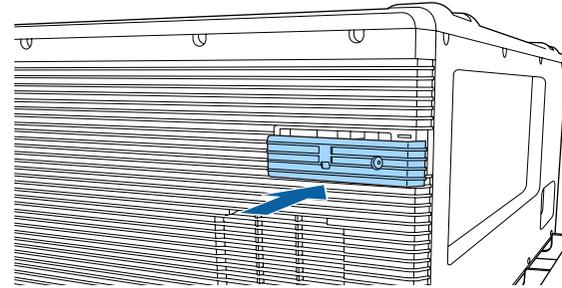

- 5 Tighten the screw for the wireless LAN unit port cover.

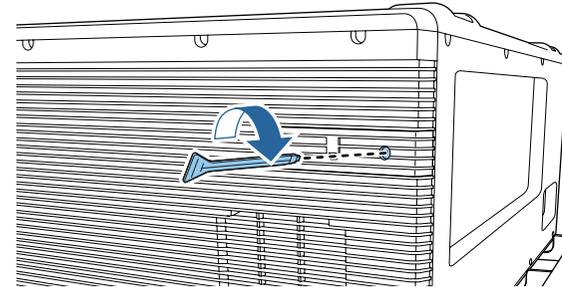

You can make wireless LAN connection settings in the **Wireless LAN** menu from the Configuration menu.

☛ **Network - Network Configuration - Wireless LAN** [p.131](#)



Basic Usage

This chapter explains how to project and adjust images.


Before turning on the projector, connect your computer or video equipment to the projector.

☛ "Connecting Equipment" p.42


Attention

- Install the current breaker for 13 A to 20 A to the wiring in the building that supplies electricity to the projector.
- Do not connect other devices to the wiring where the current breaker is installed, and use the wiring only for the projector.

- 1** Connect the projector to an electrical outlet with the power cord.

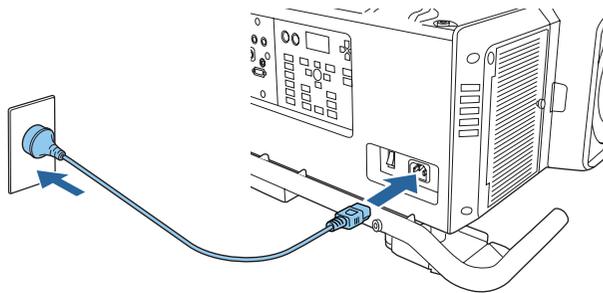

- 2** Turn on the main power switch on the back of the projector to supply power to the projector.

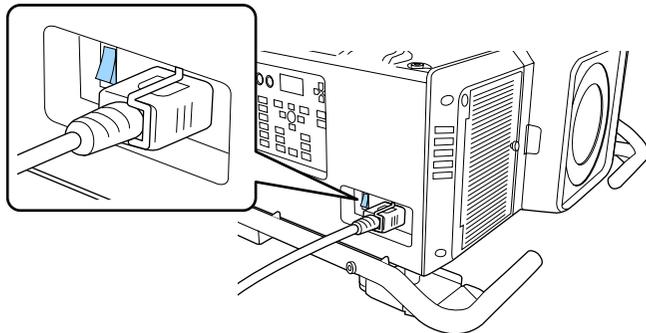

The projector's power indicator turns blue (it is in standby mode). This indicates that the projector is receiving power, but is not yet turned on.

- 3** Press the [ⓘ] button on the control panel or remote control to turn on the projector.

The confirmation buzzer beeps and the status indicator flashes blue as the projector warms up. Once the projector is warmed up, the status indicator stops flashing and turns blue.

If the image is not projected, try the following.

- Turn on the connected computer or video equipment.
- When using a laptop computer, change the screen output of the computer.
- Insert media such as a DVD and play it back.
- Press the [Search] button on the remote control to detect the input source.
- Press the button for the input source that you want to project by using the remote control.

Warning


- Do not look into the projector's lens during projection. Doing so may damage your eyes. Be especially careful if children are present.
- During projection, do not block the light from the projector with a book and so on. If the light from the projector is blocked for a long time, the area on which the light shines becomes hot which could cause it to melt, burn, or start a fire. Also, the lens may get hot due to the reflected light which could cause the projector to malfunction. To stop projection, use the Shutter function, or turn off the projector.



- If **Direct Power On** is set to **On** in the **Extended** menu, the projector automatically turns on when power is supplied to it. When the power cord is plugged in, note that the projector turns on automatically in cases such as recovery from a power outage.
 - ☛ **Extended - Operation - Direct Power On** [p.125](#)
- If an image signal from the source selected in **Auto Power On** is input, the projector automatically turns on.
 - ☛ **Extended - Operation - Auto Power On** [p.125](#)



- To ensure a long projector service life, turn off the projector when you are not using it. The light source's operating life varies depending on the Configuration menu settings, environmental conditions, and usage conditions. The brightness of the projected image drops as projection time elapses.
- The projector can be powered off directly by the breaker because it supports the direct shutdown function.
- When the projector is used continuously for more than 24 hours, or when direct shutdown is used regularly, set **Light Source Calibration** using the scheduling function to adjust the light source periodically.
 - ☛ "Scheduling Function" [p.105](#)

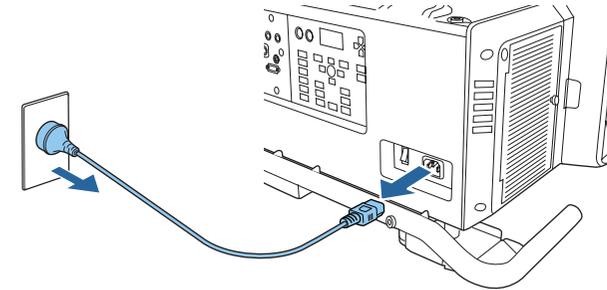



- 1** Press the [⏻] button on the control panel or the remote control. The shutdown confirmation screen is displayed.



- 2** Press the [⏻] button again. (To cancel, press any other button.) After the buzzer beeps twice, the projected image disappears, and the status indicator turns off.
- 3** Turn off the main power switch on the back of the projector. The power indicator turns off.
- 4** Disconnect the power cord.

Automatically Detecting Input Signals and Changing the Projected Image (Source Search)

Press the [Search] button on the remote control to project images from the port currently receiving an image.

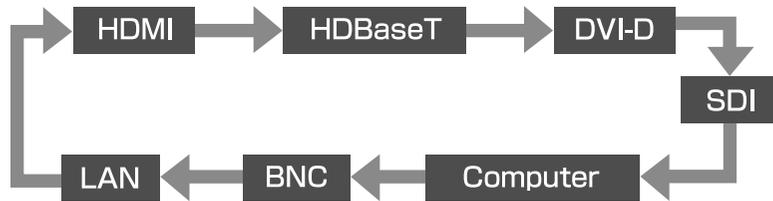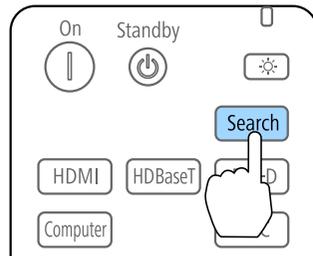


When two or more image sources are connected, repeatedly press the [Search] button until the target image is projected.

When your video equipment is connected, start playback before beginning this operation.



- You can make settings so that images are projected from the same input port the next time the projector is turned on.
 - Extended - Operation - Startup Source Search [p.125](#)
- The following screen is displayed while no image signals are input.


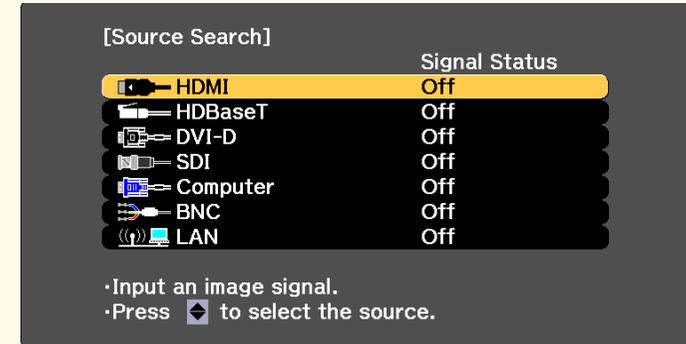


[◀]:Select [↵]:Enter [Esc]:Exit

Switching to the Target Image

You can change directly to the target image from the remote control or by pressing the following buttons on the control panel.

The following shows the input ports for each button.

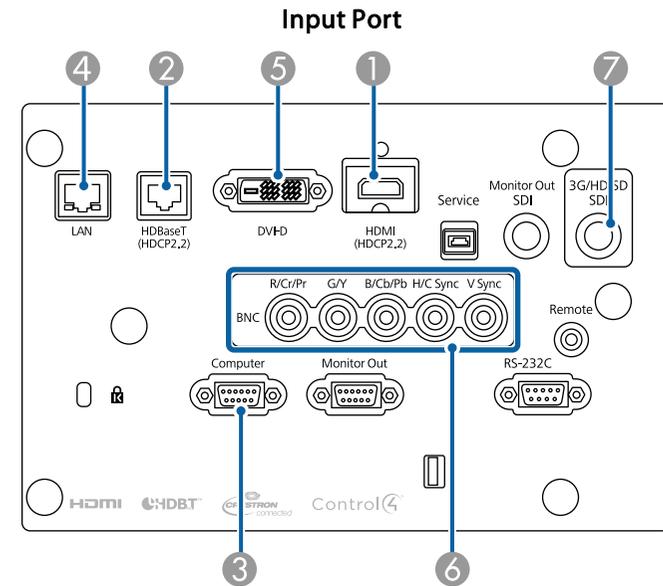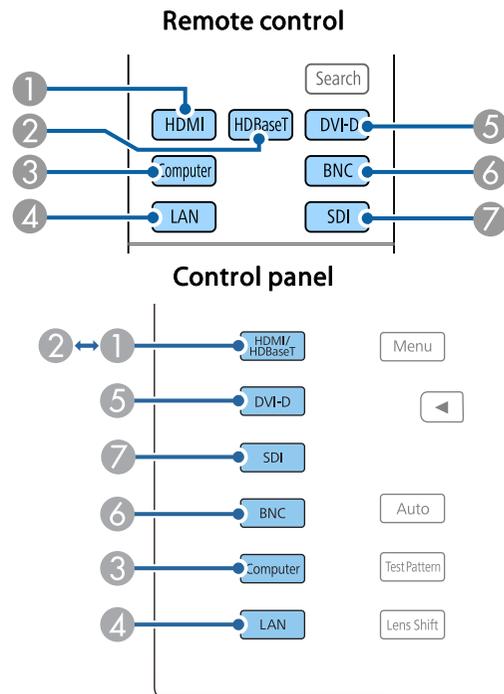

- ④ Changes to images from a computer connected via the network.


Correcting Distortion in the Projected Image

You can correct keystone distortion in projected images using one of the following methods.

- H/V-Keystone

This allows you to correct distortion in the horizontal and vertical directions independently.


☛ "H/V-Keystone" [p.56](#)

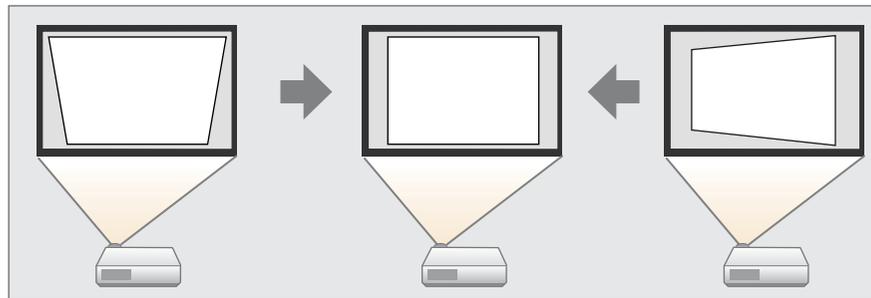

- Quick Corner

Correct the four corners independently.


☛ "Quick Corner" [p.57](#)

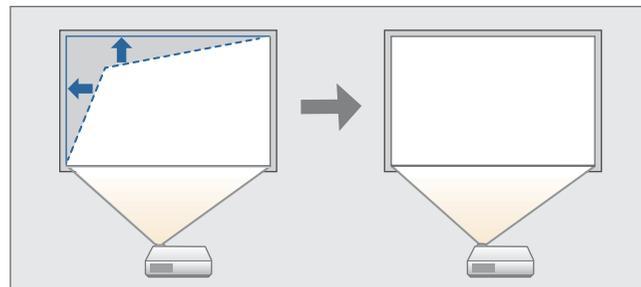

- Curved Surface

Correct distortion that occurs when projecting on a curved surface, and adjust the amount of expansion and contraction.


☛ "Curved Surface" [p.58](#)

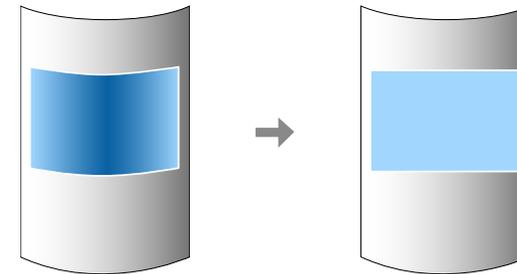

- Corner Wall

This allows you to correct distortion that occurs when projecting on a surface with right angles, such as a square pillar or the corner of a room, and adjust the amount of expansion and contraction.

☛ "Corner Wall" [p.62](#)

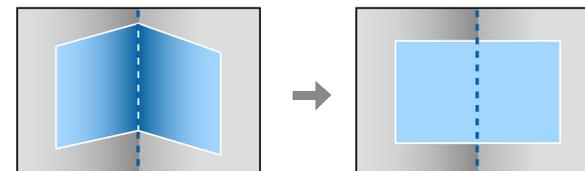

- Point Correction

Corrects slight distortion which occurs partially, or adjusts the image position in an overlapping area when projecting from multiple projectors.

☛ "Point Correction" [p.65](#)





- By pressing the [Geometry] button on the remote control or the control panel, you can perform the selected adjustment method directly.
- When you want to re-adjust the projection position and so on, if you want to release the correction status temporarily, set the **Geometry Correction** to **Off**. Even when it is set to **Off**, the correction values are saved.
 - ☛ **Settings - Geometry Correction** p.123
- You can save the geometry correction settings using **Memory** in **Geometry Correction**, and load them when needed.
 - ☛ "Memory Function" p.103


H/V-Keystone

This allows you to correct distortion in the horizontal and vertical directions independently.

Use the following to check the adjustment range for the image.


☛ "H/V-Keystone" p.212

- 1 Press the [Menu] button while projecting.
- 2 Select **Geometry Correction** from **Settings**.
- 3 Select **H/V-Keystone**, and then press the [↵] button.

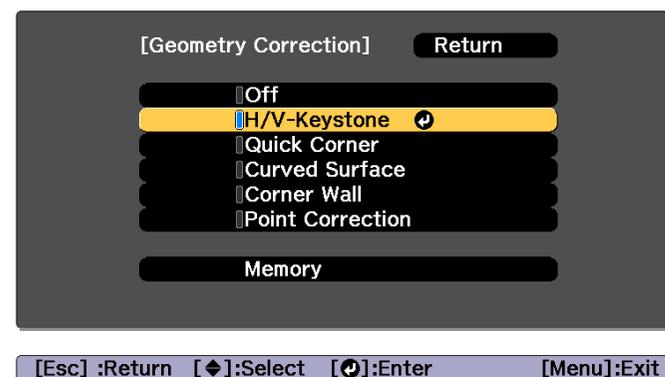


"If this setting is changed, the image may be distorted." is displayed, press the [↵] button.


- 4 Use the [▲][▼] buttons to select the correction method, and then use the [◀][▶] buttons to make the corrections.

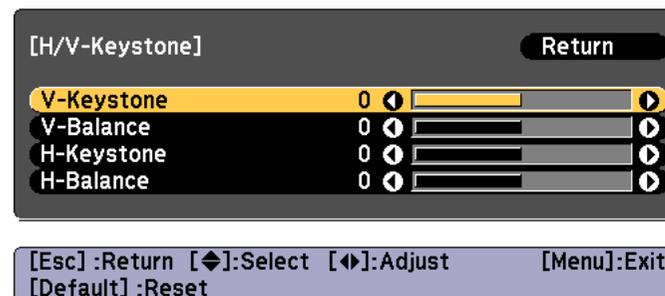

Correct the keystone distortion by using **V-Keystone** and **H-Keystone**.

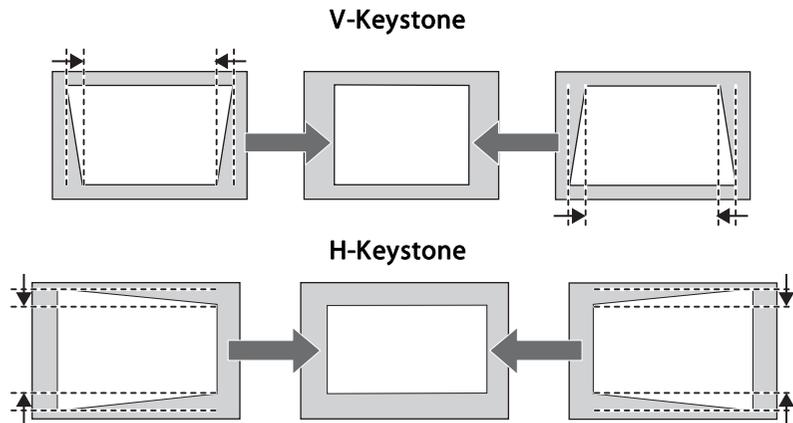

If the image aspect is incorrect, adjust the image balance by using **V-Balance** and **H-Balance**.

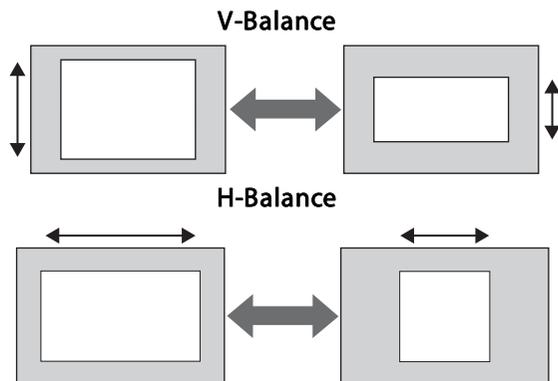

When you correct keystone distortion, the projected image may be reduced.

5 To complete the corrections, press the [Menu] button.




You cannot combine with other correction methods.

Quick Corner


This allows you to correct each of the four corners of the projected image independently.

- 1** Press the [Menu] button while projecting.
- 2** Select **Geometry Correction** from **Settings**.
- 3** Select **Quick Corner**, and then press the [**↵**] button.

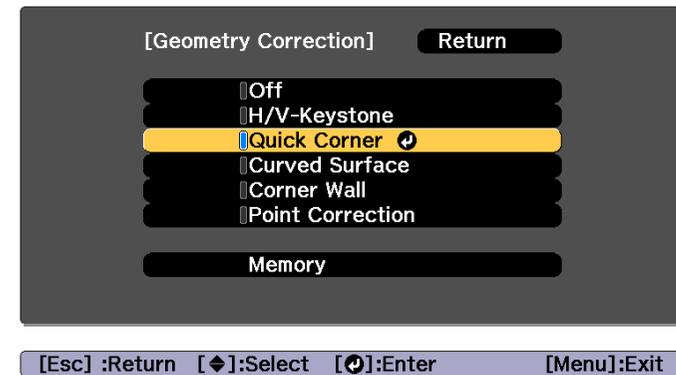

"If this setting is changed, the image may be distorted." is displayed, press the [**↵**] button again.

- 4** Use the [**▲**], [**▼**], [**◀**], and [**▶**] buttons to select the corner you want to adjust, and then press the [**↵**] button.

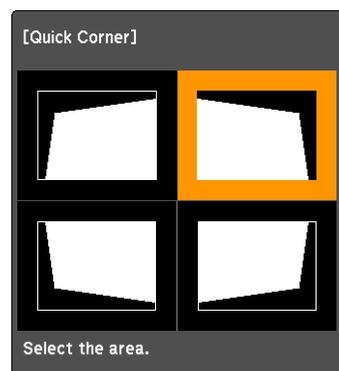

[↔/↔]: Select
 [↵]: Enter
 [Esc] : Return (press for 2 seconds to reset)




If the [Esc] button is pressed for approximately two seconds, the confirm default reset screen is displayed.

Select **Yes** to reset the result of Quick Corner corrections.

- 5** Use the [▲], [▼], [◀], and [▶] buttons to correct the position of the corner.

When you press the [↵] button, the screen shown in step 4 that allows you to select the area to be corrected is displayed.

If the message "Cannot adjust any further." is displayed while adjusting, you cannot adjust the shape any further in the direction indicated by the gray triangle.

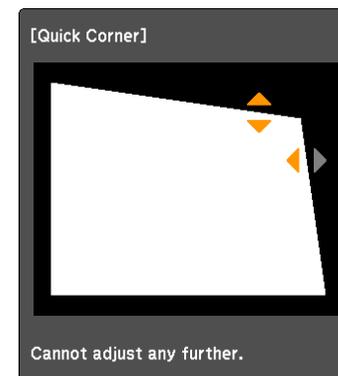

[↔/↔]: Adjust
 [Esc] / [↵]: Return

- 6** Repeat steps 4 and 5 as needed to adjust any remaining corners.
- 7** To complete the corrections, press the [Menu] button.

Curved Surface

This allows you to correct distortion that occurs when projecting on a curved surface, and adjust the amount of expansion and contraction.

Face the projector directly opposing the screen with the lens position moved to the home position.

☛ "Adjusting the Position of the Projected Image (Lens Shift)" [p.31](#)




- Project onto an arc surface with the same radius.
- If a large amount of adjustment is performed, the focus may not be uniform even after making adjustments.
- If **4K Enhancement** is enabled, a message is displayed. Select **Yes** to disable **4K Enhancement**.

☛ **Image - Image Enhancement - 4K Enhancement** [p.119](#)

Use the following to check the adjustment range for the image.
 ☛ "Curved Surface" [p.212](#)


- 1 Press the [Menu] button while projecting.
- 2 Select **Geometry Correction** from **Settings**.
- 3 Select **Curved Surface**, and then press the [↵] button.

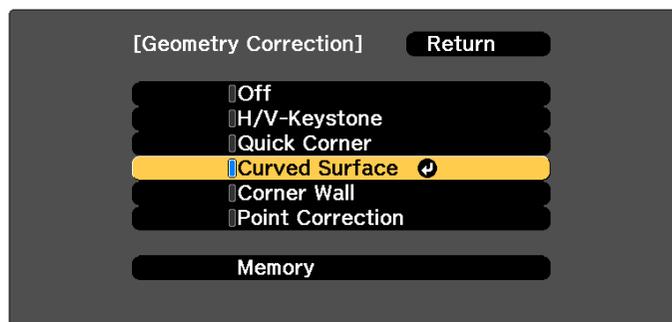

[Esc] :Return [↩]:Select [↵]:Enter [Menu]:Exit


"If this setting is changed, the image may be distorted." is displayed, press the [↵] button.

- 4 Select **Curved Surface**, and then press the [↵] button.

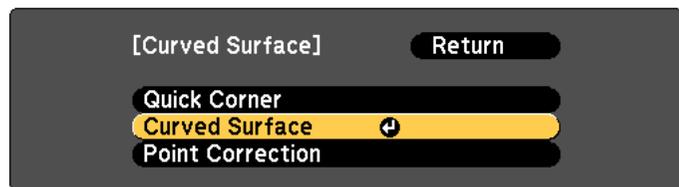


[Esc] :Return [↩]:Select [↵]:Enter [Menu]:Exit

- 5 Select **Correct Shape**, and then press the [↵] button.

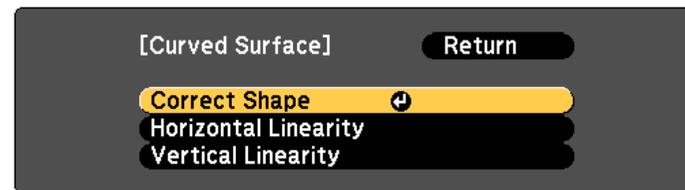

[Esc] :Return [↩]:Select [↵]:Enter [Menu]:Exit

- 6** Use the [▲], [▼], [◀], and [▶] buttons to select the area you want to adjust, and then press the [↵] button.

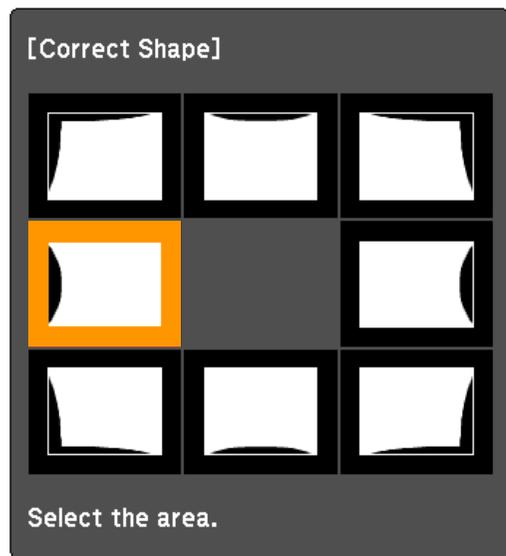


When selecting a corner, you can adjust the two sides next to the corner.




If the [Esc] button is pressed for approximately two seconds, the confirm default reset screen is displayed.

Select **Yes** to reset the result of Curved Surface.

- 7** Use the [▲], [▼], [◀], and [▶] buttons to adjust the shape.

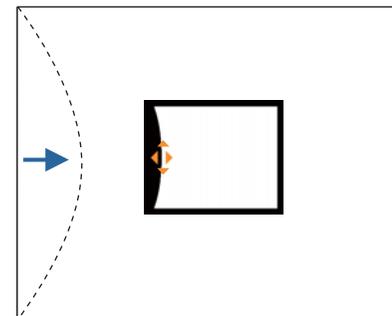

If the triangle in the direction you are adjusting the shape turns gray, as shown in the screenshot below, you cannot adjust the shape any further in that direction.

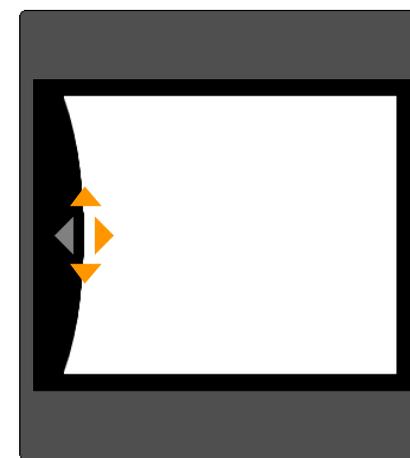


- 8** Press the [Esc] button to return to the previous screen.

- 9** Repeat steps from 6 to 8 as needed to adjust any remaining parts.

If the image expands or contracts, go to the next step and adjust the linearity.

- 10** Press the [Esc] button to display the screen from step 5. Select **Horizontal Linearity** or **Vertical Linearity**, and then press the [↵] button.

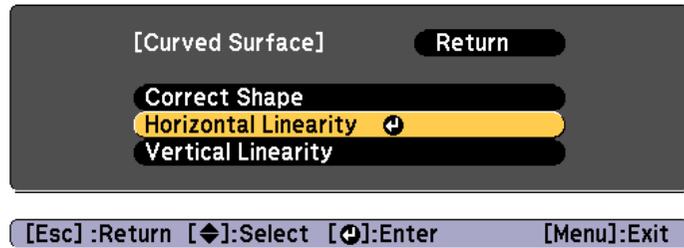

Select **Horizontal Linearity** to adjust the horizontal expansion or contraction, and select **Vertical Linearity** to adjust the vertical expansion or contraction.


- 11** Select the standard line for the adjustments, and then press the [↵] button.

Press the [◀][▶] buttons when selecting **Horizontal Linearity**, and the [▲][▼] buttons when selecting **Vertical Linearity**, and then press [↵].


The selected standard line is displayed in flashing orange and white.

- 12** Adjust the linearity. Correct it so that the distance between lines is equal.

When pressing the [◀] button

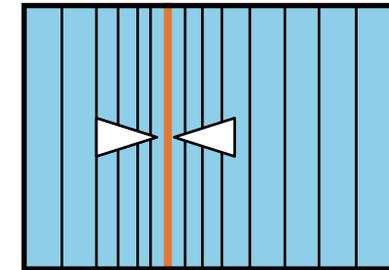


When **Vertical Linearity** is selected

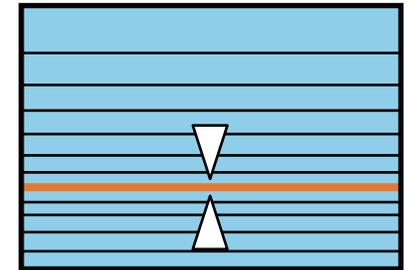


When pressing the [▶] button

When **Horizontal Linearity** is selected

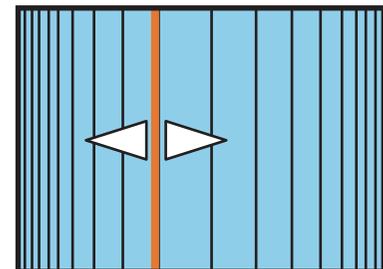

When **Vertical Linearity** is selected

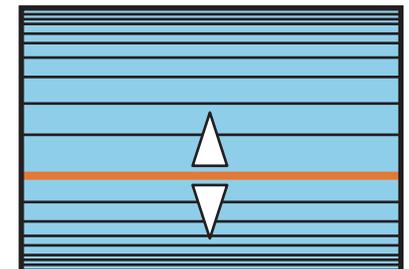

- 13** To complete the corrections, press the [Menu] button.



You can fine tune the corrected results. Use **Quick Corner** to adjust the tilt of the image, and then use **Point Correction** for fine tuning. Select **Quick Corner** or **Point Correction** on the screen from step 4.

☞ "Quick Corner" p.57

☞ "Point Correction" p.65

Corner Wall

This allows you to correct distortion that occurs when projecting on a surface with right angles, such as a square pillar or the corner of a room, and adjust the amount of expansion and contraction.

Face the projector directly opposing the screen with the lens position moved to the home position.

☛ "Adjusting the Position of the Projected Image (Lens Shift)" [p.31](#)




- Project onto a surface with a right angle.
- If a large amount of adjustment is performed, the focus may not be uniform even after making adjustments.
- If **4K Enhancement** is enabled, a message is displayed. Select **Yes** to disable **4K Enhancement**.

☛ **Image - Image Enhancement - 4K Enhancement** [p.119](#)

Use the following to check the adjustment range for the image.


☛ "Corner Wall" [p.214](#)

- 1 Press the [Menu] button while projecting.
- 2 Select **Geometry Correction** from **Settings**.
- 3 Select **Corner Wall**, and then press the [↵] button.

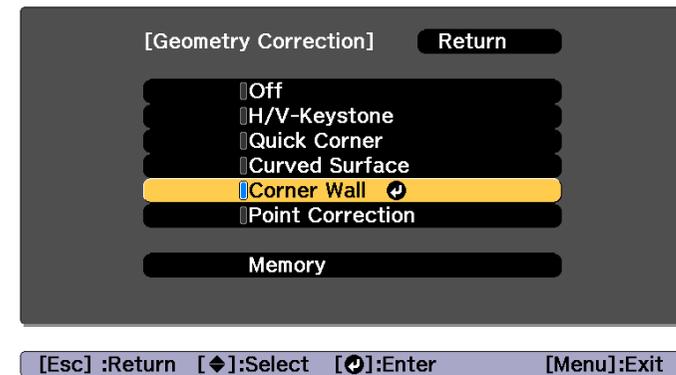


"If this setting is changed, the image may be distorted." is displayed, press the [↵] button again.

- 4 Select **Corner Wall**, and then press the [↵] button.

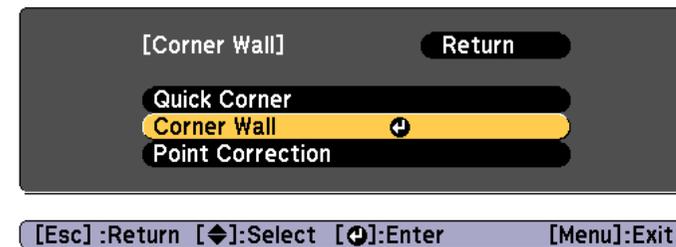


- 5 Select **Corner Type**, and then press the [↵] button.

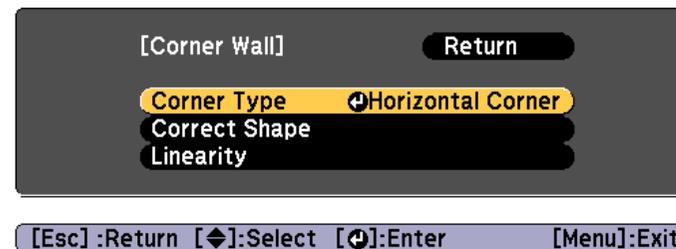

6 According to the projection area, select **Horizontal Corner** or **Vertical Corner**, and then press the [↵] button.


When the surfaces line up horizontally:

Select **Horizontal Corner**.

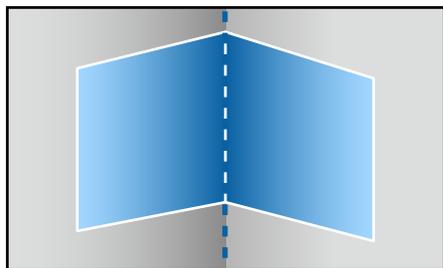

When the surfaces line up vertically:

Select **Vertical Corner**.

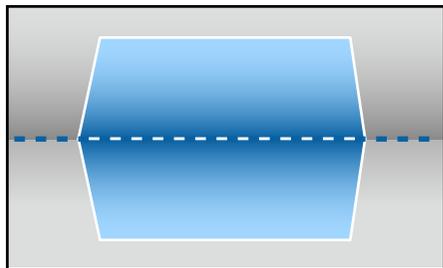


From here on, steps are explained using **Horizontal Corner** as an example.

7 Press the [Esc] button to display the screen from step 5. Select **Correct Shape**, and then press the [↵] button.


8 Adjust the position of the projector and the lens shift so that the line in the center of the screen matches the corner (the point where the two surfaces meet).

☛ "Adjusting the Position of the Projected Image (Lens Shift)"
p.31

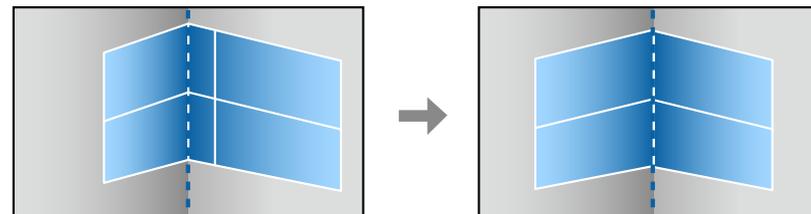

Each time you press the [↵] button, you can show or hide the image and the grid.

- 9** Use the [▲], [▼], [◀], and [▶] buttons to select the area you want to adjust, and then press the [↵] button.

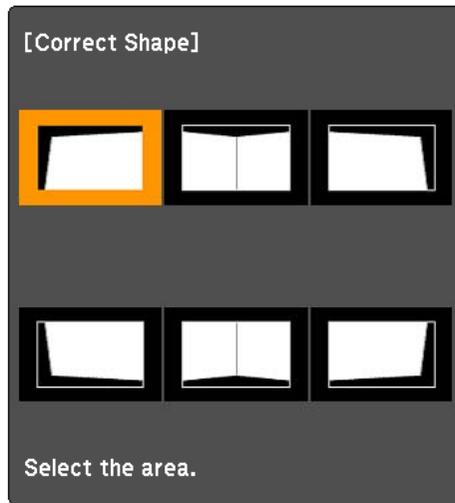


Adjustment tips

When **Horizontal Corner** is selected:

Adjust the upper area based on the lowest point (indicated by the **A** arrow).

Adjust the lower area based on the highest point (indicated by the **B** arrow).

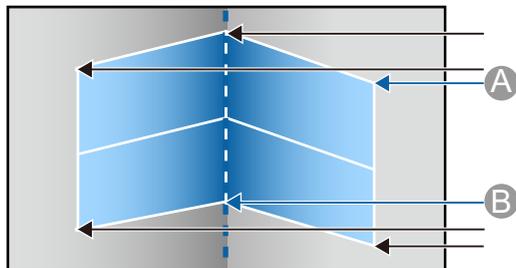

When **Vertical Corner** is selected:


Adjust the left and right based on the point nearest to the vertical line in the center of the screen.



If the [Esc] button is pressed for approximately two seconds, the confirm default reset screen is displayed.

Select **Yes** to reset the result of **Corner Wall**.



- 10** Press the [▲][▼][◀][▶] buttons to adjust the shape. If the message "Cannot adjust any further." is displayed while adjusting, you cannot adjust the shape any further in the direction indicated by the gray triangle.
- 11** Repeat steps 9 and 10 as needed to adjust any remaining parts. If the image expands or contracts, go to the next step and adjust the linearity.
- 12** Press the [Esc] button to display the screen from step 4. Select **Linearity**, and then press the [↵] button.

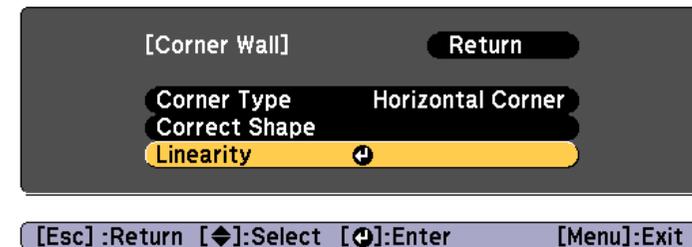

- 13** Press the [◀][▶] buttons to adjust the linearity.
Correct it so that the distance between lines is equal.



When pressing the [◀] button

When **Horizontal Corner** is selected When **Vertical Corner** is selected

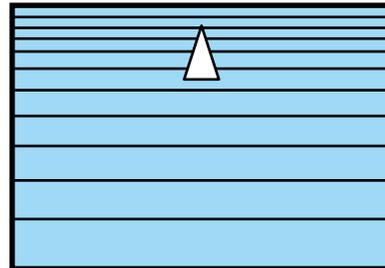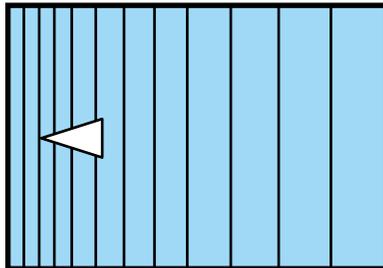

When pressing the [▶] button

When **Horizontal Corner** is selected When **Vertical Corner** is selected

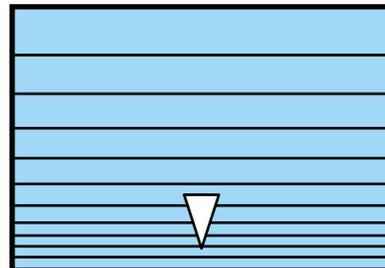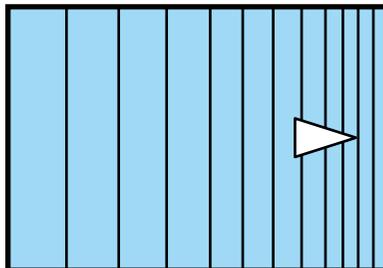

- 14** To complete the corrections, press the [Menu] button.

 You can fine tune the corrected results. Use **Quick Corner** to adjust the tilt of the image, and then use **Point Correction** for fine tuning. Select **Quick Corner** or **Point Correction** on the screen from step 4.

-  "Quick Corner" p.57
-  "Point Correction" p.65


Point Correction

Divides the projected image by the grid and corrects the distortion by moving the point of intersection from side to side and up and down.



- You can make corrections by 0.5 pixels in each direction up to a maximum of 32 pixels.
- If **4K Enhancement** is enabled, a message is displayed. Select **Yes** to disable **4K Enhancement**.
 **Image - Image Enhancement - 4K Enhancement p.119**


- 1** Press the [Menu] button while projecting.
- 2** Select **Geometry Correction** from **Settings**.
- 3** Select **Point Correction**, and then press the [↵] button.

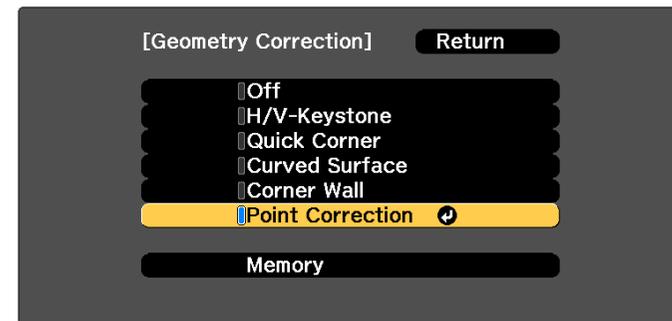

[Esc] :Return [◀]:Select [↵]:Enter [Menu]:Exit


"If this setting is changed, the image may be distorted." is displayed, press the [↵] button again.

- 4** Select **Point Correction**, and then press the [↵] button.

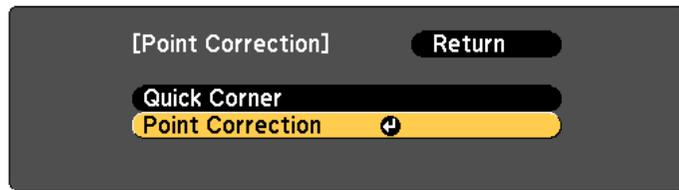

[Esc]:Return [◀]:Select [⏎]:Enter [Menu]:Exit

5 Select **Point Correction**, and then press the [↵] button.

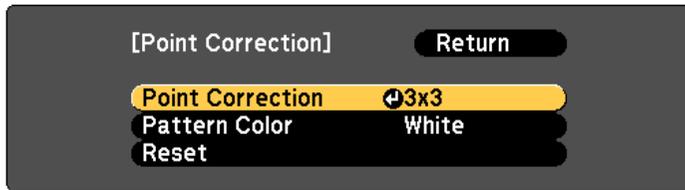


[Esc]:Return [◀]:Select [⏎]:Enter [Menu]:Exit


| | |
|-------------------------|---|
| Point Correction | Select the point number (3x3, 5x5, 9x9, 17x17), and then make the Point Correction setting. |
| Pattern Color | Select the color of the grid when performing corrections. |
| Reset | Resets all corrections for Point Correction to their default values. |

6 Select the point number (**3x3**, **5x5**, **9x9**, or **17x17**), and then press the [↵] button.

7 Use the [▲], [▼], [◀], and [▶] buttons to move to the point you want to correct, and then press the [↵] button.

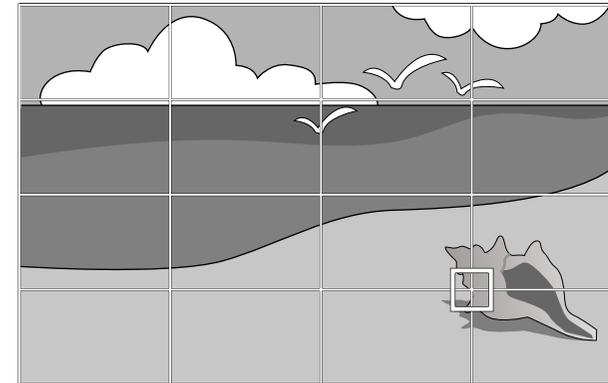

8 Use the [▲], [▼], [◀], and [▶] buttons to correct distortion.

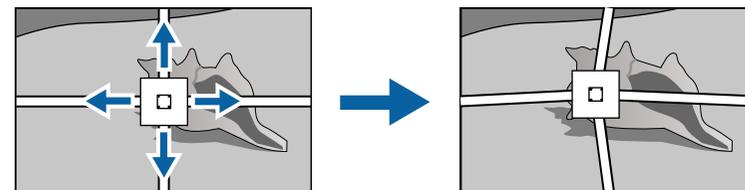

To continue to correct another point, press the [Esc] button to return to the previous screen, then repeat the steps 7 and 8.



Each time you press the [↵] button, you can show or hide the image and the grid.

9 To complete the corrections, press the [Menu] button.



You can fine tune the corrected results. Select **Quick Corner** on the screen from step 4 to adjust the tilt of the image.


☞ "Quick Corner" [p.57](#)

Selecting the Projection Quality (Selecting Color Mode)

You can easily obtain the optimum image quality simply by selecting the setting that best corresponds to your surroundings when projecting. The brightness of the image varies depending on the mode selected.

| Mode | Application |
|-------------------------|---|
| Dynamic | The brightest mode. Ideal for prioritizing brightness. |
| Presentation | Ideal for projecting bright, vivid images. |
| Cinema | Ideal for enjoying movies. |
| sRGB | Ideal for projecting a faithful reproduction of the original. |
| DICOM SIM | Ideal for projecting X-ray photographs and other medical images. However, the projector is not a medical device and cannot be used for medical diagnosis. |
| Multi-Projection | Ideal for projecting from multiple projectors. |

Each time you press the [Color Mode] button on the remote control, the Color Mode name is displayed on the screen and the Color Mode changes.

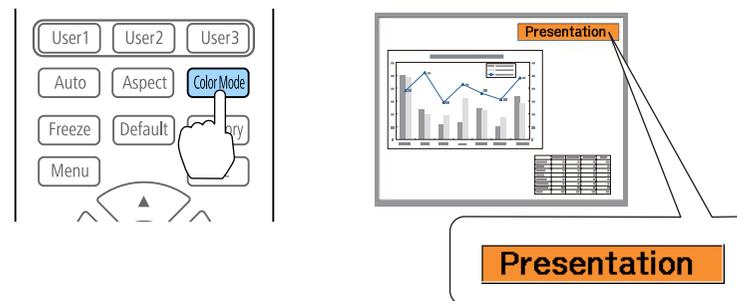


You can set Color Mode from the Configuration menu.

☞ **Image - Color Mode** [p.119](#)

Setting the Brightness


Set the brightness for the light source.

- 1** Press the [Menu] button while projecting.
- 2** Select **Brightness Settings** from **Settings**.

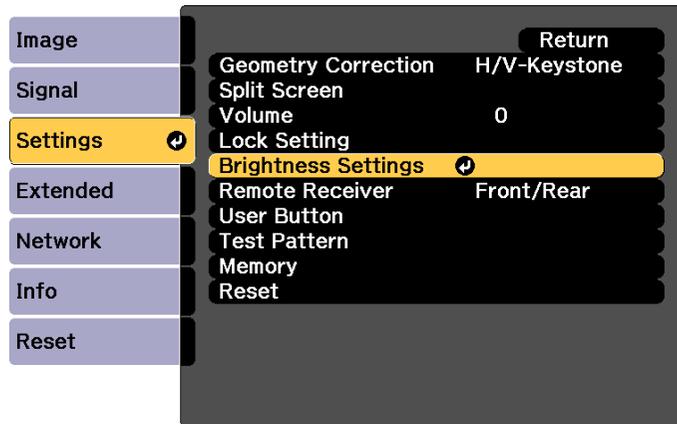

[Esc] :Return [↩]:Select [↵]:Enter [Menu]:Exit

3 Select **Light Source Mode**, and then press the [↵] button.

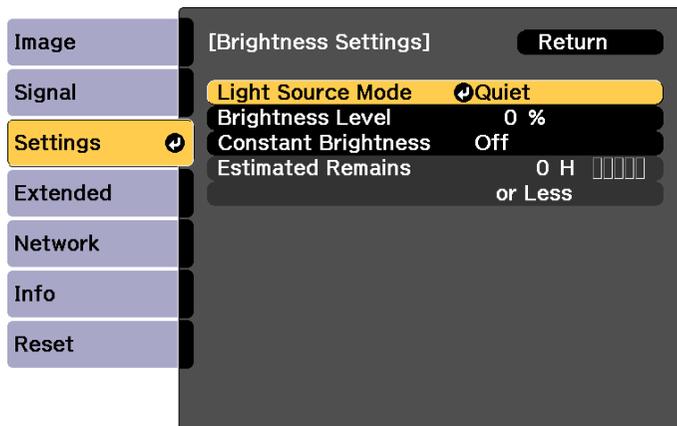

[Esc] :Return [↩]:Select [↵]:Enter [Menu]:Exit

4 Select the item you want to set, and then press the [↵] button.

Normal: Select this if you do not want to decrease the brightness. This makes the target usage time approximately 20,000 hours.

Quiet: Select this if you are concerned about the noise made by the fan. This sets the brightness at 70%. This makes the target usage time approximately 20,000 hours.

Extended: Select this to extend the life expectancy of the light source. This sets the brightness at 70%. This makes the target usage time approximately 30,000 hours.

Customized: Select this to set the **Brightness Level** manually. When **Customized** is selected, **Constant Brightness** is available.

5 When **Light Source Mode** is set to **Customized**, select **Brightness Level**, and then use the [◀][▶] buttons to set the brightness.


6 To maintain a fixed brightness, select **Constant Brightness**, and set it to **On**.



- When **Constant Brightness** is set to **On**, you cannot change the settings for **Light Source Mode** and **Brightness Level**. When you want to change these settings, set **Constant Brightness** to **Off**.
- When **Constant Brightness** is set to **Off**, the value for **Brightness Level** changes depending on the current status of the light source.
- There may be a margin of error in the **Brightness Level**.
- When the projector is used continuously for more than 24 hours, or when direct shutdown is used regularly, set **Light Source Calibration** using the scheduling function. If this is not set, the Constant Brightness function does not work.
 "Scheduling Function" [p.105](#)

Guide to Estimated Remains

When **Constant Brightness** is set to **On**, the Estimated Remains is displayed. Estimated Remains indicates the amount of time for which constant brightness can be maintained.

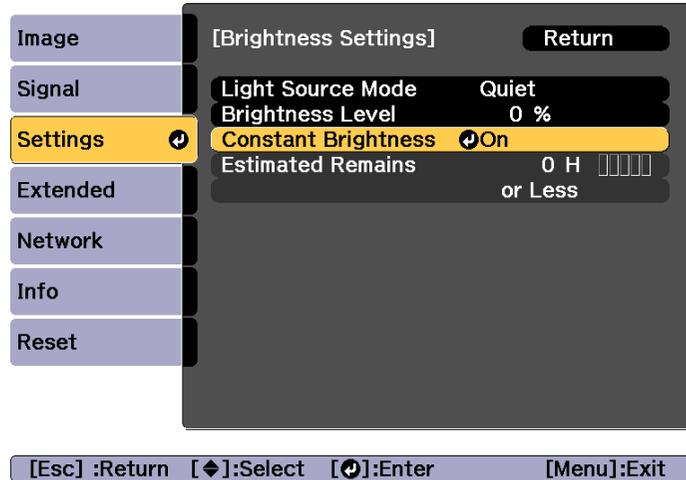

| Display Level | Actual Time Remaining |
|---------------|-----------------------|
| | 10,000 hours or more |
| █ | 8,000 to 9,999 hours |
| █ | 6,000 to 7,999 hours |
| █ | 4,000 to 5,999 hours |
| █ | 2,000 to 3,999 hours |
| █ | 0 to 1,999 hours |



Estimated Remains displays the amount of time remaining in hours without the minutes remaining.


Relationship between Brightness Level and usage time

The following shows the relationship between Brightness Level and usage time.

Make settings according to your desired usage time and the brightness of the projected image.


When Constant Brightness is set to Off

- ①: Brightness Level
- ②: Standard usage time (Approximate time until light source brightness is reduced by half)
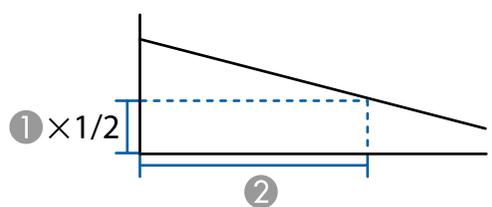
| ① | ② | Illustration |
|------|---------------|---|
| 100% | 20,000 hours |  |
| 90% | 36,000 hours | |
| 80% | 41,000 hours | |
| 70% | 43,000 hours | |
| 60% | 46,000 hours | |
| 50% | 57,000 hours | |
| 40% | 75,000 hours | |
| 30% | 103,000 hours | |

When Constant Brightness is set to On

- ①: Brightness Level
- ②: Standard constant time (Approximate time for which constant brightness of the light source can be maintained)
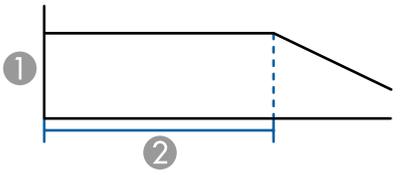
| ① | ② | Illustration |
|-----|--------------|---|
| 90% | 7,000 hours |  |
| 80% | 15,000 hours | |
| 70% | 25,000 hours | |
| 60% | 35,000 hours | |
| 50% | 47,000 hours | |
| 40% | 66,000 hours | |
| 30% | 95,000 hours | |


- This is an approximate guide only and may change depending on usage and surroundings.
- These times are the standard hours when using the projector continuously without changing the **Brightness Level** or **Constant Brightness** settings and are not guaranteed.
- When the usage time exceeds 20,000 hours, you may need to replace parts inside the projector.
- If you have used the projector beyond the standard constant time when **Constant Brightness** is set to **On**, you cannot set a higher **Brightness Level** even if you set **Constant Brightness** to **Off**.

Setting the Amount of Light for the Projected Image

By automatically setting the luminance according to the brightness of the displayed image, it lets you enjoy deep and rich images.

 **Dynamic Contrast** can only be set when the **Color Mode** is set to **Dynamic** or **Cinema**.

- 1 Press the [Menu] button while projecting.
- 2 Select **Dynamic Contrast** from **Image**, and then press the [↵] button.

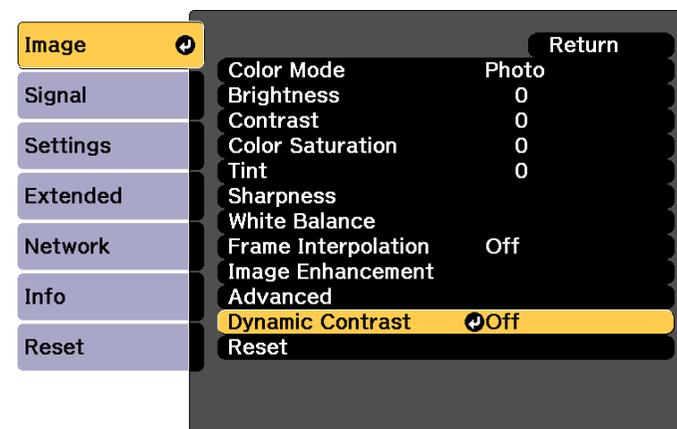

[Esc] :Return [◆]:Select [⏏]:Enter [Menu]:Exit

- 3 Select **Normal** or **High Speed**, and then press the [↵] button. The setting is stored for each color mode.
- 4 Press the [Menu] button to finish making settings.

Changing the Aspect Ratio of the Projected Image

You can change the Aspect Ratio of the projected image to suit the type, the ratio of height and width, and the resolution of the input signals.

Available aspect modes vary depending on the Screen Type currently set.

 Set the **Screen Type** before changing the aspect ratio.
 🖱️ "Screen Settings" [p.28](#)

Changing methods

Each time you press the [Aspect] button on the remote control, the aspect mode name is displayed on the screen and the aspect ratio changes.



| Aspect Mode | Explanation |
|---------------|---|
| Auto | Projects in an appropriate aspect ratio based on information from the signal being input. |
| Normal | Projects while retaining the aspect ratio of the input image. |
| 4:3 | Projects at an aspect ratio of 4:3. |
| 16:9 | Projects at an aspect ratio of 16:9. |
| Full | Projects at the full size of the projected screen. |

| Aspect Mode | Explanation |
|---------------|---|
| H-Zoom | Projects by enlarging the input image to the full width of the projected screen while retaining the aspect ratio. Areas that exceed the edges of the projected screen are not projected. |
| V-Zoom | Projects by enlarging the input image to the full height of the projected screen while retaining the aspect ratio. Areas that exceed the edges of the projected screen are not projected. |
| Native | Projects to the center of the projected screen at the resolution of the input image. Areas that exceed the edges of the projected screen are not projected. |

 • You can also set the aspect ratio from the Configuration menu.

- 🖱️ **Signal - Aspect** [p.121](#)
- If parts of the computer image are missing, set the **Resolution** setting to **Wide** or **Normal** from the Configuration menu, according to the resolution of the computer.
- 🖱️ **Signal - Resolution** [p.121](#)



The aspect mode changes as shown in the tables below.

The following colors in screen images in the tables indicate areas that are not displayed.

: The area where the image is not displayed depending on the screen type setting.




: The area where the image is not displayed depending on the aspect mode setting.










Screen type setting: 16:10
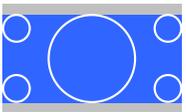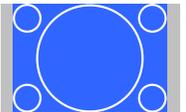
| | Aspect Ratio of Input Signal | | |
|----------------|---|---|--|
| | 16:10 | 16:9 | 4:3 |
| Auto or Normal |  |  |  |
| 16:9 |  |  |  |
| Full |  |  |  |
| H-Zoom |  |  |  |
| V-Zoom |  |  |  |
| Native* |  |  |  |

* *The image may differ depending on the resolution of the input signal.







Screen type setting: 16:9



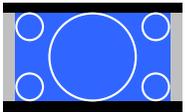
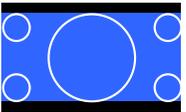
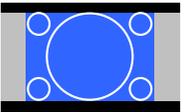
| | Aspect Ratio of Input Signal | | |
|----------------|---|---|--|
| | 16:10 | 16:9 | 4:3 |
| Auto or Normal |  |  |  |
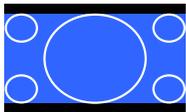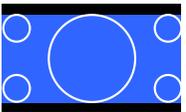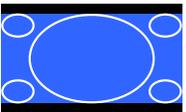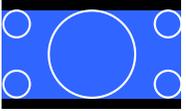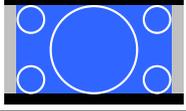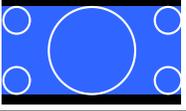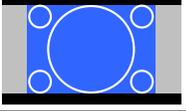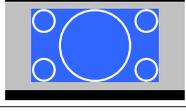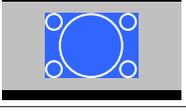
| | Aspect Ratio of Input Signal | | |
|---------|---|---|---|
| | 16:10 | 16:9 | 4:3 |
| Full |  |  |  |
| H-Zoom |  |  |  |
| V-Zoom |  |  |  |
| Native* |  |  |  |

* *The image may differ depending on the resolution of the input signal.

Screen type setting: 4:3
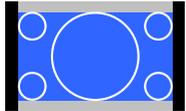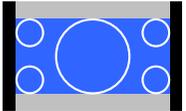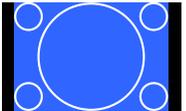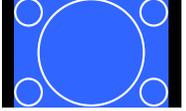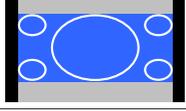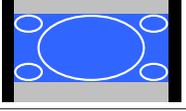
| | Aspect Ratio of Input Signal | | |
|----------------|---|---|---|
| | 16:10 | 16:9 | 4:3 |
| Auto or Normal |  |  |  |
| 4:3 |  |  |  |
| 16:9 |  |  |  |
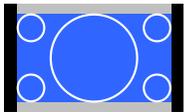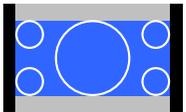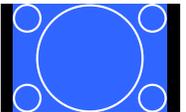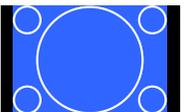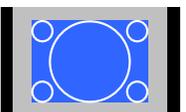
| | Aspect Ratio of Input Signal | | |
|---------|---|---|--|
| | 16:10 | 16:9 | 4:3 |
| H-Zoom |  |  |  |
| V-Zoom |  |  |  |
| Native* |  |  |  |


* Only computer images and images from the HDMI port/HDBaseT port. The image may differ depending on the resolution of the input signal.

Adjusting the Image


Hue, Saturation, and Brightness adjustment

You can adjust the **Hue** (tint), **Saturation** (vividness), and **Brightness** of the six axes R (red), G (green), B (blue), C (cyan), M (magenta), and Y (yellow) according to your preferences.


- 1 Press the [Menu] button while projecting.
- 2 Select **Advanced** from **Image**, and then press the [↵] button.

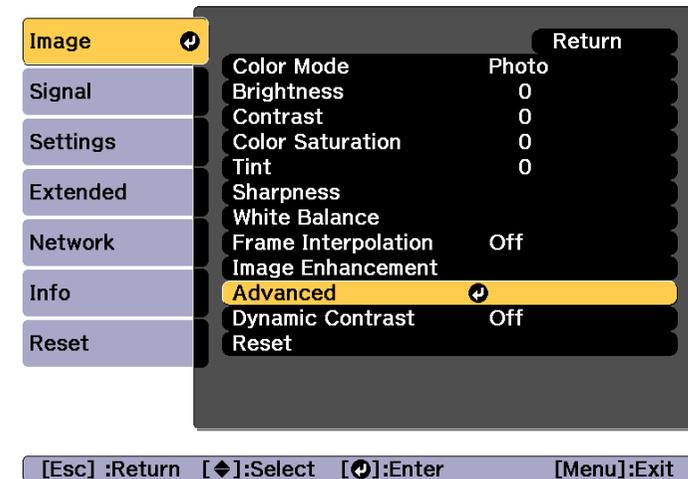

- 3 Select **RGBCMY**, and then press the [↵] button.
- 4 Use the [▲][▼] buttons to select the color you want to adjust, and then press the [↵] button.

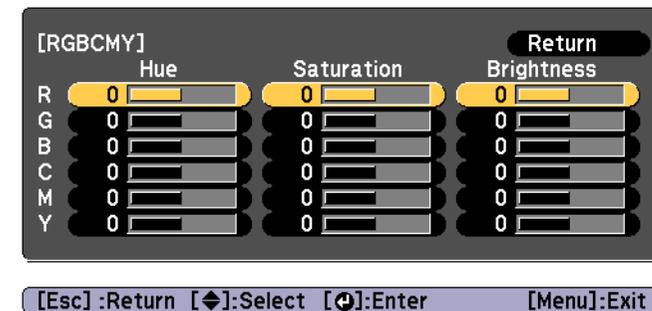

- 5 Use the [▲][▼] buttons to select the item, and then use the [◀][▶] buttons to make the adjustments.

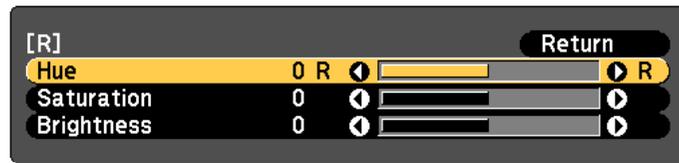

[Esc] :Return [◆]:Select [◀▶]:Adjust [Menu]:Exit
[Default] :Reset [⏏]:Display

Each time you press the [↵] button, the adjustment screen changes.

- To complete the corrections, press the [Menu] button.

Gamma adjustment

You can adjust differences in the halftone brightness that occurs depending on the connected device.

You can set it by using one of the following three methods.


- Select and adjust the correction value
- Adjust while viewing the image
- Adjust using the gamma adjustment graph



Adjust by projecting a still picture. Gamma cannot be adjusted correctly by using movies.


Select and adjust the correction value

- Press the [Menu] button while projecting.
- Select **Advanced** from **Image**, and then press the [↵] button.

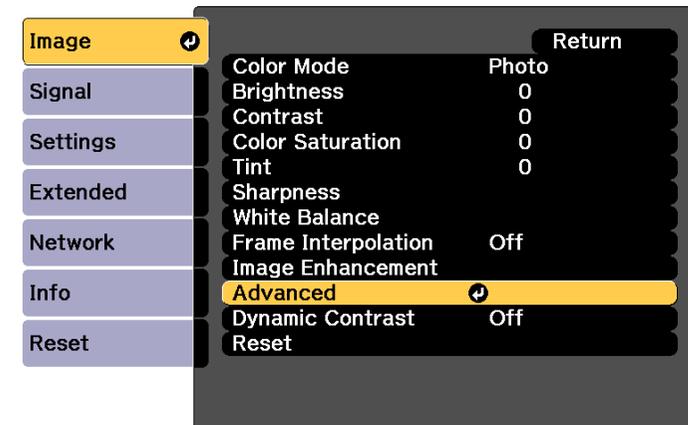

[Esc] :Return [◆]:Select [⏏]:Enter [Menu]:Exit

- Select **Gamma**, and then press the [↵] button.
- Use the [▲][▼] buttons to select the correction value, and then use the [↵] button to confirm the selection.

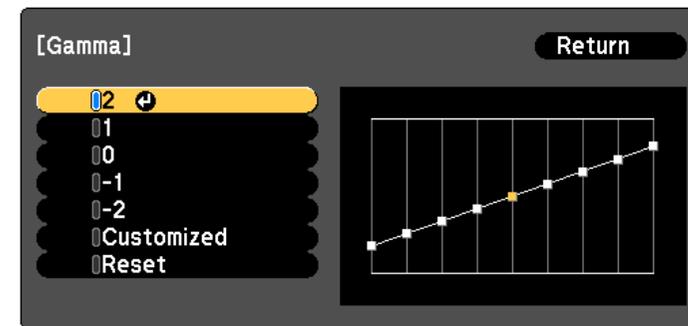

[Esc] :Return [◆]:Select [⏏]:Set [Menu]:Exit

When a larger value is selected, the dark areas of images become brighter, but the color saturation for lighter areas may become weaker. When a smaller value is selected, you can reduce the overall brightness of the image to make the image sharper.

If you select **DICOM SIM** from **Color Mode** on the **Image** menu, select the adjustment value according to the projection size.

- If the projection size is 150 inches or less, select a small value.
- If the projection size is 150 inches or more, select a large value.




Medical images may not be reproduced correctly according to your installation environment and screen specifications.

Adjust while viewing the image

Select a point on the image where you want to adjust the brightness, and adjust only the selected tone.

- 1 Press the [Menu] button while projecting.
- 2 Select **Advanced** from **Image**, and then press the [↵] button.

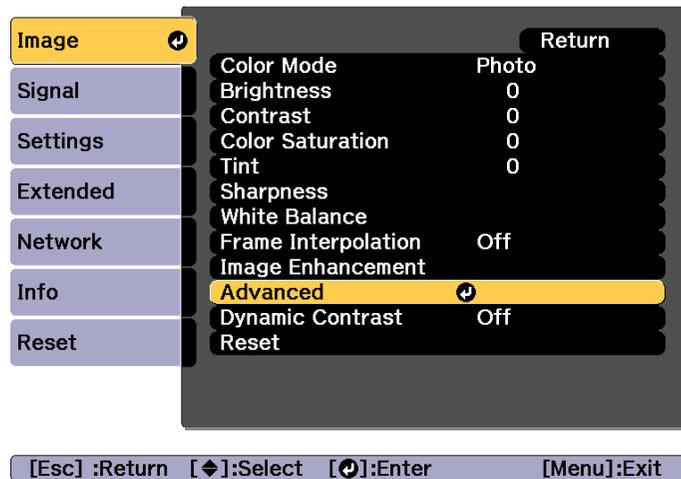


- 3 Select **Gamma**, and then press the [↵] button.


- 4 Select **Customized**, and confirm using the [↵] button.

- 5 Select **Adjust it from the image**, and confirm using the [↵] button.

- 6 Move the cursor on the projected image to the part where you want to change the brightness, and then press the [↵] button.
If you press [↵], the image flashes and you can check the tone area of the adjustment target.

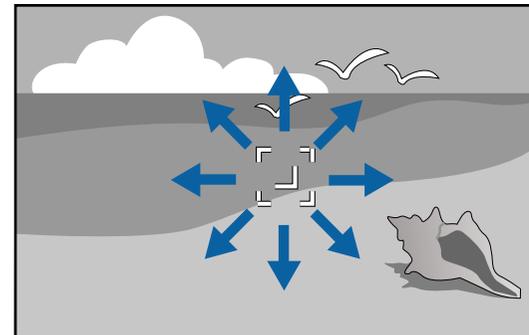

- 7 Use the [▲][▼] buttons to make adjustments, and then confirm using the [↵] button.

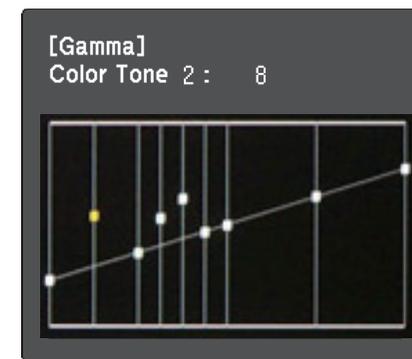


- When **Do you want to continue adjusting the setting?** is displayed, select **Yes** or **No**.

To adjust another location, select **Yes**, and repeat the procedure from step 6.

Adjust using the gamma adjustment graph

Select a tone point on the graph and make adjustments.


- Press the [Menu] button while projecting.
- Select **Advanced** from **Image**, and then press the [↵] button.

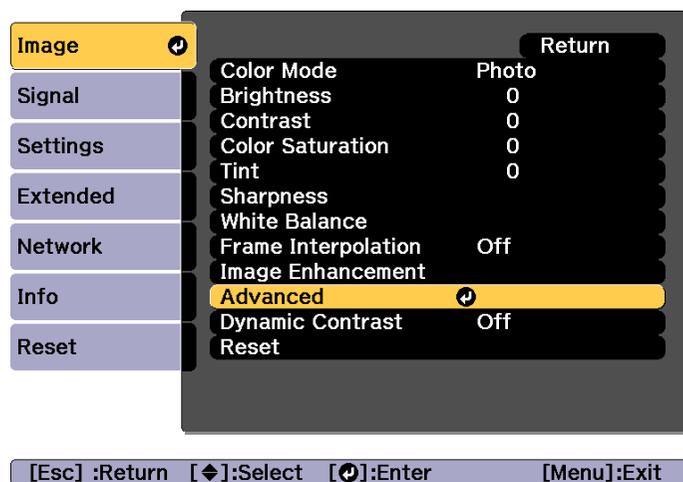

- Select **Gamma**, and then press the [↵] button.
- Select **Customized**, and confirm using the [↵] button.
- Select **Adjust it from the graph**, and confirm using the [↵] button.

- Use the [◀][▶] buttons to select the tone that you want to change, and then use the [▲][▼] buttons to make the adjustments. When you have finished making changes, confirm by using the [↵] button.


If you use the [◀][▶] buttons to select the tone that you want to change, the image flashes and you can check the tone area of the adjustment target.

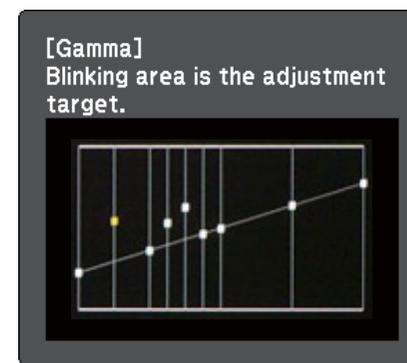


- When **Do you want to continue adjusting the setting?** is displayed, select **Yes** or **No**.
To adjust another tone, select **Yes**, and repeat the procedure from step 6.

Frame Interpolation

The current and previous frames are used to create intermediate frames, interpolating to produce smooth-moving images. You can resolve clumsy-moving images, such as frame skipping when projecting a fast moving image.

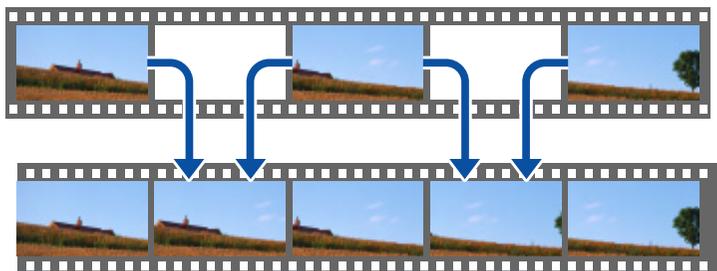

- 1 Press the [Menu] button while projecting.
- 2 Select **Frame Interpolation** from **Image**, and then press the [↵] button.

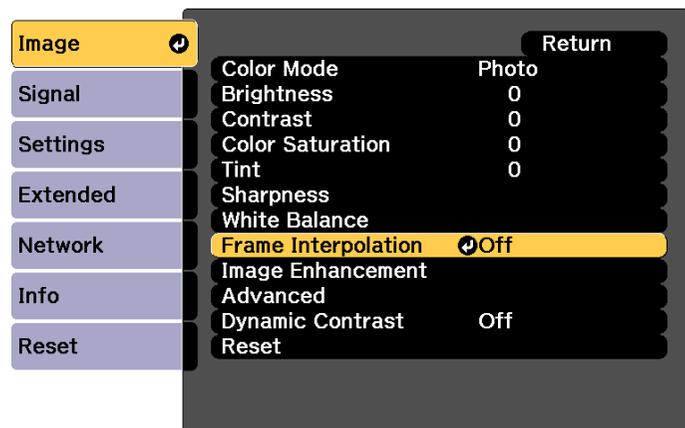

[Esc] :Return [↵]:Select [↵]:Enter [Menu]:Exit

- 3 Select the level of interpolation from **Low**, **Normal** or **High**. Set to **Off** if noise occurs after setting them.



- 4 Press the [Menu] button to finish making settings.


Adjusting Image Resolution (Image Enhancement)

You can adjust the resolution of the image using **Image Enhancement** to reproduce a clear image with an emphatic texture and material feel.

- 1 Press the [Menu] button while projecting.

- 2 Select **Image Enhancement** from **Image**, and then press the [↵] button.

The following screen is displayed.

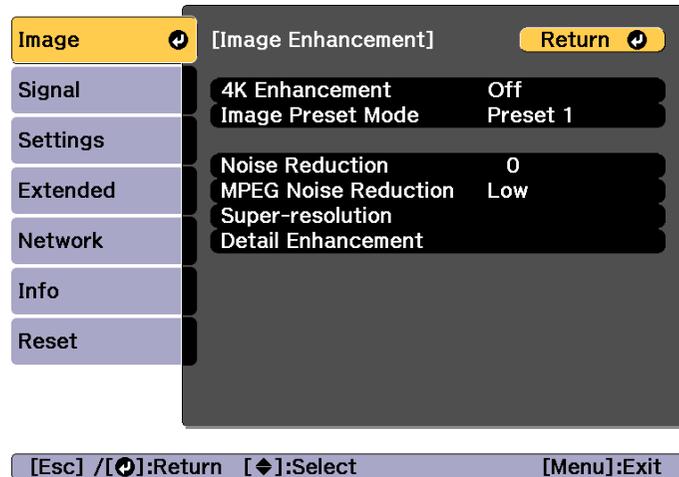

4K Enhancement

4K Enhancement is a function that projects an image at a doubled resolution by diagonally shifting 1 pixel in increments of 0.5 pixels.

A high-resolution image signal is projected in fine detail.

- 1 Select **4K Enhancement** from **Image Enhancement**, and then press the [↵] button.

- 2 Select one of the following, and then press the [↵] button.

Off: Disables 4K Enhancement. If a signal that exceeds the panel resolution of this projector is input, the image is displayed according to the panel resolution of this projector.

Full HD: If a signal with a resolution of 1080i/1080p/WUXGA or higher is input, 4K Enhancement is enabled.

WUXGA+: If a signal with a resolution that exceeds WUXGA is input, 4K Enhancement is enabled. To project a high-resolution movie, you can project a high-definition image by using this setting with **Image Preset Mode**.



- To project from multiple projectors, select **Off** to unify each image.
- **Off** is ideal for projecting presentation materials from computers and so on. When **Off** is set, the resolution of the image returns to the previous state before 4K Enhancement was enabled.
- When **Full HD** or **WUXGA+** is set, the settings for the following functions are disabled.
Scale, Curved Surface, Point Correction, Corner Wall

- 3 Press the [Esc] button to return to the previous screen.


Image Preset Mode

Select the optimal setting according to the projected image from five presets prepared in advance.

The following settings are saved in the presets.

Noise Reduction, MPEG Noise Reduction, Super-resolution, Detail Enhancement

- 1** Select **Image Preset Mode** from **Image Enhancement**, and then press the [**↵**] button.
- 2** Select one of the following, and then press the [**↵**] button.
Preset 1 to Preset 5: The settings saved in advance are applied to the image.
Off: Select this to turn off presets.

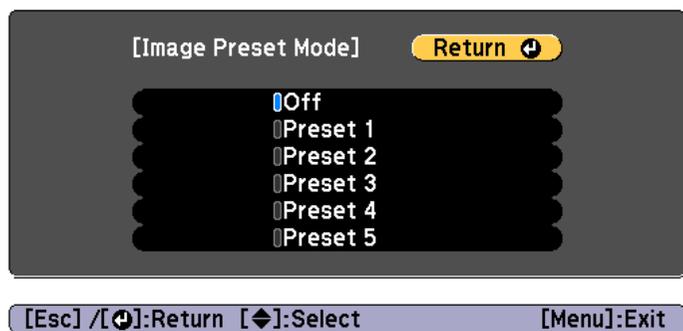

- After selecting **Preset 1 to Preset 5**, you can fine tune each setting individually. The setting after adjustment will be overwritten.
- The setting after adjustment will be overwritten separately when **4K Enhancement** is enabled and disabled.

- 3** Press the [**Esc**] button to return to the previous screen.

Noise Reduction


You can smooth out rough images for softer image quality when inputting progressive signals or progressive interlace signals.



You cannot set Noise Reduction in the following situations.

- When **Image Processing** is set to **Fast 2**
- When **4K Enhancement** is enabled
- When a signal with a resolution that exceeds WUXGA is input

- 1** Select **Noise Reduction** from **Image Enhancement**, and then press the [**↵**] button.
- 2** Use the [**⏪**][**⏩**] buttons to adjust the value.

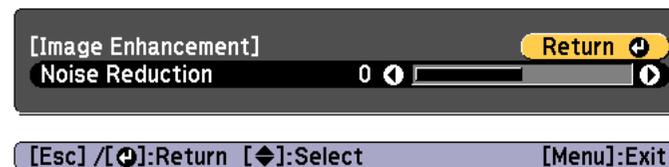

- 3** Press the [**Esc**] button to return to the previous screen.

MPEG Noise Reduction

You can reduce dot and block noise that occurs in outlines when projecting MPEG movies.




You cannot set MPEG Noise Reduction in the following situations.

- When **4K Enhancement** is enabled
- When a signal with a resolution that exceeds WUXGA is input

- 1 Select **MPEG Noise Reduction** from **Image Enhancement**, and then press the [↵] button.
- 2 Select a level to reduce noise from **Low**, **Normal**, or **High**, and then press the [↵] button.

If **Off** is selected, **MPEG Noise Reduction** is disabled.

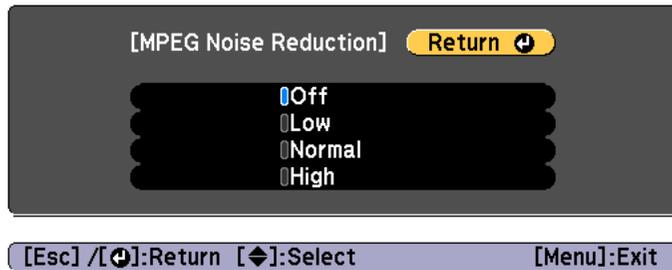

- 3 Press the [Esc] button to return to the previous screen.

Super-resolution


To display a crisp image, you can reduce the blurring that is created on the edge when the resolution of the image signal is scaled up and projected.

- 1 Select **Super-resolution** from **Image Enhancement**, and then press the [↵] button.

- 2 Use the [▲][▼] buttons to select the item, and then use the [◀][▶] buttons to make the adjustments.

Fine Line Adjust: If this parameter is set to a positive value, details such as hair or fabric patterns will be enhanced.

Soft Focus Detail: If this parameter is set to a positive value, the outline, background, and the other main parts of the objects in the image will be enhanced to show them clearly.

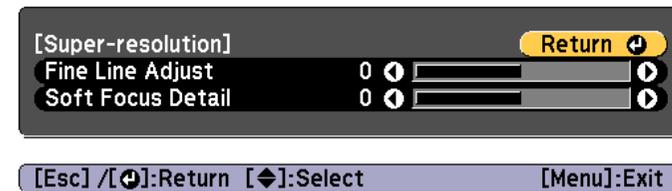

- 3 Press the [Esc] button to return to the previous screen.

Detail Enhancement


You can enhance the contrast in detailed areas of an image to create a more emphatic texture and material feel.

- 1 Select **Detail Enhancement** from **Image Enhancement**, and then press the [↵] button.

- 2** Use the [▲][▼] buttons to select the item, and then use the [◀][▶] buttons to make the adjustments.

Strength: The larger the value, the more the contrast is enhanced.

Range: The larger the value, the wider the range of detail enhancement becomes.

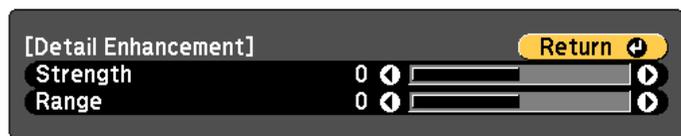

[Esc] / [◀]:Return [▶]:Select [Menu]:Exit




Depending on the image, a highlight may be noticeable at the border between colors. If this bothers you, set a smaller value.

- 3** Press the [Esc] button to return to the previous screen.



Useful Functions

This section describes the Multi-Projection, Split Screen, Memory, Schedule, and Security functions.

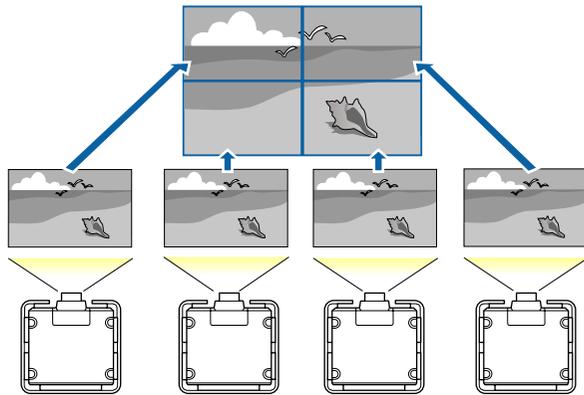

You can setup up to nine projectors to project one large and wide image. You can adjust the difference of brightness and color tone between each projected image to create a seamless screen.



- Set **4K Enhancement** to **Off**.
- We recommend setting the focus, zoom, and lens shift at least 20 minutes after you start the projection, because images are not stable right after turning on the projector.
- If the values for **Geometry Correction** are large, the image position adjustment for overlapping images becomes difficult.
- The Test Pattern can be displayed to adjust the projection status without connecting video equipment.
☛ "Displaying a Test Pattern" [p.29](#)
- If you project a dot by dot image that can be projected without being enlarged or reduced, you can make adjustments precisely.

Adjustment Procedure

Adjusting automatically online

The arrangement for all projectors (Tiling) and adjustments for the images (Screen Matching) are performed automatically using the projector set as the master projector.

Advance preparation

- (1) Connect to the network
 - Connect all projectors to a network hub using LAN cables.
 - Set the **DHCP** to **On** for all projectors, or check that IP addresses have been assigned.
☛ **Network - Network Configuration - Wired LAN - IP Settings** [p.134](#)
- (2) Set an ID for the master projector and the remote control.
☛ "Set the projector ID" [p.37](#)
- (3) Set **Sleep Mode** to **Off**
☛ **Extended - Operation - Sleep Mode** [p.125](#)

Adjusting projected images individually

- (1) Unify the aspect ratio and size of the image
 - ☛ "Screen Settings" [p.28](#)
 - ☛ "Changing the Aspect Ratio of the Projected Image" [p.71](#)
 - ☛ "Adjusting the Image Size" [p.33](#)
- (2) Adjust the orientation and position of the image
 - ☛ "Installation Settings" [p.27](#)
 - ☛ "Adjusting the Position of the Projected Image (Lens Shift)" [p.31](#)
- (3) Fine tune the focus and distortion of the image
 - ☛ "Correcting the Focus" [p.34](#)
 - ☛ "Point Correction" [p.65](#)

Combining multiple projected images

- (1) Set the arrangement of the images.
 - ☛ "Performing tiling automatically" [p.85](#)
- (2) Adjust the edges of the images
 - ☛ "Edge Blending" [p.87](#)
 - ☛ "Black Level" [p.88](#)
- (3) Unify the brightness and tint of the images
 - ☛ "Screen Matching" [p.92](#)
- (4) Splice the images to create one, large image
 - ☛ "Displaying a Scaled Image" [p.95](#)

Adjusting manually offline

Adjust the images from all projectors manually.

Advance preparation

Set an ID for all projectors and the remote controls.

- ☛ "Set the projector ID" [p.37](#)

Adjusting projected images individually



- (1) Unify the aspect ratio and size of the image
 - ☛ "Screen Settings" [p.28](#)
 - ☛ "Changing the Aspect Ratio of the Projected Image" [p.71](#)
 - ☛ "Adjusting the Image Size" [p.33](#)
- (2) Adjust the orientation and position of the image
 - ☛ "Installation Settings" [p.27](#)
 - ☛ "Adjusting the Position of the Projected Image (Lens Shift)" [p.31](#)
- (3) Fine tune the focus and distortion of the image
 - ☛ "Correcting the Focus" [p.34](#)
 - ☛ "Point Correction" [p.65](#)

Combining multiple projected images

- (1) Set the arrangement of the images.
 - ☛ "Performing tiling manually" [p.86](#)
- (2) Adjust the edges of the images
 - ☛ "Edge Blending" [p.87](#)
 - ☛ "Black Level" [p.88](#)
- (3) Unify the brightness and tint of the images
 - ☛ "Color Matching" [p.94](#)
- (4) Splice the images to create one, large image
 - ☛ "Displaying a Scaled Image" [p.95](#)

Tiling

Set the arrangement for each projector when lining up and projecting from multiple projectors.

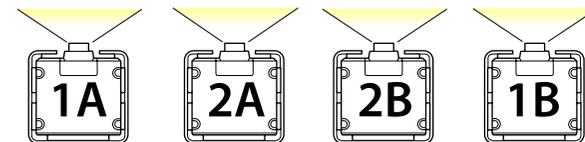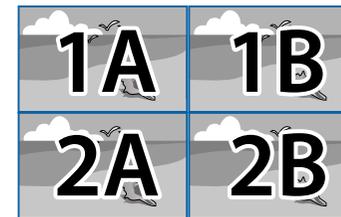

Before performing tiling, adjust the projected image so that it is a rectangle. Also, adjust the size and focus of the images.

- ☛ "Adjusting the Image Size" [p.33](#)
- ☛ "Correcting the Focus" [p.34](#)


Performing tiling automatically

Automatically sets the arrangement for the projectors being used. You can make settings by operating only the master projector.



Location Setup is performed using the camera built into the front of the projector. Do not block the camera or the projected images.


- 1 Press the [Menu] button while projecting.
- 2 Select **Multi-Projection** from **Extended**, and then press the [↵] button.
- 3 Select **Projector Grouping**, and then press the [↵] button.
- 4 Select the projectors that will be used for tiling, and then press the [↵] button.

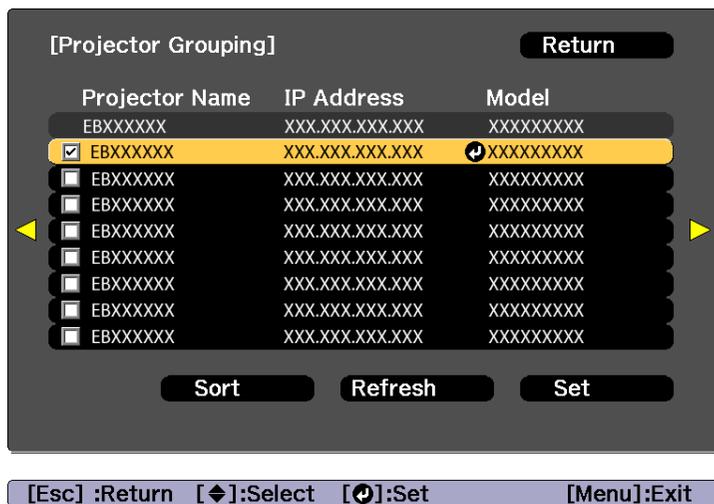

- (1) Select the projectors you want to use to enter a checkmark. Select **Refresh** to update the list. Select **Sort** to sort the projector order.

- (2) Select **Set**, and then press the [↵] button.


- 5 Select **Tiling**, and then press the [↵] button.
- 6 Select **Tiling**. Select **Auto**, and then press the [Esc] button.

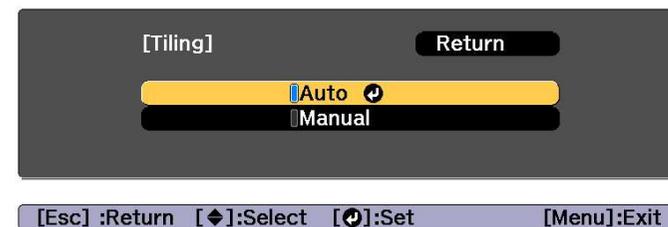

- 7 Select **Location Setup**, and then press the [↵] button. The image is positioned automatically.

When the message "Assign IDs to projectors that have been located. Do you want to continue?" is displayed, select **Yes**.

When setup is complete, the following screen is displayed.

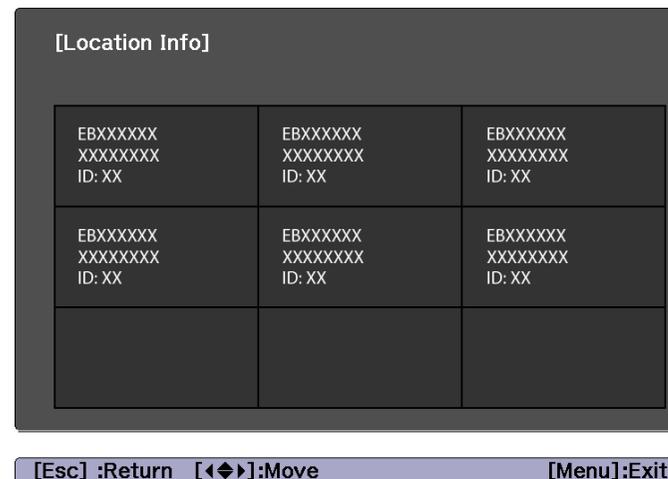



If the image is not located correctly, select **Manual** in step 6, and then follow the steps below to locate the image manually.

- (1) Set **Row** and **Column** in **Layout**.
- (2) Select **Set**, and then press the [↵] button.
- (3) Select the projector in **Location Setup**, and then press the [↵] button.
- (4) Select the position you want to locate, and then press the [↵] button.
- (5) Repeat steps (3) and (4) to reposition the location of all projectors.
- (6) Select **Set**, and then press the [↵] button.

8 Input the image signal to display the image.

☛ "Automatically Detecting Input Signals and Changing the Projected Image (Source Search)" [p.53](#)

When tiling is complete, adjust any positional gaps and the tint of the projected images.

☛ "Adjusting projected images individually" [p.83](#)




- After tiling is complete, do not change the IP addresses or projector names of the projectors. Otherwise the image will not be adjusted automatically.
- After tiling is complete, you can set each projector with one remote control. Select the projector ID for the projector you want to set with the remote control. You can check the projector ID in **Tiling - Location Info**.
☛ "Setting the remote control ID" [p.38](#)

Performing tiling manually

Manually arrange the images being projected for each projector.

- 1 Press the [Menu] button while projecting.
- 2 Select **Multi-Projection** from **Extended**, and then press the [↵] button.
- 3 Select **Tiling**, and then press the [↵] button.
- 4 Select **Layout**, and then press the [↵] button.
 - (1) Set the number of projectors in **Row** and **Column**.
 - (2) Select **Set**, and then press the [↵] button.
- 5 Repeat steps 1 to 4 for each projector to be used for tiling.
- 6 Select **Location Setup**, and then press the [↵] button.
 - (1) Set the positions of the projected images in **Row Order** and **Column Order**.
Row Order: Place screens from top to bottom in the order of 1, 2, 3.
Column Order: Place screens from left to right in the order of A, B, C.

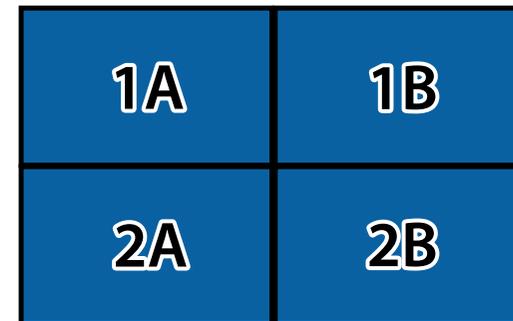

- (2) Select **Set**, and then press the [↵] button.

7 Repeat step 6 for each projector.


- 8 Input the image signal to display the image.
 - ☛ "Automatically Detecting Input Signals and Changing the Projected Image (Source Search)" p.53

When tiling is complete, adjust any positional gaps and the tint of the projected images.

- ☛ "Adjusting projected images individually" p.83


Edge Blending

You can fine tune the overlapping areas to make seamless screen.

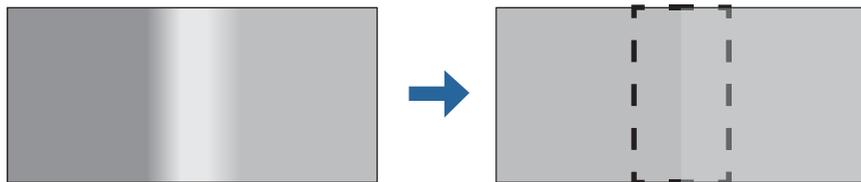

Before performing edge blending to raise the precision of adjustments, press the [Color Mode] button on the remote control, and then set **Color Mode** to **Multi-Projection**.

- 1 Press the [Menu] button while projecting.
- 2 Select **Multi-Projection** from **Extended**.
- 3 Select **Edge Blending**, and then press the [↵] button.
The following screen is displayed.

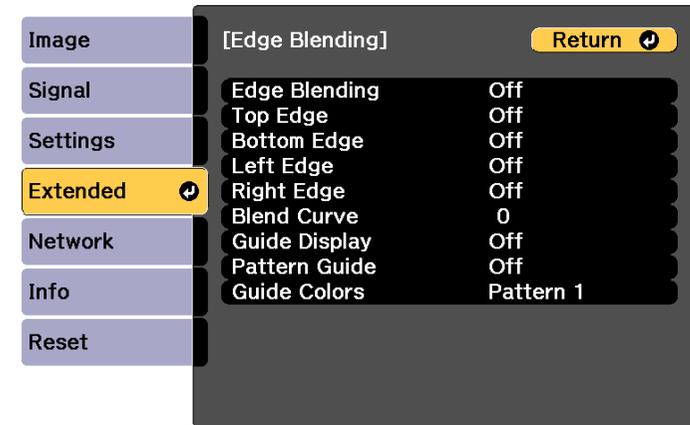

[Esc] / [⏪]:Return [⏩]:Select [Menu]:Exit

| Submenu | Function |
|--|---|
| Edge Blending | Set to On to activate Edge Blending. Set to Off when not projecting from multiple projectors. |
| Top Edge/Bottom Edge/Left Edge/Right Edge | <p>Blending: Set to On to activate Edge Blending towards your settings, and the blend range will be shaded.</p> <p>Blend Start Position: Displays blending start position as a red line, and adjusts at the level of one pixel.</p> <p>Blend Range: Adjusts the range to be shaded. Adjustment is possible at the level of one pixel. The maximum range is 45% of the resolution.</p> |
| Blend Curve | You can select from three ways of shading. |
| Guide Display | Set to On to display a guide on the Edge Blending setting range. |
| Pattern Guide | Set to On to display a guide to match the position of the Edge Blending setting range. |
| Guide Colors | Select a combination of guide colors from the three provided. |

- 4** Turn on Edge Blending.
- (1) Select **Edge Blending**, and then press the [↵] button.
 - (2) Select **On**, and then press the [↵] button.
 - (3) Press the [Esc] button.

- 5** Set **Guide Display** to **On**.
- (1) Select **Guide Display**, and then press the [↵] button.
 - (2) Select **On**, and then press the [↵] button.
 - (3) Press the [Esc] button.




If the guide is not clear, you can change the color of the guide on **Guide Colors**.

- 6** Set **Pattern Guide** to **On**.
- (1) Select **Pattern Guide**, and then press the [↵] button.
 - (2) Select **On**, and then press the [↵] button.
 - (3) Press the [Esc] button.

- 7** Set **Top Edge**, **Bottom Edge**, **Left Edge**, or **Right Edge** according to the parts of the image that are overlapped.

The following shows how to set screen (1) as an example.

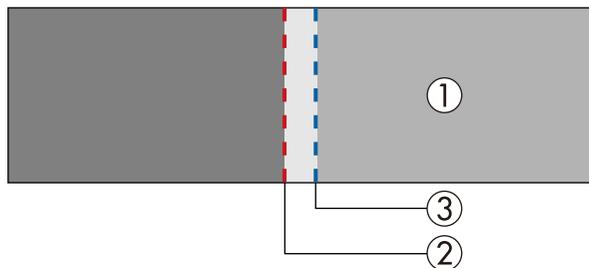

In the example above, you need to adjust the **Left Edge** because you can see the overlapping areas on the left side of the image (1).


- (1) Select **Left Edge**, and then press the [↵] button.
- (2) Select **Blending**, and then press the [↵] button.
- (3) Select **On**, and then press the [↵] button.
- (4) Press the [Esc] button.
- (5) In **Blend Start Position**, align the blending start position with the edge (2) of the image.
- (6) Press the [Esc] button.
- (7) In **Blend Range**, adjust the range (3) to be shaded.
The value for when the overlapped range and the guide are in the same position is the best.
- (8) Press the [Esc] button.

- 8** Set **Blend Curve**.
- (1) Select **Blend Curve**, and then press the [↵] button.
 - (2) Select the amount of shading from **1** to **3**, and then press the [↵] button.
 - (3) Press the [Esc] button.

- 9** After the settings are complete, set **Guide Display** and **Pattern Guide** to **Off** to finish.


Black Level

When a black image is displayed, only areas where the images overlap stands out. The black level function allows you to match the brightness and tone for areas where the images do not overlap with areas where the images overlap, to make the difference less noticeable.

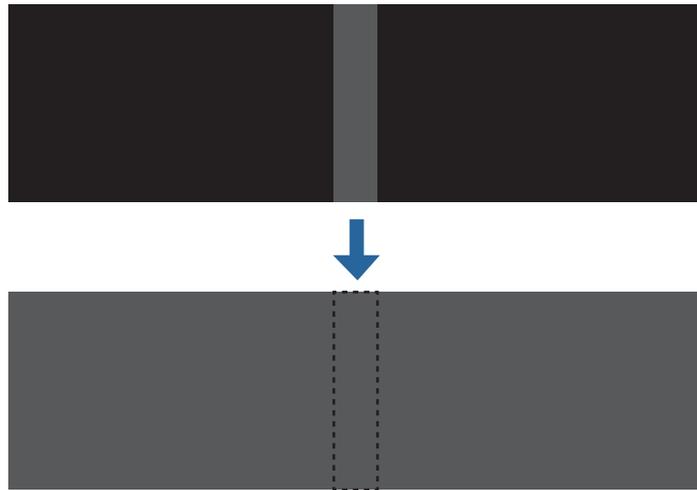

- You cannot adjust the Black Level when a test pattern is displayed.
- If the **Geometry Correction** value is large, you may not be able to adjust correctly.
- The brightness and tone may differ in areas where the images overlap as well as in other areas even after performing black level adjustment.
- If you change the **Top Edge/Bottom Edge/Right Edge/Left Edge** setting, the Black Level is returned to its default value.
 - ☛ "Edge Blending" [p.87](#)
- When auto adjustment starts for Screen Matching, the settings for Color Adjustment are automatically adjusted.
 - ☛ "Automatically correct the brightness and tint for multiple projectors" [p.93](#)

- 1 Select **Black Level** from **Multi-Projection**, and then press the [**↵**] button.

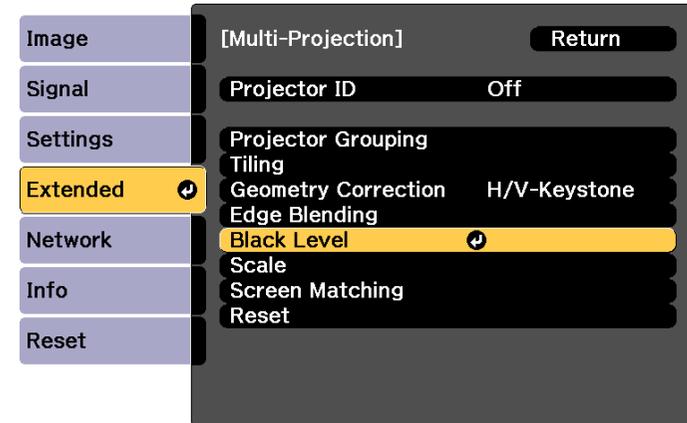

[Esc] :Return [◆]:Select [↵]:Enter [Menu]:Exit

- 2 Select **Color Adjustment**, and then press the [**↵**] button.




[Esc] :Return [◆]:Select [↵]:Enter [Menu]:Exit


The areas are displayed based on the settings for **Top Edge/Bottom Edge/Right Edge/Left Edge**.

- 3** Select the area you want to adjust, and then press the [**↵**] button.

The selected area is displayed in orange.

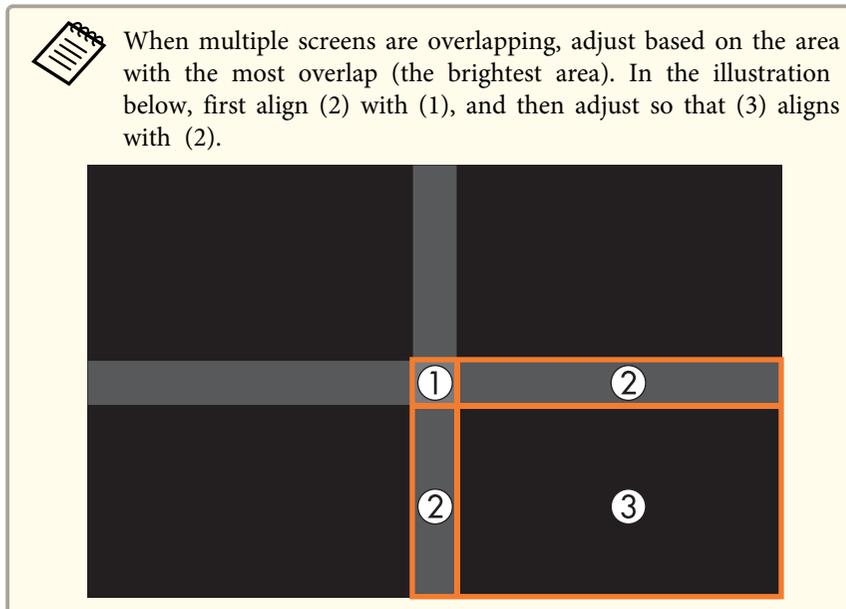

- 4** Adjust the black tone and brightness.

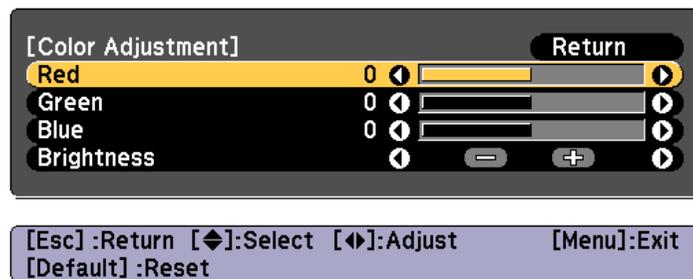


- 5** Repeat steps 3 and 4 as needed to adjust any remaining parts.


- 6** To complete the adjustment, press the [Menu] button.

Area Correction


If there are areas where the color does not match after adjusting the Black Level, adjust individually in **Area Correction**.

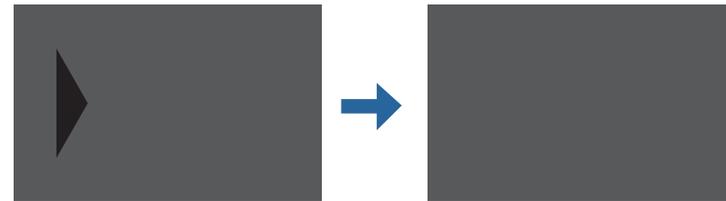

- 1** Select **Black Level** from **Area Correction**, and then press the [**↵**] button.

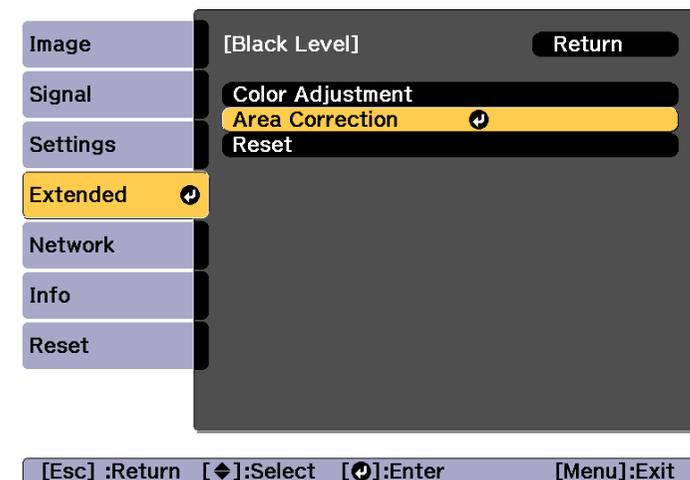

- 2** Select **Start Adjustments**, and then press the [**↵**] button.

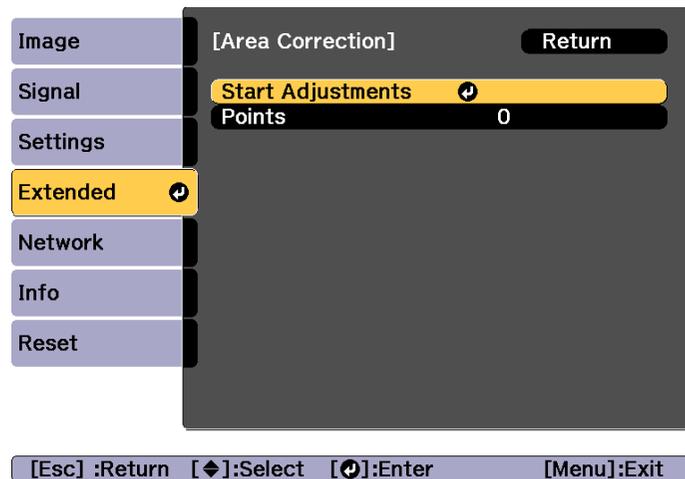

Boundary lines that indicate areas where images overlap are displayed.

The boundary lines are displayed based on the settings for **Top Edge/Bottom Edge/Right Edge/Left Edge**.

- Use the [**▲**][**▼**][**◀**][**▶**] buttons to select a boundary line of the area you want to adjust.


The selected line is displayed in orange.



- Press the [**↵**] button to confirm the selection.

The points where you want to set the range for adjustment are displayed.


You can change the number of points displayed on one side in **Points** on the screen from step 8.

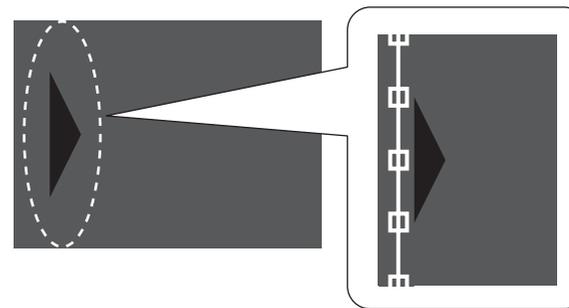


- Use the [**▲**][**▼**][**◀**][**▶**] buttons to adjust the boundary line positions, and then press the [**↵**] button.

- Press the [**▲**][**▼**][**◀**][**▶**] buttons to select the point you want to move, and then press the [**↵**] button.

The selected point is displayed in orange.

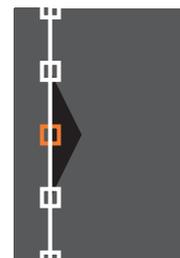

- Press the [**▲**][**▼**][**◀**][**▶**] buttons to move the point.

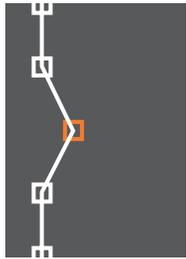

To continue to move another point, press the [Esc] button to return to step 12, and then repeat steps 12 and 13.

To adjust another boundary line, press the [Esc] button until the screen for selecting a boundary line from step 9 is displayed.



To return **Black Level** to its default value, press the [Esc] button to return to the screen from step 7, select [Reset], and then press the [↵] button.

8 To complete the adjustment, press the [Menu] button.

Screen Matching

Adjust the tint and brightness for multiple projectors.

When projectors are connected to a network, the tint and brightness for multiple projectors are automatically adjusted based on the darkest projector.

When projectors are not connected to a network, or if auto adjustment does not work, you can adjust the tint and brightness for all projectors manually.



- We recommend performing Screen Matching at least 20 minutes after turning on the projector or canceling the shutter function.
- To increase the accuracy of adjustments, we recommend darkening the room while projecting images and then making adjustments.
- Perform the following on the master projector before starting adjustments.
 - Set the **Color Mode** to **Multi-Projection** with the remote control's [Color Mode] button.
 - Press the [Shutter] button on the remote control to release the shutter function.
 - Adjust the following items on the Image menu as necessary. Brightness, Contrast, Color Saturation, Tint, White Balance, Advanced
 - ☛ "Image Menu" [p.119](#)
 - Set the brightness of the projected image.
 - ☛ "Setting the Brightness" [p.67](#)
- When there are large differences in the brightness for each projector due to aging light sources, perform Screen Matching again.
- By using the scheduling function, you can automatically adjust the tint and brightness at the time you set.
 - ☛ "Scheduling Function" [p.105](#)
- See the following if Screen Matching does not work correctly.
 - ☛ "Automatic adjustments are not performed correctly" [p.169](#)

Operating conditions for auto adjustment functions

The auto adjustment functions for Screen Matching are enabled when the following conditions are met.

- The screen is flat without any curves or distortions
- Using a matte white diffusion screen
- The projection size is 100 to 300 inches
- The projected image after tiling is rectangular

- There are no gaps between projected images (or part of the images overlap)
- Projectors are installed in parallel with the screen
- The blend width for edge blending is 15 to 45%



- Auto adjustment is not available when using the following lenses. ELPLR04, ELPLL08, ELPLL07
- After auto adjustment, lens shift may not work for some lenses.
 - ☛ "Adjusting the Position of the Projected Image (Lens Shift)" p.31

Automatically correct the brightness and tint for multiple projectors


The brightness and tint for the arranged images are adjusted automatically based on the darkest projector.



- Check the following before starting auto adjustment.
 - The projector is connected to the network
 - The **Location Setup** for the projector has already been set
 - The **Brightness Level** is set to the maximum for all projectors
 - ☛ **Settings - Brightness Settings - Light Source Mode - Brightness Level** p.123
- Auto adjustment is performed using the camera built into the front of the projector. Do not block the camera or the projected images.
- The time necessary for auto adjustment varies according to the location and number of projectors and can take up to approximately 17 minutes.
- Settings are auto adjusted for Brightness Settings and Black Level (**Color Adjustment** only).
- After making automatic adjustments, Color Uniformity and Color Matching are returned to their defaults.

1 Select **Screen Matching** from **Multi-Projection**, and then press the [↵] button.

2 Select **Start Auto Adjustment**, and then press the [↵] button.

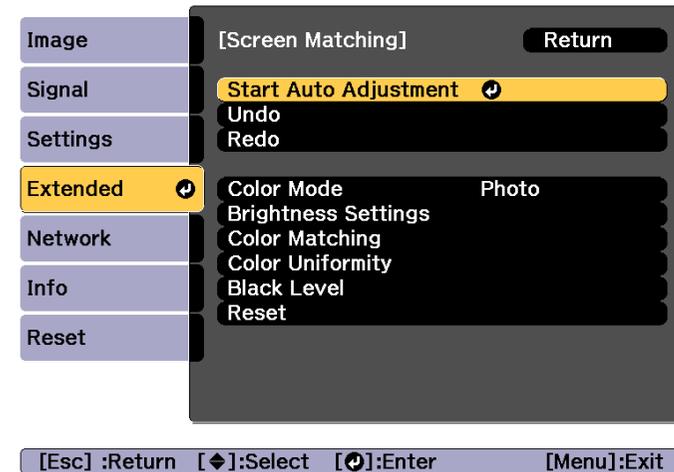

The adjustment pattern is displayed, and adjustment starts. If the projected image is displayed before the adjusting, the procedure is complete.




- See the following if an error occurs.
 - ☛ "Automatic adjustments are not performed correctly" p.169
- To return to the status before auto adjustment, select **Undo**. When you select **Redo** after selecting **Undo**, it returns the image to the status after auto adjustment.
- To return **Screen Matching** to its default value, select **Reset**.

Color Matching


You can fine tune the color balance and brightness from black to white for each color tone.

When the projectors are not connected to a network, or if you want to adjust manually after the automatic adjustments, perform the following steps on all projectors.


- 1 Select **Screen Matching** from **Multi-Projection**, and then press the [**↵**] button.
- 2 Select **Color Matching**, and then press the [**↵**] button.

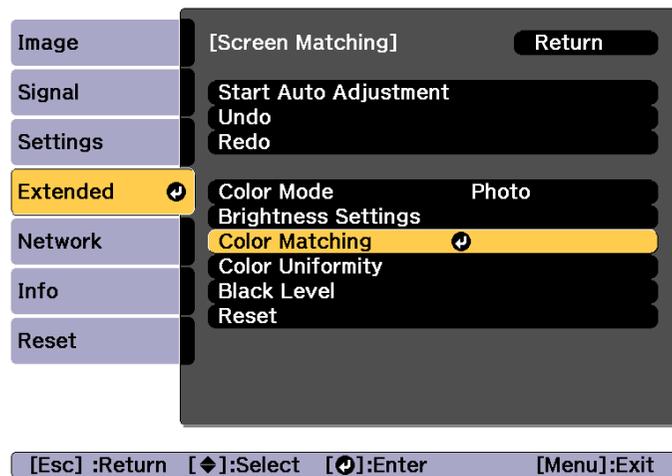

The following screen is displayed.

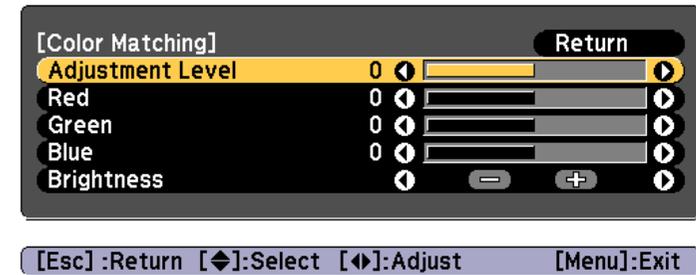

Half of the overlapped area is displayed in black so that it is easy to check the edge of the image.

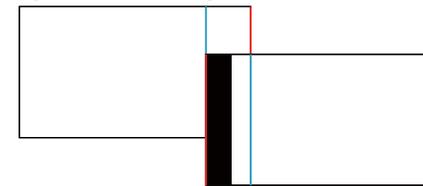

Adjustment Level: There are eight levels from white, through gray, and up to black. You can adjust each level individually.

Red, Green, Blue: Adjusts the tone for each color.

Brightness: Adjusts the image brightness.




Whenever the [**↵**] button is pressed, the screen changes between the projected image and the adjustment screen.

- 3 Select **Adjustment Level**, and then use the [**◀**][**▶**] buttons to set the adjustment level.
- 4 Select **Red**, **Green**, or **Blue**, and then press the [**◀**][**▶**] buttons to adjust the color tone.

- 5 Select **Brightness**, and then use the [◀][▶] buttons to adjust the brightness.
- 6 Return to step 3 and adjust each level.
- 7 Press the [Esc] button to return to the previous screen.

Displaying a Scaled Image

A section of the image is cropped and displayed. This allows you to create one large image by combining images projected from multiple projectors.

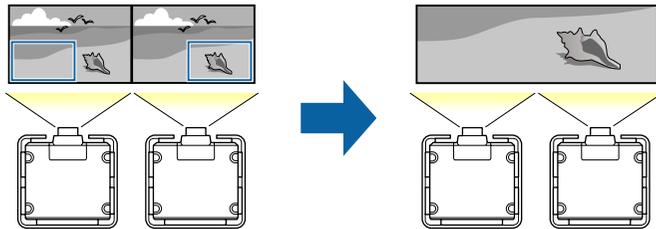

- 1 Project the image, and then press the [Menu] button.
- 2 Select **Multi-Projection** from **Extended**.



You can also perform the same operation from **Scale** in **Signal**.

- 3 Select **Scale**, and then press the [↵] button.
- 4 Turn on **Scale**.
 - (1) Select **Scale**, and then press the [↵] button.

- (2) Select **Auto** or **Manual**, and then press the [↵] button.
 - Auto:** Automatically adjusts the clipped area according to the adjustment values in Edge Blending and Tiling. You do not need to perform any steps after step 6.
 - Manual:** Allows you to adjust the clipped area manually.
- (3) Press the [Esc] button to return to the previous screen.



If auto adjustment does not work for the clipped image, adjust the aspect ratio, and then select **Auto**.

☛ "Changing the Aspect Ratio of the Projected Image "

[p.71](#)

5

Set **Scale Mode**.

- (1) Select **Scale Mode**, and then press the [↵] button.

- (2) Select **Zoom Display** or **Full Display**, and then press the [**↵**] button.

Zoom Display: Adjusts according to the image currently displayed.

Enlarge



Move



Full Display: Adjusts according to the projector's panel size (the maximum area in which an image can be displayed).

Enlarge



Move



- (3) Press the [Esc] button to return to the previous screen.

6 Adjust the scale.

Select the adjustment method with the [**▲**][**▼**] buttons, then adjust using the [**◀**][**▶**] buttons.

-+: Enlarges or reduces an image horizontally and vertically at the same time.

Scale Vertically: Enlarges or reduces an image vertically.

Scale Horizontally: Enlarges or reduces an image horizontally.

7 The image is clipped and adjusted.


- (1) Select **Clip Adjustment**, and then press the [**↵**] button.
If you select **Clip Range**, the range and coordinates of the image that the projector will project is displayed.
- (2) Use the [**▲**], [**▼**], [**◀**], and [**▶**] buttons to scroll the image.
Adjust the coordinates and size of each image while viewing the screen.
- (3) Press the [Menu] button to finish making settings.



You can check the displayed area after clipping for the entire image from **Clip Range**.

Projecting Two Images Simultaneously (Split Screen)

You can simultaneously project images from two sources on the right and left of the screen.

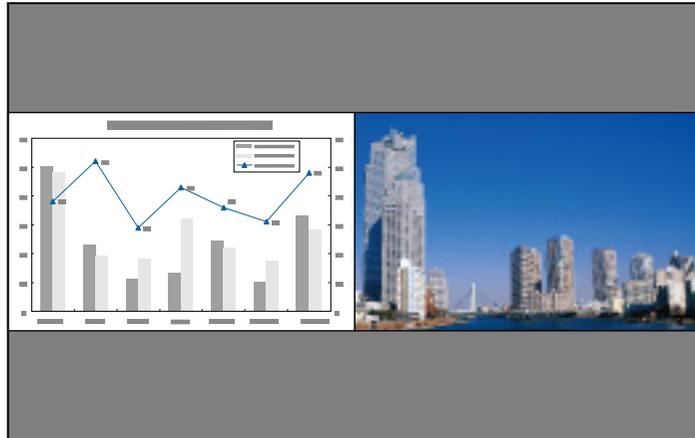

Input Sources for Split Screen Projection

The combinations of input sources that can be projected on a split screen are listed below.

| Left Screen | Right Screen | | | | | | |
|-------------|--------------|----------|-------|-----|-----------|-----|-----|
| | HDMI | HDBa-seT | DVI-D | SDI | Com-puter | BNC | LAN |
| HDMI | - | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| HDBaseT | ✓ | - | ✓ | ✓ | ✓ | ✓ | ✓ |
| DVI-D | ✓ | ✓ | - | ✓ | ✓ | ✓ | ✓ |
| SDI | ✓ | ✓ | ✓ | - | - | - | - |
| Computer | ✓ | ✓ | ✓ | - | - | - | - |
| BNC | ✓ | ✓ | ✓ | - | - | - | - |
| LAN | ✓ | ✓ | ✓ | - | - | - | - |




- Signals that exceed WUXGA are not supported.
- If **4K Enhancement** is enabled, a message is displayed. Select **Yes** to disable **4K Enhancement**.
 🖱️ **Image - Image Enhancement - 4K Enhancement** [p.119](#)

Operating procedures


Projecting on a split screen

- 1** Press the [Menu] button while projecting.
- 2** Select **Split Screen** from **Settings**.

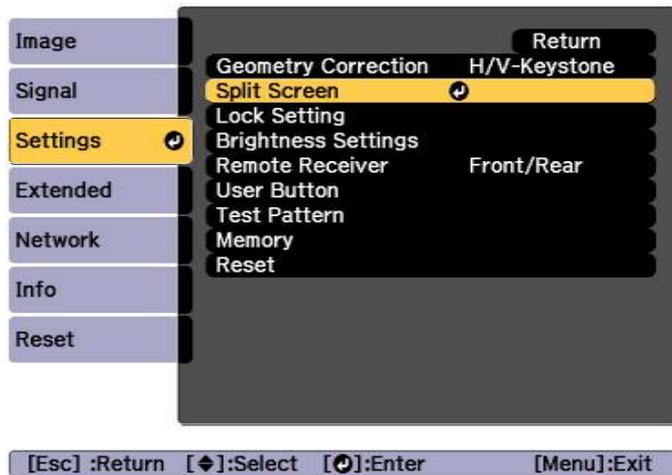


The currently selected input source is projected on the left of the screen.

- 3 Press the [Menu] button.
The Split Screen Setup screen is displayed.

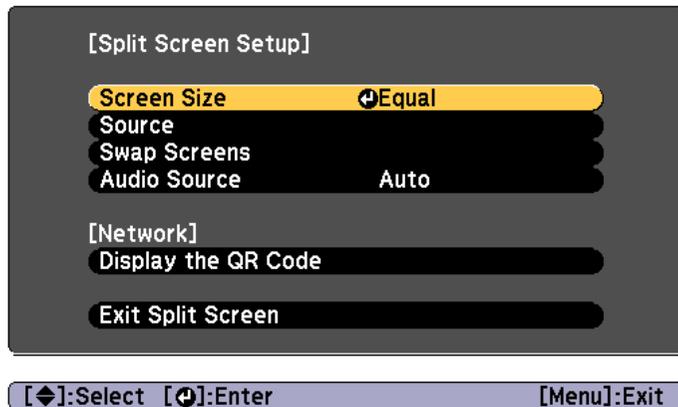

- 4 Select **Source**, and then press the [↵] button.

- 5 Select each input source for **Left** and **Right**.

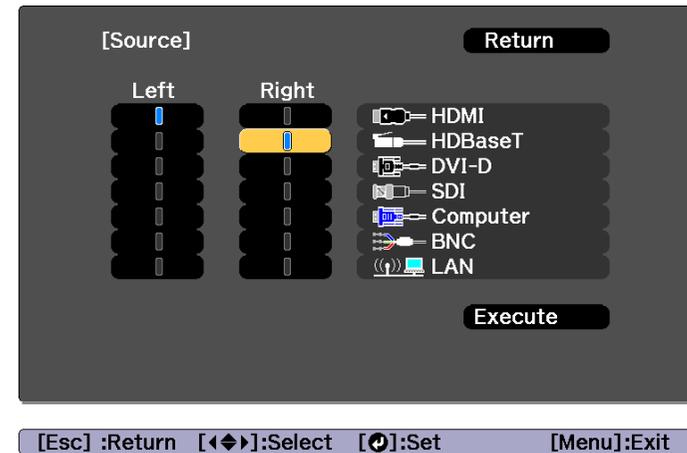

You can perform the same operations using the following procedure.

- ☛ "Automatically Detecting Input Signals and Changing the Projected Image (Source Search)" [p.53](#)
- ☛ "Switching to the Target Image" [p.54](#)


- 6 Select **Execute**, and then press the [↵] button.
To switch the source during split screen projection, start the procedure from step 2.

Switching the left and right screens

Use the following procedure to switch the projected images displayed on the left and right screens.


- 1 Press the [Menu] button during split screen projection.

- 2 Select **Swap Screens**, and then press the [↵] button.
The projected images on the left and right are swapped.

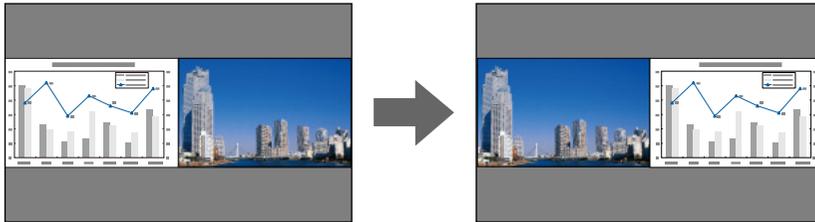


Switching the left and right image sizes

- 1 Press the [Menu] button during split screen projection.
- 2 Select **Screen Size**, and then press the [↵] button.
- 3 Select the screen size you want to display, and then press the [↵] button.

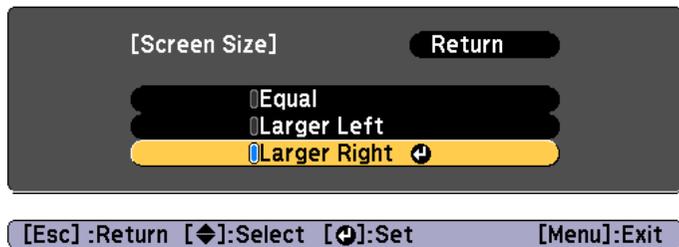

The projected images will appear as shown below after setting the screen size.

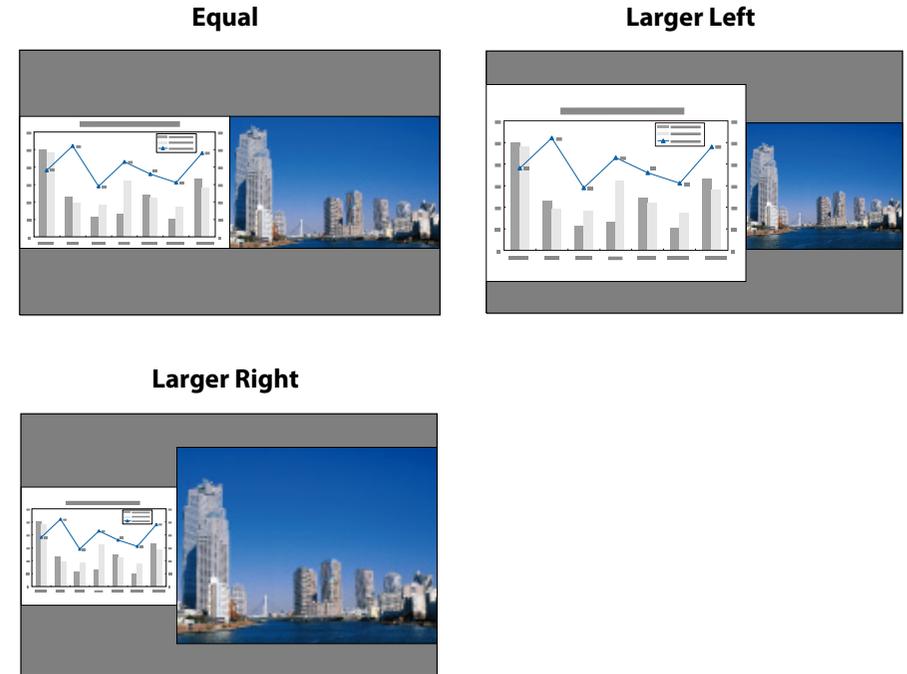

- You cannot enlarge both the left screen and right screen images at the same time.
- When one image is enlarged, the other image is reduced.
- Depending on the video signals that are input, the images on the left and right may not appear to be the same size even if **Equal** is set.

Ending the split screen

Perform one of the following operations to end split screen.

- Press the [Esc] button.
- Select **Exit Split Screen** on the Split Screen Setup screen. [p.97](#)

Restrictions during split screen projection

Operating restrictions


The following operations cannot be performed during split screen projection.

- Setting the configuration menu
- Changing the aspect mode
- Using the [User1], [User2], or [User3] button on the remote control
- Help can be displayed only when image signals are not input or when an error or warning notification is displayed.
- The user's logo is not displayed.

Restriction relating to images


- For the image on the right screen, the default values for the **Image** menu are applied. However, the settings for the image projected on the left screen are applied to the image on the right screen for **Color Mode**, **Color Temp.**, and **Super-resolution**.
- **Dynamic Contrast** and **Frame Interpolation** are not available.

Each time you press the [Shutter] button, the Shutter function turns on or off.

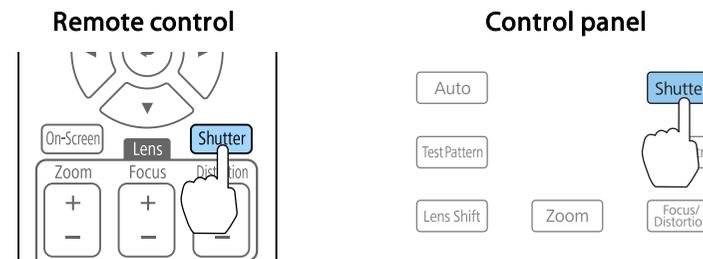

Hiding the Image Temporarily (Shutter)

You can switch off the image on the screen when you want to focus the audience's attention on what you are saying, or when you do not want to display operations such as changing files.

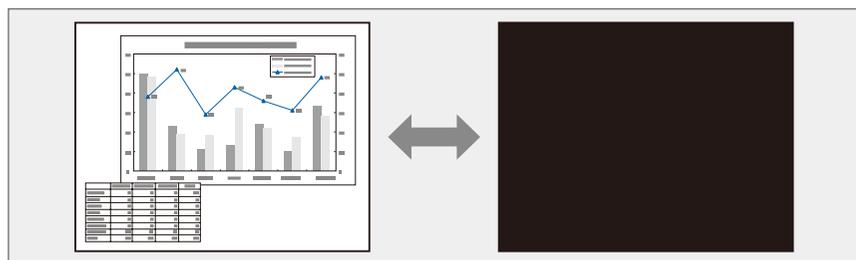




- If you want to fade out or fade in when turning the video on or off, set the desired number of seconds in **Fade-out** and **Fade-in**.
 ➤ **Extended - Operation - Shutter Settings - Fade-out, Fade-in** p.125
- When the shutter function is activated and no operations are performed for about two hours, the projector turns off automatically. If you do not want to turn off the power, set **Shutter Timer** to **Off**.
 ➤ **Extended - Operation - Shutter Settings - Shutter Timer** p.125
- When **Shutter Release** is set to **Shutter** in the configuration menu, the following operations can be performed while the shutter function is still activated.
 - Change the source with the change input buttons on the remote control.
 - Control the projector from a computer using communication commands.
 ➤ **Extended - Operation - Shutter Settings - Shutter Release** p.125
 The shutter function is only released by pressing the [Shutter] button, or by sending a command to release the shutter function.
- When projecting moving images, the images continue to be played back while the Shutter function is activated. It is not possible to resume projection from the point where the Shutter function was activated.

Freezing the Image (Freeze)

When Freeze is activated on moving images, the frozen image continues to project on the screen, so you can project a moving image one frame at a time like a still photo. Also, you can perform operations such as changing between files during presentations from a computer without projecting any images if the Freeze function is activated beforehand.

Each time you press the [Freeze] button on the remote control, Freeze turns on or off.

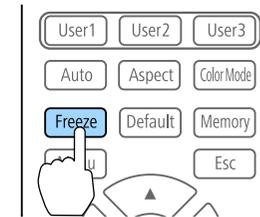

- When projecting moving images, the images continue to be played back while the screen is frozen. It is not possible to resume projection from the point where the screen was frozen.
- If the [Freeze] button is pressed while the Configuration menu or the Help screen is displayed, the menu or the Help screen that is displayed is closed.

Saving a User's Logo

You can save the image that is currently being projected as a User's Logo.



Once a User's Logo has been saved, the logo cannot be returned to the factory default.

- 1** Project the image you want to save as the User's Logo, and then press the [Menu] button.
 ➤ "Using the Configuration Menu" p.116
- 2** Select **User's Logo** from **Extended**.



• When **User's Logo Protection** from **Password Protection** is set to **On**, a message is displayed and the User's Logo cannot be changed. You can make changes after setting **User's Logo Protection** to **Off**.

☞ "Managing Users (Password Protection)" p.109

• If **User's Logo** is selected when Geometry Correction or Aspect are being performed, the function currently being performed is temporarily cancelled.



3 When the message "Choose this image as the User's Logo?" is displayed, select **Yes**.



When you press the [**↵**] button, the screen size may change depending on the signal to match the actual resolution of the image signal.

4 Move the box to select the part of the image to use as the User's Logo.

You can perform the same operations from the projector's control panel.

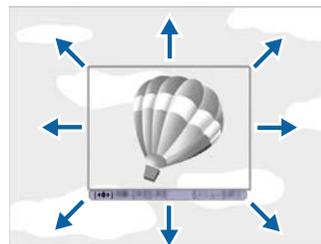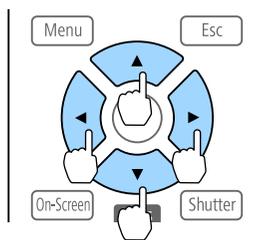

You can save at 400x300 dots in size.

5 When you press the [**↵**] button and the message "Select this image?" is displayed, select **Yes**.

6 Select the zoom factor from the zoom setting screen.

7 When the message "Save this image as the User's Logo?" is displayed, select **Yes**.

The image is saved. After the image has been saved, the message "Completed." is displayed.




When a User's Logo is saved, the previous User's Logo is erased.

The settings for the image currently displayed and values for geometry correction are saved as a memory, allowing you to load them when necessary.

Saving/Loading/Erasing/Resetting the Memory


- 1 Press the [Memory] button while projecting.

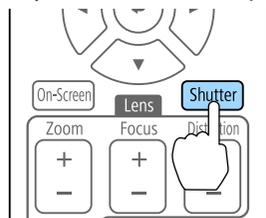

You can also operate from the Configuration menu.

➔ Settings - Memory p.123

- 2 Select a memory type, and then press the [↵] button.

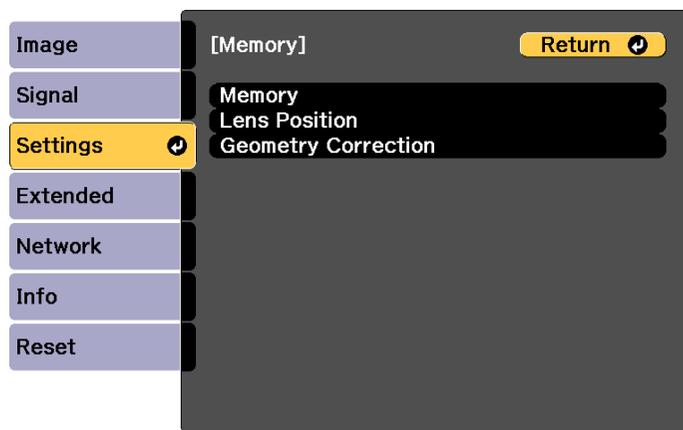

[Esc] / [⏪]:Return [↵]:Select [Menu]:Exit


Memory: Settings for the following menu items are saved in the memory. You can register up to 10 values.

| Top Menu | Submenu |
|----------|--|
| Image | All setting items |
| Signal | Scale |
| Set | Brightness Settings |
| Extended | Edge Blending Black Level Color Matching |

Lens Position: Registers the position of the lens adjusted using lens shift, zoom, focus, and distortion. You can register up to 10 values.
➔ "Registering and Loading Lens Adjustment Values" p.35

Geometry Correction: Adjustment value of the geometry correction is saved. You can register up to 3 values.

- 3 Select the function you want to perform, then press the [↵] button.

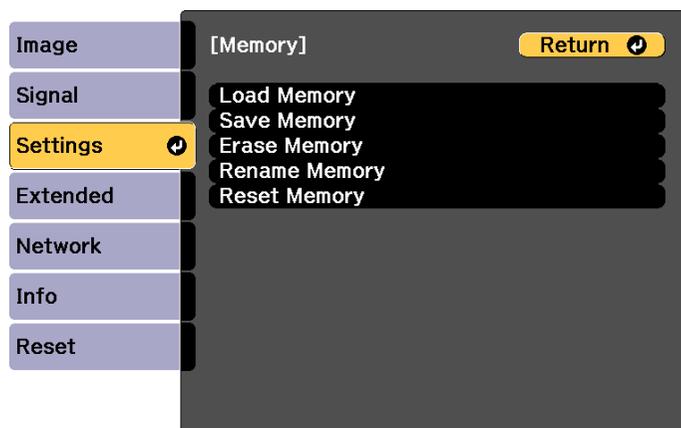

[Esc] / [Return]:Return [Left Arrow]:Select [Menu]:Exit

| Function | Explanation |
|----------------------|--|
| Load Memory | Loads the saved memory. When you select a memory and press the [Left Arrow] button, the settings applied to the current image are replaced with the settings from the memory. |
| Save Memory | Registers current settings in the memory. When you select a memory name and press the [Left Arrow] button, the settings are saved. |
| Erase Memory | Erases the registered memory. When you select a memory name and press the [Left Arrow] button, a message is displayed. Select Yes , and then press the [Left Arrow] button to erase the selected memory. |
| Rename Memory | Changes the memory name. Select the memory name you want to change, and then press the [Left Arrow] button. Enter the memory name using the soft keyboard. ☛ "Soft keyboard operations" p.130 When you have finished, move the cursor over Finish , and then press the [Left Arrow] button. |

| Function | Explanation |
|---------------------|---|
| Reset Memory | Resets the name and settings of a saved memory. To reset all memories saved in Memory , Lens Position , and Geometry Correction , use Reset All Memories . ☛ Reset - Reset All Memories p.137 |




If the mark on the left of the memory name is turned blue, it means the memory has already been registered. When you select a registered memory, a message is displayed asking you to confirm that you want to overwrite the memory. If you select **Yes**, the previous settings are deleted and the current settings are registered.

You can schedule turning the projector power on/off and switching the input source, as events in the schedule. Registered events are executed automatically at the specified time on the specified dates or weekly. You can register up to 30 events in **Schedule**, and one event in **Extended Schedule**.

Saving an Event

Setting an Event


- 1** Press the [Menu] button while projecting.
 ☞ "Using the Configuration Menu" [p.116](#)
- 2** Select **Schedule Settings** from **Extended**.
- 3** Select **Add New** from **Schedule** or **Extended Schedule**.

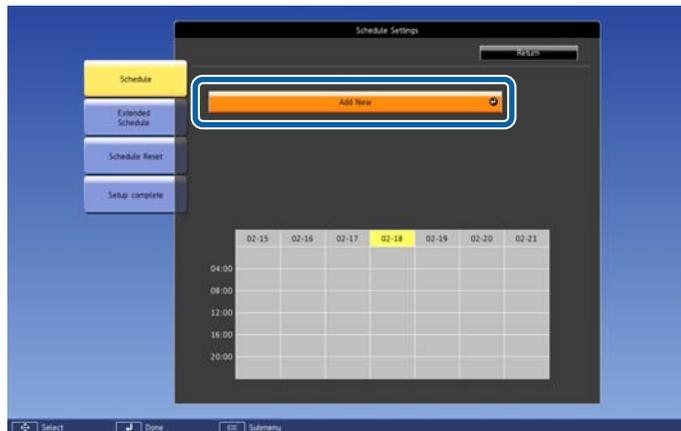

- 4** Set the schedule.

| Submenu Name | Function |
|-----------------------------|---|
| Event Settings | Select an operation of the projector when the event is executed. Select No Change for items that you do not want to change when the event occurs. You can set the following item operations. <p>Schedule</p> <ul style="list-style-type: none"> • Power • Source • Light Source Mode • Shutter • Light Source Calibration <p>Extended Schedule</p> <ul style="list-style-type: none"> • Color Calibration • Screen Matching |
| Date / Time Settings | Set the date, day of the week, and time to execute the event. Use the soft keyboard to enter the date and time. ☞ "Soft keyboard operations" p.130 |

- 5** Select **Save**, and then press the [↵] button.
 To register additional events, repeat steps 3 to 5.
- 6** Select **Setup complete**, and then select **Yes** to finish saving.

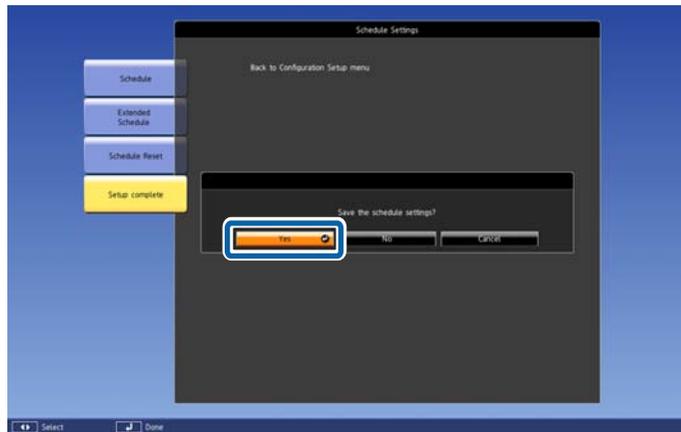

- Light source calibration does not start automatically when the projector is used continuously for more than 24 hours, or when direct shutdown is used regularly. Set **Light Source Calibration** to enable this function after every 100 hours of usage.
- You cannot register a schedule in which Schedule events conflict with an Extended Schedule event.
- You cannot set other events before the following times.
 - Five minutes before or after executing a Color Calibration event.
 - Five minutes before and 30 minutes after executing a Screen Matching event.

Checking an Event


This section explains how to check a Schedule event.

- 1 Press the [Menu] button while projecting.
- 2 Select **Schedule Settings** from **Extended**.
The indicator turns on when an event is saved.



- (Aqua): Single event
- (Orange): Regular event
- (Green): Communication monitoring On/Off
- (Gray): Disabled event

- Press the [◀][▶] buttons to highlight the date you want to check.
The details of the events registered on the selected date are displayed.

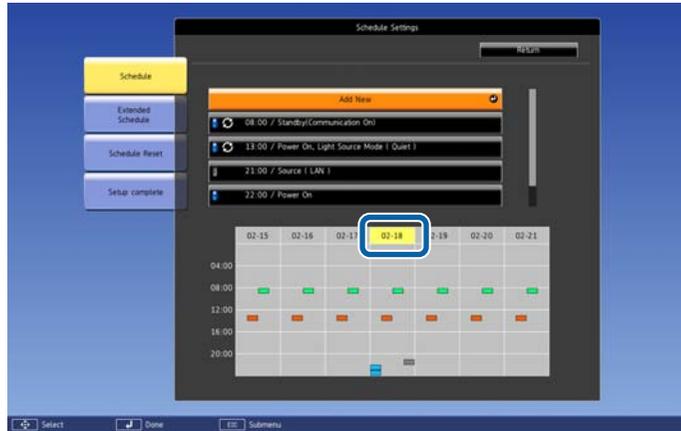


- (Blue): Enabled event
- (Gray): Disabled event
- : Regular event

Editing an Event

- Press the [Menu] button while projecting.
"Using the Configuration Menu" p.116
- Select **Schedule Settings** from **Extended**.
- Use the [◀][▶] buttons to highlight the date containing the event you want to edit.



- Highlight the event you want to edit, and then press the [Esc] button.

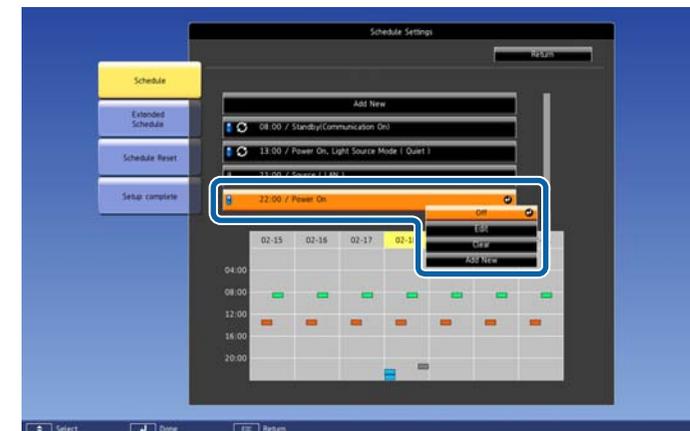


- Edit the event.

| Submenu Name | Function |
|--------------|---------------------------------------|
| On/Disabled | Enable or disable the selected event. |

| Submenu Name | Function |
|----------------|--|
| Edit | Edits the content of the selected event. Select Save , and then press the [↵] button to complete the editing. |
| Clear | Deletes the selected event. |
| Add New | Saves a new event. Select Save , and then press the [↵] button to complete the registration. |

6 Select **Setup complete**, and then select **Yes** to finish editing.

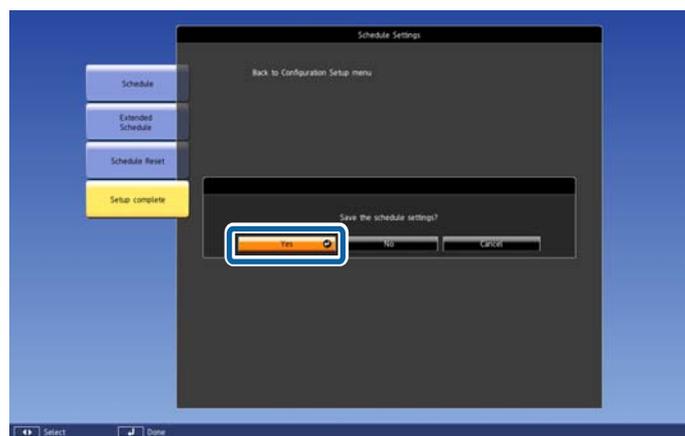

To delete all registered events, select **Schedule Reset**, and then select **Yes**. Select **Setup complete**, and then select **Yes** to delete the events.

The projector has the following enhanced security functions.

- **Password protect**
You can limit who can use the projector.
- **Control Panel Lock/Remote Control Button Lock**
You can prevent people changing the settings on the projector without permission.
☛ "Restricting Operation" [p.111](#)
- **Anti-Theft Lock**
The projector is equipped with the following anti-theft security device.
☛ "Anti-Theft Lock" [p.113](#)

Managing Users (Password Protection)

When Password Protection is activated, people who do not know the password cannot use the projector to project images even if the projector power is on. Furthermore, the user's logo that is displayed when you turn on the projector cannot be changed. This acts as an anti-theft function as the projector cannot be used even if it is stolen. At the time of purchase, Password Protection is not activated.

Kinds of Password Protection

The following four kinds of Password Protect settings can be made according to how the projector is being used.

- **Power On Protection**
When **Power On Protection** is **On**, you need to enter a preset password after the projector is plugged in and turned on (this also applies to Direct Power On). If the correct password is not entered, projection does not start.

- **User's Logo Protection**

Even if someone tries to change the User's Logo set by the owner of the projector, it cannot be changed. When **User's Logo Protection** is set to **On**, the following setting changes for the User's Logo are prohibited.

- Capturing a User's Logo
- Setting **Display Background** or **Startup Screen** from **Display**
☛ **Extended - Display** [p.125](#)

- **Network Protection**

When **Network Protection** is set to **On**, changing the settings for **Network** is prohibited.

☛ "Network Menu" [p.129](#)

- **Schedule Protection**


When **Schedule Protection** is set to **On**, changing settings for the projector's system time or schedules is prohibited.

Setting Password Protection

Use the following procedure to set Password Protect.

- 1 During projection, hold down the [Freeze] button on the remote control for about five seconds.

The Password Protection setting menu is displayed.

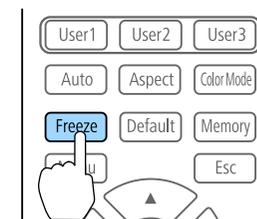




If Password Protection is already activated, you must enter the password.
If the password is entered correctly, the Password Protection setting menu is displayed.

👁️ "Entering the password" p.110


- 2 Select the type of Password Protect you want to set, and then press the [↵] button.

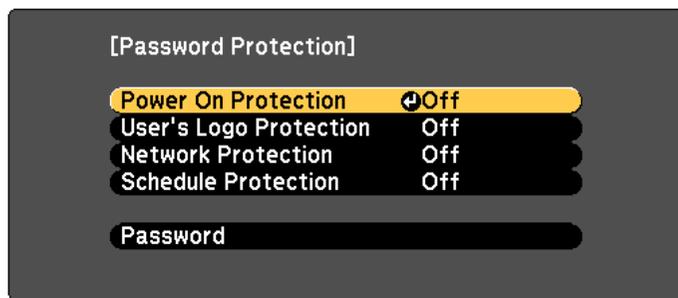

[↔]:Select [↵]:Enter [Menu]:Exit

- 3 Select **On**, and then press the [↵] button.
Press the [Esc] button to return to the screen in step 2.

- 4 Set the password.
 - (1) Select **Password**, and then press the [↵] button.
 - (2) When the message "Change the password?" is displayed, select **Yes** and then press the [↵] button. The default password is set to "0000". Change this to your own desired password. If you select **No**, the screen displayed in step 2 is displayed again.
 - (3) While holding down the [Num] button, enter a four digit number using the numeric buttons. The number entered is displayed as "* * * *". When you enter the fourth digit, the confirmation screen is displayed.

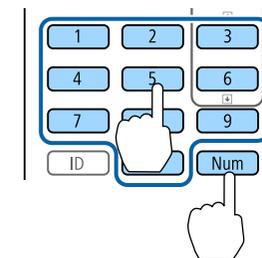


- (4) Re-enter the password.
"Password accepted." is displayed.
If you enter the password incorrectly, a message is displayed prompting you to re-enter the password.

Entering the password

When the password entry screen is displayed, enter the password using the remote control.

While holding down the [Num] button, enter the password by pressing the numeric buttons.

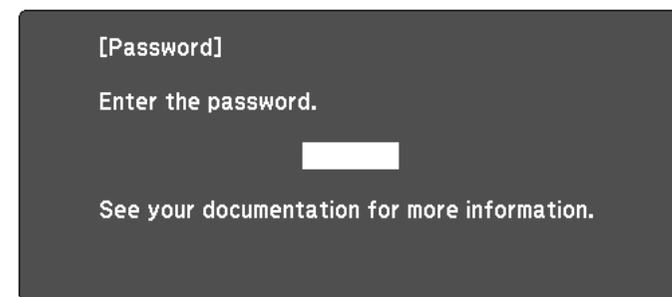

[0-9] :Enter

When you enter the correct password, Password Protect is temporarily released.

Attention

- If an incorrect password is entered three times in succession, the message "The projector's operation will be locked." is displayed for approximately five minutes, and then the projector switches to standby mode. If this happens, disconnect the power plug from the electrical outlet and then reinsert it and turn the projector's power back on. The projector displays the password entry screen again so that you can enter the correct password.
- If you have forgotten the password, make a note of the "Request Code: xxxxx" number that appears on the screen and contact the nearest address provided in the Epson Projector Contact List.
 [Epson Projector Contact List](#)
- If you continue to repeat the above operation and input the wrong password thirty times in succession, the following message is displayed and the projector does not accept any more password entries. "The projector's operation will be locked. Contact Epson as described in your documentation."
 [Epson Projector Contact List](#)

Restricting Operation

The following three kinds of operation restriction functions are available with the projector.

- **Control Panel Lock**
This is useful at events or shows when you want to deactivate all buttons during projection or at schools when you want to limit button operation.
- **Lens Lock**
This function deactivates all buttons on the remote control related to the lens operation to prevent improper lens adjustment after it is properly adjusted.
- **Remote control button lock**
This function deactivates buttons except for main buttons needed for basic remote control operation, to prevent mistakes in operations.

Control Panel Lock

Perform one of the following to lock the operation buttons on the control panel. Even if the control panel is locked, you can still use the remote control as usual.

- **Full Lock**
All of the buttons on the control panel are locked. You cannot perform any operations from the control panel, including turning the power on or off.
- **Partial Lock**
All of the buttons on the control panel, except for the [⏻] button, are locked.


- 1** Press the [🔒] button on the control panel during projection to display the Control Panel Lock screen.



You can also make settings in **Control Panel Lock** from the configuration menu.

 [Settings - Lock Setting - Control Panel Lock p.123](#)

- 2** Select either **Full Lock** or **Partial Lock** according to your purpose.

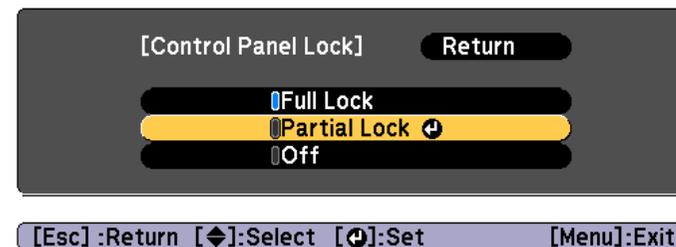

- 3** Select **Yes** when the confirmation message is displayed. The control panel buttons are locked according to the setting you chose.




You can release the control panel lock by one of the following two methods.

- Use the remote control to set **Control Panel Lock** to **Off** from the configuration menu.
 - ☛ **Settings - Lock Setting - Control Panel Lock** [p.123](#)
- Press and hold down the [] button on the control panel for about seven seconds, a message is displayed and the lock is released.

Lens Lock

This function locks the following buttons on the remote control related to the lens operation.

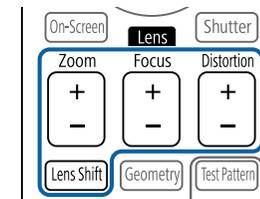


Set the **Lens Lock** to **On** in the Configuration menu.

- ☛ **Settings - Lock Setting - Lens Lock** [p.123](#)

Remote control button lock

This function locks the following buttons on the remote control.

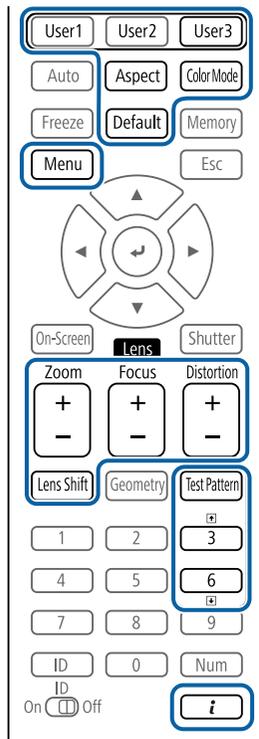

 Even if the remote control button lock is on, the following operations are possible.


- Resetting default for the Remote Receiver setting
- Releasing the remote control button lock

Anti-Theft Lock

The projector is equipped with the following types of anti-theft security devices.


- Security slot
The security slot is compatible with the Microsaver Security System manufactured by Kensington.
See the following for more details on the Microsaver Security System.
<http://www.kensington.com/>
- Handles
A commercially available theft-prevention wire lock can be passed through the installation point to secure the projector to a desk or pillar.

Each time the [i] button is pressed for approximately 5 seconds, the remote control button lock turns on or off.

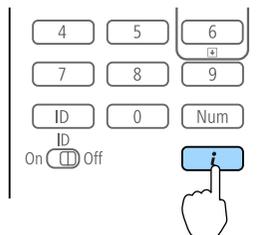

Installing the wire lock

Pass an anti-theft wire lock through the installation point.
See the documentation supplied with the wire lock for locking instructions.

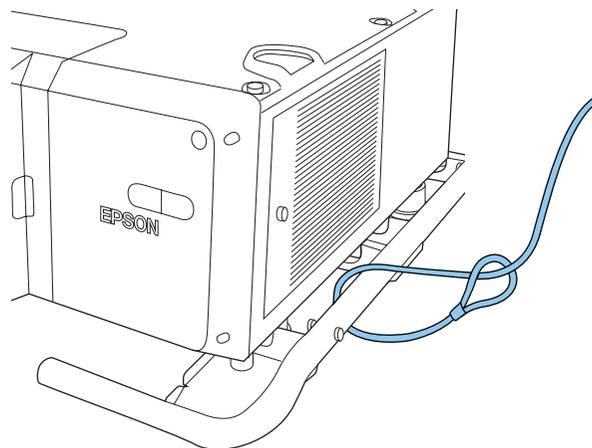




Configuration Menu

This chapter explains how to use the Configuration menu and its functions.


This section explains how to use the Configuration menu.

Although steps are explained using the remote control as an example, you can perform the same operations from the control panel. Check the guide under the menu for the available buttons and their operations.


1 Display the Configuration menu screen.

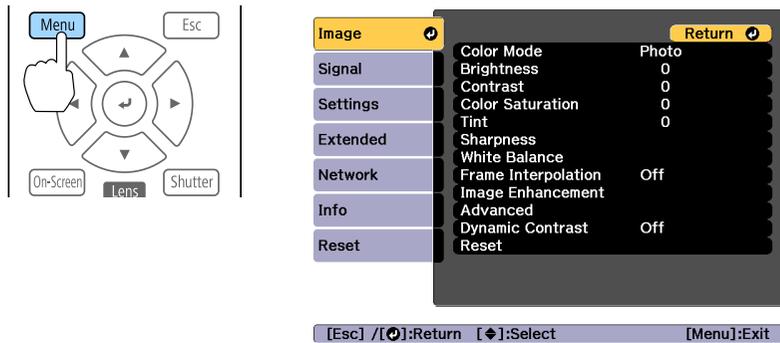


2 Select a top menu item.

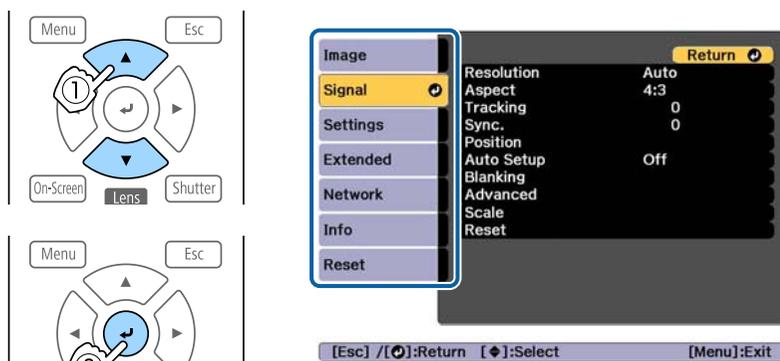

3 Select a submenu item.

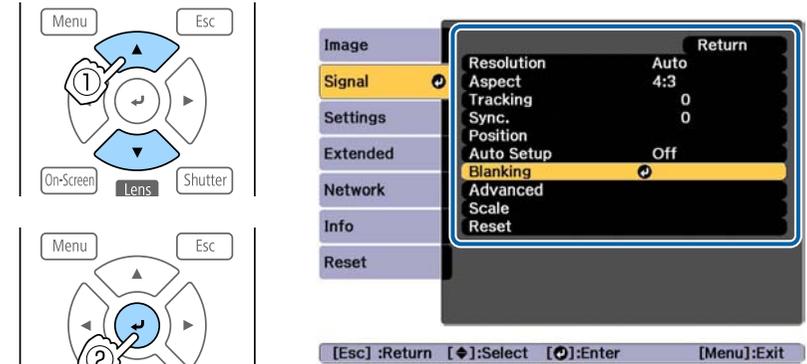

4 Change settings.

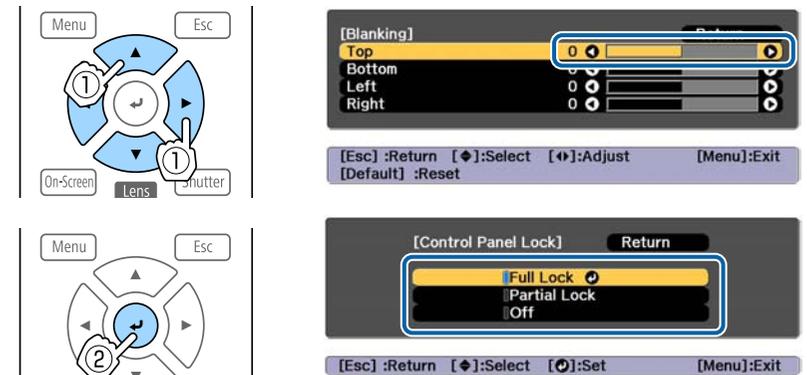

When "[Default]: Reset" is displayed on the guide under the menu, pressing the [Default] button on the remote control returns the settings being adjusted to their default values.

5 Press the [Menu] button to finish making settings.

Configuration Menu Table

Settable items vary depending on the model being used and the image signal and source being projected.

| Top Menu Name | Submenu Name | Items or Setting Values |
|------------------------|-----------------------------|--|
| Image menu ☛ p.119 | Color Mode | Dynamic, Presentation, Cinema, sRGB, DICOM SIM, Multi-Projection |
| | Brightness | 0 to 100 |
| | Contrast | 0 to 100 |
| | Color Saturation | 0 to 100 |
| | Tint | 0 to 100 |
| | Sharpness | Standard, Thin Line Enhancement, Thick Line Enhancement |
| | White Balance | Color Temp., G-M Correction, Customized |
| | Frame Interpolation | Off, Low, Normal, and High |
| | Image Enhancement | 4K Enhancement, Image Preset Mode, Noise Reduction, MPEG Noise Reduction, Super-resolution, Detail Enhancement |
| | Advanced | Gamma, RGBCMY, Deinterlacing |
| Dynamic Contrast | Off, Normal, and High Speed | |
| Signal menu ☛ p.121 | Resolution | Auto, Wide, Normal, and Manual |
| | Aspect | Auto, Normal, 4:3, 16:9, Full, H-Zoom, V-Zoom, Native |
| | Tracking | - |
| | Sync. | 0 to 31 |
| | Position | -128 to 127 |
| | Auto Setup | On, Off |

| Top Menu Name | Submenu Name | Items or Setting Values | |
|--------------------------|--------------------------|---|---|
| | Overscan | Auto, Off, 4%, and 8% | |
| | Blanking | Top, Bottom, Left, and Right | |
| | Advanced | Video Range, Input Signal, Image Processing | |
| | Scale | Scale, Scale Mode, Scale Vertically, Scale Horizontally, Clip Adjustment, Clip Range | |
| Settings menu ☛ p.123 | Geometry Correction | Off, H/V-Keystone, Quick Corner, Curved Surface, Corner Wall, Point Correction, Memory | |
| | Split Screen | - | |
| | Lock Setting | Control Panel Lock, Lens Lock | |
| | Brightness Settings | Light Source Mode, Brightness Level, Constant Brightness, Estimated Remains | |
| | Remote Receiver | Front/Rear, Front, Rear, and Off | |
| | User Button | User Button 1, User Button 2, and User Button 3 | |
| | Test Pattern | Standard, Cross-hatching, Color Bars V, Color Bars H, Grayscale, Gray Bars V, Gray Bars H, Checkerboard 1, Checkerboard 2, White, Black, Aspect Frame | |
| | Memory | Memory, Lens Position, Geometry Correction | |
| | Extended menu ☛ p.125 | Display | Menu Position, Message Position, Messages, Display Background, Startup Screen, Standby Confirmation, Air Filter Notice, Screen, Panel Alignment, Color Uniformity, OSD Rotation |
| | | User's Logo | - |

| Top Menu Name | Submenu Name | Items or Setting Values |
|----------------------|-------------------|--|
| | Projection | Front, Front/Ceiling, Rear, and Rear/Ceiling |
| | Operation | Direct Power On, Sleep Mode, Sleep Mode Timer, High Altitude Mode, Startup Source Search, Auto Power On, Shutter Settings, Advanced, Date & Time, Lens Calibration |
| | A/V Settings | A/V Output, Monitor Out |
| | Standby Mode | Communication On and Communication Off |
| | HDBaseT | Control Communications, Extron XTP |
| | Color Calibration | Start Auto Adjustment, Undo, Redo, Color Uniformity |
| | Multi-Projection | Projector ID, Projector Grouping, Tiling, Geometry Correction, Edge Blending, Black Level, Scale, Screen Matching |
| | Schedule Settings | - |
| | Language | 27 languages |
| Info menu ☛ p.136 | Projector Info | Total Op. Time, Operation Hours, Sources, Input Signal, Resolution, Refresh Rate, Sync Info, Status, Serial Number, Lens Type, Event ID, HDBaseT Signal Level |
| | Light Source Info | Light Source Hours, Estimated Remains |
| | Version | Main, Video2, Status Monitor |

| Top Menu Name | Submenu Name | Items or Setting Values |
|-----------------------|--------------------|---|
| | Status Information | Status Information, Source, Signal Information, Network Wired, Network Wireless, Maintenance, Version |
| Reset Menu ☛ p.137 | Reset All Memories | - |
| | Reset All Config | - |

Network menu


| Top Menu Name | Submenu Name | Items or Setting Values |
|---------------------------|----------------------|--|
| Basic menu ☛ p.131 | Projector Name | - |
| | PJLink Password | - |
| | Remote Password | - |
| | Web Control Password | - |
| | Projector Keyword | On, Off |
| | Display LAN Info. | Text & QR Code, Text |
| Wireless LAN menu ☛ p.131 | Connection Mode | Quick, Advanced |
| | Search Access Point | - |
| | SSID | - |
| | Security | Open, WPA2-PSK, WPA/WPA2-PSK |
| | Passphrase | - |
| | Channel | 1ch, 6ch, and 11ch |
| | IP Settings | DHCP, IP Address, Subnet Mask, Gateway Address |
| | SSID Display | On, Off |
| | IP Address Display | On, Off |

| Top Menu Name | Submenu Name | Items or Setting Values |
|--|---|--|
| Wired LAN menu  p.134 | IP Settings | DHCP, IP Address, Subnet Mask, Gateway Address |
| | IP Address Display | On, Off |
| Notifications menu  p.135 | Mail Notification | On, Off |
| | SMTP Server | - |
| | Port Number | - |
| | From | - |
| | Address 1 Setting, Address 2 Setting, Address 3 Setting | Email Address, No Signal, System Error, Laser Error, High Temp Error, Air Filter Error, Laser Warning, High Temp Warning, Air Filter Warning, Cinema Filter Warn., Air Filter Notice |
| | SNMP | On, Off |
| | Trap IP Address 1, Trap IP Address 2 | - |
| | Community Name | - |
| Others menu  p.135 | Priority Gateway | Wired LAN, Wireless LAN |
| | AMX Device Discovery | On, Off |
| | Crestron RoomView | On, Off |
| | Control4 SDDP | On, Off |
| | Art-Net | Art-Net, Net, Sub-Net, Universe, Start Channel |
| | Message Broadcasting | On, Off |

Image Menu

Settable items vary depending on the image signal and source currently being projected. Setting details are saved for each color mode.

 "Automatically Detecting Input Signals and Changing the Projected Image (Source Search)" [p.53](#)

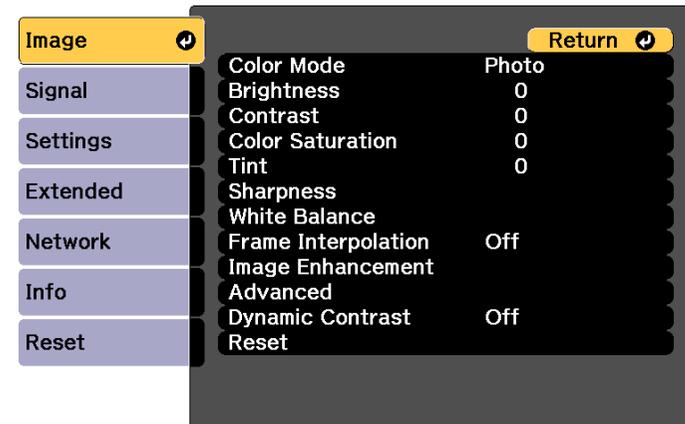

[Esc] / [Return]:Return [Left/Right]:Select [Menu]:Exit

| Submenu | Function |
|-------------------------|--|
| Color Mode | You can select the quality of the image to suit your surroundings.  "Selecting the Projection Quality (Selecting Color Mode)" p.67 |
| Brightness | Adjusts the image brightness. |
| Contrast | Adjusts the difference between light and shade in the images. |
| Color Saturation | Adjusts the color saturation for the images. |
| Tint | You can adjust the image tint. |

| Submenu | Function |
|---|---|
| Sharpness | <p>Standard: You can adjust the image sharpness.</p> <p>Thin Line Enhancement: If this parameter is set to a positive value, details such as hair or fabric patterns will be enhanced.</p> <p>Thick Line Enhancement: If this parameter is set to a positive value, the outline, background, and the other main parts of the objects in the image will be enhanced to show them clearly.</p> |
| White Balance | <p>You can adjust the overall tint of the image.</p> <p>Color Temp.: You can adjust the overall tint of the image. When the Color Mode is set to sRGB or DICOM SIM, adjust to 11 steps in 3200K, 5000K to 10000K. When the Color Mode is set to anything other than sRGB and DICOM SIM, you can adjust it in a range of 0 to 10. The image is tinted blue when a high value is selected and tinted red when a low value is selected.</p> <p>G-M Correction: The color tone is tinted red when set to a negative value, and tinted green when set to a positive value.</p> <p>Customized: You can adjust the offset and gain of each color R (red), G (green), and B (blue) individually.</p> |
| Frame Interpolation *1, 2, 3, 4, 5, 6 | <p>You can play fast moving images smoothly by producing intermediate frames between the original frames.</p> |


| Submenu | Function |
|----------------------------|--|
| Image Enhancement | <p>You can adjust the image resolution.</p> <p> "Adjusting Image Resolution (Image Enhancement)" p.77</p> <p>4K Enhancement: You can project at a doubled resolution.</p> <p>Image Preset Mode: You can select the optimal setting according to the projected image from five presets prepared in advance.</p> <p>Noise Reduction*1, 2, 6: You can smooth out the roughness in progressive images.</p> <p>MPEG Noise Reduction*1, 2: You can reduce dot and block noise that occurs in outlines when projecting MPEG movies.</p> <p>Super-resolution: To display a crisp image, you can reduce the blurring that is created on the edge when the resolution of the image signal is scaled up and projected.</p> <p>Detail Enhancement: You can enhance the contrast of details in an image.</p> |
| Advanced | <p>You can make adjustments by choosing the following items.</p> <p>Gamma: You can adjust the coloring by selecting one of the gamma correction values, or referring to the projected image or a gamma graph.</p> <p>RGBCMY: You can adjust the hue, saturation, and brightness of each color R (red), G (green), B (blue), C (cyan), M (magenta), Y (yellow) individually.</p> <p>Deinterlacing*6, 8: You can convert interlace signals into progressive signals. (IP conversion)</p> <p>Off is ideal for images with a large amount of movement, Video for general video images, and Film/Auto for movie films, computer graphics, and animation.</p> |
| Dynamic Contrast *7 | <p>Set to Normal or High Speed to adjust the iris to obtain the optimum light for images being projected. Select High Speed to make faster iris corrections to match the speed of the scene.</p> |

| Submenu | Function |
|--------------|--|
| Reset | You can reset all adjustment values for the Image menu to their default settings. See the following to return all menu items to their default settings.  "Reset Menu" p.137 |

- *1 This cannot be set when the signal input exceeds WUXGA.
- *2 This cannot be set when 4K Enhancement is enabled.
- *3 This cannot be set when **Edge Blending** is **On**.
- *4 This cannot be set when **Scale** is enabled.
- *5 This cannot be set when **Image Processing** is set to **Fast 1**.
- *6 This cannot be set when **Image Processing** is set to **Fast 2**.
- *7 This can be set only if **Color Mode** is set to **Dynamic** or **Cinema**.
- *8 This can be set only when the input signal is 480i, 576i, or 1080i.

Signal Menu

Settable items vary depending on the image signal and source currently being projected. Setting details are saved for each image signal.

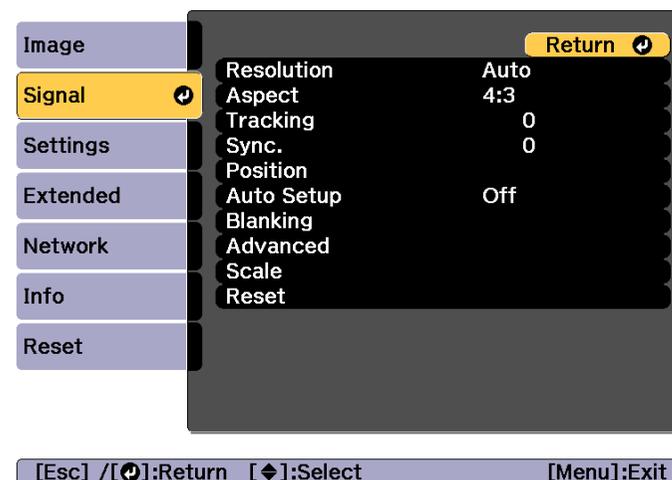


| Submenu | Function |
|-------------------|--|
| Resolution | (Only available when an analog RGB computer signal is being input.) Set to Auto to automatically identify the resolution of the input signal. If images are not projected correctly when set to Auto , for example if some of the image is missing, set to Wide for wide screens, or set to Normal for 4:3 or 5:4 screens depending on the connected computer. Manual allows you to specify the resolution. This is ideal when connected computer is fixed. |
| Aspect | You can set the <u>Aspect Ratio</u>  for projected images.  "Changing the Aspect Ratio of the Projected Image" p.71 |
| Tracking | (Only available when an analog RGB computer signal is being input.) You can adjust computer images when vertical stripes appear in the images. |
| Sync. | (Only available when an analog RGB computer signal is being input.) You can adjust computer images when flickering, fuzziness, or interference appear in the images. |

| Submenu | Function |
|-------------------|--|
| Position | You can adjust the display position up, down, left, and right when a part of the image is missing so that the whole image is projected. |
| Auto Setup | (Only available when an analog RGB computer signal is being input.) Set to On to automatically adjust Tracking, Sync., and Position to the optimum state when the input signal changes. |
| Overscan | Changes the output image ratio (the range of the projected image). You can set the cropping range to 4% or 8% . When set to Auto , this is automatically adjusted according to the input signal. |
| Blanking | You can hide images in the set area. Use the [◀] [▶] buttons to adjust the area. You can adjust by using a combination of Top , Bottom , Left , and Right . |
| Advanced | You can set by choosing the following items. Video Range: Select the video range for the input signal from the HDMI port, DVI-D port, HDBaseT port, or SDI. Set to Expanded if you are concerned about misadjusted black levels or blown out highlights in the image. Input Signal: Select an input signal from the Computer port or BNC port. If set to Auto , the input signal is set automatically according to the connected equipment. If colors do not appear correctly when set to Auto , select the appropriate signal according to the connected equipment. Image Processing: Changes settings for image processing. <ul style="list-style-type: none"> • Fine: When Frame Interpolation is On, Frame Interpolation is enabled. • Fast 1: Images are displayed quicker without any loss in image quality. (Only enabled when Video or Film/Auto are set for Progressive) • Fast 2: Images are displayed quicker than Fast 1. |
| Scale | When using multiple projectors to project one image, adjust the range of the image displayed by each projector. ☞ "Displaying a Scaled Image" p.95 |

| Submenu | Function |
|--------------|--|
| Reset | You can reset all adjustment values on the Signal menu to their default settings, except for Input Signal . See the following to return all menu items to their default settings. ☞ "Reset Menu" p.137 |

Settings Menu

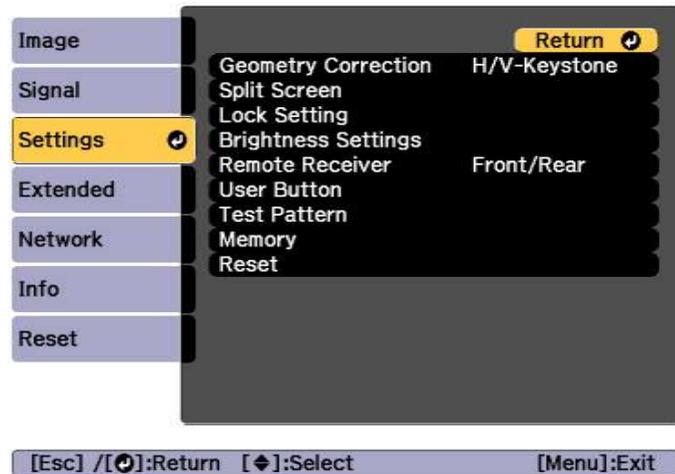


| Submenu | Function |
|----------------------------|--|
| Geometry Correction | <p>You can correct distortion.</p> <p>☛ "Correcting Distortion in the Projected Image" p.55</p> <ul style="list-style-type: none"> • Off: Temporarily cancels the geometry correction. • H/V-Keystone: Adjust V-Keystone, V-Balance, H-Keystone, and H-Balance to correct vertical and horizontal keystone distortion. • Quick Corner: Select and correct the four corners of the projected image. • Curved Surface: Corrects distortion that occurs when projecting on a curved surface. • Corner Wall: Corrects distortion that occurs when projecting on a surface with right angles. • Point Correction: Divides the projected image into a grid and corrects the distortion by moving the selected point of intersection from side to side and up and down. • Memory: You can save the adjustment value of the geometry correction and load it when needed. ☛ "Memory Function" p.103 |
| Split Screen | <p>You can split the screen into two screens.</p> <p>☛ "Projecting Two Images Simultaneously (Split Screen)" p.97</p> |
| Lock Setting | <p>Control Panel Lock: You can use this to restrict operation of the projector's control panel. ☛ "Control Panel Lock" p.111</p> <p>Lens Lock: When set to On, [Lens Shift], [Zoom], and [Focus] button operations on the remote control are disabled. ☛ "Lens Lock" p.112</p> |

| Submenu | Function |
|----------------------------|---|
| Brightness Settings | <p>Light Source Mode: Set the brightness for the light source.</p> <ul style="list-style-type: none"> • Normal: Select this if you do not want to decrease the brightness. This makes the target usage time approximately 20,000 hours. • Quiet: Select this if you are concerned about the noise made by the fan, This sets the brightness at 70%. This makes the target usage time 20,000 hours. • Extended: Select this to extend the life expectancy of the light source. This sets the brightness at 70%. This makes the target usage time approximately 30,000 hours. • Customized: Select this to set the brightness level within a range of 30 to 100%. <p>Brightness Level: (Only available when Light Source Mode is set to Customized) Sets the brightness for the light source.</p> <p>Constant Brightness: (Only available when Light Source Mode is set to Customized) When set to On, the brightness of the light source set in Brightness Level is maintained as it is. When Constant Brightness is set to On, you cannot change the settings for Light Source Mode and Brightness Level.  "Setting the Brightness" p.67</p> <p>Estimated Remains: When Constant Brightness is set to On, this indicates the amount of time for which constant brightness can be maintained.  "Guide to Estimated Remains" p.69</p> |
| Remote Receiver | <p>You can limit the reception of the operation signal from the remote control.</p> <p>When set to Off, you cannot perform any operations from the remote control. If you want to make operations from the remote control, hold down the [Menu] button on the remote control for at least 15 seconds to reset the setting to its default value.</p> |

| Submenu | Function |
|---------------------|---|
| User Button | <p>Select the items in the Configuration menu that you want to assign to the [User1], [User2], and [User3] buttons on the remote control. The following items can be assigned. Light Source Mode, Multi-Projection, Resolution, Image Processing, Display the QR Code, Image Enhancement, Frame Interpolation, Screen Matching, Color Calibration, Help, Split Screen</p> |
| Test Pattern | <p>You can display a test pattern to adjust the projection without connecting other equipment when you set up the projector.  "Displaying a Test Pattern" p.29</p> |
| Memory | <p>Perform operations and make settings for the memory function.  "Memory Function" p.103</p> |
| Reset | <p>You can reset all adjustment values on the Settings menu to their default settings, except for User Button and Memory. See the following to return all menu items to their default settings.  "Reset Menu" p.137</p> |

Extended Menu

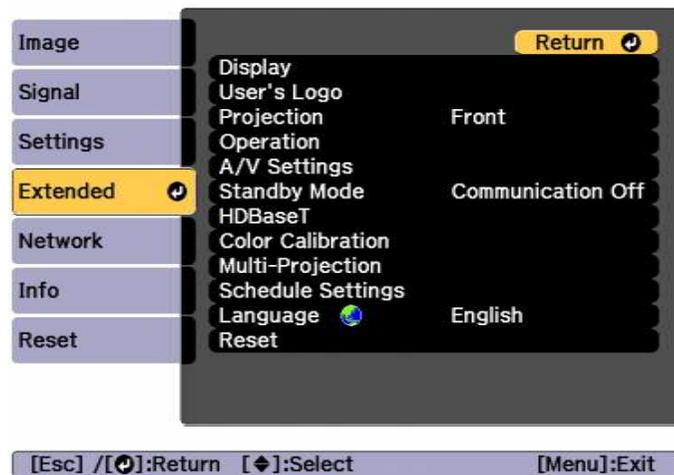

| Submenu | Function |
|---------------|---|
| Display | <p>You can make settings related to the projector's display.</p> <p>Menu Position: Select the position to display the menu on the projected screen.</p> <p>Message Position: Select the position to display the message on the projected screen.</p> <p>Messages: When set to Off, the following items will not be displayed.</p> <p>Item names when the Source, Color Mode, or Aspect is changed, messages when no signal is being input, and warnings such as High Temp Warning.</p> <p>Display Background*: You can set the screen background to Black, Blue, or Logo when no image signal is available.</p> <p>Startup Screen*: Set to On to display the User's Logo when you turn on the projector.</p> <p>Standby Confirmation: If it is set to Off, you can turn off the power simply by pressing the [Power] button once.</p> <p>Air Filter Notice: You can set whether or not (On/Off) to enable Air Filter Notice. When this is set to On and a clog in the air filter is detected, the message is displayed on the screen.</p> <p>Screen: (This is unavailable when projecting images from a computer over a network.) Set the aspect ratio and position of the projected screen according to the screen being used.</p> <p>☛ "Screen Settings" p.28</p> <p>Panel Alignment: Correct color misalignments (red and blue) in the screen.</p> <p>☛ "Panel Alignment" p.183</p> <p>Color Uniformity: Adjusts the color tone balance for the whole screen.</p> <p>☛ "Color Uniformity" p.184</p> <p>OSD Rotation: Rotates the menu direction by 90 degrees.</p> |
| User's Logo * | <p>You can change the user's logo that is displayed as a background during Display Background, Shutter, and so on.</p> <p>☛ "Saving a User's Logo" p.101</p> |

| Submenu | Function |
|-------------------|---|
| Projection | <p>Select from one of the following projection methods depending on how the projector is installed.</p> <p>Front, Front/Ceiling, Rear, and Rear/Ceiling</p> <p>You can change the setting as follows by pressing down the [Shutter] button for about five seconds.</p> <p>Front ↔ Front/Ceiling</p> <p>Rear ↔ Rear/Ceiling</p> |

| Submenu | Function |
|------------------|---|
| Operation | <p>Direct Power On: Set to On to turn on the projector simply by supplying power.</p> <p>When the power cord is plugged in and the main power switch is turned on, note that the projector turns on automatically in cases such as a power outage being restored.</p> <p>Sleep Mode: When set to On, this automatically stops projection when no image signal is being input and no operations are carried out.</p> <p>Sleep Mode Timer: When Sleep Mode is set to On, you can set the time before the projector automatically turns off within a range of 1 to 30 minutes.</p> <p>High Altitude Mode: Set to On when using the projector above an altitude of 1,500 m.</p> <p>Startup Source Search: Set to On to automatically detect an image signal from another source and project the image when there is no image signal from the current source.</p> <p>Auto Power On: If it is set to Computer or BNC, the projector is turned on when the signals are received from the Computer port or BNC port, even when the projector is in standby status.</p> <p>Shutter Settings: Make settings related to the shutter.</p> <ul style="list-style-type: none"> • Fade-in: Specify the number of seconds for fade-in when displaying an image. • Fade-out: Specify the number of seconds for fade-out when hiding an image. • Shutter Timer: When it is set to On, if no operations are performed for about 2 hours after shutter is activated, the projector turns off automatically. • Shutter Release: If it is set to Shutter, it is only released by pressing the Shutter Button (or by sending an off command to set the [Shutter] to off). When set to Any Button, the shutter function is released when any operation is performed on the projector. |

| Submenu | Function |
|---------|--|
| | <p> "Hiding the Image Temporarily (Shutter)" p.100</p> <p>Advanced: The following items can be set.</p> <ul style="list-style-type: none"> • BNC Sync Termination: Set the termination for the signal from the BNC port. This should usually be set to Off. Set to On when analog (75Ω) termination such as for switchers is necessary. • Beep: When this is set to On, the confirmation buzzer beeps to notify you that the power turns on or off, or cooling down is finished. • Indicators: When set to Off, the projector's indicators are turned off, except for abnormality or warning. • Instant Off: When set to Enabled, the projector goes into standby status in approximately three seconds after Power Off. If you turn the power on immediately after turning it off, command communication may be cut off. To stabilize command communication, set this to Disabled. When set to Disabled, the projector goes into standby status in approximately 75 seconds after power off. • Inv Direction Button: Set this to On when the projector is installed on a ceiling. • HDMI DDC Buffer: If the image from a device connected using an HDMI extension cable is not displayed correctly, turning this On may improve the image. • DVI-D DDC Buffer: If the image from a device connected using a DVI extension cable is not displayed correctly, turning this On may improve the image. • AC Voltage Monitoring: When this is set to On and the projector is turned off by any method other than pressing the power button (including direct shutdown), a power supply voltage warning message is displayed the next time the projector turns on. If you are using direct shutdown, set this to Off. <p>Date & Time: Make system time settings for the projector.</p> <p> "Setting the Time" p.38</p> <p>Lens Calibration: Acquires the information of the lens installed on the projector.</p> |

| Submenu | Function |
|---------------------|--|
| A/V Settings | <p>A/V Output: Set this to Always On if you want to output images to an external device even when the projector is in standby status.</p> <p>Monitor Out: Select the image source output to an external monitor connected to the Monitor Out port when the projector is in standby status. When set to Auto, analog RGB signals from the Computer input port or the BNC input port are output depending on which source was selected when the projector was turned off.</p> |
| Standby Mode | <p>If you set Communication On, you can perform the following operations even if the projector is in standby mode.</p> <ul style="list-style-type: none"> • Monitor and control the projector over a network. • Output audio and images to an external device. (Only when A/V Output is set to Always On.) • Communication from the HDBaseT port is enabled. (Only when Control Communications is set to On.) <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p> When monitoring or controlling the projector using wireless LAN, set Connection Mode to Advanced.</p> <p> Network - Wireless LAN - Connection Mode p.131</p> </div> |

| Submenu | Function |
|-------------------|---|
| HDBaseT | <p>Control Communications (This cannot be set when Extron XTP is set to On.) When set to On, Ethernet communication, serial communication, and the wired remote control through the HDBaseT Transmitter connected to the HDBaseT port are all enabled.</p> <p>Extron XTP: Set to On when you connect the Extron XTP transmitter or switcher to the HDBaseT port. See the following Extron Web site for more details on the XTP system. http://www.extron.com/</p> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;">  <ul style="list-style-type: none"> • When Control Communications or Extron XTP is set to On, Standby Mode is automatically set to Communication On. • When Control Communications or Extron XTP is On, the projector's LAN port, RS-232 port, and Remote port are disabled. • When Extron XTP is set to On, the fan may rotate in standby mode but this is not abnormal. </div> |
| Color Calibration | <p>Start Auto Adjustment: Automatically adjusts the color tone for the whole screen.  "Color Calibration" p.182</p> <p>Undo: Undoes the auto adjustment.</p> <p>Redo: Redoes the auto adjustment.</p> <p>Color Uniformity: Adjusts the color tone balance for the whole screen.  "Color Uniformity" p.184</p> <p>Reset: You can reset all adjustment values for Color Calibration to their default values.</p> |

| Submenu | Function |
|-------------------|---|
| Multi-Projection | <p>Make settings when projecting from multiple projectors.  "Multi-Projection Function" p.83</p> <p>Projector ID: Set the ID from 1 to 30. Off indicates that no ID is set.  "ID Settings" p.37</p> <p>Projector Grouping: When using multiple projectors to project one image, select the projectors being used.</p> <p>Tiling: Set the number of split screens and positions of each projected image.  "Tiling" p.84</p> <p>Geometry Correction: Corrects distortion in the projected image.  "Correcting Distortion in the Projected Image" p.55</p> <p>Edge Blending: Corrects a border between multiple images to create a seamless screen.  "Edge Blending" p.87</p> <p>Black Level: Adjusts the differences in brightness and tone for areas where images overlap and areas where the images do not overlap.  "Black Level" p.88</p> <p>Scale: When using multiple projectors to project one image, adjust the range of the image displayed by each projector.  "Displaying a Scaled Image" p.95</p> <p>Screen Matching: Adjusts the tint and brightness for each projector.  "Screen Matching" p.92</p> <p>Reset: You can reset all adjustment values for the Multi-Projection menu to their default settings.</p> |
| Schedule Settings | <p>You can set the projector's schedule so that it performs a specific operation at a pre-scheduled time.  "Scheduling Function" p.105</p> |
| Language | <p>You can set the language for messages and menus.</p> |

| Submenu | Function |
|--------------|--|
| Reset | <p>You can reset all adjustment values for the Extended menu to their default settings. However, the following items are not reset.</p> <p>Screen Type, Screen Position, Projection, High Altitude Mode, Startup Source Search, Shutter Release, Inv Direction Button, Date & Time, Lens Calibration, A/V Output, Monitor Out, Standby Mode, Control Communications, Extron XTP, Projector ID, Color Calibration, Projector Grouping, Screen Matching, Color Matching, and Language</p> <p>See the following to return all menu items to their default settings.</p> <p>☛ "Reset Menu" p.137</p> |


* *When **User's Logo Protection** is set to **On** in **Password Protection**, you cannot change settings related to user's logo. You can make changes after setting **User's Logo Protection** to **Off**.

☛ "Managing Users (Password Protection)" [p.109](#)

Network Menu

When **Network Protection** is set to **On** in **Password Protection**, a message is displayed and the network settings cannot be changed. Set **Network Protection** to **Off** and then configure the network.

☛ "Setting Password Protection" [p.109](#)

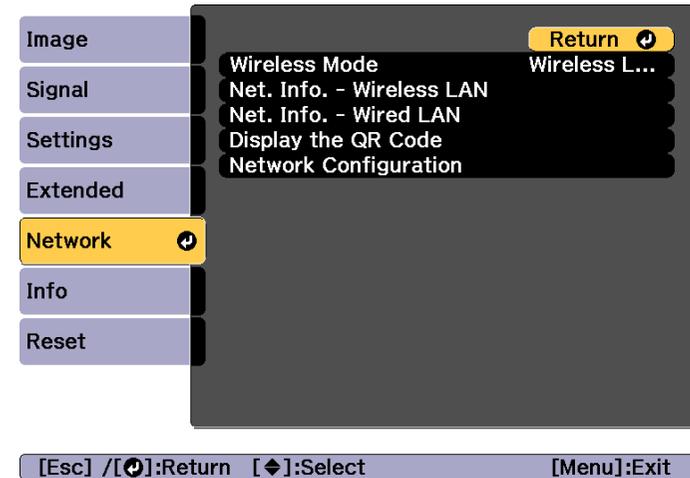

| Submenu | Function |
|----------------------------------|---|
| Wireless Mode | Set this to Wireless LAN On when connecting the projector and a computer via a wireless LAN. If you do not want to connect via wireless LAN, turn it Off to prevent unauthorized access by others. |
| Net. Info. - Wireless LAN | <p>Displays the following network setting status information.</p> <ul style="list-style-type: none"> • Connection Mode • Wireless LAN Sys. • Antenna Level • Projector Name • SSID • DHCP • IP Address • Subnet Mask • Gateway Address • MAC Address • Region Code |

| Submenu | Function |
|-------------------------------|--|
| Net. Info. - Wired LAN | Displays the following network setting status information. <ul style="list-style-type: none"> • Projector Name • DHCP • IP Address • Subnet Mask • Gateway Address • MAC Address |
| Display the QR Code | Displays the QR code. |
| Network Configuration | The following menus are available for setting Network items. Basic, Wireless LAN, Wired LAN, Notifications, Others, Reset |

Notes on operating the Network menu

Selecting from the top menu and sub menus, and changing selected items is the same as making operations from the Configuration menu.

When done, make sure you go to the **Complete** menu, and select **Yes**, **No**, or **Cancel**. When you select **Yes** or **No**, you are returned to the Configuration menu.



Yes: Saves the settings and exits the Network menu.

No: Does not save the settings and exits the Network menu.

Cancel: Continues displaying the Network menu.

Soft keyboard operations

The Network menu contains items that require input of alphanumeric during setup. In this case, the following software keyboard is displayed. Use [▲][▼][◀][▶] buttons to move the cursor to the desired key, and then press the [↵] button to enter the selected character. Enter figures by holding down the [Num] button on the remote control, and pressing the numeric buttons. After inputting, press **Finish** on the keyboard to confirm your input. Press **Cancel** on the keyboard to cancel your input.




- Each time the **CAPS** key is selected and the [↵] button is pressed, it sets and changes between upper case and lower case letters.
- Each time the **SYM1/2** key is selected and the [↵] button is pressed, it sets and changes the symbol keys for the section enclosed by the frame.

The following types of character can be entered.

| | |
|----------------|--|
| Numbers | 0123456789 |
| Letters | ABCDEFGHIJKLMNOPQRSTUVWXYZ abcdefghijklmnopqrstuvwxyz |
| Symbols | !"#\$%&'()*+,-./:;<=>@[¥]^_`{ }~ |

Basic menu

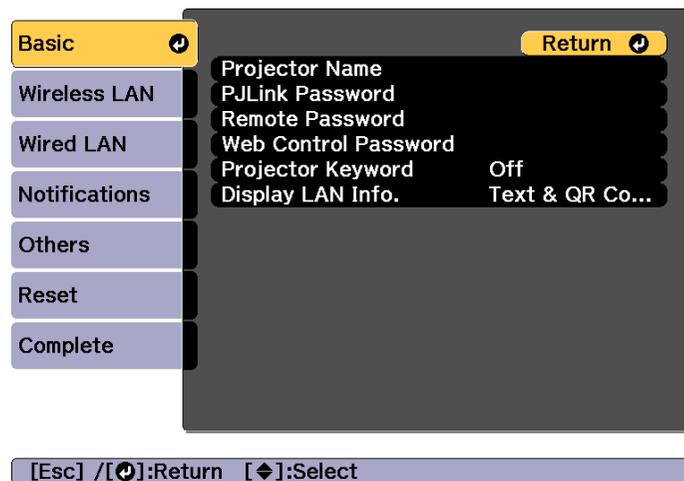


| Submenu | Function |
|------------------------|---|
| Projector Name | The projector's name is displayed when using the supplied application EasyMP Multi PC Projection. When editing, you can enter up to 16 single-byte alphanumeric characters. ("* + , / : ; < = > ? [\] ` and spaces cannot be used.) |
| PJLink Password | Set a password to use when you access the projector using compatible PJLink software. You can enter up to 32 single-byte alphanumeric characters. (Spaces and symbols other than @ cannot be used.) ☛ "About PJLink" p.195 |
| Remote Password | Set a password to use Remote in Epson Web Control. You can enter up to 8 single-byte alphanumeric characters. (* : and spaces cannot be used.) The default user name is "EPSONREMOTE" and the default password is "guest". ☛ "Changing Settings Using a Web Browser (Epson Web Control)" p.188 |

| Submenu | Function |
|-----------------------------|--|
| Web Control Password | Set a password for authentication to use when making settings and controlling the projector using Web Control in Epson Web Control. You can enter up to eight single-byte alphanumeric characters (* : and spaces cannot be used). The default user name is "EPSONWEB" and the default password is "admin". ☛ "Changing Settings Using a Web Browser (Epson Web Control)" p.188 |
| Projector Keyword | When set to On , you have to enter the keyword when you try to connect the projector to a computer via a network. As a result, you can prevent presentations from being interrupted by connections from other computers. Normally this should be set to On . ☛ EasyMP Multi PC Projection Operation Guide |
| Display LAN Info. | Set the display format for the projector's network information. If you display the QR code, you can connect to a network just by reading the QR code in Epson iProjection. Text & QR Code is set by default. |

Wireless LAN menu

To connect the projector to a computer using a wireless LAN, install the Wireless LAN unit (ELPAP10).

☛ "Installing the Wireless LAN Unit" [p.48](#)

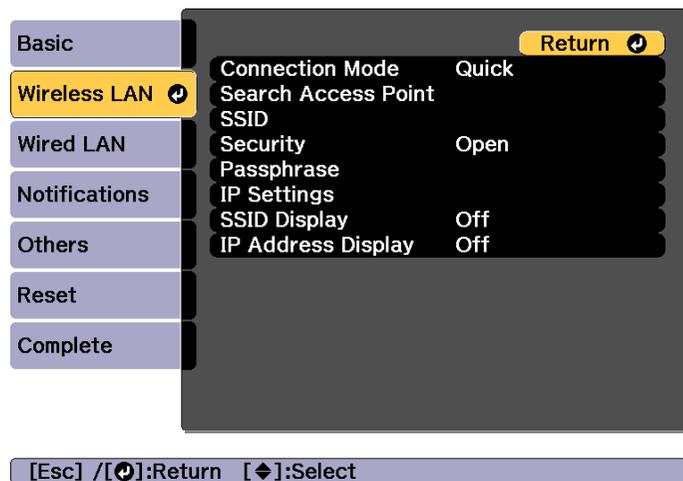

| Submenu | Function |
|----------------------------|--|
| Connection Mode | <p>Set the connection mode to use when connecting the projector and a computer via a wireless LAN.</p> <p>Quick: Lets you directly connect to a smartphone, tablet, or computer via a wireless LAN.</p> <p>Advanced: Lets you connect to a smartphone, tablet, or computer over a wireless LAN access point. The connection is established in infrastructure mode.</p> |
| Search Access Point | <p>When Connection Mode is set to Advanced, you can search for surrounding access points, and set the SSID to be connected from those access points. Depending on the access point settings, they may not be displayed in the list.</p> <p>☛ "Search Access Point screen" p.133</p> |
| SSID | <p>Enter an SSID. When an SSID is provided for the wireless LAN system in which the projector participates, enter the SSID. You can enter up to 32 single-byte alphanumeric characters.</p> |

| Submenu | Function |
|-------------------|--|
| Security | <p>Select the security type according to the wireless LAN settings. When setting security, follow the instructions of your network administrator.</p> |
| Passphrase | <p>Enter a passphrase used to connect to the network when Security is set to WPA2-PSK or WPA/WPA2-PSK.</p> <p>You can enter at least 8 and up to 63 single-byte alphanumeric characters.</p> <p>You can enter up to 32 characters on the Configuration menu. When entering more than 32 characters, use your Web browser to enter the text.</p> <p>☛ "Changing Settings Using a Web Browser (Epson Web Control)" p.188</p> <p>When Connection Mode is set to Quick, the initial passphrase is set.</p> |
| Channel | <p>You can select the channels used to connect in Quick mode. If interference from other signals occurs, use a different channel.</p> |

| Submenu | Function |
|---------------------------|--|
| IP Settings | <p>(This can only be set if Connection Mode is set to Advanced.) Configure the network.</p> <p>DHCP: Set to On to configure the network using DHCP. If this is set to On, you cannot set any more addresses.</p> <p>IP Address: You can enter the IP address assigned to the projector. You can enter a number from 0 to 255 in each field of the address. However, the following IP addresses cannot be used. 0.0.0.0, 127.x.x.x, 224.0.0.0 to 255.255.255.255 (where x is a number from 0 to 255)</p> <p>Subnet Mask: You can enter the Subnet Mask for the projector. You can enter a number from 0 to 255 in each field of the address. However, the following subnet masks cannot be used. 0.0.0.0, 255.255.255.255</p> <p>Gateway Address: You can enter the IP address for the gateway for the projector. You can enter a number from 0 to 255 in each field of the address. However, the following Gateway Address cannot be used. 0.0.0.0, 127.x.x.x, 224.0.0.0 to 255.255.255.255 (where x is a number from 0 to 255)</p> |
| SSID Display | To prevent the SSID from being displayed on the LAN Standby screen, set this to Off . |
| IP Address Display | To prevent the IP address from being displayed on the LAN Standby screen, set this to Off . |

Type of security

When the optional wireless LAN unit is attached and being used in Advanced connection mode, it is strongly recommended that you set security.

WPA is an encryption standard that improves the security for wireless networks. The projector supports TKIP and AES encryption methods.

WPA also includes user authentication functions. WPA authentication provides two methods: using an authentication server, or authenticating


between a computer and an access point without using a server. This projector supports the latter method, without a server.



For setting details, follow the instructions from your network administrator.


Search Access Point screen

Detected access points are displayed in a list.

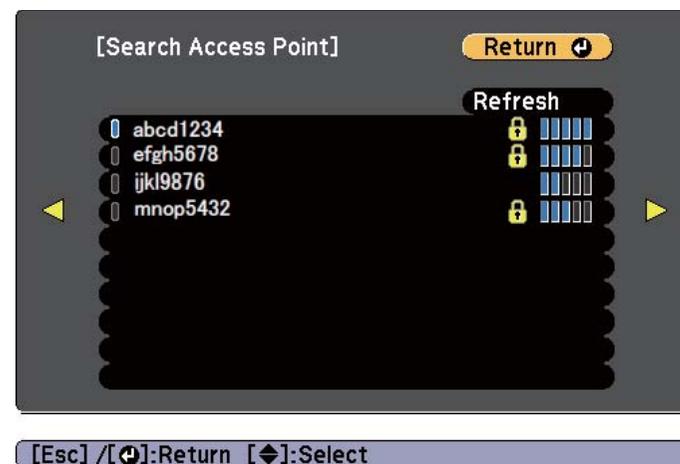

| Submenu | Function |
|---|---|
| Refresh | Searches for the access point again. |
|  | Indicates an already set access point. |
|  | Indicates the access points where security is set. If you select an access point where security has not been set, the Wireless LAN menu is displayed. If you select an access point where security has been set, the Security menu is displayed. Select a type of security according to the security settings for the access point. |

Wired LAN menu

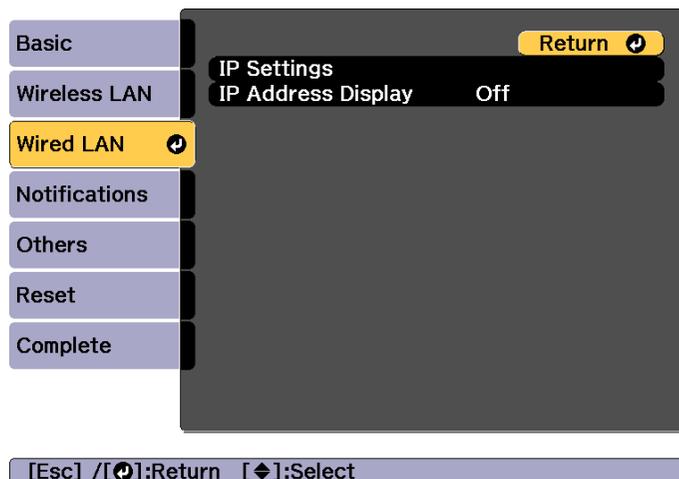


| Submenu | Function |
|--------------------|--|
| IP Settings | <p>You can make settings related to the following addresses.</p> <p>DHCP: Set to On to configure the network using DHCP. If this is set to On, you cannot set any more addresses.</p> <p>IP Address: You can enter the IP address assigned to the projector. You can enter a number from 0 to 255 in each field of the address. However, the following IP addresses cannot be used. 0.0.0.0, 127.x.x.x, 224.0.0.0 to 255.255.255.255 (where x is a number from 0 to 255)</p> <p>Subnet Mask: You can enter the Subnet Mask for the projector. You can enter a number from 0 to 255 in each field of the address. However, the following subnet masks cannot be used. 0.0.0.0, 255.255.255.255</p> <p>Gateway Address: You can enter the IP address for the gateway for the projector. You can enter a number from 0 to 255 in each field of the address. However, the following Gateway Address cannot be used. 0.0.0.0, 127.x.x.x, 224.0.0.0 to 255.255.255.255 (where x is a number from 0 to 255)</p> |

| Submenu | Function |
|---------------------------|--|
| IP Address Display | To prevent the IP address from being displayed on the LAN Standby screen, set this to Off . |

Notifications menu

When this is set, you receive an email notification if a problem or warning occurs in the projector.


☛ "Reading error notification mail" [p.193](#)

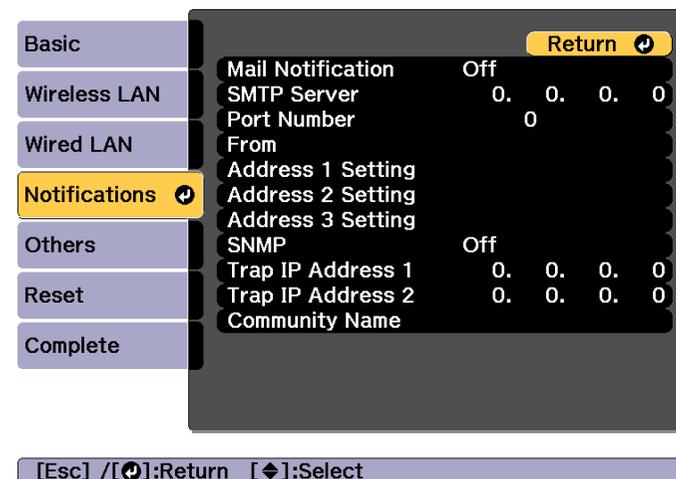

| Submenu | Function |
|--------------------------|--|
| Mail Notification | Set to On to send an email to the preset addresses when a problem or warning occurs with a projector. |
| SMTP Server | <p>You can input the IP Address for the SMTP server for the projector.</p> <p>You can enter a number from 0 to 255 in each field of the address. However, the following IP addresses cannot be used. 127.x.x.x, 224.0.0.0 to 255.255.255.255 (where x is a number from 0 to 255)</p> |

| Submenu | Function |
|--|--|
| Port Number | You can input the port number for the SMTP server. The default value is 25. You can input numbers between 1 to 65535. |
| From | Enter the email address of the sender. |
| Address 1 Setting/Address 2 Setting/Address 3 Setting | Set the destination email addresses for the notification email, and the notification content. You can register up to three destinations. You can enter up to 32 single-byte alphanumeric characters for the email addresses. (" () , ; < > [\] and spaces cannot be used.) |
| SNMP | Set to On to monitor the projector using SNMP . To monitor the projector, you need to install the SNMP manager program on your computer. SNMP should be managed by a network administrator. The default value is Off . |
| Trap IP Address 1/Trap IP Address 2 | You can register up to two IP addresses for the SNMP trap notification destination. You can enter a number from 0 to 255 in each field of the address. However, the following IP addresses cannot be used. 127.x.x.x, 224.0.0.0 to 255.255.255.255 (where x is a number from 0 to 255) |
| Community Name | Set the community name of SNMP. You can enter up to 32 single-byte alphanumeric characters. (Spaces and symbols other than @ cannot be used.) |

Others menu

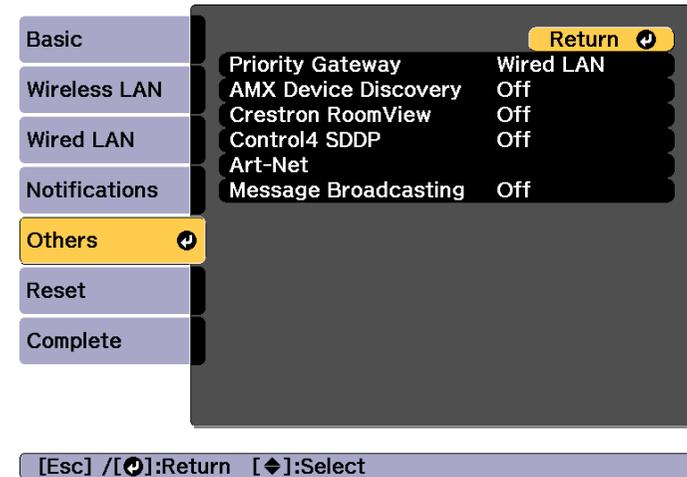


| Submenu | Function |
|-----------------------------|--|
| Priority Gateway | For the priority gateway, select either Wired or Wireless . |
| AMX Device Discovery | When you want to allow the projector to be detected by AMX Device Discovery , set this to On . Set this to Off if you are not connected to an environment controlled by a controller from AMX or AMX Device Discovery. |
| Crestron RoomView | Set this to On only when monitoring or controlling the projector over the network using Crestron RoomView®. Otherwise, set this to Off .  "About Crestron RoomView®" p.196 Changes in projector settings take effect upon restarting. When this is set to On , the following functions are not available. <ul style="list-style-type: none"> • Epson Web Control • Message Broadcasting (EasyMP Monitor plugin) |
| Control4 SDDP | Set to On if you want to enable the acquisition of the device information by Control4®Simple Device Discovery Protocol (SDDP) . |

| Submenu | Function |
|-----------------------------|---|
| Art-Net | <p>Art-Net: Set this to On to control the projector using Art-Net. "About Art-Net" p.200</p> <p>Net/Sub-Net/Universe: Sets the projector's Net/Sub-Net/Universe.</p> <p>Start Channel: Sets the start channel that handles Art-Net. "Channel definitions" p.200</p> |
| Message Broadcasting | <p>You can switch the Message Broadcasting function to enable or disable.</p> <p>You can download Message Broadcasting and its Operation Guide from the following Web site. http://www.epson.com</p> |

Reset menu


Resets all of the network settings.

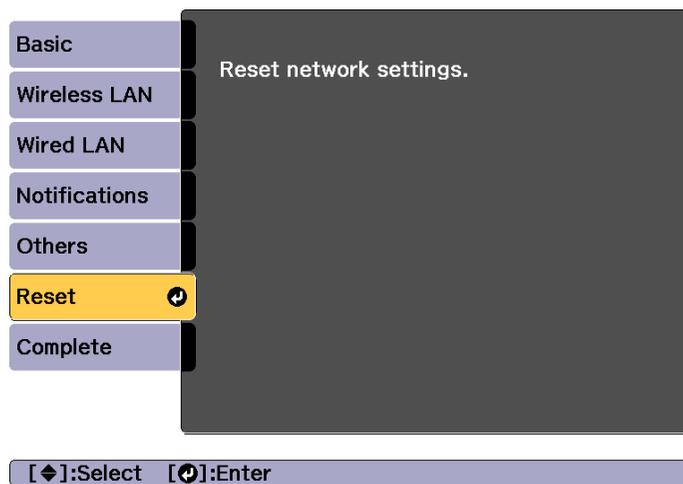

| Submenu | Function |
|--------------------------------|---|
| Reset network settings. | To reset all of the Network settings, select Yes . |

Info Menu (Display Only)

Lets you check the status of the image signals being projected and the status of the projector. Items that can be displayed vary depending on the source currently being projected.

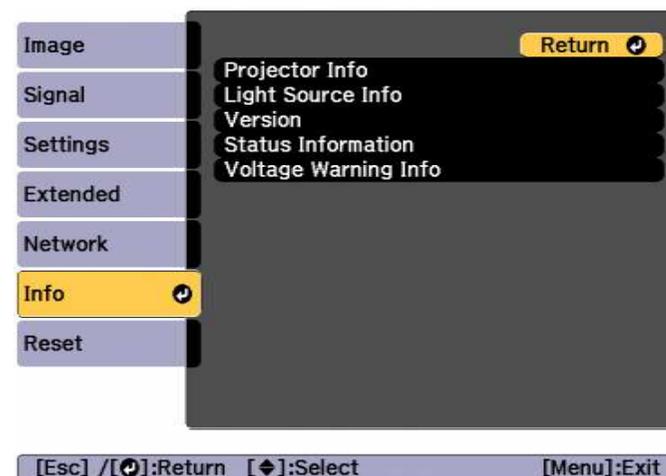


| Submenu | Function | |
|-----------------------|------------------------|---|
| Projector Info | Total Op. Time* | Displays the projector's cumulative operating time. |
| | Operation Hours | Displays the operation time after turning on the projector. |
| | Source | You can display the source name for the connected equipment currently being projected. |
| | Input Signal | You can display the content of Input Signal set in the Signal menu according to the source. |
| | Resolution | You can display the resolution. |
| | Refresh Rate | You can display the <u>Refresh Rate</u> |

| Submenu | | Function |
|--------------------------|-----------------------------------|--|
| | Sync Info | You can display the image signal information. This information may be needed if service is required. |
| | Status | This is information about errors that have occurred on the projector. This information may be needed if service is required. |
| | Serial Number | Displays the projector's serial number. |
| | Lens Type | Displays the model number of your lens. |
| | Event ID | When problems occur when the projector and computer are connected through the network, information on the problem is displayed using an Event ID. See the following page for information on interpreting the Event ID. ☛ "About Event ID" p.173 |
| | HDBaseT Signal Level | You can display the image signal information from the HDBaseT port. |
| Light Source Info | Light Source Hours | Displays the operating time for the light source according to the light source mode. |
| | Estimated Remains | When Constant Brightness is set to On , this displays the amount of time for which the brightness of the light source can be maintained. |
| Version | Main Video2 Status Monitor | Displays the projector's firmware version information. |
| | Status Information | Displays the projector's status. ☛ "Reading Status Monitor" p.154 |

| Submenu | Function |
|-----------------------------|---|
| Voltage Warning Info | Displays a warning regarding the power voltage. |

* The cumulative use time is displayed as "0H" for the first 10 hours. 10 hours and above is displayed as "10H", "11H", and so on.

Reset Menu

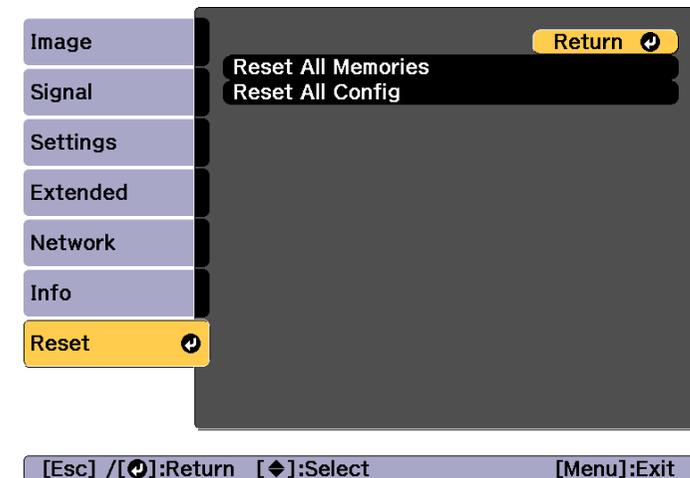

| Submenu | Function |
|---------------------------|---|
| Reset All Memories | Resets all names and settings saved in Memory , Lens Position , and Geometry Correction . ☛ "Memory Function" p.103 |
| Reset All Config | You can reset all items in the Configuration menu to their default settings. The following items are not reset to their defaults: Input Signal , Memory , User's Logo , all items for Network menus, Language , Date & Time , Panel Alignment , Color Uniformity , Lens Calibration , Color Calibration , Projector Grouping , Screen Matching , and Color Matching . |

Once the Configuration menu content has been set for one projector, you can use it to perform batch setup for multiple projectors (batch setup function). The batch setup function is only for projectors with the same model number.

Use one of the following methods.

- Setup using a USB flash drive.
- Setup by connecting the computer and projector with a USB cable.
- Setup using EasyMP Network Updater.

This manual explains the USB flash drive and the USB cable methods.



- The following content is not reflected by the batch setup function.
 - The Network menu settings (except for the Notifications menu and the Others menu)
 - Status and Light Source Info in the Info menu
- Perform batch setup before adjusting the projected image. Adjustment values for the projected image, such as Geometry Correction are reflected by the batch setup function. If batch setup is performed after adjusting the projected image, the adjustments you made may change.
- By using the batch setup function, the registered User's Logo is set for the other projectors. Do not register confidential information and so on as the User's Logo.



Caution

Performing batch setup is the customers responsibility. If batch setup fails due to a power failure, communication error, and so on, the customer is responsible for any repair costs incurred.

Setup Using a USB Flash Drive


This section explains how to perform batch setup using a USB flash drive.



- Use a FAT format USB flash drive.
- The batch setup function cannot be used by USB flash drives that incorporate security functions. Use a USB flash drive that does not incorporate security functions.
- The batch setup function cannot be used by USB card readers or USB hard disks.

Saving settings to the USB flash drive


- 1** Turn off the main power switch while the power cord is connected to the projector, and check that all of the projector's indicators turn off.
- 2** Connect the USB flash drive to the projector's wireless LAN unit port.
 - ☛ "Installing the Wireless LAN Unit" [p.48](#)

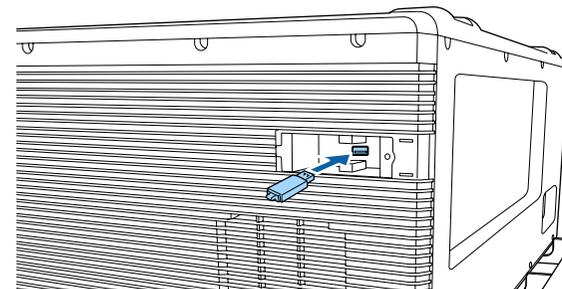




- Connect the USB flash drive directly to the projector. If the USB flash drive is connected to the projector through a USB hub, the settings may not be saved correctly.
- Connect an empty USB flash drive. If the USB flash drive contains data other than the batch setup file, the settings may not be saved correctly.
- If you have saved a batch setup file from another projector to the USB flash drive, delete the file or change the file name. The batch setup function cannot overwrite a batch setup file.
- The file name for the batch setup file is PJCONFDATA.bin. If you need to change the file name, add text after PJCONFDATA. If you change the file name in any other way, the projector may not be able to recognize the file correctly.
- You can only use single-byte characters for the file name.

3 While holding down the [Esc] button, turn on the main power switch.

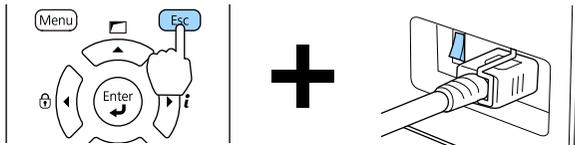

When the projector's indicators turn on as follows, release the [Esc] button.

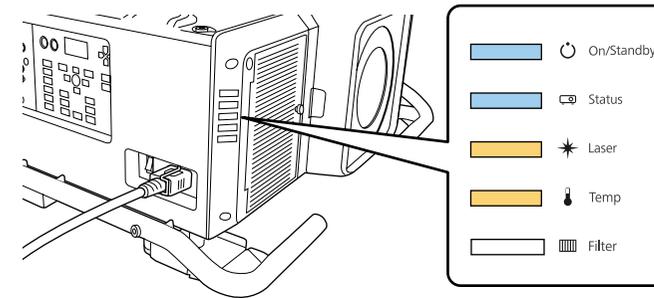


| | | | |
|--------------|-----------|-------------|-------------|
| Power supply | Status | Laser | Temp |
| Blue - On | Blue - On | Orange - On | Orange - On |

When all of the indicators start flashing, the batch setup file is being written.

Caution

- Do not disconnect the power cord from the projector or turn off the main power switch while the file is being written. If power is not being supplied, the projector may not startup correctly.
- Do not disconnect the USB flash drive from the projector while the file is being written. If the USB flash drive is disconnected, the projector may not start correctly.

When writing completes normally, the projector enters standby status.

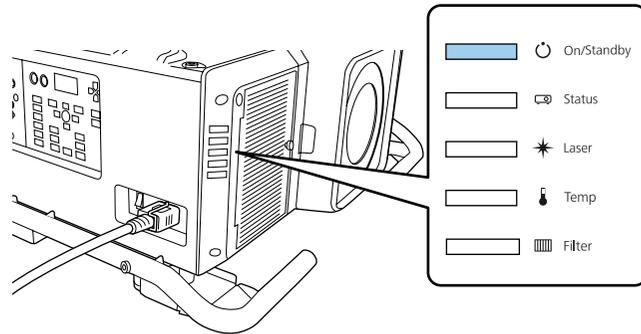


Power supply
Blue - On

When the projector is in standby status, remove the USB flash drive.


Reflecting saved settings to other projectors

- 1** Turn off the main power switch while the power cord is connected to the projector, and check that all of the projector's indicators turn off.
- 2** Connect the USB flash drive containing the saved batch setup file to the projector's wireless LAN unit port.

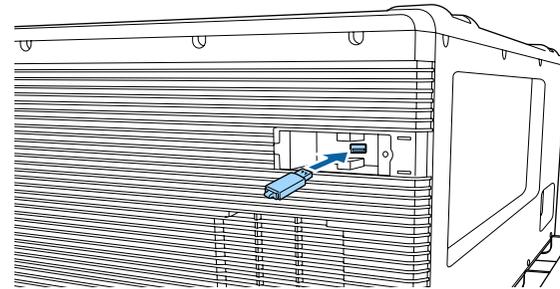


- When the USB flash drive contains 1 to 3 types of batch setup files, the file is reflected to the projector with the same model number. If there are multiple files for a projector with the same model number, the settings may not be reflected correctly.
- When there are four or more types of batch setup files on the USB flash drive, the settings may not be reflected correctly.
- Do not store any data except for the batch setup file on the USB flash drive. If the USB flash drive contains data other than the batch setup file, the settings may not be reflected correctly.

3 While holding down the [Menu] button, turn on the main power switch.

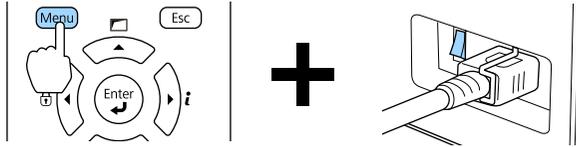

When the projector's indicators turn on as follows, release the [Menu] button.

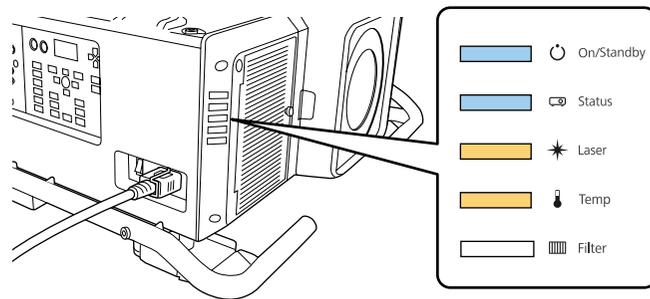

| | | | |
|--------------|-----------|-------------|-------------|
| Power supply | Status | Laser | Temp |
| Blue - On | Blue - On | Orange - On | Orange - On |


The indicators remain on for about 75 seconds.

When all of the indicators start flashing, the settings are being written.

Caution

- Do not disconnect the power cord from the projector or turn off the main power switch while the settings are being written. If power is not being supplied, the projector may not startup correctly.
- Do not disconnect the USB flash drive from the projector while the settings are being written. If the USB flash drive is disconnected, the projector may not start correctly.

4 When writing completes normally, the projector enters standby status.

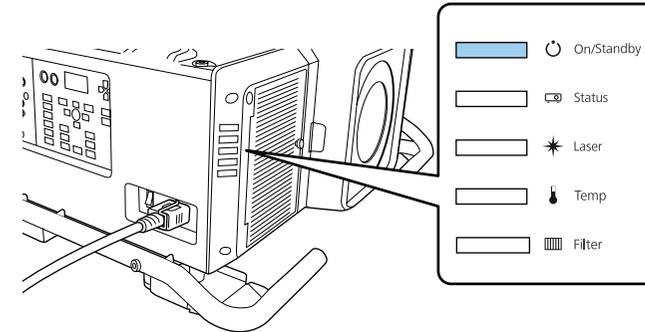

Power supply
Blue - On

When the projector is in standby status, remove the USB flash drive.

Setup by Connecting the Computer and Projector with a USB Cable




The following operating systems support the batch setup function.


- Windows Vista or later
- Mac OS X 10.5.3 or later

Saving settings to a computer


- 1** Turn off the main power switch while the power cord is connected to the projector, and check that all of the projector's indicators turn off.
- 2** Connect the computer's USB port to the projector's Service port with a USB cable.

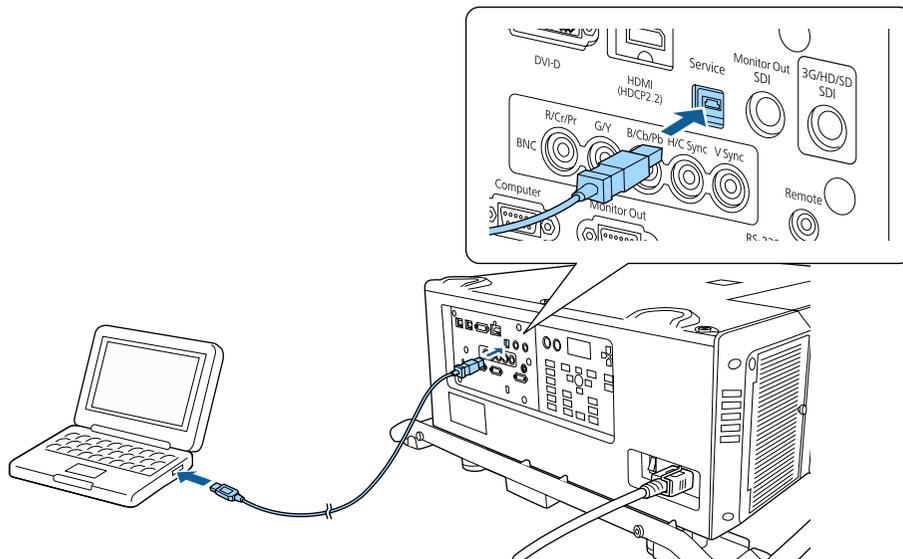

- 3** While holding down the [Esc] button, turn on the main power switch.

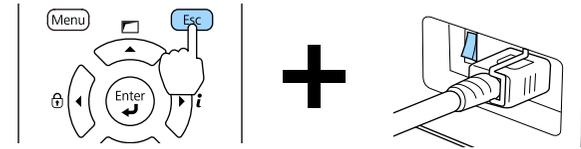

When the projector's indicators turn on as follows, release the [Esc] button.

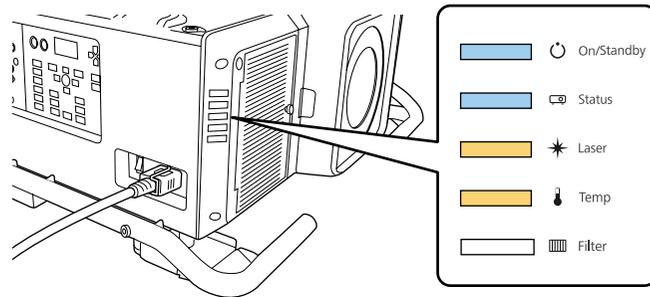

| | | | |
|--------------|-----------|-------------|-------------|
| Power supply | Status | Laser | Temp |
| Blue - On | Blue - On | Orange - On | Orange - On |

The projector is recognized as a removable disk by the computer.

- 4 Open the removable disk, and save the batch setup file (PJCONFDATA.bin) to the computer.

If you need to change the name of the batch setup file, add text after PJCONFDATA. If you change the file name, the projector may not be able to recognize the file correctly.


- 5 Perform "Remove USB device" on your computer, and then disconnect the USB cable.

When using OS X, perform "Remove EPSON_PJ".


The projector enters standby status.

Reflecting saved settings to other projectors


- 1 Turn off the main power switch while the power cord is connected to the projector, and check that all of the projector's indicators turn off.
- 2 Connect the computer's USB port to the projector's Service port with a USB cable.

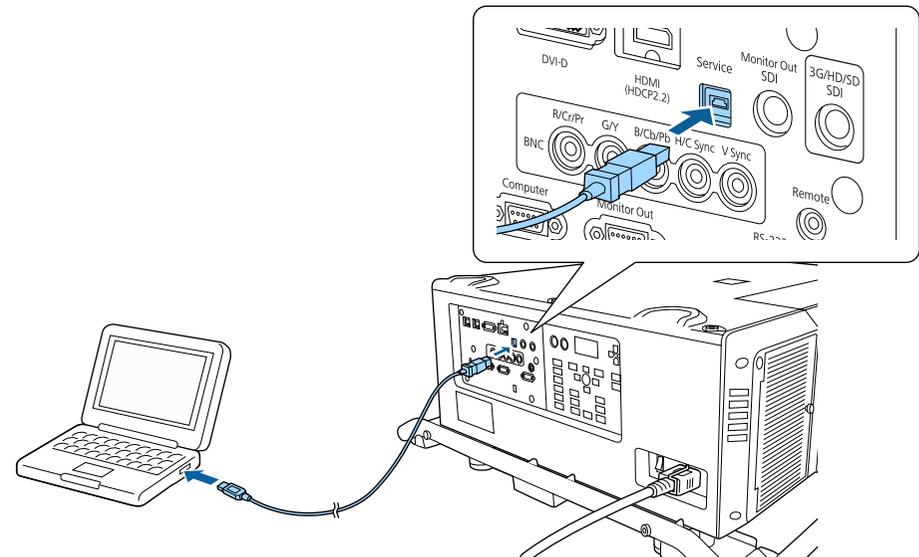

- While holding down the [Menu] button, turn on the main power switch.

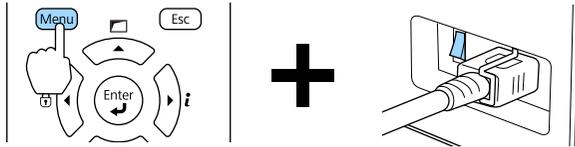

When the projector's indicators turn on as follows, release the [Menu] button.

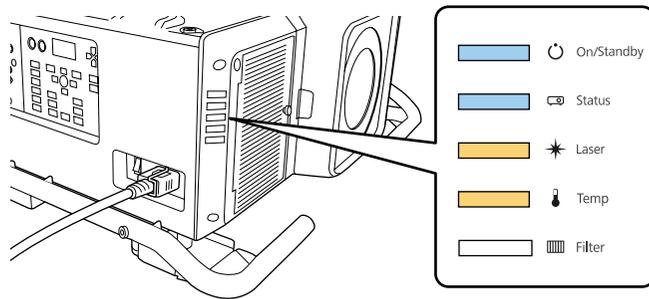

| | | | |
|--------------|-----------|-------------|-------------|
| Power supply | Status | Laser | Temp |
| Blue - On | Blue - On | Orange - On | Orange - On |

The projector is recognized as a removable disk by the computer.

- Copy the batch setup file (PJCONFDATA.bin) that you saved to your computer to the top level folder of the removable disk.

Do not copy any files or folders other than the batch setup file to the removable disk.

- Perform "Remove USB device" on your computer, and then disconnect the USB cable.

When using OS X, perform "Remove EPSON_PJ".

When all of the indicators start flashing, the settings are being written.


Caution

Do not disconnect the power cord from the projector or turn off the main power switch while the settings are being written. If power is not being supplied, the projector may not startup correctly.

When writing completes normally, the projector enters standby status.

When Setup Fails

The Indicators notify you if an error occurs. Check the status of the indicators.
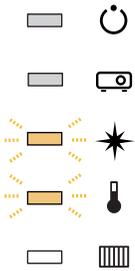
| Status of the Indicators | Remedy |
|---|--|
|  <p>Laser: Orange - flashing fast Temp: Orange - flashing fast</p> | <p>The batch setup file may be corrupt, or the USB flash drive may not be connected correctly. Disconnect the USB flash drive, unplug and then plug in the projector's power cord, and then try again.</p> |
|  <p>Power: Blue - flashing fast Status: Blue - flashing fast Laser: Orange - flashing fast Temp: Orange - flashing fast</p> | <p>Writing the settings may have failed and an error may have occurred in the projector's firmware. Stop using the projector, remove the power plug from the electrical outlet, and contact your local dealer or the nearest address provided in the Epson Projector Contact List. Epson Projector Contact List</p> |



Troubleshooting


This chapter explains how to identify problems and what to do if a problem is found.

If a problem occurs with the projector, you can display the Help screen to assist you. You can also set the projector to an appropriate state by answering the questions.





Before displaying the help screen, assign **Help** to a **User Button**.
 ➔ **Settings - User Button** p.123


- 1 Press the [User] button to which **Help** was assigned.
The Help screen is displayed.

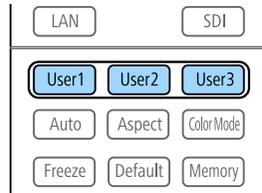


- 2 Select a menu item.

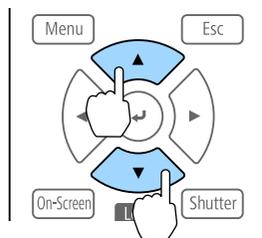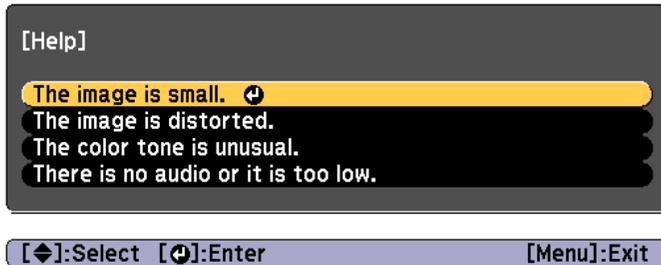

- 3 Confirm the selection.

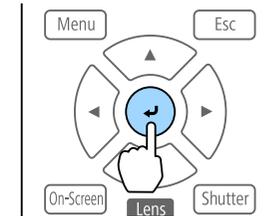


Questions and solutions are displayed as shown on the screen below.
Press the [Menu] button to exit Help.

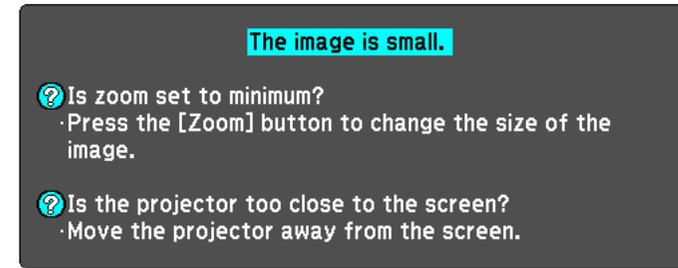

See the following if the Help function does not provide a solution to the problem.
 ➔ "Reading the Indicators" p.148

This projector has the following five indicators to indicate the projector's status.

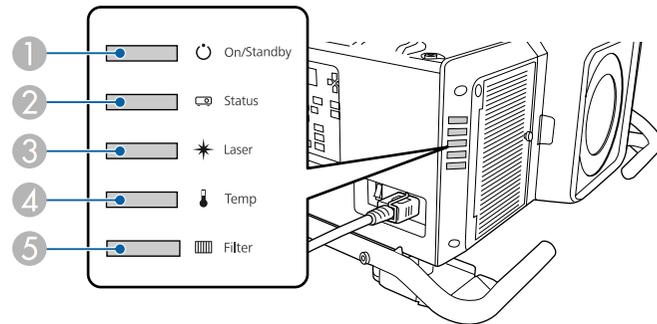

- ① Power indicator
Indicates the projector's status.
- ② Status indicator
Indicates the projector's status.
- ③ Laser indicator
Indicates the light source status.
- ④ Temp indicator
Indicates the internal temperature status. This is normally turned off.
- ⑤ Filter indicator
Indicates the air filter status. This is normally turned off.

The following indicator status are used during regular operation.

| Indicator | | | | | Projector's Status | Explanation |
|--|--|--|--|--|---------------------------|--|
| Power supply | Status | Laser | Temp | Filter | | |
|  Blue - On |  Off |  Off |  Off |  Off | Standby condition | Power is being supplied to the projector. In this status, you can start projecting by pressing the [Ⓜ] button on the remote control or control panel. (Sometimes, when the power cord is unplugged, the power indicator remains lit for a short period, but this is not a fault.) |
| | | | | | Network monitoring status | The projector is being monitored and controlled over a network (when Standby Mode is set to Communication On). If the power cord is disconnected and then reconnected in this status, the power indicator flashes blue. |
|  Blue - On |  Blue - Flashing |  Status varies |  Off |  Off | Warm-up status | This is the status immediately after turning on the projector. Warm-up takes approximately 30 seconds after the light source turns on. The [Ⓜ] button is disabled during warm-up. |

| Indicator | | | | | Projector's Status | Explanation |
|--|--|--|--|--|------------------------------|---|
| Power supply | Status | Laser | Temp | Filter | | |
|  Blue - On |  Blue - On |  Status varies |  Off |  Off | Projecting | The projector is projecting. |
|  Blue - On |  Blue - Flashing |  Off |  Off |  Off | Cool down status | This is the status immediately after turning off the power. In this status, all buttons are disabled. |
|  Blue - Flashing |  Off |  Off |  Off |  Off | Preparing Network monitoring | Preparing to monitor and control this projector over a network. During network monitoring preparation, all button operations are disabled. |
|  Blue - On |  Blue - On |  Blue - Flashing |  Off |  Off | Shutter is active | The Shutter function is activated. |

When an error has occurred in the projector, the error status is indicated by the indicator's color and combination of flashing or lit.

Refer to the following table to see what the indicators mean and how to remedy problems that they indicate.

| Indicator | | | | | Cause | Remedy or Status | Status Monitor Display |
|---|--|--|--|--|----------------------------------|--|---------------------------|
| Power supply | Status | Laser | Temp | Filter | | | |
|  Off |  Blue - Flashing |  Orange - Flashing |  Off |  Off | Internal Error | Stop using the projector, remove the power plug from the electrical outlet, and contact your local dealer or the nearest address provided in the Epson Projector Contact List.  Epson Projector Contact List | Internal Error |
|  Off |  Blue - Flashing |  Off |  Orange - Flashing |  Off | Fan Error Sensor Error | Stop using the projector, remove the power plug from the electrical outlet, and contact your local dealer or the nearest address provided in the Epson Projector Contact List.  Epson Projector Contact List | Fan Error Sensor Error |
|  Off |  Blue - Flashing |  Off |  Orange - On |  Off | High Temp Error (Overheating) | The light source turns off automatically and projection stops. Wait for about five minutes. After about five minutes the projector switches to standby mode, so check the following two points. <ul style="list-style-type: none"> • Check that the air filter and air exhaust vents are clear, and that the projector is not positioned against a wall. • If the air filter are clogged, remove the power cord from the electrical outlet, and then clean or replace them. <ul style="list-style-type: none">  "Cleaning the Air Filter" p.175  "Replacing the Air Filter" p.179 If the error continues after checking the points above, stop using the projector, remove the power plug from the electrical outlet, and contact your local dealer or the nearest address provided in the Epson Projector Contact List.  Epson Projector Contact List | Temp Error |
| When using at an altitude of 1500 m or more, set High Altitude Mode to On .  Extended - Operation - High Altitude Mode p.125 | | | | | | | |

| Indicator | | | | | Cause | Remedy or Status | Status Monitor Display |
|--|--|--|--|--|--|---|------------------------|
| Power supply | Status | Laser | Temp | Filter | | | |
|  Off |  Blue - Flashing |  Orange - On |  Off |  Off | Laser Error Retardation Plate Error | Stop using the projector, remove the power plug from the electrical outlet, and contact your local dealer or the nearest address provided in the Epson Projector Contact List.  Epson Projector Contact List | Laser Error |
|  Off |  Blue - Flashing |  Off |  Off |  Orange - On | Filter Airflow Error | Check the following two points. <ul style="list-style-type: none"> • Check that the air filter and air exhaust vents are clear, and that the projector is not positioned against a wall. • If the air filter is clogged, turn off the power, remove the power cord from the electrical outlet, and then clean or replace them.  "Cleaning the Air Filter" p.175  "Replacing the Air Filter" p.179 After checking, connect the power cord to the electrical outlet. If the error continues after checking the points above, stop using the projector, remove the power plug from the electrical outlet, and contact your local dealer or the nearest address provided in the Epson Projector Contact List.  Epson Projector Contact List | Airflow Error |
|  Off |  Blue - Flashing |  Orange - On |  Orange - On |  Off | Lens Shift Error | Stop using the projector, remove the power plug from the electrical outlet, and contact your local dealer or the nearest address provided in the Epson Projector Contact List.  Epson Projector Contact List | Lens Error |
|  Blue - Flashing |  Status varies |  Status varies |  Orange - Flashing |  Status varies | High Temp Warning | This is not an error. However, if the temperature rises too high again, projection stops automatically. Check the following two points. <ul style="list-style-type: none"> • Check that the air filter and air exhaust vents are clear, and that the projector is not positioned against a wall. • If the air filter is clogged, turn off the power, remove the power cord from the electrical outlet, and then clean or replace them.  "Cleaning the Air Filter" p.175  "Replacing the Air Filter" p.179 | Temp Warning |

| Indicator | | | | | Cause | Remedy or Status | Status Monitor Display |
|--|--|--|--|--|---------------|---|------------------------|
| Power supply | Status | Laser | Temp | Filter | | | |
|  Blue - Flashing |  Status varies |  Orange - Flashing |  Status varies |  Status varies | Laser Warning | Stop using the projector, remove the power plug from the electrical outlet, and contact your local dealer or the nearest address provided in the Epson Projector Contact List.  Epson Projector Contact List | Laser Warning |
|  Blue - Flashing |  Status varies |  Orange - Flashing |  Status varies |  Status varies | Lens Warning | An unsupported lens is attached. Use a supported lens.  "Optional Accessories and Consumables" p.205 | Lens Warning |
|  Blue - Flashing |  Status varies |  Status varies |  Status varies |  Orange - On | Low Air Flow | This is not an error. However, projection stops automatically if the airflow falls any further. "The air filter is clogged. Clean or replace the air filter." is displayed. Check the following points. <ul style="list-style-type: none"> • Check that the air filter and air exhaust vents are clear, and that the projector is not positioned against a wall. • If the air filter is clogged, turn off the power, remove the power cord from the electrical outlet, and then clean or replace them. <ul style="list-style-type: none">  "Cleaning the Air Filter" p.175  "Replacing the Air Filter" p.179 If the error continues after checking the points above, stop using the projector, remove the power plug from the electrical outlet, and contact your local dealer or the nearest address provided in the Epson Projector Contact List.  Epson Projector Contact List | Airflow Decline |

| Indicator | | | | | Cause | Remedy or Status | Status Monitor Display |
|--|--|--|--|--|-------------------|---|------------------------|
| Power supply | Status | Laser | Temp | Filter | | | |
|  Status varies |  Status varies |  Status varies |  Status varies |  Orange - Flashing | Air Filter Notice | <p>"Time to clean the air filter. Clean or replace the air filter." is displayed.</p> <p>Turn off the projector's power, unplug the power cord from the electrical outlet, and then clean the air filter.</p> <p>☛ "Cleaning the Air Filter" p.175</p> <p>The indicators or messages regarding air filter notice are displayed only when Air Filter Notice is set to On in the Configuration menu.</p> <p>☛ Extended - Display - Air Filter Notice p.125</p> | Cleaning Filter |



- See the following if the projector is not operating properly, even though the indicators are all showing normal.
 - ☛ "Problem Solving" [p.163](#)
- If the indicators are in a state not shown in this table, stop using the projector, remove the power plug from the electrical outlet, and contact your local dealer or the nearest address provided in the Epson Projector Contact List.
 - ☛ [Epson Projector Contact List](#)


The LCD of the control panel indicates the projector's status. Also, you can check the detailed status or error history of this projector by using the buttons on the control panel.



Make the following settings to use the status monitor when the projector is in standby mode.

- Set **Standby Mode** to **Communication On**.
 - ☛ **Extended - Standby Mode** [p.125](#)
- Set **A/V Output** to **Always On**.
 - ☛ **Extended - A/V Settings - A/V Output** [p.125](#)

You can check the items and information of each category by using the [▲][▼] buttons.

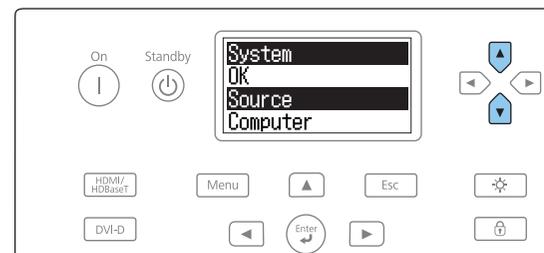

The status monitor turns on in the following situations:

- When one button is pressed on the control panel
- When an error or a warning occurs
- When adjusting the zoom, focus, or lens shift
- When checking the projector ID
 - ☛ "Checking the projector ID" [p.37](#)



If you do not want to turn on the status monitor, set **Lighting Time** to **Off** in the status monitor setting.

☛ "Setting the screen display (LCD)" [p.156](#)

Checking the Status

To display the status monitor, press the [☼] button on the control panel.

There are eight display categories for the status monitor, and each time you press the [▶][◀] buttons, the category switches in the following order.

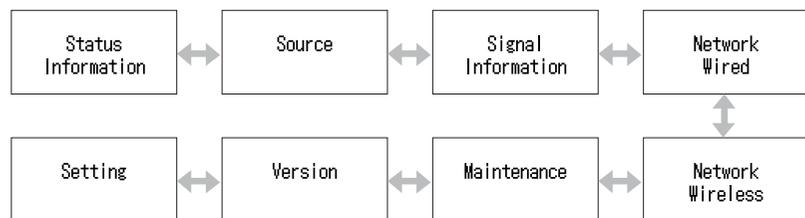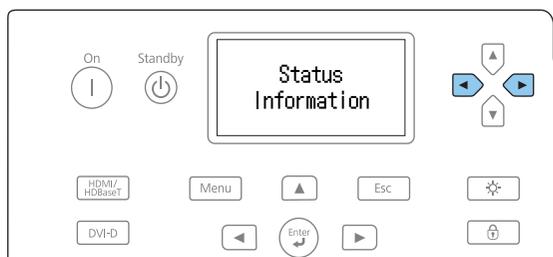


Understanding the screen

Normal display

Each display category contains the following information.

- Status Information : Operating status of the projector
- Source : Input signal information
- Signal Information : Input digital signal information
- Network Wired : Wired LAN settings
- Network Wireless : Wireless LAN settings
- Maintenance : Operating time for the projector and light source
- Version : Projector's firmware version

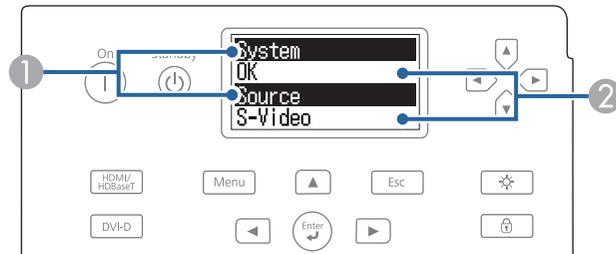

| | |
|---|--|
| ① | Displays the item name. ☛ "Explanations of the Display Content" p.157 |
| ② | Information about the items. |

Display when error or warning occurs

When a problem has occurred in the projector, the following is displayed.

When an error occurs



When a warning occurs



If the problem is cleared, or one of the [⏪][⏩][⏴][⏵] buttons is pressed, the display returns to normal.


See the following for more information on the error or warning contents and remedies.

☛ "Reading the Indicators" p.148

Setting the screen display (LCD)

You can adjust the contrast and the lighting time for the back light.

- 1 Press the [◀][▶] buttons to select **Setting**.

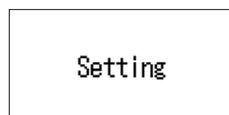

- 2 Press the [↑] button to display the following screen.



- 3 Press the [◀][▶] buttons to adjust the contrast.

- 4 Press the [↓] button to display the following screen.



- 5 Press the [◀][▶] buttons to set the lighting time for the back light.

The default is set to **30sec** (30 seconds). You can set from **Off** (light is off), **10-60sec**, **30min** (30 minutes), and **Always** (Always On).

Explanations of the Display Content

| Category | Item | Status Display | Explanation |
|--------------------|-------------------------------|---|---|
| Status Information | System | Displays the projector's status. See the following for more information on how to remedy the errors and warnings. ☛ "Reading the Indicators" p.148 | |
| | | OK | The projector is in normal status. |
| | | Warm-Up | The projector is warming up. |
| | | Standby | The projector is in standby status. |
| | | Cool Down | The projector is in cool down status. |
| | | Temp Error | A high temp error has occurred. |
| | | Fan Error | A fan error has occurred. |
| | | Sensor Error | A sensor error has occurred. |
| | | Internal Error | An internal error has occurred. |
| | | Airflow Error | A filter airflow error has occurred. |
| | | Temp Warning | A high temp warning has occurred. |
| | | Internal Warning | A warning about the internal system has occurred. |
| | | Airflow Decline | A low air flow error has occurred. |
| | | Clean Filter | An air filter notice has occurred. |
| | | Lens Error | A lens error has occurred. |
| Laser Error | A laser error has occurred. | | |
| Laser Warning | A laser warning has occurred. | | |

| Category | Item | Status Display | Explanation |
|--------------------|-------------------|---|---|
| Status Information | Source | HDMI | Displays the source name for the connected equipment currently being projected. |
| | | HDBaseT | |
| | | DVI-D | |
| | | SDI | |
| | | Computer | |
| | | BNC | |
| | | LAN | |
| | On-Screen Display | On | Displays the settings for the On-Screen Display . When set to Off , the menus or messages are not displayed on the projected images. |
| | | Off | |
| | Shutter | On | Displays the projector's shutter function status. |
| | | Off | |
| | Air Temp | - | Displays the usage environment temperature as a value. |
| Temp Level | - | Displays the usage environment temperature in five levels. | |
| AC Voltage | - | Displays warnings and errors that have occurred when AC Voltage Monitoring is set to On . | |
| Laser Status | On | Displays the operating status of the light source. | |
| | Off | | |
| Source | Source | HDMI | Displays the source name for the connected equipment currently being projected. |
| | | HDBaseT | |
| | | DVI-D | |
| | | SDI | |
| | | Computer | |
| | | BNC | |
| | | LAN | |
| | Resolution | - | Displays the resolution of the current input signal. No Signal: No signals are being input. Not Supported: The projector does not support the current input signal. |

| Category | Item | Status Display | Explanation |
|-------------|-----------------|--|---|
| Source | Video Signal | - | Displays the current input video signal. |
| | Color Space | RGB | Displays the color space of the current input signal. |
| | | YCbCr | |
| | | YPbPr | |
| | H-Frequency | - | Displays the horizontal frequency of the current input signal. |
| | V-Frequency | - | Displays the vertical frequency of the current input signal. |
| | Sync Polarity | H:Posi / V:Posi | Displays the Sync polarity. |
| | | H:Posi / V:Nega | |
| | | H:Nega / V:Posi | |
| | | H:Nega / V:Nega | |
| | Sync Mode | Composite Sync | Displays the sync type. |
| | | Separate Sync | |
| | | Sync On Green | |
| | Detected Mode | - | Displays the discriminant resolution of the current input signal. |
| Video Level | Auto (Normal) | Displays the video level of the projector. | |
| | Auto (Expanded) | | |
| | Normal | | |
| | Expanded | | |



Items displayed for source vary depending on the model being used and the image signal and source being projected.

| Category | Item | Status Display | Explanation |
|--------------------|------------------|---|---|
| Signal Information | 5V Detection | Detected | Displays the detection results of 5V signals. |
| | | Not Detect | |
| | TMDS Clock | - | Displays the TMDS frequency of the current input signal. |
| | TMDS H-Frequency | - | Displays the horizontal frequency of the current input signal. |
| | TMDS V-Frequency | - | Displays the vertical frequency of the current input signal. |
| | DetChg 5CFHMP123 | - | Displays the factors of signal changes. |
| | Stable Time | - | Displays the operating time since the input source is determined. |
| | HDCP Status | Non-HDCP | Displays the HDCP status. |
| | | Passed | |
| | | Failed | |
| | HDCP Ver | - | Displays the HDCP version. |
| | AVI Info VIC | - | Displays the VIC information (AVI) of the current input signal. |
| | AVI InfoChecksum | OK | Displays the checksum result for AVI. |
| | | NG | |
| | Signal Mode | HDMI | Displays the signal mode. |
| | | DVI | |
| | Pixel Encoding | RGB | Displays the color space information (AVI) of the current input signal. |
| YUV4:4:4 | | | |
| YUV4:2:2 | | | |
| YUV4:2:0 | | | |
| HDBaseT Level | - | You can display the image signal information from the HDBaseT port. | |



Items displayed for Signal Information vary depending on the model being used and the image signal and source being projected.

| Category | Item | Status Display | Explanation |
|------------------|-----------------|--|---|
| Network Wired | Projector Name | - | Displays the projector name used to identify the projector when connected to a network. |
| | Connection Mode | HDBaseT | Displays the connection path for LAN. |
| | | LAN | |
| | DHCP | On | Displays the DHCP settings. |
| | | Off | |
| | IP Display | On | Displays the IP address display settings. |
| | | Off | |
| IP Address | - | Displays the IP address. | |
| MAC Address | - | Displays the MAC address. | |
| Network Wireless | Projector Name | - | Displays the projector name used to identify the projector when connected to a network. |
| | Connection Mode | Quick | Displays the connection mode to use when connecting the projector and a computer over a wireless LAN. |
| | | Advanced | |
| | SSID Display | On | Displays the SSID display settings. |
| | | Off | |
| | IP Display | On | Displays the IP address display settings. |
| | | Off | |
| | SSID | - | Displays the SSID. |
| | IP Address | - | Displays the IP address. |
| | DHCP | On | Displays the DHCP settings. |
| | | Off | |
| | MAC Address | - | Displays the MAC address. |
| | Security | No | Displays the security settings. |
| WPA2-PSK | | | |
| WPA/WPA2-PSK | | | |
| Antenna Level | LEVEL 0-5 | Displays the reception status for Wi-Fi. | |



| Category | Item | Status Display | Explanation |
|-------------|----------------|----------------|--|
| Maintenance | Operation Time | - | Displays the total operation time of the projector. |
| | Laser Op.Time | - | Displays the laser operating time for each setting in Light Source Mode. |
| Version | Serial No. | - | Displays the projector's serial number. |
| | Main | - | Displays the projector's firmware version information. |
| | Video2 | - | |
| | Sub | - | |
| | Sub2 | - | |
| | HDBaseT | - | |
| | Status Monitor | - | |

If any of the following problems occur and the indicators do not offer a solution, refer to the pages given for each problem.

Problems Relating to Images

| | |
|---|---|
| <ul style="list-style-type: none"> • No images appear Projection does not start, the projection area is completely black, or the projection area is completely blue. |  p.164 |
| <ul style="list-style-type: none"> • Moving images are not displayed Videos played back on a computer are black or no image is projected, or the video is not played back on the computer. |  p.164 |
| <ul style="list-style-type: none"> • Projection stops automatically |  p.165 |
| <ul style="list-style-type: none"> • The message "Not supported" is displayed |  p.165 |
| <ul style="list-style-type: none"> • The message "No Signal" is displayed |  p.165 |
| <ul style="list-style-type: none"> • Images are fuzzy, out of focus, or distorted |  p.166 |
| <ul style="list-style-type: none"> • Interference or distortion appear in images |  p.166 |
| <ul style="list-style-type: none"> • The image is truncated (large) or small, the aspect ratio is not suitable, or the image has been reversed Only part of the image is displayed, the height and width ratios of the image are not correct, or the image may appear reversed from top to bottom or left to right. |  p.167 |
| <ul style="list-style-type: none"> • Image colors are not right The whole image appears purplish or greenish, images are black & white, or colors appear dull. |  p.167 |
| <ul style="list-style-type: none"> • Images appear dark |  p.168 |
| <ul style="list-style-type: none"> • Automatic adjustments are not performed correctly |  p.169 |

Problems when Projection Starts

| | |
|---|---|
| <ul style="list-style-type: none"> • The projector does not turn on |  p.169 |
|---|---|

Other Problems

| | |
|---|---|
| <ul style="list-style-type: none"> • The remote control does not work |  p.170 |
|---|---|

| | |
|--|---|
| <ul style="list-style-type: none"> • Cannot control correctly using Art-Net |  p.171 |
| <ul style="list-style-type: none"> • Nothing appears on the external monitor |  p.171 |
| <ul style="list-style-type: none"> • I want to change the language for messages and menus |  p.172 |
| <ul style="list-style-type: none"> • Email is not received even if a problem occurs in the projector |  p.172 |
| <ul style="list-style-type: none"> • "The battery that saves your clock settings is running low." is displayed |  p.172 |

Problems Relating to Images

No images appear

| Check | Remedy |
|---|---|
| Did you press the [ⓘ] button on the remote control or control panel? | Press the [ⓘ] button to turn on the power. |
| Are the indicators switched off? | The power cord is not connected correctly or power is not being supplied. Connect the projector's power cord correctly. Check that your electrical outlet or power source is functioning correctly. |
| Is Shutter active? | Press the [Shutter] button to release the Shutter function. ☛ "Hiding the Image Temporarily (Shutter)" p.100 |
| Are the Configuration menu settings correct? | Reset all of the settings. ☛ Reset - Reset All Config p.137 |
| Is the image to be projected completely black? (Only when projecting computer images) | Some input images, such as screen savers, may be completely black. |
| Is Windows Media Center displayed in full screen? (Only during network connection) | When Windows Media Center is displayed at full screen, you cannot project using a network connection. Reduce the screen size. |
| Is an application using the Windows DirectX function displayed? (Only during network connection) | Applications using the Windows DirectX function may not display images correctly. |

Moving images are not displayed

| Check | Remedy |
|--|---|
| Is the computer's image signal being output to the LCD and the monitor? (Only when projecting images from a laptop computer or a computer with a built-in LCD screen) | Change the image signal from the computer to external output only. Check your computer's documentation, or contact the computer's manufacturer. |
| Are the contents of the moving image you are trying to project copyright protected? | The projector may not be able to project copyright protected moving images that are being played back on a computer. For more details, see the user's guide supplied with the player. |

Projection stops automatically

| Check | Remedy |
|---|--|
| Is Sleep Mode set to On ? | Press the [ⓘ] button to turn on the power. If you do not want to use Sleep Mode, change the setting to Off . ☛ Extended - Operation - Sleep Mode p.125 |

"Not supported." is displayed

| Check | Remedy |
|---|--|
| Do the image signal resolution and the refresh rate correspond to the mode? (Only when projecting computer images) | Refer to the computer's documentation for how to change the image signal resolution and the refresh rate output from the computer. ☛ "Supported Monitor Displays" p.217 |

"No Signal." is displayed

| Check | Remedy |
|---|--|
| Are the cables connected correctly? | Check that all the cables required for projection are securely connected. Check that no cables are disconnected and that there are no poor contacts in the cables. |
| Is the correct port selected? | Change the image by pressing the [Search] button. ☛ "Automatically Detecting Input Signals and Changing the Projected Image (Source Search)" p.53 |
| Is the power for the computer or video source turned on? | Turn the power on for the equipment. |
| Are the image signals being output to the projector? (Only when projecting images from a laptop computer or a computer with a built-in LCD screen) | If the image signals are only being output to the computer's LCD monitor or to the accessory monitor, you need to change the output to an external destination as well as the computer's own monitor. For some computer models, when the image signals are output externally, they no longer appear on the LCD monitor or accessory monitor. If the connection is made while the power of the projector or computer is already turned on, the Fn key (Function key) that changes the computer's image signal to external output may not work. Turn the power for the computer and the projector off and then back on again. ☛ Computer's documentation |

Images are fuzzy, out of focus, or distorted

| Check | Remedy |
|---|---|
| Is the focus adjusted correctly? | Make sure that at least 20 minutes has passed after the projection starts, and press the [Focus] button on the remote control to adjust the focus. ☛ "Correcting the Focus" p.34 |
| Is the projector at the correct distance? | Is it projecting outside of the recommended projection distance range? Setup within the recommended range. ☛ "Screen Size and Projection Distance" p.206 |
| Has condensation formed on the lens? | If the projector is suddenly taken from a cold environment to a warm environment, or if sudden ambient temperature changes occur, condensation may form on the surface of the lens, and this may cause the images to appear fuzzy. Set the projector up in the room about one hour before it is used. If condensation forms on the lens, turn the projector off and wait for the condensation to disappear. |

Interference or distortion appear in images

| Check | Remedy |
|--|--|
| Are the cables connected correctly? | Check that all the cables required for projection are securely connected. ☛ "Connecting Equipment" p.42 |
| Is an extension cable being used? | If an extension cable is used, electrical interference may affect the signals. Use the cables supplied with the projector to check if the cables you are using may be causing the problem. |
| Is the correct resolution selected? (Only when projecting computer images) | Set the computer so that the signals being output are compatible with the projector. ☛ "Supported Monitor Displays" p.217 ☛ Computer's documentation |
| Are the Sync and Tracking settings adjusted correctly? (Only when projecting computer images) | Press the [Auto] button on the Remote Control or the [↵] button on the Control panel to perform automatic adjustment. If the images are not adjusted correctly even after performing automatic adjustment, you can also make adjustments from the Configuration menu. ☛ Signal - Tracking, Sync. p.121 |
| Is the Resolution set to anything other than Auto ? (Only when projecting on a split screen) | The image may be collapsed if the Resolution on the Configuration menu and the resolution of the projected image are not the same. If the image is collapsed, set the Resolution to Auto . ☛ Signal - Resolution p.121 |

The image is truncated (large) or small, the aspect is not suitable, or the image has been reversed

| Check | Remedy |
|---|---|
| Have the Screen been set correctly? | Make the appropriate Screen for the screen being used. ☛ "Screen Settings" p.28 |
| Is the aspect adjusted correctly? | Press the [Aspect] button to select an aspect suitable for the input source. ☛ "Changing the Aspect Ratio of the Projected Image " p.71 |
| Is a wide panel computer image being projected? (Only when projecting computer images) | Change the setting according to the signal for the connected equipment. ☛ Signal - Resolution p.121 |
| Is Scale turned on? | Set Scale to Off on the configuration menu. ☛ Signal - Scale p.121 |
| Is the display range restricted by Blanking ? | Appropriately set Blanking in the configuration menu. ☛ Signal - Blanking p.121 |
| Is the image position adjusted correctly? | (Only when projecting analog RGB signals input from the Computer port) Press the [Auto] button on the remote control or the [↵] button on the control panel to adjust the position. You can also adjust the position from the Configuration menu. ☛ Signal - Position p.121 |
| Is the computer set for dual display? (Only when projecting computer images) | If dual display is activated in the Display Properties of the computer's Control Panel, only about half of the image on the computer screen is projected. To display the entire image on the computer screen, turn off the dual display setting. ☛ Computer video driver documentation |
| Is the correct resolution selected? (Only when projecting computer images) | Set the computer so that the signals being output are compatible with the projector. ☛ "Supported Monitor Displays" p.217 ☛ Computer's documentation |
| Is the image direction correct? | Make the correct settings in Projection from the Configuration menu. ☛ "Installation Settings" p.27 |

Image colors are not right

| Check | Remedy |
|---|--|
| Do the input signal settings match the signals from the connected device? | Change the setting according to the signal for the connected equipment. ☛ Signal - Advanced - Input Signal p.121 |

| Check | Remedy |
|---|---|
| Is the image brightness adjusted correctly? | Adjust the Brightness setting from the Configuration menu. ☛ Image - Brightness p.119 |
| Are the cables connected correctly? | Check that all the cables required for projection are securely connected. Check that no cables are disconnected and that there are no poor contacts in the cables. ☛ "Connecting Equipment" p.42 |
| Is the <u>Contrast</u> adjusted correctly? | Adjust the Contrast setting from the Configuration menu. ☛ Image - Contrast p.119 |
| Is the color adjustment set correctly? | Adjust the Gamma or RGBCMY setting from the Configuration menu. ☛ Image - Advanced p.119 ☛ "Adjusting the Image" p.73 |
| Are the color saturation and tint adjusted correctly? | Adjust the Color Saturation and Tint settings from the Configuration menu. ☛ Image - Color Saturation, Tint p.119 |
| Is the brightness of the room appropriate? | If the room is darker than when the auto adjustment was performed, the tint of the projected images may not be displayed correctly. Make the room darker and then perform auto adjustment again. ☛ "Screen Matching" p.92 ☛ "Color Calibration" p.182 |

Images appear dark

| Check | Remedy |
|--|--|
| Is the image brightness set correctly? | Check the Brightness and Brightness Settings values from the Configuration menu. ☛ Image - Brightness p.119 ☛ Settings - Brightness Settings p.123 |
| Is the <u>Contrast</u> adjusted correctly? | Adjust the Contrast setting from the Configuration menu. ☛ Image - Contrast p.119 |
| Is only one projector being used? | Check if the following item is set to dark. ☛ Extended - Multi-Projection - Screen Matching - Brightness Settings p.125 |

Automatic adjustments are not performed correctly

| Check | Remedy |
|--|--|
| Have at least 20 minutes passed since the power was turned on? | Auto adjustment does not work correctly until the temperature of the projector is stable. Perform auto adjustment 20 minutes after turning on the projector or canceling Shutter. |
| Is the cover of the built-in camera clean? | Make sure that the cover of the built-in camera is clean. Clean the cover if it is dirty. |
| Is an analog signal being input? | When inputting an analog signal, the color and brightness of the input image changes, and the results of adjustment may not be applied correctly. |
| Has the image been corrected using Geometry Correction? | Auto adjustment may not work for images corrected using Geometry Correction. Set Geometry Correction to Off or reduce the correction range. ☛ Settings - Geometry Correction p.123 |
| Is the brightness of the surroundings appropriate? | If a powerful spotlight or natural light shines into the area during auto adjustment, the brightness of the surroundings changes and auto adjustment does not operate correctly. Make sure the brightness of the surroundings does not change. |
| Is the blending width 15 to 45%? | If the blending width in Edge Blending is 15% or less, or 45% or more, the Screen Matching function may not operate correctly. Check the blending width. ☛ Extended - Multi-Projection - Edge Blending p.125 |

Problems when Projection Starts

The projector does not turn on

| Check | Remedy |
|--|---|
| Is the main power switch set to Off? | Turn on the main power switch to supply power to the projector. |
| Did you press the [Ⓛ] button on the remote control or control panel? | Press the [Ⓛ] button to turn on the power. |
| Are the indicators switched off? | The power cord is not connected correctly or power is not being supplied. Disconnect and then reconnect the power cord. Check that your electrical outlet or power source is functioning correctly. |

| Check | Remedy |
|--|---|
| Do the indicators turn on and off when the power cord is touched? | There is probably a poor contact in the power cord, or the power cord may be defective. Reinsert the power cord. If this does not solve the problem, stop using the projector, disconnect the power cord from the electrical outlet, and contact your local dealer or the nearest address provided in the Epson Projector Contact List. ☛ Epson Projector Contact List |
| Is the Control Panel Lock set to Full Lock ? | Press the [ⓘ] button on the remote control. If you do not want to use Control Panel Lock , change the setting to Off . ☛ "Control Panel Lock" p.111 |
| Is the correct setting for the remote receiver selected? | Check the Remote Receiver from the Configuration menu. ☛ Settings - Remote Receiver p.123 |
| Was the power cord plugged back in or was the breaker turned on immediately after direct shutdown? | When the operation to the left is performed when Direct Power On is set to On , the power may not turn back on. Press the [ⓘ] button to turn on the power. |
| Is the [ID] switch on the remote control set to On? | When the switch is set to On, you can use the remote control to operate only a projector with a matching ID. Set the [ID] switch to Off. ☛ "Setting the remote control ID" p.38 |

Other Problems

The remote control does not work

| Check | Remedy |
|---|---|
| Is the remote control light-emitting area pointing towards the remote receiver on the projector during operation? | Point the remote control towards the remote receiver. ☛ "Remote control operating range" p.23 |
| Is the remote control too far from the projector? | Check the operating range. ☛ "Remote control operating range" p.23 |
| Is direct sunlight or strong light from fluorescent lamps shining onto the remote receiver? | Set the projector up in a location where strong light does not shine onto the remote receiver. |
| Is the correct setting for the Remote Receiver selected? | Check the Remote Receiver from the Configuration menu. ☛ Settings - Remote Receiver p.123 |

| Check | Remedy |
|--|---|
| Are the batteries dead or have the batteries been inserted correctly? | Make sure the batteries are inserted correctly or replace the batteries with new ones if necessary. ☛ "Replacing the remote control batteries" p.22 |
| Are the remote control ID and the projector ID matched? | Make sure the ID for the projector you want to operate and the ID for the remote control match. To operate all projectors by remote control regardless of the ID setting, set the [ID] switch on the remote control to Off. ☛ "ID Settings" p.37 |
| Is the optional remote control cable connected to the projector's Remote port? | When the remote control cable is connected, the projector's remote receiver is disabled. When not using the remote control cable set, disconnect it from the Remote port. |
| Is Control Communications or Extron XTP set to On ? | The Remote port is disabled. When using the optional remote control cable set, set Control Communications or Extron XTP to Off . ☛ Extended - HDBaseT p.125 |
| Is the remote control button lock set? | When the remote control button lock is set, buttons except for those needed for basic remote control operations are deactivated. Hold down the [🏠] button to cancel the remote control button lock. ☛ "Remote control button lock" p.112 |

Cannot control correctly using Art-Net

| Check | Remedy |
|---|--|
| While controlling the projector using Art-Net, did you operate the projector using the remote control or control panel? | While controlling the projector using Art-Net and performing operations from the remote control or control panel, settings made by the DMX controller or application software may not be applied to the projector correctly. When you want to apply all the channel controls to the projector, set Channel 13 to "Cannot control", then set it back to "Can control". ☛ "About Art-Net" p.200 |

Nothing appears on the external monitor

| Check | Remedy |
|--|---|
| Is the external monitor connected to the correct port? | The port to which the external monitor should be connected varies depending on the port to which the image you want to display is being input. <ul style="list-style-type: none"> • When inputting an image signal to the Computer port or the BNC port, connect to the Monitor Out port. • When inputting an image signal to the 3G/HD/SD SDI port, connect to the Monitor Out SDI port. |

| Check | Remedy |
|-------------------------------------|---|
| Are you projecting a split screen? | Only RGB signals projected on the left screen from the Computer port or the BNC port can be displayed on an external monitor. ☛ "Projecting Two Images Simultaneously (Split Screen)" p.97 |
| Is the projector in standby status? | Check that Standby Mode , A/V Output , and Monitor Out from the Configuration menu are set correctly. ☛ Extended - Standby Mode, A/V Settings p.125 |

I want to change the language for messages and menus

| Check | Remedy |
|------------------------------|--|
| Change the Language setting. | Adjust the Language setting from the Configuration menu. ☛ Extended - Language p.125 |

Email is not received even if a problem occurs in the projector

| Check | Remedy |
|--|---|
| Is Standby Mode set to Communication On ? | To use the Mail Notification function when the projector is in standby, set Communication On in Standby Mode from the Configuration menu. ☛ Extended - Standby Mode p.125 |
| Is power being supplied to the projector? | Check that your electrical outlet or power source is functioning correctly. |
| Is the Mail Notification function set correctly in the Configuration menu? | An error notification email is sent according to the Notifications settings in the Configuration menu. Check if it is set correctly. ☛ "Notifications menu" p.134 |

"The battery that saves your clock settings is running low." is displayed

| Check | Remedy |
|--|--|
| The internal power supply that saves your clock settings may be running low. | Contact your local dealer or the nearest address provided in the Epson Projector Contact List. ☛ Epson Projector Contact List |

Check the numbers and then apply the following countermeasures. If you cannot resolve the problem, contact your network administrator, or contact your local dealer or the nearest address provided in the Epson Projector Contact List.

 [Epson Projector Contact List](#)

| Event ID | Cause | Remedy |
|------------------------------|---|--|
| 0432 0435 | Failed to start the network software. | Restart the projector. |
| 0434 0482 0484 0485 | Network communication is unstable. | Check the network communication status, and reconnect after waiting for a while. |
| 0433 | Cannot play transferred images. | Restart the network software. |
| 0481 | Communication was disconnected from the computer. | |
| 0483 04FE | The network software ended unexpectedly. | Check the status of network communications. Restart the projector. |
| 0479 04FF | A system error occurred in the projector. | Restart the projector. |
| 0891 | Cannot find an access point with the same SSID. | Set the computer, the access point, and the projector to the same SSID. |
| 0892 | The WPA/WPA2 authentication type does not match. | Check that the wireless LAN security settings are correct. |
| 0893 | The TKIP/AES encryption types do not match. |  Network - Wireless LAN p.131 |
| 0894 | Communication was disconnected because the projector connected to an unauthorized access point. | Contact your network administrator for more information. |
| 0898 | Failed to acquire DHCP. | Check that the DHCP server is operating correctly. If you are not using DHCP, turn off the DHCP setting.  Network - Wireless LAN p.131 , Wired LAN p.134 |
| 0899 | Other communication errors | If restarting the projector or network software does not solve the problem, contact your local dealer or the nearest address provided in the Epson Projector Contact List.  Epson Projector Contact List |



Maintenance

This chapter provides information on maintenance procedures to ensure the best level of performance from the projector for a long time to come.

You should clean the projector if it becomes dirty or if the quality of projected images starts to deteriorate.

Caution

When cleaning, turn off the main power switch, and then unplug the power cord from the electric outlet. Otherwise, it could cause an electric shock.

Attention

We recommend cleaning the inside of the projector once a year. If the inside of the projector is not cleaned for a long time, dust collects which could cause a fire or electric shock.

Cleaning the Projector's Surface

Clean the projector's surface by wiping it gently with a soft cloth.

If the projector is particularly dirty, moisten the cloth with water containing a small amount of neutral detergent, and then firmly wring the cloth dry before using it to wipe the projector's surface.

Attention

Do not use volatile substances such as wax, alcohol, or thinner to clean the projector's surface. The quality of the case may change or become discolored.

Cleaning the Lens

Clean any dirt on the lens wiping it gently with a soft cloth.

Warning

Do not use sprays that contain flammable gas to remove dust and lint from the lens. The projector may catch fire due to the high internal temperature.

Attention

Do not rub the lens with harsh materials or subject the lens to shocks, as it can easily become damaged.

Cleaning the Air Filter

When the following message is displayed and the filter indicator flashes orange, clean the air filter and the air intake vent.

"Time to clean the air filter. Clean or replace the air filter."

"The projector is overheating. Make sure nothing is blocking the air vent, and clean or replace the air filter."

"The air filter is clogged. Clean or replace the air filter."

Attention


- If dust collects on the air filter, it can cause the internal temperature of the projector to rise, and this can lead to problems with operation and shorten the optical engine's service life. Clean the air filter immediately when the message is displayed.
- Do not rinse the air filter in water. Do not use detergents or solvents.
- When using a brush for cleaning, use one with long soft bristles, and brush it lightly. If it is brushed too strongly, dust will be ground into the air filter and cannot be removed.




When using a projector with an air filter on the ceiling side, the air filter will become clogged frequently.

Cleaning the air filter


This projector has one air filter on the front and two on the sides (see the following illustration). This explanation uses the air filter on the front as an example.

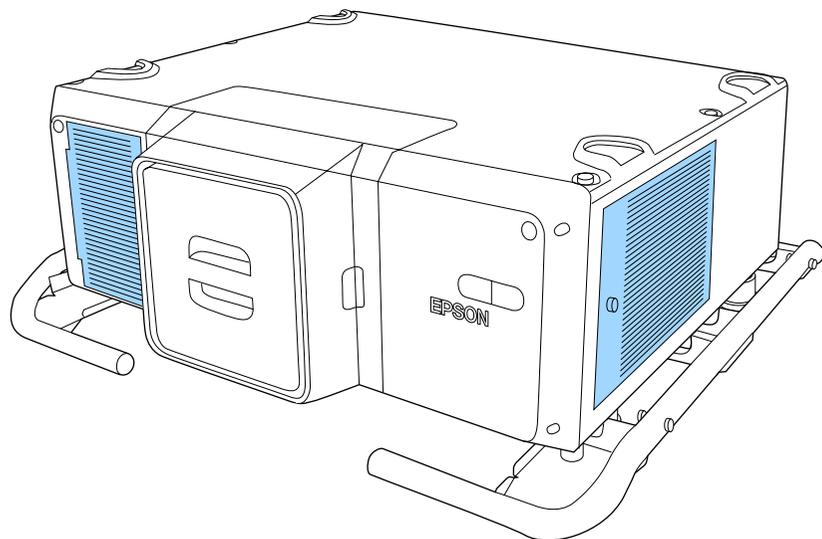

- 1** After you turn off the projector's power and the confirmation buzzer beeps, disconnect the power cord.
- 2** Remove the air filter cover screw.

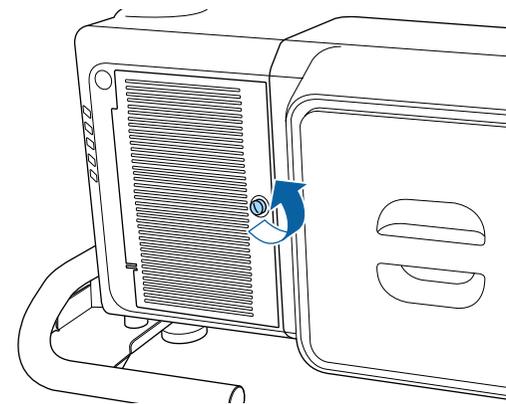


- 3** Open the air filter cover.

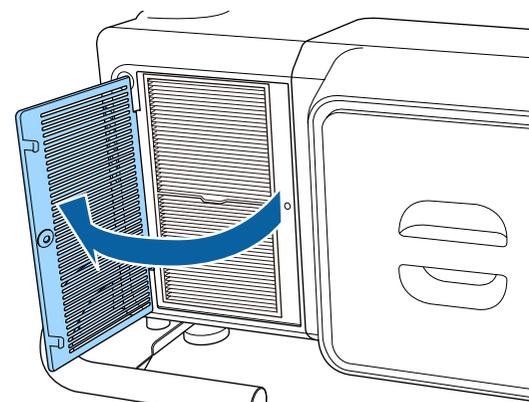





The method for opening the air filter cover differs for the front and the side. The air filter cover at the side is attached to a cord to prevent it from falling.

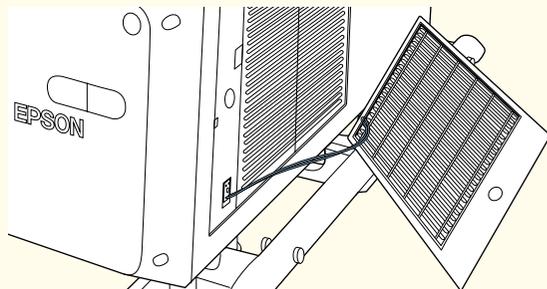

- 4** Remove the air filter.
Grip the tab of the air filter, and pull it straight out.

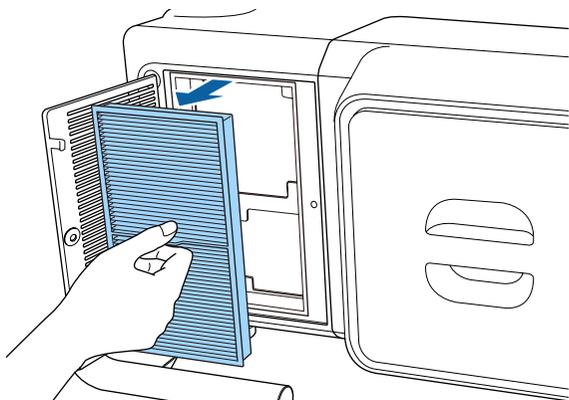


- 5** With the front (the side with tabs) of the air filter facing down, tap the air filter four or five times to shake off the dust.
Turn it over and tap the other side in the same way.

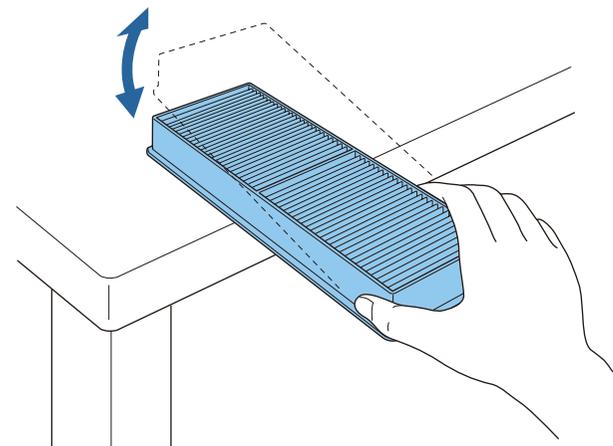



Attention

If the air filter is hit too hard, it may become unusable due to deformities and cracks.


- 6** Remove any dust remaining on the air filter by using a vacuum cleaner from the front side.

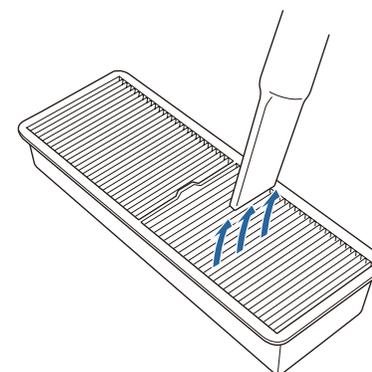

- 7** Replace the air filter.
Press until it clicks into place.

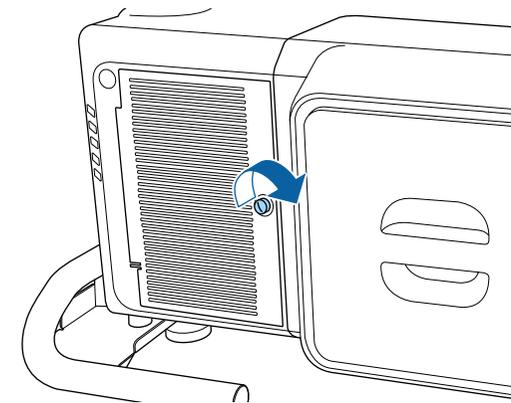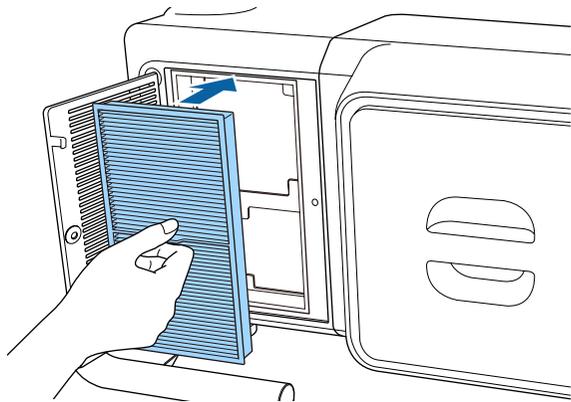

8 Close the air filter cover.

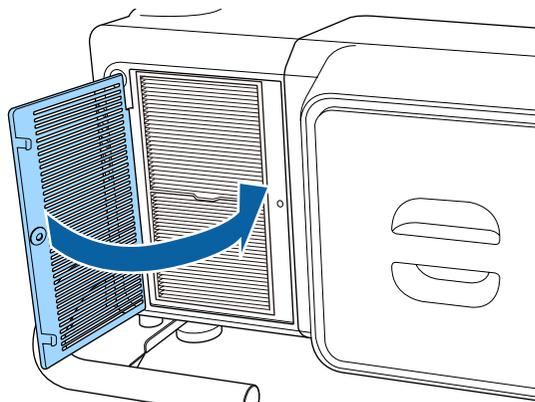

9 Tighten the air filter cover screw.



- If a message is frequently displayed, even after cleaning, it is time to replace the air filter. Replace it with a new air filter.
 - ☛ "Replacing the Air Filter" [p.179](#)
- It is recommended that you clean the air filter every 20,000 hours. Clean it more often than this if using the projector in a particularly dusty environment.
- The indicators or messages regarding Air Filter Notice are displayed only when **Air Filter Notice** is set to **On** from the Configuration menu.
 - ☛ **Extended - Display - Air Filter Notice** [p.125](#)

This section explains how to replace the air filter.

Replacing the Air Filter

Air filter replacement period


If the message is displayed frequently even though the air filter has been cleaned, replace the air filter.

Attention

When using the projector in smoky and dusty environments, replace the air filter every 24 hours.


How to replace the air filter

This projector has one air filter on the front and two on the sides. This explanation uses the air filter on the front as an example.

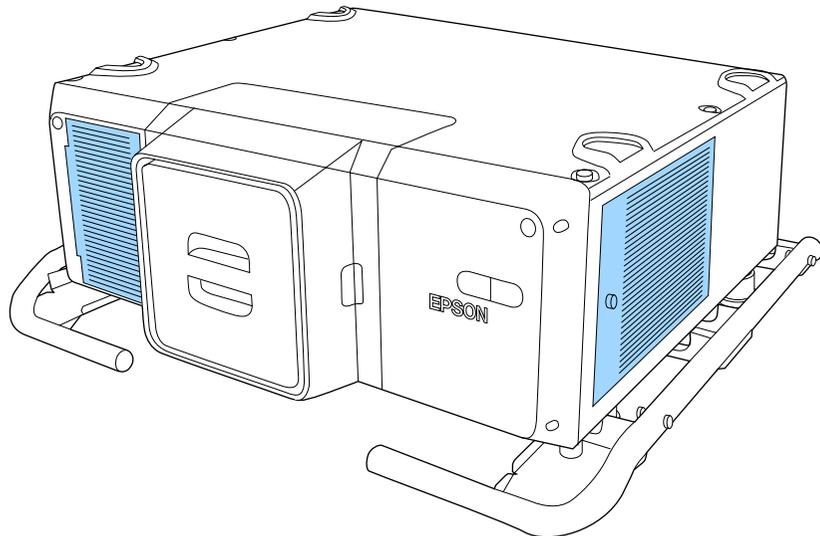


- 1 After you turn off the projector's power and the confirmation buzzer beeps, disconnect the power cord.

- 2 Remove the air filter cover screw.

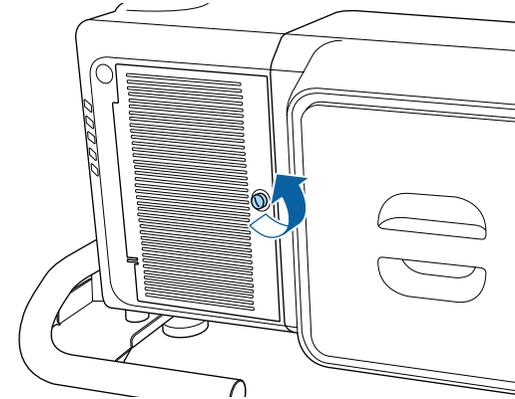


- 3 Open the air filter cover.

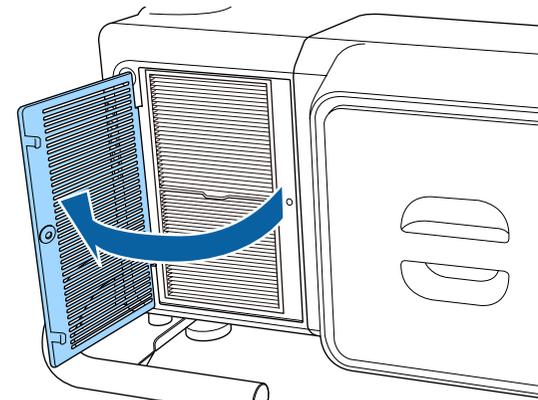




The method for opening the air filter differs for the front and the side. The air filter cover at the side is attached to a cord to prevent it from falling.

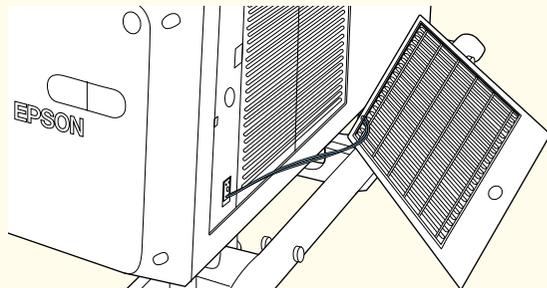


4 Remove the air filter.

Grip the tab of the air filter, and pull it straight out.

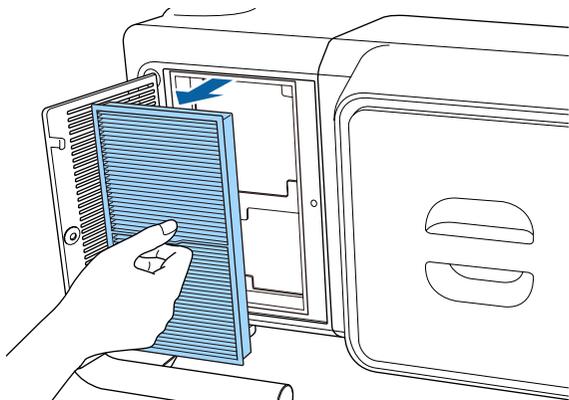


5 Install the new air filter.


Press until it clicks into place.

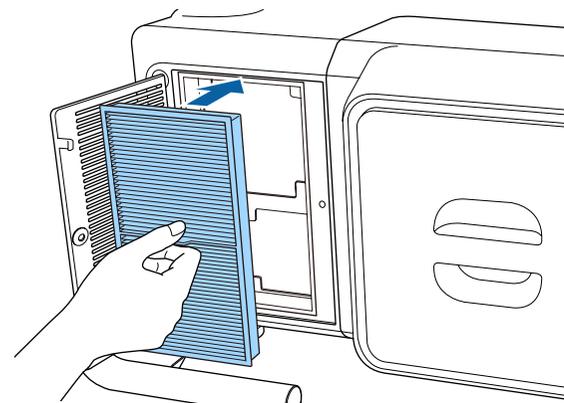

6 Close the air filter cover.

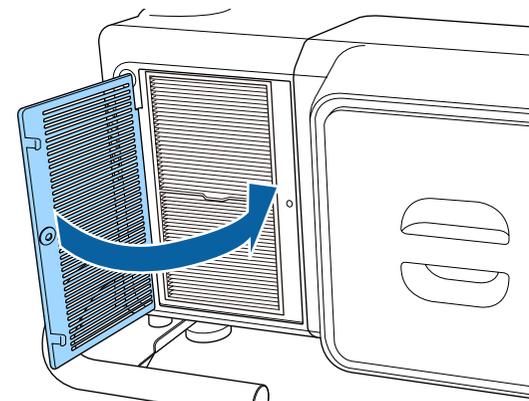

7 Tighten the air filter cover screw.

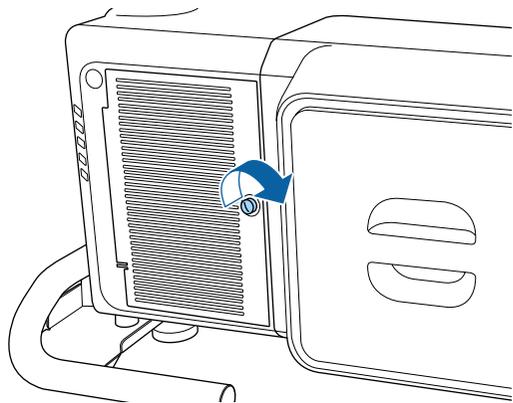

Dispose of used air filters properly in accordance with your local regulations.

Material of the frame part: Polypropylene

Material of the filter part: Paper

Color Calibration

Automatically adjusts aging deterioration of the color tone for the whole screen based on the default color settings.

Operating conditions for auto adjustment functions


The auto adjustment function for Color Calibration works under the following conditions:

- The screen is flat without any curves or distortions
- Using a matte white diffusion screen
- The projection size is 100 to 300 inches
- Projectors are installed in parallel with the screen



- Auto adjustment is not available when using the following lenses. ELPLR04, ELPLL08, ELPLL07
- After auto adjustment, the movement range for lens shift is reduced for some lenses.
 - ☛ "Adjusting the Position of the Projected Image (Lens Shift)" p.31
- We recommend performing Color Calibration at least 20 minutes after turning on the projector or canceling the shutter function.
- To increase the accuracy of adjustments, we recommend darkening the room while projecting images and then making adjustments.
- Auto adjustment is performed using the camera built into the front of the projector. Do not block the camera or the projected images.
- Auto adjustment takes approximately one minute and 30 seconds.
- After making automatic adjustments, Color Uniformity and Color Matching are returned to their defaults.
- By using the scheduling function, you can automatically adjust the color for the whole screen at the time you set.
 - ☛ "Scheduling Function" p.105
- See the following if Color Calibration does not work correctly.
 - ☛ "Automatic adjustments are not performed correctly" p.169

- 1 Press the [Menu] button while projecting.
- 2 Select **Color Calibration** from **Extended**.
- 3 Select **Start Auto Adjustment**, and then press the [↵] button.

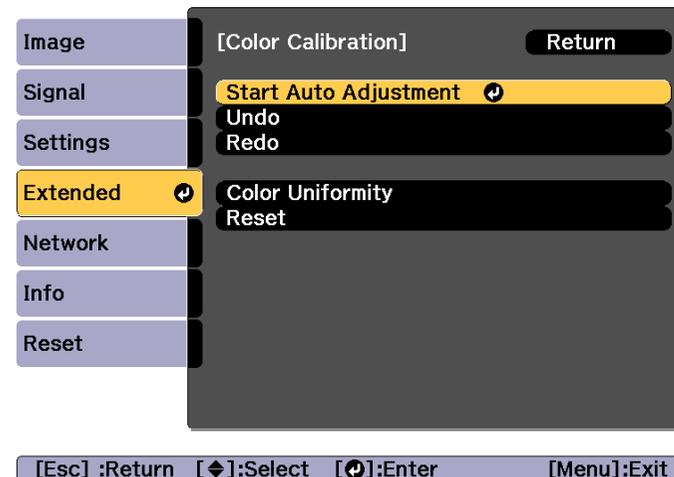

The adjustment pattern is displayed, and adjustment starts. If the projected image is displayed before the adjusting, the procedure is complete.



- See the following if an error occurs.
 - ☛ "Automatic adjustments are not performed correctly" p.169
- To return to the status before auto adjustment, select **Undo**. When you select **Redo** after selecting **Undo**, it returns the image to the status after auto adjustment.
- To return **Color Calibration** to its default value, select **Reset**.


Panel Alignment

Adjusts the pixel color shift for the LCD panel. You can adjust the pixels horizontally and vertically by 0.25 pixel within a range of ± 1 pixel.




- Image quality may decline after performing LCD alignment.
- Images for pixels that extend beyond the edge of the projected screen are not displayed.

- 1 Press the [Menu] button while projecting.
- 2 Select **Display** from **Extended**.
- 3 Select **Panel Alignment**, and then press the [\leftarrow] button.

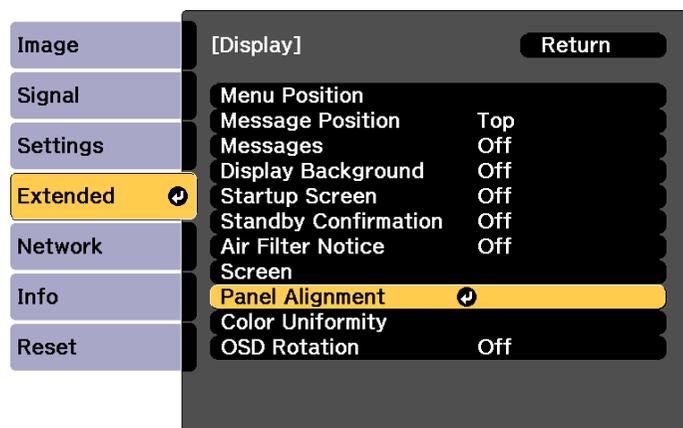

[Esc] :Return [\leftarrow] :Select [\rightarrow] :Enter [Menu] :Exit

- 4 Enable **Panel Alignment**.

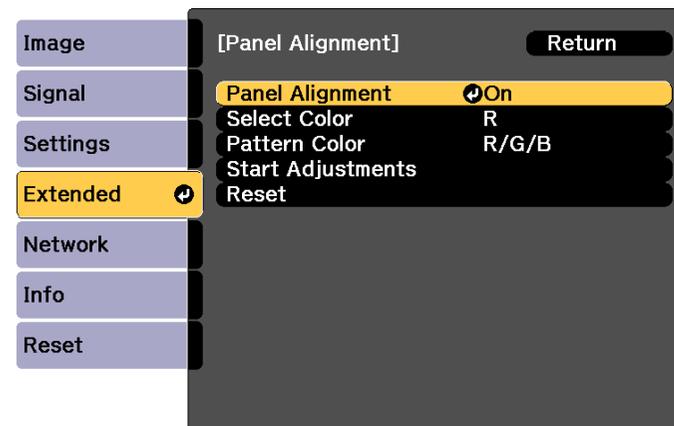

[Esc] :Return [\leftarrow] :Select [\rightarrow] :Enter [Menu] :Exit

- (1) Select **Panel Alignment**, and then press the [\leftarrow] button.
- (2) Select **On**, and then press the [\leftarrow] button.
- (3) Press the [Esc] button to return to the previous screen.

- 5 Select the color you want to adjust.

- (1) Select **Select Color**, and then press the [\leftarrow] button.
- (2) Select **R** (red) or **B** (blue), and then press the [\leftarrow] button.
- (3) Press the [Esc] button to return to the previous screen.

- 6 Select the grid color displayed when making adjustments from **Pattern Color**.

- (1) Select **Pattern Color**, and then press the [\leftarrow] button.

- (2) Select a combination of R (red), G (green), and B (blue) for the grid color.
- R/G/B:** Displays a combination all three colors; red, green and blue. The actual color of the grid is white.
- R/G:** This is available when **R** is selected from **Select Color**. Displays a combination of two colors; red and green. The actual color of the grid is yellow.
- G/B:** This is available when **B** is selected from **Select Color**. Displays a combination of two colors; green and blue. The actual color of the grid is cyan.
- (3) Press the [Esc] button to return to the previous screen.


- 7** Select **Start Adjustments**, and then press the [**↵**] button. When the message is displayed, press the [**↵**] button again.

Adjustment starts. All four corners are adjusted in order starting at the top left.



The image may become distorted while adjusting. The image is restored once adjustments are complete.

- 8** Use the [**▲**], [**▼**], [**◀**], and [**▶**] buttons to make adjustments, and then press the [**↵**] button to move to the next adjustment point.
- 9** When you have adjusted all four corners, select **Exit**, and then press the [**↵**] button.

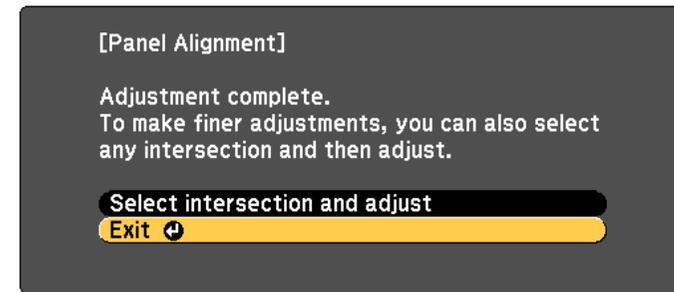

[**◆**]:Select [**⏎**]:Enter [Menu]:Exit

If you feel you still need to make adjustments after correcting all four points, select **Select intersection and adjust** and then continue making adjustments.


Color Uniformity

Adjusts the color tone for the whole screen.



The color tone may not be uniform even after performing color uniformity.

- 1** Press the [Menu] button while projecting.
- 2** Select **Display** from **Extended**.
- 3** Select **Color Uniformity**, and then press the [**↵**] button. The following screen is displayed.

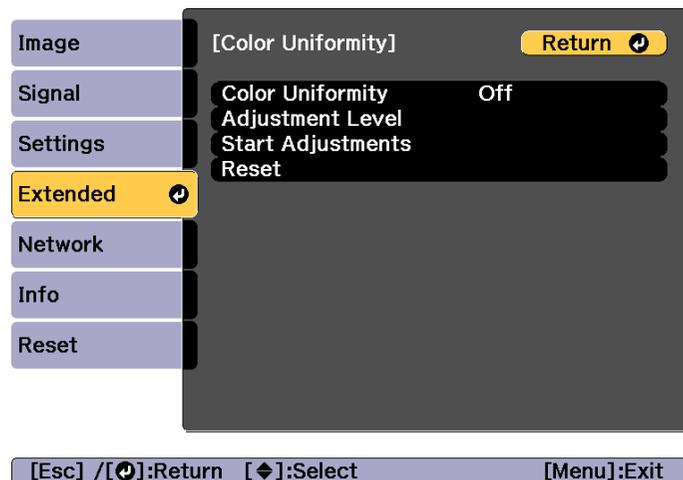

Color Uniformity: Turns color uniformity on or off.

Adjustment Level: There are eight levels from white, through gray, and up to black. You can adjust each level individually.

Start Adjustments: Starts adjusting color uniformity.

Reset: Resets all adjustments and settings for **Color Uniformity** to their default values.




The image may become distorted while adjusting **Color Uniformity**. The image is restored once adjustments are complete.


- 4 Select **Color Uniformity**, and then press the [↵] button.
- 5 Set to **On**, and then press the [Esc] button.
- 6 Select **Adjustment Level**, and then press the [↵] button.
- 7 Use the [◀][▶] buttons to set the adjustment level.

- 8 Press the [Esc] button to return to the previous screen.
- 9 Select **Start Adjustments**, and then press the [↵] button.
- 10 Select the area you want to adjust, and then press the [↵] button.

Adjust the outer areas first, and then adjust the whole screen.

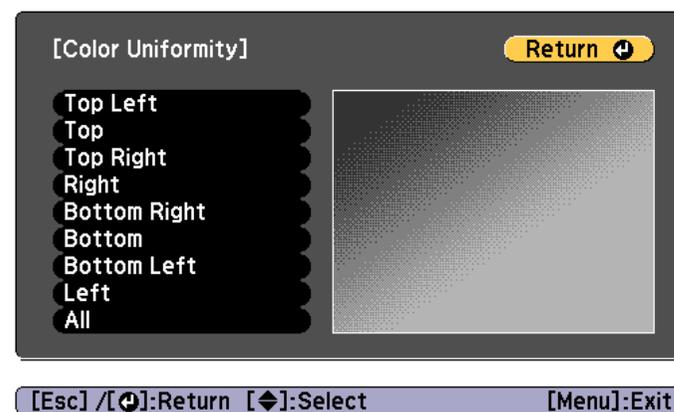

- 11 Use the [▲][▼] buttons to select the color you want to adjust, and then use the [◀][▶] buttons to adjust.
Press the [◀] button to weaken the color tone. Press the [▶] button to strengthen the color tone.

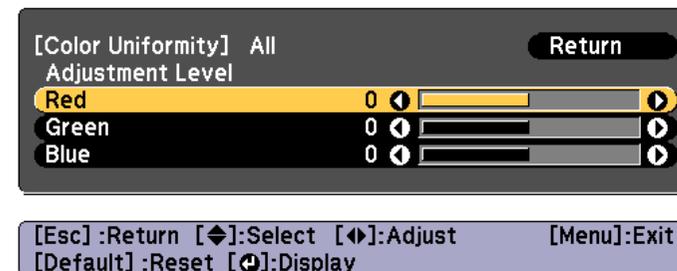

- 12 Return to step 6 and adjust each level.



- 13** To complete the adjustment, press the [Menu] button.



Appendix

About EasyMP Monitor

EasyMP Monitor lets you carry out operations such as checking the status of multiple Epson projectors that are connected to a network at a computer monitor, and controlling the projectors from the computer.

You can download EasyMP Monitor from the following Web site.

<http://www.epson.com>

About Message Broadcasting

Message Broadcasting is plugin software for EasyMP Monitor.

Message Broadcasting can be used to send a message (JPEG file) to project on all Epson projectors or specified projectors connected on the network.

The data can be sent manually, or sent automatically using Timer Settings of EasyMP Monitor.

Download the Message Broadcasting software from the following website.

<http://www.epson.com>

Changing Settings Using a Web Browser (Epson Web Control)

By using a Web browser of a computer or mobile device connected to the projector on a network, you can set functions and control the projector. This function allows you to perform setup and control operations remotely. Also, you can operate a specific projector when using multiple projectors.

Use Internet Explorer 9.0 or later as the Web browser. Use Safari for OS X.



If you set **Standby Mode** to **Communication On**, you can use the Web browser to make settings and perform control even if the projector is in standby mode (when the power is off).

 **Extended - Standby Mode** [p.125](#)

Displaying the Epson Web Control Screen


Use the following procedure to display the Epson Web Control screen.

Make sure your device and projector are ready for the network connection.



If your Web browser is set up to connect via a proxy server, the Epson Web Control screen cannot be displayed. To display Web Control, you need to make settings so that a proxy server is not used for a connection.

- 1** Connect your device to the same network as the connected projector.
The connection method varies depending on the device. See the manual supplied with your device for details. When using a tablet, check the Wi-Fi settings.
- 2** Start the Web browser on your device.
- 3** Connect by entering the address of the connected projector in the URL field of the Web browser.
The Home screen is displayed.

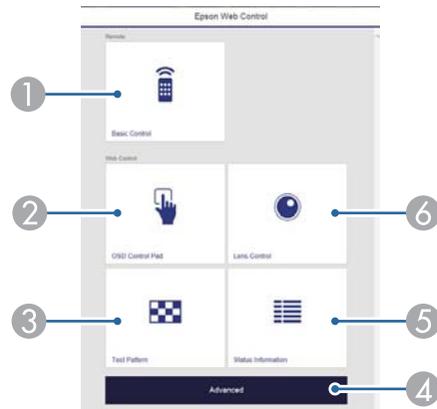


- ① **Basic Control**
 🖱️ "Basic Control Screen" [p.189](#)
- ② **OSD Control Pad**
 🖱️ "OSD Control Pad Screen" [p.190](#)
- ③ **Test Pattern**
 🖱️ "Test Pattern Operation Screen" [p.192](#)
- ④ **Advanced**
 You are moved to the Advanced screen.
- ⑤ **Status Information**
 🖱️ "Status Information Screen" [p.192](#)
- ⑥ **Lens Control**
 🖱️ "Lens Control Screen" [p.190](#)



- When performing the functions from the Home screen, you may be prompted to enter the user name and password. The following two types of user names and passwords are available.
 Remote: The user name is "EPSONREMOTE" and the default password is "guest".
 Web Control: The user name is "EPSONWEB" and the default password is "admin".
- You cannot change the user name. You can change the password in the Network menu from the Configuration menu.
 🖱️ **Network - Basic - Remote Password, Web Control Password** [p.131](#)
- You must enter the user name for Web Control Password even when the password is disabled.

Basic Control Screen

You can perform basic projector operations.

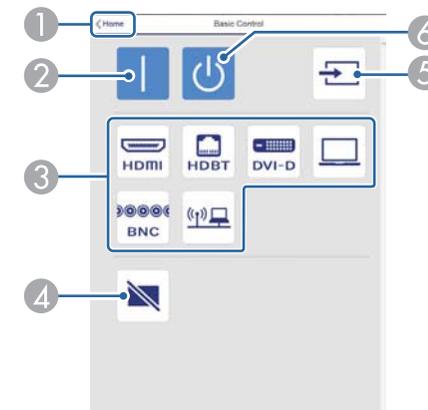


- ① Moves to the Home screen.
- ② Turns the projector on.
- ③ Switches to the target image.

- ④ Press to turn the image on or off temporarily.
- ⑤ Automatically detects the input signal.
- ⑥ Turns the projector off.

OSD Control Pad Screen

You can operate the Configuration menu of the projector.

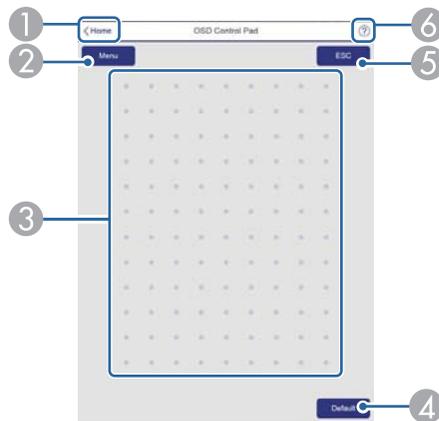

- ① Moves to the Home screen.
- ② Displays and closes the Configuration menu.
- ③ You can operate the Configuration menu using your finger or mouse. Flick to select an item, and tap to confirm the selection.
- ④ When "[Default] :Reset" is displayed on the Configuration menu guide, selecting this icon returns the settings to their default values.
- ⑤ Returns to the previous menu level in the Configuration menu.
- ⑥ Displays information on using the OSD Control Pad.



Items in the Configuration menu that cannot be set in Epson Web Control are listed below.

- Settings Menu - User Button
- Extended menu - Display - Message Position
- Extended Menu - User's Logo
- Extended menu - Operation - Advanced - BNC Sync Termination, HDMI DDC Buffer, DVI-D DDC Buffer, Lens Type
- Extended menu - Operation - Lens Calibration
- Extended Menu - Language


The settings for items on each menu are the same as the projector's Configuration menu.

☞ "Configuration Menu" [p.115](#)

Lens Control Screen

You can operate the lens of the projector.

Focus/Distortion Operation Screen

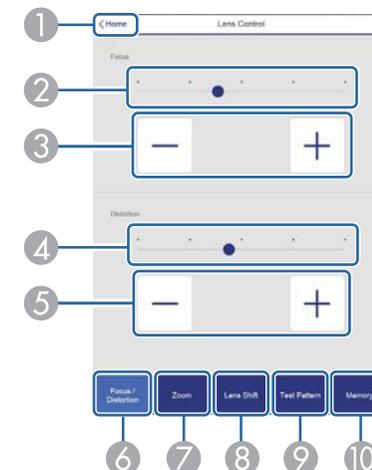


- ① Moves to the Home screen.

- ② Move the slider to adjust the focus.
- ③ Press the buttons to adjust the focus.
- ④ Move the slider to adjust image warping.*
- ⑤ Press the buttons to adjust image warping.*
- ⑥ Displays the Focus / Distortion operation screen.
- ⑦ Displays the Zoom operation screen.
- ⑧ Displays the Lens Shift operation screen.
- ⑨ Displays the Test Pattern operation screen.
- ⑩ Displays the Memory operation screen.

* For ELPLR05 and ELPLU05 only.


Zoom Operation Screen

This is not available for ELPLR05.

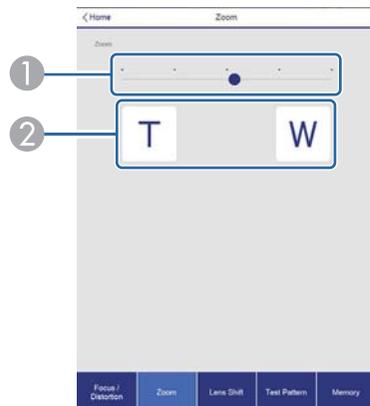


- ① Move the slider to adjust the zoom.
- ② Press the buttons to adjust the zoom.

Lens Shift Operation Screen

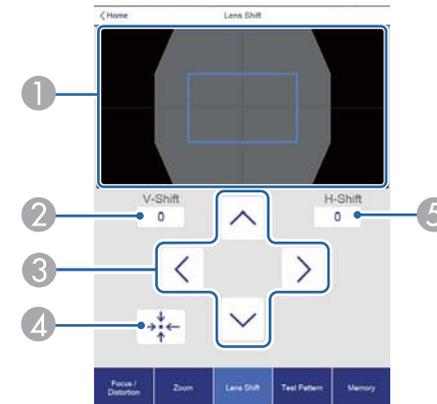

- ① Displays the position of the image as a blue square. When you move the image position, a red square is displayed at the destination.
- ② Displays the vertical image position. You can directly specify the position by tapping it and entering a number.
- ③ Moves the image position up, down, left, or right.
- ④ Moves the lens position to the home position if you press the **OK** button in the confirmation screen.
- ⑤ Displays the horizontal image position. You can directly specify the position by tapping it and entering a number.

Test Pattern Operation Screen

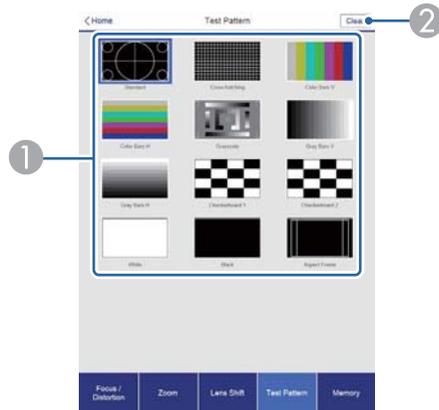


- ① Displays a test pattern.
- ② Closes the test pattern.

Memory Operation Screen

See the following for memory function details.

☛ "Memory Function" p.103

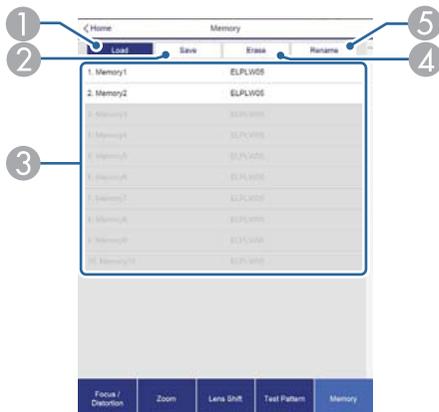


- ① Loads a memory.

- ② Saves a memory.
- ③ Displays a list of memories.
- ④ Erases a memory.
- ⑤ Changes a memory name.

Status Information Screen

You can check the projector's status. See the following for display details.

☛ "Reading Status Monitor" p.154

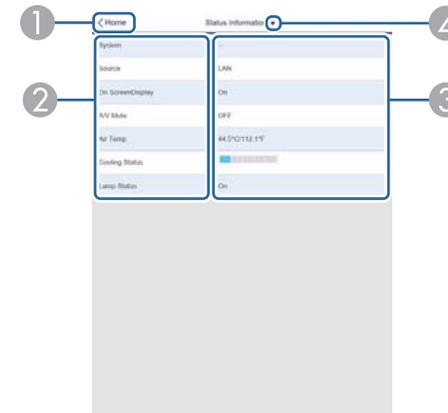

- ① Moves to the Home screen.
- ② Displays the item name.
- ③ Displays the status of each item.
- ④ Selects a category from the following.
Status Information, Source, Signal Information, Network Wired, Network Wireless, Maintenance, Version, Voltage Warning Info

Using the Mail Notification Function to Report Problems

When you set Mail Notification, notification messages are sent to the preset email addresses when a problem or warning occurs with a projector. This will enable the operator to be notified of problems with projectors even at locations away from the projectors.

☛ **Network - Notifications - Mail Notification** [p.134](#)



- Up to a maximum of three notification destinations (addresses) can be registered, and notification messages can be sent to all three destinations at once.
- If a projector develops a critical problem and suddenly stops working, it may not be able to send a message notifying an operator of the problem.
- If you set **Standby Mode** to **Communication On**, you can control the projector even if it is in standby mode (when the power is off).

☛ **Extended - Standby Mode** [p.125](#)

Reading error notification mail

When the Mail Notification function is set to On and a problem or warning occurs in the projector, the following email will be sent.

Sender: The email address set in **From**

Subject: EPSON Projector

Line 1: The projector name where the problem has occurred

Line 2: The IP address set for the projector where the problem has occurred.

Line 3 and on: Details of the problem

The details of the problem are listed line by line. The main message contents are listed below.

- Clean Air Filter
- Internal error
- Fan related error
- Sensor error
- Laser error
- Laser warning
- Retardation Plate Error
- Internal temperature error
- High-speed cooling in progress
- Low Air Flow
- Low Air Flow Error
- No-signal
No Signal is input to the projector. Check the connection status or check that the power for the signal source is turned on.
- Lens shift error
- No lens
- Peltier Device error

See the following to deal with problems or warnings.

☛ "Reading the Indicators" [p.148](#)

Management Using SNMP

By setting **SNMP** to **On** in the Configuration menu, notification messages are sent to the specified computer when a problem or warning occurs. This allows you to check for problems with projectors even at locations away from the projectors.

 **Network - Notifications - SNMP** [p.134](#)



- SNMP should be managed by a network administrator or someone who is familiar with the network.
- To use the SNMP function to monitor the projector, you need to install the SNMP manager program on your computer.
- The SNMP Agent for this projector complies with version 1 (SNMPv1).
- The managing function using SNMP cannot be used over wireless LAN in Quick connection mode.
- Up to two destination IP addresses can be saved.

ESC/VP21 Commands

You can control the projector from an external device using ESC/VP21.

Command list

When the power ON command is transmitted to the projector, the power turns on and it enters warm-up mode. When the projector's power has turned on, a colon ":" (3Ah) is returned.

When a command is input, the projector executes the command and returns a ":", and then accepts the next command.

If the command being processed terminates abnormally, an error message is output and a ":" is returned.

The main contents are listed below.

| Item | | Command | |
|--------------------------------|----------|-----------|-----------|
| Power ON/OFF | On | PWR ON | |
| | Off | PWR OFF | |
| Signal selection | Computer | Auto | SOURCE 1F |
| | | RGB | SOURCE 11 |
| | | Component | SOURCE 14 |
| | BNC | Auto | SOURCE BF |
| | | RGB | SOURCE B1 |
| | | Component | SOURCE B4 |
| | HDMI | | SOURCE 30 |
| | LAN | | SOURCE 53 |
| | SDI | | SOURCE 60 |
| | DVI-D | | SOURCE A0 |
| HDBaseT | | SOURCE 80 | |
| Shutter function On/Off | On | MUTE ON | |
| | Off | MUTE OFF | |

Add a Carriage Return (CR) code (0Dh) to the end of each command and transmit.

For more details, contact your local dealer or the nearest address provided in the Epson Projector Contact List.



 [Epson Projector Contact List](#)

Cable layouts

Serial connection

- Connector shape: D-Sub 9-pin (male)

- Projector input port name: RS-232C

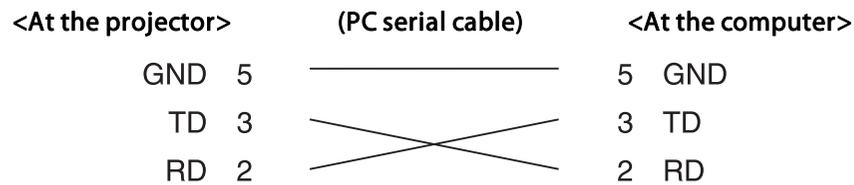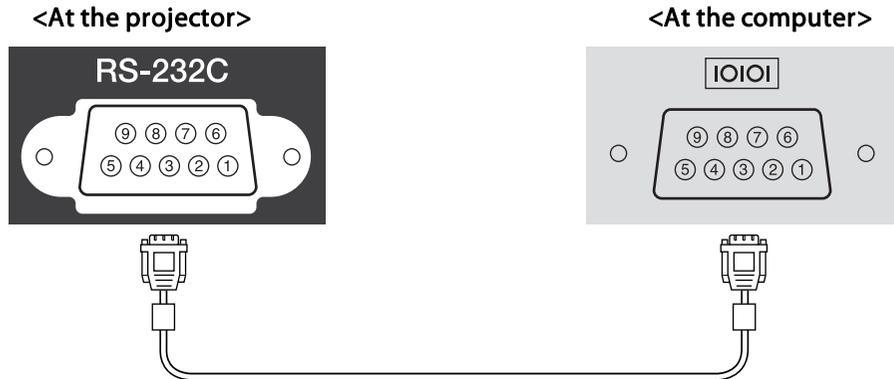

| Signal Name | Function |
|-------------|--------------------|
| GND | Signal wire ground |
| TD | Transmit data |
| RD | Receive data |

Communications protocol

- Default baud rate setting: 9600 bps
- Data length: 8 bit
- Parity: None
- Stop-bit: 1 bit
- Flow control: None

About PJLink

PJLink Class1 was established by the JBMIA (Japan Business Machine and Information System Industries Association) as a standard protocol for controlling network-compatible projector's as part of their efforts to standardize projector control protocols.

The projector complies with the PJLink Class1 standard established by the JBMIA.

You need to make network settings before you can use PJLink. See the following for more information on network settings.

☛ "Network Menu" [p.129](#)

It complies with all commands except for the following commands defined by PJLink Class1, and agreement was confirmed by the PJLink standard adaptability verification.

URL: <http://pjlink.jbmia.or.jp/english/>

- **Non-compatible commands**

| | Function | PJLink Command |
|---------------|------------------|----------------|
| Mute settings | Image muting set | AVMT 11 |
| | Audio muting set | AVMT 21 |

- **Input names defined by PJLink and corresponding projector sources**

| Source | PJLink Command |
|----------|----------------|
| Computer | INPT 11 |
| BNC | INPT 13 |
| DVI-D | INPT 31 |
| HDMI | INPT 32 |
| SDI | INPT 34 |
| LAN | INPT 52 |

| Source | PJLink Command |
|---------|----------------|
| HDBaseT | INPT 56 |

- Manufacturer name displayed for "Manufacture name information query"
EPSON
- Model name displayed for "Product name information query"
EPSON L2500U

About Crestron RoomView®

Crestron RoomView® is an integrated control system provided by Crestron®. It can be used to monitor and control multiple devices connected on a network.

The projector supports the control protocol, and can therefore be used in a system built with Crestron RoomView®.

Visit the Crestron® Web site for details on Crestron RoomView®. (Only English-language displays are supported.)

<http://www.crestron.com>

The following provides an overview of Crestron RoomView®.

- **Remote operation using a Web browser**
You can operate a projector from your computer just like using a remote control.
- **Monitoring and control with application software**
You can use Crestron RoomView® Express or Crestron RoomView® Server Edition provided by Crestron® to monitor devices in the system, to communicate with the help desk, and to send emergency messages. See the following Web site for details.
<http://www.crestron.com/getroomview>

This manual describes how to perform operations on your computer using a Web browser.



- You can only enter single-byte alphanumeric characters and symbols.
- The following functions cannot be used while using Crestron RoomView®.
 - ☛ "Changing Settings Using a Web Browser (Epson Web Control)" [p.188](#)
Message Broadcasting (EasyMP Monitor plug-in)
 - If you set **Standby Mode** to **Communication On**, you can control the projector even if it is in standby mode (when the power is off).
 - ☛ **Extended - Standby Mode** [p.125](#)

Operating a projector from your computer

Displaying the operation window

Check the following before carrying out any operations.

- Make sure the computer and projector are connected to the network.
- Set **Crestron RoomView** to **On** from the **Network** menu.
 - ☛ **Network - Others - Crestron RoomView** [p.135](#)

1


Start the Web browser on the computer.

2

Enter the IP address of the projector in the address field of the Web browser, and press the Enter key on the keyboard.

The operation window is displayed.

Using the operation window

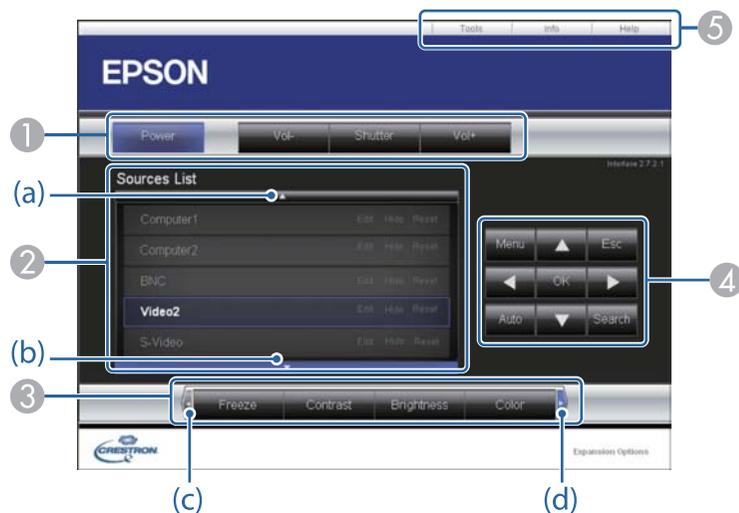

- ① You can perform the following operations when you click the buttons.

| Button | Function |
|----------------|--|
| Power | Turns the projector power on or off. |
| Shutter | Press to turn the image on or off temporarily. ☛ "Hiding the Image Temporarily (Shutter)" p.100 |

- ② Switch to the image from the selected input source. To display input sources that are not shown in Source List, click (a) or (b) to scroll up or down. The current video signal input source is displayed in blue. You can change the source name if necessary.
- ③ You can perform the following operations when you click the buttons. To display buttons that are not shown in Source List, click (c) or (d) to scroll left or right.

| Button | Function |
|-------------------|--|
| Freeze | Images are paused or unpaused. ☛ "Freezing the Image (Freeze)" p.101 |
| Contrast | Adjusts the difference between light and shade in the images. |
| Brightness | Adjusts the image brightness. |
| Color | Adjusts the color saturation for the images. |
| Sharpness | Adjusts the image sharpness. |
| Zoom | Click the [⊕] button to enlarge the image without changing the projection size. Click the [⊖] button to reduce an image that was enlarged with the [⊕] button. |

- ④ The [▲] [▼] [◀] [▶] buttons perform the same operations as the [▲] [▼] [◀] [▶] buttons on the remote control. You can perform the following operations when you click the other buttons.

| Button | Function |
|---------------|---|
| OK | Performs the same operation as the [↵] button on the remote control. ☛ "Remote Control" p.19 |
| Menu | Displays and closes the Configuration menu. |
| Auto | If clicked while projecting analog RGB signals from the Computer port, you can automatically optimize Tracking, Sync., and Position. |
| Search | Changes to the next input source that is sending an image. ☛ "Automatically Detecting Input Signals and Changing the Projected Image (Source Search)" p.53 |


| Button | Function |
|--------|---|
| Esc | Performs the same operation as the [Esc] button on the remote control.  "Remote Control" p.19 |

5 You can perform the following operations when you click the tabs.

| Tab | Function |
|-------|---|
| Help | Displays the Help Desk window. Used to send messages to, and receive messages from, the administrator using Crestron RoomView® Express. |
| Info | Displays information on the projector that is currently connected. |
| Tools | Changes settings in the projector that is currently connected. See the next section. |

Using the tools window

The following window is displayed when you click the **Tools** tab on the operation window. You can use this window to change settings in the projector that is currently connected.

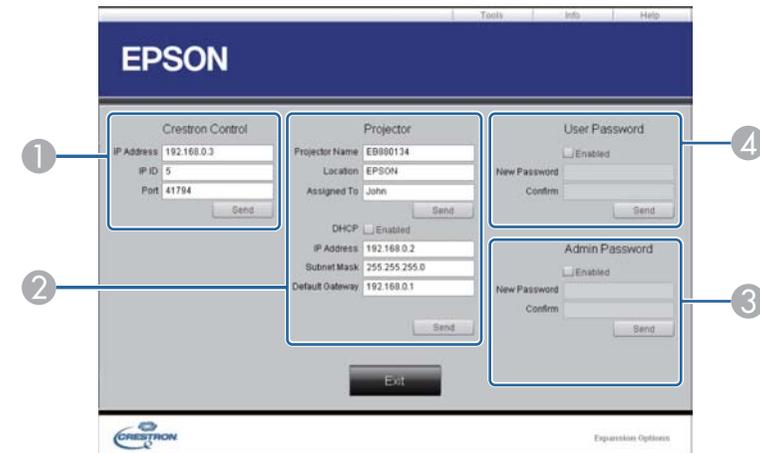

- 1 **Crestron Control**
Make settings for Crestron® central controllers.
- 2 **Projector**
The following items can be set.

| Item | Function |
|-----------------------|--|
| Projector Name | Enter a name to differentiate the projector that is currently connected from other projectors on the network. (The name can contain up to 15 single-byte alphanumeric characters.) |
| Location | Enter an installation location name for the projector that is currently connected on the network. (The name can contain up to 32 single-byte alphanumeric characters and symbols.) |
| Assigned To | Enter a user name for the projector. (The name can contain up to 32 single-byte alphanumeric characters and symbols.) |

| Item | Function |
|------------------------|---|
| DHCP | Select the Enabled check box to use DHCP. You cannot enter an IP address if DHCP is enabled. |
| IP Address | Enter the IP address to assign to the currently connected projector. |
| Subnet Mask | Enter a subnet mask for the currently connected projector. |
| Default Gateway | Enter the gateway address for the currently connected projector. |
| Send | Click this button to confirm the changes made to the Projector . |

| Item | Function |
|---------------------|--|
| New Password | Enter the new password when changing the password to open the operation window. (The name can contain up to 26 single-byte alphanumeric characters.) |
| Confirm | Enter the same password as you entered in New Password . If the passwords are not the same, an error is displayed. |
| Send | Click this button to confirm the changes made to the User Password . |

3 Admin Password

Select the **Enabled** check box to require a password to open the Tools window. The following items can be set.

| Item | Function |
|---------------------|--|
| New Password | Enter the new password when changing the password to open the Tools window. (The name can contain up to 26 single-byte alphanumeric characters.) |
| Confirm | Enter the same password as you entered in New Password . If the passwords are not the same, an error is displayed. |
| Send | Click this button to confirm the changes made to the Admin Password . |

4 User Password

Select the **Enabled** check box to require a password to open the operation window on the computer. The following items can be set.

About Art-Net

Art-Net is an Ethernet communication protocol based on the TCP/IP protocol.

You can control the projector by using a DMX controller or an application system.

Channel definitions

The following explains the channel definitions used when controlling the projector in Art-Net.

| Channel | Function | Operation | | Parameters | Default | Operation Content |
|-----------------|---------------------------|-----------------|--------|------------|---------|----------------------------------|
| 1 | Adjusting light (Dimming) | 0% - 100% | | 0 - 255 | 0 | Sets the image brightness. |
| 2 | Shutter control | Shutter | Closed | 0 - 63 | 128 | Enables/disables Shutter. |
| | | Non-operational | | 64 - 191 | | |
| | | Shutter | Open | 192 - 255 | | |
| 3 | Switch source | Non-operational | | 0 - 7 | 0 | Changes to the specified source. |
| | | HDMI | | 8 - 15 | | |
| | | Non-operational | | 16 - 23 | | |
| | | HDBaseT | | 24 - 31 | | |
| | | DVI-D | | 32 - 39 | | |
| | | Non-operational | | 40 - 47 | | |
| | | SDI | | 48 - 55 | | |
| | | Computer | | 56 - 63 | | |
| | | Non-operational | | 64 - 71 | | |
| | | BNC | | 72 - 79 | | |
| | | LAN | | 80 - 87 | | |
| | | Non-operational | | 88 - 95 | | |
| Non-operational | | 96 - 255 | | | | |



| Channel | Function | Operation | | Parameters | Default | Operation Content |
|---------|-----------------------|-----------------------|-------------------|------------|---------|--|
| 4 | Lens position | Non-operational | | 0 - 31 | 0 | Moves the lens shift to the home position. |
| | | Move to home position | | 32 - 63 | | |
| | | Non-operational | | 64 - 255 | | |
| 5 | Horizontal lens shift | (+) lens adjustment | Movement - Large | 0 - 31 | 128 | Performs horizontal lens shift using the amount of movement specified. |
| | | | Movement - Medium | 32 - 63 | | |
| | | | Movement - Small | 64 - 95 | | |
| | | Non-operational | | 96 - 159 | | |
| | | (-) lens adjustment | Movement - Small | 160 - 191 | | |
| | | | Movement - Medium | 192 - 223 | | |
| | | | Movement - Large | 224 - 255 | | |
| 6 | Vertical lens shift | (+) lens adjustment | Movement - Large | 0 - 31 | 128 | Performs vertical lens shift using the amount of movement specified. |
| | | | Movement - Medium | 32 - 63 | | |
| | | | Movement - Small | 64 - 95 | | |
| | | Non-operational | | 96 - 159 | | |
| | | (-) lens adjustment | Movement - Small | 160 - 191 | | |
| | | | Movement - Medium | 192 - 223 | | |
| | | | Movement - Large | 224 - 255 | | |
| 7 | Electronic zoom | (+) lens adjustment | Movement - Large | 0 - 31 | 128 | Performs electronic zoom using the amount of movement specified. |
| | | | Movement - Medium | 32 - 63 | | |
| | | | Movement - Small | 64 - 95 | | |
| | | Non-operational | | 96 - 159 | | |

| Channel | Function | Operation | | Parameters | Default | Operation Content |
|---------|-----------------------|---------------------|-------------------|------------|---------|--|
| | | (-) lens adjustment | Movement - Small | 160 - 191 | | |
| | | | Movement - Medium | 192 - 223 | | |
| | | | Movement - Large | 224 - 255 | | |
| 8 | Electronic focus | (+) lens adjustment | Movement - Large | 0 - 31 | 128 | Performs electronic focus using the amount of movement specified. |
| | | | Movement - Medium | 32 - 63 | | |
| | | | Movement - Small | 64 - 95 | | |
| | | Non-operational | | 96 - 159 | | |
| | | (-) lens adjustment | Movement - Small | 160 - 191 | | |
| | | | Movement - Medium | 192 - 223 | | |
| | | | Movement - Large | 224 - 255 | | |
| 9 | Electronic distortion | (+) lens adjustment | Movement - Large | 0 - 31 | 128 | Performs electronic distortion using the amount of movement specified. |
| | | | Movement - Medium | 32 - 63 | | |
| | | | Movement - Small | 64 - 95 | | |
| | | Non-operational | | 96 - 159 | | |
| | | (-) lens adjustment | Movement - Small | 160 - 191 | | |
| | | | Movement - Medium | 192 - 223 | | |
| | | | Movement - Large | 224 - 255 | | |
| 10 | Load lens memory | Non-operational | | 0 - 15 | 0 | Loads the specified lens memory. |
| | | Load lens memory 1 | | 16 - 31 | | |
| | | Load lens memory 2 | | 32 - 47 | | |
| | | Load lens memory 3 | | 48 - 63 | | |

| Channel | Function | Operation | Parameters | Default | Operation Content |
|---------|---------------------|---|------------|---------|--------------------------------------|
| | | Load lens memory 4 | 64 - 79 | | |
| | | Load lens memory 5 | 80 - 95 | | |
| | | Load lens memory 6 | 96 - 111 | | |
| | | Load lens memory 7 | 112 - 127 | | |
| | | Load lens memory 8 | 128 - 143 | | |
| | | Load lens memory 9 | 144 - 159 | | |
| | | Load lens memory 10 | 160 - 175 | | |
| | | Non-operational | 176 - 255 | | |
| 11 | Power control | Power off | 0 - 63 | 128 | Turns the projector power on or off. |
| | | Non-operational | 64 - 191 | | |
| | | Power on | 192 - 255 | | |
| 12 | Geometry correction | Off | 0 - 15 | 255 | Performs geometry correction. |
| | | Horizontal/vertical distortion (Keystone) | 16 - 31 | | |
| | | Quick Corner | 32 - 47 | | |
| | | Point Correction | 48 - 63 | | |
| | | Curved Surface | 64 - 79 | | |
| | | Corner Wall | 80 - 95 | | |
| | | Load geometry correction memory 1 | 96 - 111 | | Loads a geometry correction memory. |
| | | Load geometry correction memory 2 | 112 - 127 | | |
| | | Load geometry correction memory 3 | 128 - 143 | | |
| | | Non-operational | 144 - 175 | | |
| 13 | Lock | Cannot control | 0 - 127 | 0 | Enables/disables Art-Net operations. |
| | | Can control | 128 - 255 | | |



While controlling the projector using Art-Net and performing operations from the remote control or control panel, settings made by the DMX controller or application software may not be applied to the projector correctly. When you want to apply all the channel controls to the projector, set Channel 13 to "Cannot control", then set it back to "Can control".

The following optional accessories and consumables are available. Please purchase these products as and when needed. The following list of optional accessories and consumables is current as of: July 2016. Details of accessories are subject to change without notice and availability may vary depending on the country of purchase.

Optional Accessories

Lens unit

ELPLR05, ELPLU05, ELPLW07, ELPLM12, ELPLM13, ELPLM14, ELPLL09, ELPLL10

See the following for more information on the projection distance for each lens.

👁️ "Screen Size and Projection Distance" [p.206](#)

Computer cable ELPKC02

(1.8 m - for mini D-Sub15-pin/mini D-Sub 15pin)

Computer cable ELPKC09

(3 m - for mini D-Sub15-pin/mini D-Sub 15pin)

Computer cable ELPKC10

(20 m - for mini D-Sub15-pin/mini D-Sub 15pin)

An extension cable for when the computer cable being used is too short.

Component video cable ELPKC19

(3 m - for mini D-Sub 15-pin/RCA male×3)

Use to connect a [Component Video](#) source.

Remote control cable set ELPKC28

(10 m 2 piece set)

Use this to guarantee operation from the remote control from a distance.

Wireless mouse receiver ELPST16

Use this to use the projector's remote control to control the mouse pointer on the computer or to page up and down.

HDBaseT Transmitter ELPHD01

This transmitter performs long distance transmissions for HDMI signals and control signals for 1 LAN cable. Based on the [HDBaseT](#) standard. (HDCP 2.2 is not supported.)

Wireless LAN unit ELPAP10

Use when connecting the projector to a computer wirelessly and projecting.

Handle ELPMB49



Install this on the projector and use it to tilt or carry the projector.

Consumables

Air Filter ELPAF52

Use as a replacement for used air filters.

Projection Distance List

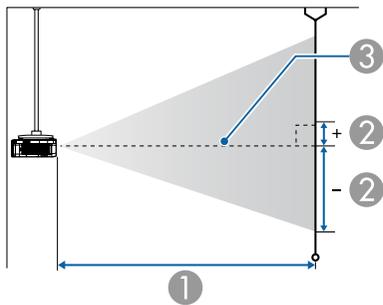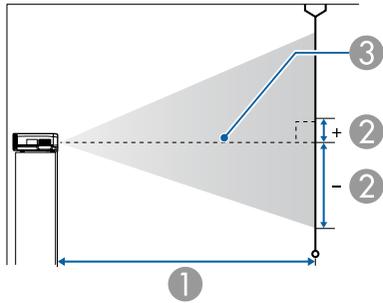

- ① Projection distance
- ② is the distance from the center of the lens to the base of the screen. This changes depending on the setting for vertical lens shift.
- ③ Center of lens

ELPLR05

Unit: cm

| 4:3 Screen Size | | ① | ② |
|-----------------|---------|----------------------------------|-----------------------------------|
| | | Minimum (Wide) to Maximum (Tele) | Vertical Lens Shift Top to Bottom |
| 90" | 183x137 | 128 to 128 | -92 to -45 |
| 100" | 203x152 | 143 to 143 | -102 to -50 |

| 4:3 Screen Size | | ① | ② |
|-----------------|-----------|----------------------------------|-----------------------------------|
| | | Minimum (Wide) to Maximum (Tele) | Vertical Lens Shift Top to Bottom |
| 120" | 244x183 | 174 to 174 | -123 to -60 |
| 150" | 305x229 | 219 to 219 | -154 to -75 |
| 200" | 406x305 | 296 to 296 | -205 to -100 |
| 250" | 508x381 | 373 to 373 | -256 to -125 |
| 883" | 1794x1346 | 1342 to 1342 | -904 to -442 |

Unit: cm

| 16:9 Screen Size | | ① | ② |
|------------------|-----------|----------------------------------|-----------------------------------|
| | | Minimum (Wide) to Maximum (Tele) | Vertical Lens Shift Top to Bottom |
| 100" | 221x125 | 129 to 129 | -86 to -38 |
| 120" | 266x149 | 157 to 157 | -103 to -46 |
| 150" | 332x187 | 198 to 198 | -129 to -58 |
| 200" | 443x249 | 268 to 268 | -172 to -77 |
| 250" | 553x311 | 337 to 337 | -215 to -96 |
| 972" | 2152x1210 | 1341 to 1341 | -836 to -374 |

Unit: cm

| 16:10 Screen Size | | ① | ② |
|-------------------|---------|----------------------------------|-----------------------------------|
| | | Minimum (Wide) to Maximum (Tele) | Vertical Lens Shift Top to Bottom |
| 100" | 215x135 | 125 to 125 | -90 to -44 |
| 120" | 258x162 | 152 to 152 | -109 to -53 |
| 150" | 323x202 | 193 to 193 | -136 to -66 |
| 200" | 431x269 | 260 to 260 | -181 to -88 |
| 250" | 538x337 | 328 to 328 | -226 to -110 |



| 16:10 Screen Size | | ① | ② |
|-------------------|-----------|----------------------------------|-----------------------------------|
| | | Minimum (Wide) to Maximum (Tele) | Vertical Lens Shift Top to Bottom |
| 1000" | 2154x1346 | 1342 to 1342 | -904 to -442 |

Unit: cm

| 16:10 Screen Size | | ① | ② |
|-------------------|-----------|----------------------------------|-----------------------------------|
| | | Minimum (Wide) to Maximum (Tele) | Vertical Lens Shift Top to Bottom |
| 100" | 215x135 | 191 to 232 | -142 to +7 |
| 120" | 258x162 | 231 to 280 | -170 to +8 |
| 150" | 323x202 | 290 to 352 | -212 to +11 |
| 200" | 431x269 | 389 to 472 | -283 to +14 |
| 250" | 538x337 | 488 to 591 | -354 to +18 |
| 1000" | 2154x1346 | 1977 to 2387 | -1416 to +70 |

ELPLU05

Unit: cm

| 4:3 Screen Size | | ① | ② |
|-----------------|-----------|----------------------------------|-----------------------------------|
| | | Minimum (Wide) to Maximum (Tele) | Vertical Lens Shift Top to Bottom |
| 90" | 183x137 | 195 to 237 | -144 to +7 |
| 100" | 203x152 | 217 to 264 | -160 to +8 |
| 120" | 244x183 | 262 to 318 | -192 to +10 |
| 150" | 305x229 | 329 to 399 | -214 to +12 |
| 200" | 406x305 | 442 to 535 | -321 to +16 |
| 250" | 508x381 | 554 to 670 | -401 to +20 |
| 883" | 1794x1346 | 1976 to 2386 | -1416 to +70 |

ELPLW07

Unit: cm

| 4:3 Screen Size | | ① | ② |
|-----------------|-----------|----------------------------------|-----------------------------------|
| | | Minimum (Wide) to Maximum (Tele) | Vertical Lens Shift Top to Bottom |
| 90" | 183x137 | 277 to 382 | -158 to +21 |
| 100" | 203x152 | 309 to 425 | -175 to +23 |
| 120" | 244x183 | 373 to 513 | -211 to +28 |
| 150" | 305x229 | 469 to 643 | -263 to +35 |
| 200" | 406x305 | 629 to 861 | -351 to +46 |
| 250" | 508x381 | 788 to 1079 | -439 to +58 |
| 883" | 1794x1346 | 2811 to 3838 | -1549 to +203 |

Unit: cm

| 16:9 Screen Size | | ① | ② |
|------------------|-----------|----------------------------------|-----------------------------------|
| | | Minimum (Wide) to Maximum (Tele) | Vertical Lens Shift Top to Bottom |
| 100" | 221x125 | 196 to 239 | -139 to +14 |
| 120" | 266x149 | 237 to 288 | -166 to +17 |
| 150" | 332x187 | 298 to 362 | -208 to +21 |
| 200" | 443x249 | 400 to 485 | -277 to +28 |
| 250" | 553x311 | 502 to 608 | -347 to +35 |
| 972" | 2152x1210 | 1975 to 2385 | -1348 to +137 |

Unit: cm

| 16:9 Screen Size | | ① | ② |
|------------------|-----------|----------------------------------|-----------------------------------|
| | | Minimum (Wide) to Maximum (Tele) | Vertical Lens Shift Top to Bottom |
| 100" | 221x125 | 280 to 385 | -152 to +28 |
| 120" | 266x149 | 338 to 464 | -183 to +33 |
| 150" | 332x187 | 425 to 583 | -229 to +42 |
| 200" | 443x249 | 570 to 781 | -305 to +56 |
| 250" | 553x311 | 715 to 979 | -381 to +70 |
| 972" | 2152x1210 | 2809 to 3836 | -1481 to +270 |

| 4:3 Screen Size | | ① | ② |
|-----------------|-----------|----------------------------------|-----------------------------------|
| | | Minimum (Wide) to Maximum (Tele) | Vertical Lens Shift Top to Bottom |
| 100" | 203x152 | 418 to 567 | -175 to +23 |
| 120" | 244x183 | 504 to 683 | -211 to +28 |
| 150" | 305x229 | 634 to 857 | -263 to +35 |
| 200" | 406x305 | 849 to 1146 | -351 to +46 |
| 250" | 508x381 | 1065 to 1436 | -439 to +58 |
| 883" | 1794x1346 | 3793 to 5102 | -1549 to +203 |

Unit: cm

| 16:10 Screen Size | | ① | ② |
|-------------------|-----------|----------------------------------|-----------------------------------|
| | | Minimum (Wide) to Maximum (Tele) | Vertical Lens Shift Top to Bottom |
| 100" | 215x135 | 272 to 375 | -155 to +20 |
| 120" | 258x162 | 328 to 452 | -186 to +24 |
| 150" | 323x202 | 413 to 567 | -232 to +30 |
| 200" | 431x269 | 554 to 760 | -310 to +41 |
| 250" | 538x337 | 695 to 952 | -387 to +51 |
| 1000" | 2154x1346 | 2812 to 3840 | -1550 to +203 |

Unit: cm

| 16:9 Screen Size | | ① | ② |
|------------------|-----------|----------------------------------|-----------------------------------|
| | | Minimum (Wide) to Maximum (Tele) | Vertical Lens Shift Top to Bottom |
| 100" | 221x125 | 379 to 514 | -152 to +28 |
| 120" | 266x149 | 457 to 619 | -183 to +33 |
| 150" | 332x187 | 574 to 777 | -229 to +42 |
| 200" | 443x249 | 770 to 1040 | -305 to +56 |
| 250" | 553x311 | 965 to 1302 | -381 to +70 |
| 972" | 2152x1210 | 3791 to 5099 | -1481 to +270 |

Unit: cm

ELPLM12

| 4:3 Screen Size | | ① | ② |
|-----------------|---------|----------------------------------|-----------------------------------|
| | | Minimum (Wide) to Maximum (Tele) | Vertical Lens Shift Top to Bottom |
| 90" | 183x137 | 375 to 509 | -158 to +21 |

Unit: cm

| 16:10 Screen Size | | ① | ② |
|-------------------|---------|----------------------------------|-----------------------------------|
| | | Minimum (Wide) to Maximum (Tele) | Vertical Lens Shift Top to Bottom |
| 100" | 215x135 | 386 to 500 | -155 to +20 |
| 120" | 258x162 | 444 to 602 | -186 to +24 |
| 150" | 323x202 | 558 to 755 | -232 to +30 |
| 200" | 431x269 | 749 to 1011 | -310 to +41 |



| 16:10 Screen Size | | ① | ② |
|-------------------|-----------|----------------------------------|-----------------------------------|
| | | Minimum (Wide) to Maximum (Tele) | Vertical Lens Shift Top to Bottom |
| 250" | 538x337 | 939 to 1267 | -387 to +51 |
| 1000" | 2154x1346 | 3794 to 5103 | -1550 to +203 |

| 16:9 Screen Size | | ① | ② |
|------------------|-----------|----------------------------------|-----------------------------------|
| | | Minimum (Wide) to Maximum (Tele) | Vertical Lens Shift Top to Bottom |
| 972" | 2152x1210 | 4970 to 7519 | -1481 to +270 |

Unit: cm

ELPLM13

Unit: cm

| 4:3 Screen Size | | ① | ② |
|-----------------|-----------|----------------------------------|-----------------------------------|
| | | Minimum (Wide) to Maximum (Tele) | Vertical Lens Shift Top to Bottom |
| 90" | 183x137 | 491 to 752 | -158 to +21 |
| 100" | 203x152 | 548 to 838 | -175 to +23 |
| 120" | 244x183 | 661 to 1009 | -211 to +28 |
| 150" | 305x229 | 830 to 1265 | -263 to +35 |
| 200" | 406x305 | 1113 to 1692 | -351 to +46 |
| 250" | 508x381 | 1396 to 2118 | -439 to +58 |
| 883" | 1794x1346 | 4973 to 7523 | -1549 to +203 |

Unit: cm

| 16:9 Screen Size | | ① | ② |
|------------------|---------|----------------------------------|-----------------------------------|
| | | Minimum (Wide) to Maximum (Tele) | Vertical Lens Shift Top to Bottom |
| 100" | 221x125 | 496 to 759 | -152 to +28 |
| 120" | 266x149 | 598 to 914 | -183 to +33 |
| 150" | 332x187 | 752 to 1147 | -229 to +42 |
| 200" | 443x249 | 1009 to 1534 | -305 to +56 |
| 250" | 553x311 | 1265 to 1922 | -381 to +70 |

| 16:10 Screen Size | | ① | ② |
|-------------------|-----------|----------------------------------|-----------------------------------|
| | | Minimum (Wide) to Maximum (Tele) | Vertical Lens Shift Top to Bottom |
| 100" | 215x135 | 482 to 738 | -155 to +20 |
| 120" | 258x162 | 582 to 889 | -186 to +24 |
| 150" | 323x202 | 731 to 1115 | -232 to +30 |
| 200" | 431x269 | 981 to 1492 | -310 to +41 |
| 250" | 538x337 | 1231 to 1869 | -387 to +51 |
| 1000" | 2154x1346 | 4975 to 7526 | -1550 to +203 |

ELPLM14

Unit: cm

| 4:3 Screen Size | | ① | ② |
|-----------------|-----------|----------------------------------|-----------------------------------|
| | | Minimum (Wide) to Maximum (Tele) | Vertical Lens Shift Top to Bottom |
| 90" | 183x137 | 749 to 1121 | -158 to +21 |
| 100" | 203x152 | 832 to 1245 | -175 to +23 |
| 120" | 244x183 | 998 to 1494 | -211 to +28 |
| 150" | 305x229 | 1248 to 1868 | -263 to +35 |
| 200" | 406x305 | 1664 to 2491 | -351 to +46 |
| 250" | 508x381 | 2080 to 3113 | -439 to +58 |
| 883" | 1794x1346 | 7347 to 10996 | -1549 to +203 |



Unit: cm

| 16:9 Screen Size | | ① | ② |
|------------------|-----------|----------------------------------|-----------------------------------|
| | | Minimum (Wide) to Maximum (Tele) | Vertical Lens Shift Top to Bottom |
| 100" | 221x125 | 755 to 1131 | -152 to +28 |
| 120" | 266x149 | 907 to 1357 | -183 to +33 |
| 150" | 332x187 | 1133 to 1696 | -229 to +42 |
| 200" | 443x249 | 1511 to 2261 | -305 to +56 |
| 250" | 553x311 | 1889 to 2826 | -381 to +70 |
| 972" | 2152x1210 | 7343 to 10989 | -1481 to +270 |

| 4:3 Screen Size | | ① | ② |
|-----------------|-----------|----------------------------------|-----------------------------------|
| | | Minimum (Wide) to Maximum (Tele) | Vertical Lens Shift Top to Bottom |
| 100" | 203x152 | 1187 to 1776 | -160 to +8 |
| 120" | 244x183 | 1416 to 2122 | -192 to +10 |
| 150" | 305x229 | 1759 to 2642 | -241 to +12 |
| 200" | 406x305 | 2330 to 3508 | -321 to +16 |
| 250" | 508x381 | 2902 to 4373 | -401 to +20 |
| 883" | 1794x1346 | 10139 to 15337 | -1416 to +70 |

Unit: cm

| 16:10 Screen Size | | ① | ② |
|-------------------|-----------|----------------------------------|-----------------------------------|
| | | Minimum (Wide) to Maximum (Tele) | Vertical Lens Shift Top to Bottom |
| 100" | 215x135 | 735 to 1100 | -155 to +20 |
| 120" | 258x162 | 882 to 1320 | -186 to +24 |
| 150" | 323x202 | 1103 to 1650 | -232 to +30 |
| 200" | 431x269 | 1470 to 2200 | -310 to +41 |
| 250" | 538x337 | 1838 to 2750 | -387 to +51 |
| 1000" | 2154x1346 | 7350 to 11000 | -1550 to +203 |

Unit: cm

| 16:9 Screen Size | | ① | ② |
|------------------|-----------|----------------------------------|-----------------------------------|
| | | Minimum (Wide) to Maximum (Tele) | Vertical Lens Shift Top to Bottom |
| 100" | 221x125 | 1082 to 1616 | -139 to +14 |
| 120" | 266x149 | 1289 to 1931 | -166 to +17 |
| 150" | 332x187 | 1601 to 2402 | -208 to +21 |
| 200" | 443x249 | 2120 to 3188 | -277 to +28 |
| 250" | 553x311 | 2639 to 3975 | -347 to +35 |
| 972" | 2152x1210 | 10133 to 15327 | -1348 to +137 |

Unit: cm

ELPLL09

| 4:3 Screen Size | | ① | ② |
|-----------------|---------|----------------------------------|-----------------------------------|
| | | Minimum (Wide) to Maximum (Tele) | Vertical Lens Shift Top to Bottom |
| 90" | 183x137 | 1073 to 1602 | -144 to +7 |

Unit: cm

| 16:10 Screen Size | | ① | ② |
|-------------------|---------|----------------------------------|-----------------------------------|
| | | Minimum (Wide) to Maximum (Tele) | Vertical Lens Shift Top to Bottom |
| 100" | 215x135 | 1054 to 1574 | -142 to +7 |
| 120" | 258x162 | 1256 to 1879 | -170 to +8 |
| 150" | 323x202 | 1559 to 2338 | -212 to +11 |
| 200" | 431x269 | 2064 to 3103 | -283 to +14 |



| 16:10 Screen Size | | ① | ② |
|-------------------|-----------|----------------------------------|-----------------------------------|
| | | Minimum (Wide) to Maximum (Tele) | Vertical Lens Shift Top to Bottom |
| 250" | 538x337 | 2569 to 3868 | -354 to +18 |
| 1000" | 2154x1346 | 10142 to 15342 | -1416 to +70 |

| 16:9 Screen Size | | ① | ② |
|------------------|-----------|----------------------------------|-----------------------------------|
| | | Minimum (Wide) to Maximum (Tele) | Vertical Lens Shift Top to Bottom |
| 972" | 2152x1210 | 14687 to 22204 | -1348 to +137 |

Unit: cm

ELPLL10

Unit: cm

| 4:3 Screen Size | | ① | ② |
|-----------------|-----------|----------------------------------|-----------------------------------|
| | | Minimum (Wide) to Maximum (Tele) | Vertical Lens Shift Top to Bottom |
| 90" | 183x137 | 1561 to 2326 | -144 to +7 |
| 100" | 203x152 | 1727 to 2577 | -160 to +8 |
| 120" | 244x183 | 2058 to 3079 | -192 to +10 |
| 150" | 305x229 | 2555 to 3831 | -241 to +12 |
| 200" | 406x305 | 3383 to 5085 | -321 to +16 |
| 250" | 508x381 | 4211 to 6339 | -401 to +20 |
| 883" | 1794x1346 | 14695 to 22217 | -1416 to +70 |

| 16:10 Screen Size | | ① | ② |
|-------------------|-----------|----------------------------------|-----------------------------------|
| | | Minimum (Wide) to Maximum (Tele) | Vertical Lens Shift Top to Bottom |
| 100" | 215x135 | 1533 to 2284 | -142 to +7 |
| 120" | 258x162 | 1826 to 2727 | -170 to +8 |
| 150" | 323x202 | 2265 to 3392 | -212 to +11 |
| 200" | 431x269 | 2997 to 4500 | -283 to +14 |
| 250" | 538x337 | 3728 to 5608 | -354 to +18 |
| 1000" | 2154x1346 | 14701 to 22225 | -1416 to +70 |

Unit: cm

| 16:9 Screen Size | | ① | ② |
|------------------|---------|----------------------------------|-----------------------------------|
| | | Minimum (Wide) to Maximum (Tele) | Vertical Lens Shift Top to Bottom |
| 100" | 221x125 | 1574 to 2346 | -139 to +14 |
| 120" | 266x149 | 1875 to 2801 | -166 to +17 |
| 150" | 332x187 | 2326 to 3485 | -208 to +21 |
| 200" | 443x249 | 3078 to 4623 | -277 to +28 |
| 250" | 553x311 | 3830 to 5762 | -347 to +35 |

H/V-Keystone

☛ "H/V-Keystone" p.56


| Lens type | Vertical | Horizontal |
|-----------|-------------|-------------|
| ELPLR05 | -35° to 35° | -30° to 30° |
| ELPLU05 | -39° to 39° | -30° to 30° |
| ELPLW07 | -42° to 42° | -30° to 30° |
| ELPLM12 | -45° to 45° | -30° to 30° |
| ELPLM13 | -45° to 45° | -30° to 30° |
| ELPLM14 | -45° to 45° | -30° to 30° |
| ELPLL09 | -45° to 45° | -30° to 30° |
| ELPLL10 | -45° to 45° | -30° to 30° |

Curved Surface

☛ "Curved Surface" p.58



The values in the table are the minimum values for R/L in the illustration.
(Approximate value when projecting at maximum zoom.)

Horizontally curved surface (concave)

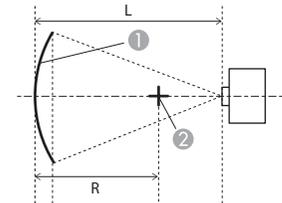


- ① Screen
- ② Center of the circle of which the curved surface is an arc
- L Projection distance
- R Radius of the circle of which the curved surface is an arc

Top view
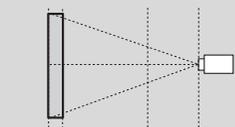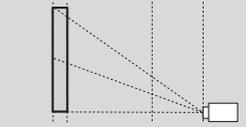
| Lens type | Vertical lens shift: Home position | Vertical lens shift: Top |
|-----------|---|---|
| |  |  |
| | Side view | Side view |
| ELPLR05 | 0.47 | 0.47 |
| ELPLU05 | 0.38 | 0.39 |
| ELPLW07 | 0.31 | 0.32 |
| ELPLM12 | 0.25 | 0.26 |
| ELPLM13 | 0.20 | 0.21 |
| ELPLM14 | 0.15 | 0.15 |
| ELPLL09 | 0.11 | 0.11 |
| ELPLL10 | 0.08 | 0.08 |


Horizontally curved surface (convex)

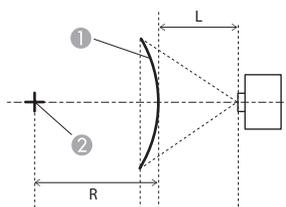

- ① Screen
- ② Center of the circle of which the curved surface is an arc
- L Projection distance
- R Radius of the circle of which the curved surface is an arc



Top view


Vertically curved surface (concave)

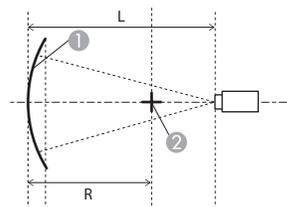


- ① Screen
- ② Center of the circle of which the curved surface is an arc
- L Projection distance
- R Radius of the circle of which the curved surface is an arc

Side view
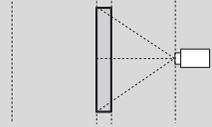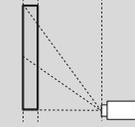
| Lens type | Vertical lens shift: Home position | Vertical lens shift: Top |
|-----------|---|--|
| |  |  |
| | Side view | Side view |
| ELPLR05 | 2.63 | 2.64 |
| ELPLU05 | 1.24 | 1.28 |
| ELPLW07 | 0.71 | 0.75 |
| ELPLM12 | 0.45 | 0.48 |
| ELPLM13 | 0.32 | 0.33 |
| ELPLM14 | 0.19 | 0.20 |
| ELPLL09 | 0.14 | 0.14 |
| ELPLL10 | 0.10 | 0.10 |


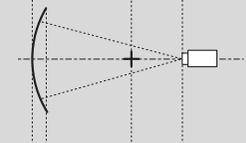
| Lens type | Vertical lens shift: Home position | Vertical lens shift: Top |
|-----------|---|---|
| |  |  |
| | Side view | Side view |
| ELPLR05 | 0.38 | 0.39 |
| ELPLU05 | 0.30 | 0.37 |
| ELPLW07 | 0.23 | 0.28 |
| ELPLM12 | 0.18 | 0.21 |
| ELPLM13 | 0.14 | 0.16 |
| ELPLM14 | 0.11 | 0.11 |
| ELPLL09 | 0.08 | 0.09 |
| ELPLL10 | 0.07 | 0.07 |

Vertically curved surface (convex)

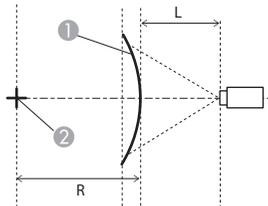

- ① Screen
 - ② Center of the circle of which the curved surface is an arc
- L Projection distance
R Radius of the circle of which the curved surface is an arc

Side view

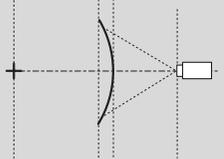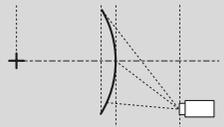
| Lens type | Vertical lens shift: Home position | Vertical lens shift: Top |
|-----------|---|--|
| |  |  |
| | Side view | Side view |
| ELPLR05 | 1.24 | 1.26 |
| ELPLU05 | 0.63 | 0.73 |
| ELPLW07 | 0.37 | 0.44 |
| ELPLM12 | 0.24 | 0.29 |
| ELPLM13 | 0.17 | 0.20 |
| ELPLM14 | 0.12 | 0.13 |
| ELPLL09 | 0.09 | 0.09 |
| ELPLL10 | 0.06 | 0.07 |

Corner Wall

☞ "Corner Wall" p.62



The α in the figure is the maximum angle in which the projector can move. See the table below for detailed values. (Approximate value when projecting at maximum zoom.)

Concave horizontal corner correction (correction to bilateral symmetry by using corners as the center line)

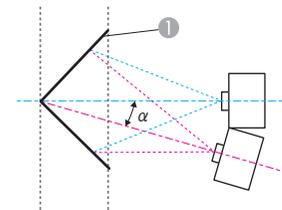


- ① Screen
- α Angle of possible projector motion

Top view
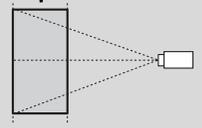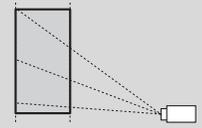
| Lens type | Vertical lens shift: Home position | Vertical lens shift: Top |
|-----------|--|--|
| |  |  |
| | Side view | Side view |
| ELPLR05 | 28° | 24° |
| ELPLU05 | 32° | 19° |
| ELPLW07 | 32° | 22° |
| ELPLM12 | 31° | 26° |
| ELPLM13 | 31° | 30° |
| ELPLM14 | 30° | 29° |
| ELPLL09 | 29° | 29° |
| ELPLL10 | 28° | 28° |

Convex horizontal corner correction (correction to bilateral symmetry by using corners as the center line)

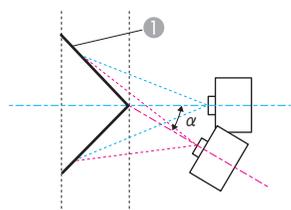


Top view

① Screen

α Angle of possible projector motion



Concave vertical corner correction (correction to horizontal symmetry by using corners as the center line)


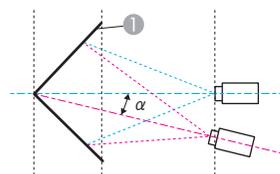


Side view


① Screen

α Angle of possible projector motion
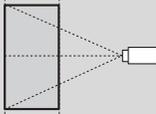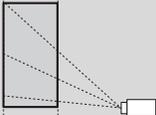
| Lens type | Vertical lens shift: Home position  Side view | Vertical lens shift: Top  Side view |
|-----------|--|--|
| ELPLR05 | - | - |
| ELPLU05 | 7° | 6° |
| ELPLW07 | 13° | 12° |
| ELPLM12 | 17° | 16° |
| ELPLM13 | 19° | 19° |
| ELPLM14 | 23° | 23° |
| ELPLL09 | 24° | 24° |
| ELPLL10 | 26° | 26° |
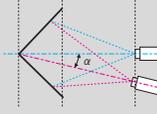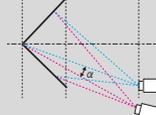
| Lens type | Vertical lens shift: Home position  Side view | Vertical lens shift: Top  Side view |
|-----------|--|--|
| ELPLR05 | 33° | 24° |
| ELPLU05 | 32° | 11° |
| ELPLW07 | 31° | 13° |
| ELPLM12 | 28° | 14° |
| ELPLM13 | 26° | 15° |
| ELPLM14 | 24° | 18° |
| ELPLL09 | 23° | 20° |
| ELPLL10 | 23° | 21° |



Convex vertical corner correction (correction to horizontal symmetry by using corners as the center line)

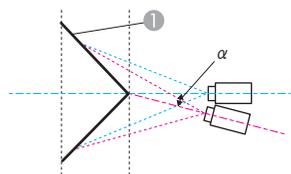

Side view

① Screen

α Angle of possible projector motion
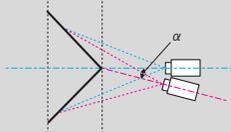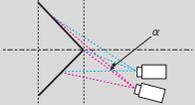
| Lens type | Vertical lens shift: Home position  Side view | Vertical lens shift: Top  Side view |
|-----------|--|---|
| ELPLR05 | 8° | 2° |
| ELPLU05 | 15° | - |
| ELPLW07 | 18° | 3° |
| ELPLM12 | 21° | 9° |
| ELPLM13 | 22° | 13° |
| ELPLM14 | 22° | 16° |
| ELPLL09 | 22° | 19° |
| ELPLL10 | 22° | 20° |

Supported Resolutions

When the resolution of the input signals is larger than the projector's panel resolution, the image quality may decline.

Computer signals (analog RGB)

| Signal | Refresh Rate (Hz) | Resolution (Dots) |
|----------|-------------------|-------------------|
| VGA | 60/72/75/85 | 640x480 |
| SVGA | 60/72/75/85 | 800x600 |
| XGA | 60/70/75/85 | 1024x768 |
| WXGA | 60 | 1280x768 |
| | 60 | 1366x768 |
| | 60/75/85 | 1280x800 |
| WXGA+ | 60/75/85 | 1440x900 |
| WXGA++ | 60 | 1600x900 |
| SXGA | 70/75/85 | 1152x864 |
| | 60/75/85 | 1280x1024 |
| | 60/75/85 | 1280x960 |
| SXGA+ | 60/75 | 1400x1050 |
| WSXGA+*1 | 60 | 1680x1050 |
| UXGA | 60 | 1600x1200 |
| WUXGA*2 | 60 | 1920x1200 |

*1 Only compatible when **Wide** is selected as the **Resolution** from the Configuration menu.

*2 Only compatible when VESA CVT-RB (Reduced Blanking) signal is input.

Even when signals other than those mentioned above are input, it is likely that the image can be projected. However, not all functions may be supported.

Component video

| Signal | Refresh Rate (Hz) | Resolution (Dots) |
|--------------|-------------------|-------------------|
| SDTV (480i) | 60 | 720x480 |
| SDTV (576i) | 50 | 720x576 |
| SDTV (480p) | 60 | 720x480 |
| SDTV (576p) | 50 | 720x576 |
| HDTV (720p) | 50/60 | 1280x720 |
| HDTV (1080i) | 50/60 | 1920x1080 |
| HDTV (1080p) | 50/60 | 1920x1080 |

Input signals from the DVI-D port, HDMI port, and HDBaseT port

| Signal | Refresh Rate (Hz) | Resolution (Dots) |
|---------|-------------------|-------------------|
| VGA | 60 | 640x480 |
| SVGA | 60 | 800x600 |
| XGA | 60 | 1024x768 |
| WXGA | 60 | 1280x800 |
| | 60 | 1366x768 |
| WXGA+ | 60 | 1440x900 |
| WXGA++ | 60 | 1600x900 |
| WSXGA+ | 60 | 1680x1050 |
| SXGA | 60 | 1280x960 |
| | 60 | 1280x1024 |
| SXGA+ | 60 | 1400x1050 |
| UXGA | 60 | 1600x1200 |
| WUXGA*1 | 60 | 1920x1200 |
| QXGA*2 | 60 | 2048x1536 |

| Signal | Refresh Rate (Hz) | Resolution (Dots) |
|-------------------|-------------------|-------------------|
| WQHD*2 | 60 | 2560x1440 |
| WQXGA*1,2 | 60 | 2560x1600 |
| SDTV (480i/480p) | 60 | 720x480 |
| SDTV (576i/576p) | 50 | 720x576 |
| HDTV (720p) | 50/60 | 1280x720 |
| HDTV (1080i) | 50/60 | 1920x1080 |
| HDTV (1080p) | 24/30/50/60 | 1920x1080 |
| 4Kx2K*2 | 24/25/30 | 3840x2160 |
| 4Kx2K*2*3 | 50/60 | 3840x2160 |
| 4Kx2K (SMPTE)*2 | 24 | 4096x2160 |
| 4Kx2K (SMPTE)*2*3 | 50/60 | 4096x2160 |

*1 Only compatible when VESA CVT-RB (Reduced Blanking) signal is input.

*2 Only for HDMI and HDBaseT input.

*3 Only when compatible YPbPr 4:2:0 signals are being input.

Input signals from SDI input port

| Signal | Refresh Rate (Hz) | Resolution (Dots) | Mode | Color difference signals | Number of Bits | Level |
|--------------|----------------------|-------------------|--------|--------------------------|----------------|-------|
| SDTV (480i) | 59.94 | 720x480 | SD-SDI | YPbPr 4:2:2 | 10 bits | - |
| SDTV (576i) | 50 | 720x576 | | | | |
| HDTV (720p) | 50/59.94/60 | 1280x720 | HD-SDI | | | |
| HDTV (1080i) | 50/59.94/60 | 1920x1080 | | | | |
| HDTV (1080p) | 23.98/24/25/29.97/30 | 1920x1080 | | | | |
| HDTV (1080p) | 50/59.94/60 | 1920x1080 | 3G-SDI | RGB 4:4:4 | | A |
| HDTV (1080p) | 23.98/24/25/29.97/30 | 1920x1080 | | | | |
| HDTV (1080i) | 50/59.94/60 | 1920x1080 | | | | |

Projector General Specifications

| | | |
|---------------------------------------|---|--|
| Product name | EB-L25000U | |
| Dimensions | 790 (W) x 299 (H) x 710 (D) mm (not including raised section) | |
| LCD panel size | 1.43" Wide | |
| Display method | Polysilicon TFT active matrix | |
| Resolution | 2,304,000 WUXGA (1920 (W) x 1200 (H) dots) x 3 | |
| Focus adjustment | Automatic | |
| Zoom adjustment | Automatic (1-1.35x)*1 | |
| Lens Shift | Automatic (Maximum vertical direction of approx. 65%, Maximum horizontal direction of approx. 30%)*2 | |
| Light source | Laser diode | |
| Light source output power | 1,670 W | |
| Wavelength | 450 to 460 nm | |
| Light source life expectancy*3 | Approximately 20,000 hours (Light Source Mode: Normal, Quiet) Approximately 30,000 hours (Light Source Mode: Extended) | |
| Power supply | 200-240V AC±10% 50/60Hz 12.3 A | |
| Power consumption | 200 - 240V | Rated power consumption: 2,160 W Standby power consumption (Communication On): 2.5 W Standby power consumption (Communication Off): 0.39 W |
| Operating altitude | Altitude 0 to 3,048 m | |
| Operating temperature | 0 to +50°C*4 (Altitude of 0 to 1,500 m, no condensation) 0 to +45°C*4 (Altitude of 1,501 to 3,048 m, no condensation) | |
| Storage temperature | -10 to +60°C (No condensation) | |

| | |
|-------------|---------------------------------------|
| Mass | Approx. 66 kg (Excluding the handles) |
|-------------|---------------------------------------|


- *1 The specifications are when ELPLM12 is attached.
- *2 ELPLU05/ELPLL09/ELPLL10 has a maximum vertical direction of approx. 55% and a maximum horizontal direction of approx. 25%; ELPLR05 has a maximum vertical direction of approx. 15% and a maximum horizontal direction of approx. 5%.
- *3 Standard time until brightness of the light source is reduced by half.
- *4 If the surrounding temperature gets too high, the brightness of the light source dims gradually.
(Approximately 40°C at an altitude of 0 to 1500 m, and approximately 35°C at an altitude of 1,501 to 3,048 m; however, this may vary depending on the surroundings and so on.)
If the maximum operating temperature is exceeded, the projector may turn off automatically.

This product is also designed for IT power distribution system with phase-to-phase voltage 230V.




FCC Compliance Statement For United States Users

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

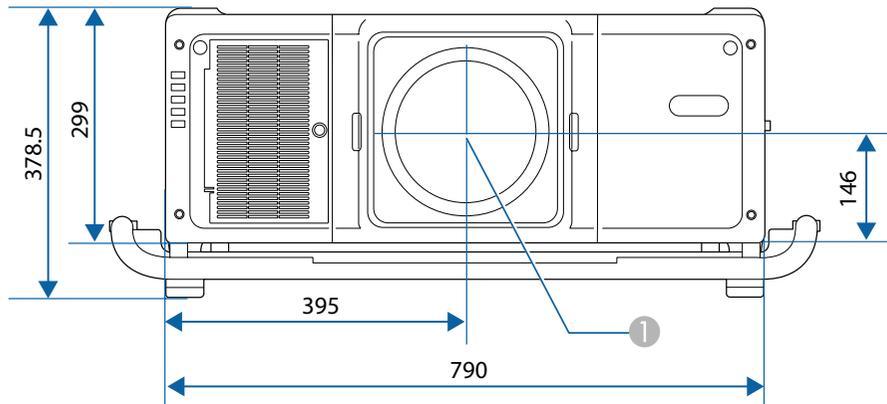

1 Center of lens

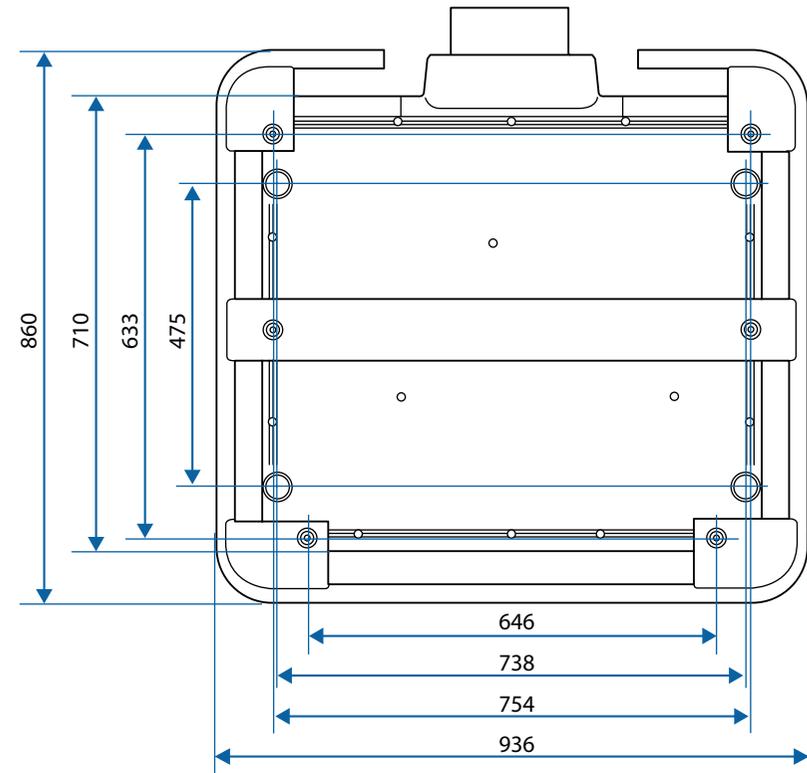

Units: mm

This section briefly explains the difficult terms that are not explained in the text of this guide. For details, refer to other commercially available publications.

| | |
|---|---|
| AMX Device Discovery | AMX Device Discovery is a technology developed by AMX to facilitate AMX control systems for easy operation of the target equipment. Epson have implemented this protocol technology, and have provided a setting to enable the protocol function (ON). See the AMX Web site for more details. URL: http://www.amx.com/ |
| Aspect Ratio | The ratio between an image's length and its height. Screens with a horizontal:vertical ratio of 16:9, such as HDTV screens, are known as wide screens. SDTV and general computer displays have an aspect ratio of 4:3. |
| Component Video | A method that separates the video signal into a luminance component (Y), and a blue minus luminance (Cb or Pb) and a red minus luminance (Cr or Pr). |
| Contrast | The relative brightness of the light and dark areas of an image can be increased or decreased to make text and graphics stand out more clearly, or to make them appear softer. Adjusting this particular property of an image is called contrast adjustment. |
| Control4 Simple Device Discovery Protocol (SDDP) | Control4 SDDP is a technology developed by Control4 to allow Control4 control systems to acquire device information for the projector. Epson have implemented this protocol technology, and have provided a setting to enable the protocol function (ON). See the Control4 Web site for more details. URL: http://www.control4.com/ |
| DHCP | An abbreviation of Dynamic Host Configuration Protocol, this protocol automatically assigns an IP Address to equipment connected to a network. |
| DICOM | An acronym for Digital Imaging and Communications in Medicine. An international standard that defines image standards and a communications protocol for medical images. |
| Gateway Address | This is a server (router) for communicating across a network (subnet) divided according to Subnet Mask . |
| HDBaseT | The connection standard for consumer electronics determined by the HDBaseT Alliance. Communicates various control signals such as uncompressed HD video, audio and 100BASE-TX Ethernet using a LAN cable. |
| HDCP | HDCP is an abbreviation for High-bandwidth Digital Content Protection. It is used to prevent illegal copying and protect copyrights by encrypting digital signals sent over DVI and HDMI ports. HDCP2.2 is a copyright protection standard for 4K content. |
| HDTV | An abbreviation for High-Definition Television that refers to high-definition systems which satisfy the following conditions. <ul style="list-style-type: none"> • Vertical resolution of 720p or 1080i or greater (p = Progressive, i = Interlace) • Screen Aspect Ratio of 16:9 |
| Infrastructure mode | A method for wireless LAN connection in which devices communicate through access points. |
| Interlace | Transmits information needed to create one screen by sending every other line, starting from the top of the image and working down to the bottom. Images are more likely to flicker because one frame is displayed every other line. |
| IP Address | A number to identify a computer connected to a network. |

| | |
|------------------------|---|
| Progressive | Projects information to create one screen at a time, displaying the image for one frame. Even though the number of scan lines is the same, the amount of flicker in images decreases because the volume of information has doubled compared with an interlace system. |
| Refresh Rate | The light-emitting element of a display maintains the same luminosity and color for an extremely short time. Because of this, the image must be scanned many times per second to refresh the light-emitting element. The number of refresh operations per second is called the Refresh rate and is expressed in hertz (Hz). |
| SDTV | An abbreviation for Standard Definition Television that refers to standard television systems which do not satisfy the conditions for HDTV ▶ High-Definition Television. |
| SNMP | An abbreviation for Simple Network Management Protocol, which is the protocol for monitoring and controlling devices such as routers and computers connected to a TCP/IP network. |
| sRGB | An international standard for color intervals that was formulated so that colors that are reproduced by video equipment can be handled easily by computer operating systems (OS) and the Internet. If the connected source has an sRGB mode, set both the projector and the connected signal source to sRGB. |
| Subnet Mask | This is a numerical value that defines the number of bits used for the network address on a divided network (subnet) from the IP address. |
| Sync. | The signals output from computers have a specific frequency. If the projector frequency does not match this frequency, the resulting images are not of a good quality. The process of matching the phases of these signals (the relative position of the crests and the troughs in the signal) is called Synchronization. If the signals are not synchronized, flickering, blurriness, and horizontal interference occur. |
| Tracking | The signals output from computers have a specific frequency. If the projector frequency does not match this frequency, the resulting images are not of a good quality. The process of matching the frequency of these signals (the number of crests in the signal) is called Tracking. If Tracking is not carried out correctly, wide vertical stripes appear in the signal. |
| Trap IP Address | This is the IP Address ▶ for the destination computer used for error notification in SNMP. |

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Seiko Epson Corporation. No patent liability is assumed with respect to the use of the information contained herein. Neither is any liability assumed for damages resulting from the use of the information contained herein.

Neither Seiko Epson Corporation nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by the purchaser or third parties as a result of: accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with Seiko Epson Corporation's operating and maintenance instructions.

Seiko Epson Corporation shall not be liable against any damages or problems arising from the use of any options or any consumable products other than those designated as Original Epson Products or Epson Approved Products by Seiko Epson Corporation.

The contents of this guide may be changed or updated without further notice.

Illustrations in this guide and the actual projector may differ.

Restriction of Use

When this product is used for applications requiring high reliability/safety such as transportation devices related to aviation, rail, marine, automotive etc.; disaster prevention devices; various safety devices etc; or functional/precision devices etc, you should use this product only after giving consideration to including fail-safes and redundancies into your design to maintain safety and total system reliability. Because this product was not intended for use in applications requiring extremely high reliability/safety such as aerospace equipment, main communication equipment, nuclear power control equipment, or medical equipment related to direct medical care etc, please make your own judgment on this product's suitability after a full evaluation.

About Notations

Microsoft® Windows® 2000 operating system
Microsoft® Windows® XP operating system
Microsoft® Windows Vista® operating system
Microsoft® Windows® 7 operating system
Microsoft® Windows® 8 operating system
Microsoft® Windows® 8.1 operating system
Microsoft® Windows® 10 operating system

In this guide, the operating systems above are referred to as "Windows 2000", "Windows XP", "Windows Vista", "Windows 7", "Windows 8", "Windows 8.1", and "Windows 10". Furthermore, these may be referred to as the collective term Windows, and multiple versions of Windows may be referred to as, for example, Windows 2000/XP/Vista/7/8/8.1/10, with the Windows notation omitted.

Mac OS X 10.3.x
Mac OS X 10.4.x
Mac OS X 10.5.x
Mac OS X 10.6.x
OS X 10.7.x
OS X 10.8.x
OS X 10.9.x
OS X 10.10.x
OS X 10.11.x

In this guide, the operating systems above are referred to as "Mac OS X 10.3.x", "Mac OS X 10.4.x", "Mac OS X 10.5.x", "Mac OS X 10.6.x", "OS X 10.7.x", "OS X 10.8.x", "OS X 10.9.x", "OS X 10.10.x", and "OS X 10.11.x". Furthermore, the collective term "OS X" is used to refer to them all.

Trademarks and Copyrights

"EPSON" is a registered trademark of the Seiko Epson Corporation. "EXCEED YOUR VISION" and "ELPLP" are trademarks or registered trademarks of the Seiko Epson Corporation.

Mac, Mac OS, and OS X, are trademarks of Apple Inc.

Microsoft, Windows, Windows Vista, PowerPoint, and Windows logo are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.

HDMI and High-Definition Multimedia Interface are the trademarks or registered trademarks of HDMI Licensing LLC. 

PJLink trademark is a trademark applied for registration or is already registered in Japan, the United States of America and other countries and areas.

WPA™ and WPA2™ are registered trademarks of the Wi-Fi Alliance.

"QR Code" is a registered trademark of DENSO WAVE INCORPORATED.

Crestron and Crestron RoomView are registered trademarks of Crestron Electronics, Inc.

Art-Net™ Designed by and Copyright Artistic Licence Holdings Ltd.

Extron® and XTP® are registered trademarks of Extron Electronics.

HDBaseT™ and the HDBaseT Alliance logo are trademarks of the HDBaseT Alliance. Other product names used herein are also for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.


©SEIKO EPSON CORPORATION 2016. All rights reserved.


Indication of the manufacturer and the importer in accordance with requirements of directive 2011/65/EU (RoHS)


Manufacturer: SEIKO EPSON CORPORATION
Address: 3-5, Owa 3-chome, Suwa-shi, Nagano-ken 392-8502 Japan
Telephone: 81-266-52-3131
<http://www.epson.com/>

Importer: SEIKO EUROPE B.V.
Address: Azië building, Atlas Arena, Hoogoorddreef 5, 1101 BA Amsterdam
Zuidoost The Netherlands
Telephone: 31-20-314-5000
<http://www.epson.com/europe.html>

The following table lists the meaning of the safety symbols labeled on the equipment.
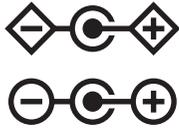
| No. | Symbol mark | Approved standards | Meaning |
|-----|---|--------------------------------------|---|
| ① |  | IEC60417 No. 5007 | "ON" (power) To indicate connection to the mains. |
| ② |  | IEC60417 No. 5008 | "OFF" (power) To indicate disconnection from the mains. |
| ③ |  | IEC60417 No. 5009 | Stand-by To identify the switch or switch position by means of which part of the equipment is switched on in order to bring it into the stand-by condition. |
| ④ |  | ISO7000 No. 0434B IEC3864-B3.1 | Caution To identify general caution when using the product. |
| ⑤ |  | IEC60417 No. 5041 | Caution, hot surface To indicate that the marked item can be hot and should not be touched without taking care. |
| ⑥ |  | IEC60417 No. 6042 ISO3864-B3.6 | Caution, risk of electric shock To identify equipment that has risk of electric shock. |
| ⑦ |  | IEC60417 No. 5957 | For indoor use only To identify electrical equipment designed primarily for indoor use. |
| ⑧ |  | IEC60417 No. 5926 | Polarity of d.c. power connector To identify the positive and negative connections (the polarity) on a piece of equipment to which a d.c. power supply may be connected. |
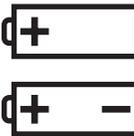
| No. | Symbol mark | Approved standards | Meaning |
|-----|---|-----------------------|---|
| ⑨ |  | IEC60417 No. 5001B | Battery, general On battery powered equipment. To identify a device for instance a cover for the battery compartment, or the connector terminals. |
| ⑩ |  | IEC60417 No. 5002 | Positioning of cell To identify the battery holder itself and to identify the positioning of the cell(s) inside the battery holder. |
| ⑪ |  | IEC60417 No. 5019 | Protective earth To identify any terminal which is intended for connection to an external conductor for protection against electric shock in case of a fault, or the terminal of a protective earth electrode. |
| ⑫ |  | IEC60417 No. 5017 | Earth To identify an earth (ground) terminal in cases where symbol No. 11 is not explicitly required. |
| ⑬ |  | IEC60417 No. 5032 | Alternating current To indicate on the rating plate that the equipment is suitable for alternating current only; to identify relevant terminals. |
| ⑭ |  | IEC60417 No. 5031 | Direct current To indicate on the rating plate that the equipment is suitable for direct current only; to identify relevant terminals. |
| ⑮ |  | IEC60417 No. 5172 | Class II equipment To identify equipment meeting the safety requirements specified for Class II equipment according to IEC 61140. |
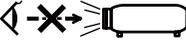
| No. | Symbol mark | Approved standards | Meaning |
|-----|---|---------------------------------|---|
| 16 |  | ISO 3864 | General prohibition To identify actions or operations that are prohibited. |
| 17 |  | ISO 3864 | Contact prohibition To indicate injury that could occur due to touching a specific part of the equipment. |
| 18 |  | --- | Never look into the projection lens while the projector is on. |
| 19 |  | --- | To indicate that the marked item don't place anything on projector. |
| 20 |  | ISO3864 IEC60825-1 | Caution, laser radiation To indicate the equipment has a laser radiation part. |
| 21 |  | ISO 3864 | Disassembly prohibition To indicate a risk of injury, such as electric shock, if the equipment is disassembled. |
| 22 |  | --- | Never look into the lens while the LED for lighting is on. |
| 23 |  | IEC60417 No. 5266 | Standby, partial standby To indicate that part of the equipment is in the ready status. |
| 24 |  | ISO3864 IEC60417 No. 5057 | Caution, movable parts To indicate that you must keep away from movable parts according to protection standards. |

A

| | |
|-------------------------------------|----------|
| A/V Settings | 127 |
| Air exhaust vent | 15 |
| Air Filter Notice | 125 |
| Air filter replacement period | 179 |
| AMX Device Discovery | 135 |
| Art-Net | 136, 200 |
| Aspect | 71, 121 |
| Auto | 18 |
| Auto Setup | 122 |

B

| | |
|----------------------------|-----|
| Basic menu | 131 |
| Batch setup function | 138 |
| Beep | 127 |
| Black Level | 128 |
| BNC port | 16 |
| BNC Sync Termination | 127 |
| Brightness | 119 |

C

| | |
|---|----------|
| Change Input | 17 |
| Cinema | 67 |
| Cleaning | 175 |
| Cleaning the air filter and air intake vent | 175 |
| Cleaning the projector's surface | 175 |
| Color Adjustment | 120 |
| Color adjustment | 120 |
| Color Mode | 67, 119 |
| Color Saturation | 119 |
| Color Uniformity | 125, 128 |

| | |
|--------------------------|----------|
| Computer Port | 16 |
| Configuration menu | 116 |
| Consumables | 205 |
| Contrast | 119 |
| Control panel | 17 |
| Control4 SDDP | 135 |
| Corner Wall | 62 |
| Crestron RoomView | 135, 196 |

D

| | |
|--------------------------|----------|
| Date & Time | 127 |
| DHCP | 133, 134 |
| DICOM SIM | 67 |
| Direct Power On | 126 |
| Display | 125 |
| Display Background | 125 |
| Distance | 206 |
| Dynamic | 67 |
| Dynamic Contrast | 120 |

E

| | |
|-------------------------|---------|
| EasyMP Monitor | 188 |
| Edge Blending | 87, 128 |
| Epson Web Control | 188 |
| Esc | 18 |
| ESC/VP21 | 194 |
| Event ID | 137 |
| Extended menu | 125 |
| Extron XTP | 128 |

F

| | |
|------------------------|-----|
| Feet | 16 |
| Filter Indicator | 148 |

| | |
|---------------------|-----|
| Focus | 18 |
| Freeze | 101 |
| Front | 126 |
| Front/Ceiling | 126 |
| Full Lock | 111 |

G

| | |
|---------------------------|----------|
| Gateway Address | 133, 134 |
| Geometry | 18 |
| Geometry Correction | 123 |

H

| | |
|-------------------------------------|-----|
| H/V-Keystone | 123 |
| HDBaseT | 128 |
| HDBaseT port | 17 |
| HDBaseT Signal Quality | 137 |
| HDMI port | 17 |
| Help function | 147 |
| High Altitude Mode | 126 |
| How to replace the air filter | 179 |

I

| | |
|---------------------------------|----------|
| Image Menu | 119 |
| Indicators | 148 |
| Info menu | 136 |
| Input Signal | 136 |
| Installation requirements | 27 |
| Installation settings | 27 |
| IP Address | 133, 134 |

L

| | |
|----------------|-----|
| Language | 128 |
|----------------|-----|

- Lens Operation Lock 112
 - Lens replacement cover 25
 - Lens Shift 18
 - Lens shift 31
- M**
- Mail Notification 134, 193
 - Memory 124
 - Menu 18
 - Message Broadcasting 136, 188
 - Messages 125
 - Monitor displays 217
 - Monitor Out port 16
 - Multi-Projection 67, 128
 - Multi-Projection function 83
- N**
- Network Configuration 130
 - Network information 129, 130
 - Network menu 129
 - Notification email address 1/2/3 135
- O**
- Operating Temperature 219
 - Operation 126
 - Optional accessories 205
 - Overheating 150
 - Overscan 122
- P**
- Panel Alignment 125
 - Part names and functions 14
- Password protect 109
 - PJLink 195
 - PJLink Password 131
 - Port Number 135
 - Position 122
 - Power inlet 16
 - Power On Protection 109
 - Presentation 67
 - Priority Gateway 135
 - Projection 126
 - Projection lens 25
 - Projector 50, 52
 - Projector ID 37
 - Projector keyword 131
 - Projector Name 131
- Q**
- Quick Corner 123
- R**
- Reading mail 193
 - Rear 126
 - Refresh Rate 136
 - Remote control 19
 - Remote control button lock 112
 - Remote control ID 38
 - Remote port 17
 - Remote receiver 14
 - Replacing batteries 22
 - Reset All 137
 - Reset Memory 137
 - Reset menu 137
 - Resolution 121, 136
- RoomView 196
 - RS-232C port 16
- S**
- Scale 122, 128
 - Schedule 105
 - Schedule Settings 128
 - Screen 125
 - Screen settings 28
 - Screen Size 99
 - Screen size 206
 - Search Access Point 133
 - Serial Number 137
 - Settings menu 123
 - Sharpness 120
 - Shutter 18, 100
 - Signal menu 121
 - SMTP Server 134
 - SNMP 194
 - Soft keyboard 130
 - Source 98, 136
 - Source Search 53
 - Specifications 219
 - Split Screen 123
 - Split Screen Setup 98
 - sRGB 67
 - Standby Mode 127
 - Startup Screen 125
 - Status 137
 - Status indicators 15
 - Status Monitor 18, 154
 - Storage temperature 219
 - Subnet Mask 133, 134

| | |
|----------------------------------|-----|
| Supported monitor displays | 217 |
| Swap Screens | 99 |
| Sync Info | 137 |
| Sync. | 121 |

T

| | |
|---------------------------|-------------|
| Test Pattern | 18, 29, 124 |
| Tint | 119 |
| Tracking | 121 |
| Trap IP Address 1/2 | 135 |

U

| | |
|------------------------------|-----|
| User Button | 124 |
| User's Logo | 101 |
| User's Logo Protection | 109 |

W

| | |
|----------------------------|-----|
| Web browser | 188 |
| Web Control Password | 131 |
| White Balance | 120 |
| Wired LAN menu | 134 |
| Wireless LAN menu | 131 |

Z

| | |
|------------|----|
| Zoom | 18 |
|------------|----|