

# Digital Cinema Dual System

## Operating Instructions

Before operating the unit, please read this manual, supplied Safety Regulations and Before Using This Unit thoroughly, and retain them for future reference.

SRX-R815P/SRX-R810P

SRX-R815/SRX-R810

LKRA-010

LKRA-011

LKRA-PCAB1

## HDMI

---

# Table of Contents

|  |          |
|--|----------|
| <b>Please Read This First</b> .....  | <b>3</b> |
| Notations Used in This Guide .....   | 3        |
| Manual Structure .....   | 3        |
| About License .....  | 3        |
| USB HDD and USB Memory Devices That can be<br>Used on INGEST PORT 1/2 of This Unit ..... | 3        |
| Recognized Folder Names .....  | 3        |
| On Security .....  | 3        |
| Water Temperature of a Chiller .....   | 3        |
| Coolant Water .....  | 4        |
| Prolonged Storage or Storage in the Winter .....   | 4        |
| Chiller Inspection .....   | 4        |

---

## Overview

|   |          |
|---|----------|
| <b>System Configuration Example</b> .....           | <b>5</b> |
| <b>Part Names and Functions</b> .....               | <b>6</b> |
| SRX-R815/SRX-R810 Digital Cinema<br>Projector ..... | 6        |
| XCT-S10 Digital Cinema Server .....                 | 9        |
| LKRA-007 Touch Panel Monitor .....                  | 10       |
| LKRA-011 3D filter and holder .....                 | 12       |
| LKRA-PCAB1 Projector Auto Calibration<br>Box .....  | 13       |
| Main Screen .....                                   | 14       |

---

## Items to Check

|   |           |
|---|-----------|
| <b>Startup</b> .....                              | <b>16</b> |
| Turning on the Main Power on the Projectors ..... | 16        |
| Starting up the Server .....                      | 16        |
| Logging Into the System .....                     | 16        |
| Starting the Projectors .....                     | 18        |
| <b>Rebooting the System</b> .....                 | <b>18</b> |
| <b>Shutting Down the System</b> .....             | <b>19</b> |

---

## Operations

|   |           |
|---|-----------|
| <b>Sequence of Operations</b> .....                   | <b>20</b> |
| <b>Selecting the Projector to be Controlled</b> ..... | <b>20</b> |
| <b>Ingesting DCP</b> .....                            | <b>21</b> |
| Ingesting from HDD via USB Connector .....            | 21        |
| Ingesting from HDD via CRU DATAPORT .....             | 22        |
| Ingesting via Network .....                           | 23        |
| <b>Ingesting KDM</b> .....                            | <b>23</b> |
| Ingesting from a USB Flash Drive .....                | 23        |
| Ingesting from a Network Folder .....                 | 24        |
| <b>Playing Back CPL</b> .....                         | <b>25</b> |
| Calling up Screen Adjustment Data .....               | 25        |
| Selecting a CPL .....                                 | 26        |
| Playing Back CPL .....                                | 27        |
| <b>Creating an SPL</b> .....                          | <b>28</b> |
| Creating an SPL .....                                 | 28        |

|  |           |
|--|-----------|
| Setting an Intermission in the SPL .....                             | 30        |
| Triggering SPL Playback Using GPI Signals .....                      | 31        |
| <b>Playing Back an SPL</b> .....                                     | <b>32</b> |
| Selecting an SPL .....   | 32        |
| Playing Back an SPL .....  | 32        |
| <b>Creating a Schedule</b> .....                                     | <b>32</b> |
| Creating a Schedule .....  | 32        |
| Importing/Exporting Schedules .....                                  | 33        |
| <b>Projecting Images Using an External Playback<br/>Device</b> ..... | <b>34</b> |
| <b>Manually Controlling Theater Facilities</b> .....                 | <b>35</b> |

---

## Others

|  |           |
|--|-----------|
| <b>Opening/Closing the 3D Filter</b> .....         | <b>36</b> |
| Opening the 3D Filter .....                        | 36        |
| Closing the 3D Filter .....                        | 36        |
| <b>Calibrating the Screen</b> .....                | <b>37</b> |
| Periodic Calibration Using SPLs .....              | 37        |
| <b>Attaching and Removing the Lens</b> .....       | <b>38</b> |
| Removing the Lens .....                            | 39        |
| Attaching the Lens .....                           | 39        |
| <b>How to Read the Indicators</b> .....            | <b>41</b> |
| <b>Troubleshooting</b> .....                       | <b>42</b> |
| <b>Error Code List (LKRA-PCAB1)</b> .....          | <b>44</b> |
| <b>Specifications</b> .....                        | <b>46</b> |
| SRX-R815 Digital Cinema Projector .....            | 46        |
| SRX-R810 Digital Cinema Projector .....            | 46        |
| XCT-S10 Digital Cinema Server .....                | 47        |
| LKRA-007 Touch Panel Monitor .....                 | 47        |
| LKRA-010 Dual System Accessory Kit .....           | 47        |
| LKRA-011 3D filter and holder .....                | 48        |
| LKRA-PCAB1 Projector Auto Calibration<br>Box ..... | 48        |

---

# Please Read This First

---

## Notations Used in This Guide

In this guide, the SRX-R815/SRX-R810 Digital Cinema Projector is referred to as the “projector,” the XCT-S10 Digital Cinema Server is referred to as the “server,” the LKRA-007 Touch Panel Monitor is referred to as the “touch panel monitor,” and the system consisting of the above is referred to as the “SRX-R815P/SRX-R810P.”

---

## Manual Structure

The following manuals are provided for the digital cinema dual system depending on the application.

### **Safety Regulations (SRX-R815P/SRX-R810P/SRX-R815/SRX-R810)**

This includes safety instructions and precautions for using the SRX-R815P/SRX-R810P/SRX-R815/SRX-R810.

### **Before Using This Unit (LKRA-010, LKRA-011, LKRA-PCAB1)**

This includes safety instructions, precautions and specifications for using the unit.

### **Installation Manual**

This includes instructions on how to install the unit, information on default settings, and instructions on how to adjust the system. Be sure to refer to this manual whenever you need to change settings or readjust the unit after installation.

### **Operating Instructions (this guide)**

This includes instructions for screening controls in a theater, how to create a screening schedule, how to change lenses, projector part names, and product specifications. Be sure to refer to this guide for instructions on daily usage.

### **Maintenance Manual**

This includes information such as instructions on periodic inspection, maintenance, and cleaning.

### **Service Manual**

This is intended for use by service personnel and includes information on diagnosing malfunctions and instructions on repair.

---

## About License

Refer to “Software License Agreement.”

---

## USB HDD and USB Memory Devices That can be Used on INGEST PORT 1/2 of This Unit

USB HDD and USB memory devices that can be used on INGEST PORT 1/2 of this unit are as follows.

- USB 2.0/3.0 (bus power capacity up to 1 A)
- Do not insert a bus-powered USB HDD and a USB memory device into the two ports at the same time.
- USB HDD compatible file system  
ext2, ext3

(Operation is not guaranteed for all types of USB HDD and USB memory devices.)

---

## Recognized Folder Names

Regarding the external directories (USB HDD, USB memory devices, network folders, etc.) that are connected to the unit, only folder names that consist of alphanumeric characters will be recognized by the unit.

---

## On Security

- SONY WILL NOT BE LIABLE FOR DAMAGES OF ANY KIND RESULTING FROM A FAILURE TO IMPLEMENT PROPER SECURITY MEASURES ON TRANSMISSION DEVICES, UNAVOIDABLE DATA LEAKS RESULTING FROM TRANSMISSION SPECIFICATIONS, OR SECURITY PROBLEMS OF ANY KIND.
- Depending on the operating environment, unauthorized third parties on the network may be able to access the system.  
We strongly recommend configuring all of the passwords for security purposes.  
For details on configuring all the passwords, refer to the Installation Manual.
- Do not browse any other website in the Web browser while making settings or after making settings. Since the login status remains in the Web browser, close the Web browser when you complete the settings to prevent unauthorized third parties from using the unit or harmful programs from running.

---

## Water Temperature of a Chiller

Set the water temperature of a chiller according to the room temperature as follows, and keep the room humidity below 75%.

- Room temperature below 25°C (77°F): set the water temperature to 20°C (68°F)
- Room temperature between 25°C and 30°C (77°F and 86°F): set the water temperature to 25°C (77°F)
- Room temperature between 30°C and 35°C (86°F and 95°F): consult qualified Sony service personnel

Adjustment of the projector settings is necessary according to the water temperature.

When the water temperature of the chiller has been changed, readjust the CSC settings.

*For further details, refer to the “Maintenance Manual.”*

#### **Caution**

Do not set the water temperature to a temperature 5°C (41°F) or less than that of room temperature. A difference in temperature causes condensation. It may cause a malfunction of the projector, or moisten peripheral devices. If condensation occurs, stop the projector and chiller immediately, and turn the power off. Do not turn the power on again before the projector and chiller are completely dry.

---

## **Coolant Water**

Use neutral distilled water with a pH range of 6.5 to 7.5.

#### **Caution**

Do not use tap water. It may cause pipe corrosion.

Replace the coolant water once every 3 months.  
When replacing it, drain the water from the chiller without disconnecting the projector from the chiller.

#### **Caution**

If the coolant water is not replaced, mold occurs in the pipe due to decomposing (impurity-containing) water. It causes clogs, corrosion, and rusty pipes.

---

## **Prolonged Storage or Storage in the Winter**

Even in temperate regions in winter, water in the pipe may freeze, and it may result in pipe failure.

If the temperature in the storage area is going to be less than 5°C (41°F), consult qualified Sony service personnel for proper preventive measures against freezing.

If water in the pipe freezes, do not use the projector, and ask for a repair.

Using antifreeze solution generally prevents from freezing. However, the projector may not achieve its cooling performance if the antifreeze solution is used. For further details, contact qualified Sony service personnel.

---

## **Chiller Inspection**

To ensure the proper operation of the chiller, check its water level regularly. If the chiller stops operation, the projector also stops.

### **Trademarks**

- The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.
- Other products or system names appearing in this document are trademarks or registered trademarks of their respective owners.

Further, the ® or ™ symbols are not used in the text.


- Reproduction or duplication, in whole or part, of the operation manual supplied with the system without the authorization of the right holder is prohibited under copyright law.
  - Sony assumes no responsibility for damages, loss of income, or any claims from a third party arising out of use of the system.
  - Note that the specifications of the system are subject to change for improvement without prior notice.



# Part Names and Functions

## SRX-R815/SRX-R810 Digital Cinema Projector

### Front

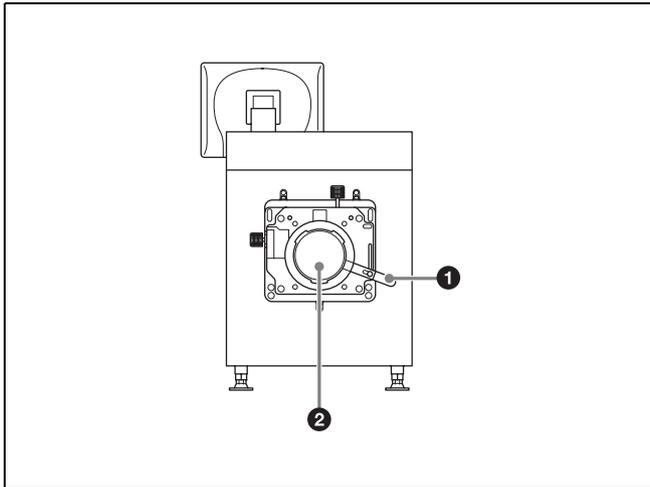


- 1 Lens fixing lever**  
Locks/unlocks the lens.

*For further details, see “Attaching and Removing the Lens” (page 38).*

- 2 Lens attachment part**  
Used to attach a separately-sold lens.

*For further details, see “Attaching and Removing the Lens” (page 38).*

### Rear

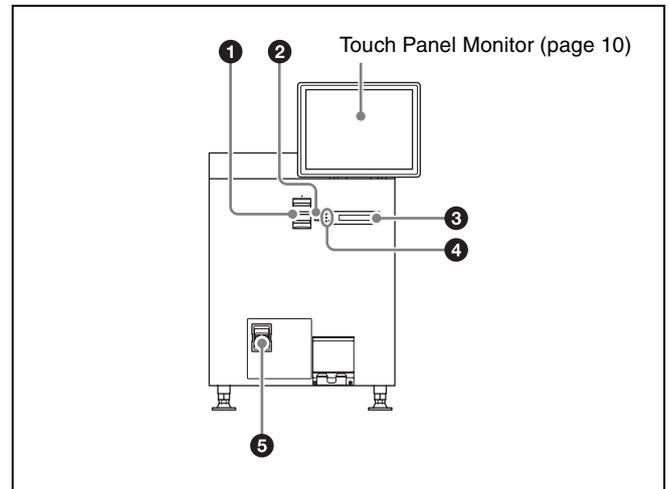


- 1 Status lights**  
Shows the status of the projector.  
  
*For further details, see “How to Read the Indicators” (page 41).*
- 2 EMERGENCY switch**  
Forcibly turns off the projector (equipped with a cooling function).
- 3 STATUS MESSAGE window**  
Displays various messages.
- 4 Status indicators**  
Shows the status of the projector.  
  
*For further details, see “How to Read the Indicators” (page 41).*
- 5 Power switch**  
Turns the projector’s main power on (I) or off (O).

#### When turning the power off

Wait for the projector’s cooling process to complete before turning the power switch off.


*For further details, see “Shutting Down the System” (page 19).*

### Right side

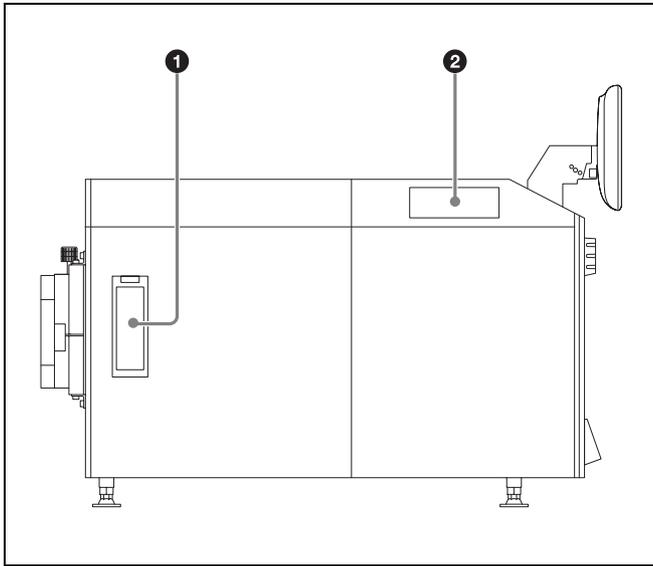

- ❶ Ventilation holes (intake)
- ❷ Ventilation holes (exhaust)


### Left side

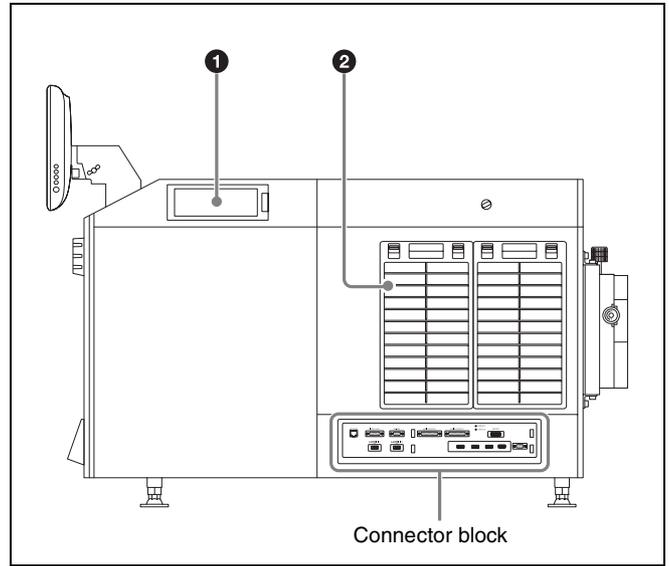


- ❶ Ventilation holes (intake)
- ❷ Ventilation holes (intake)/air filter

*For details on air filter cleaning, refer to the “Maintenance Manual.”*

### Connector block: Main projector

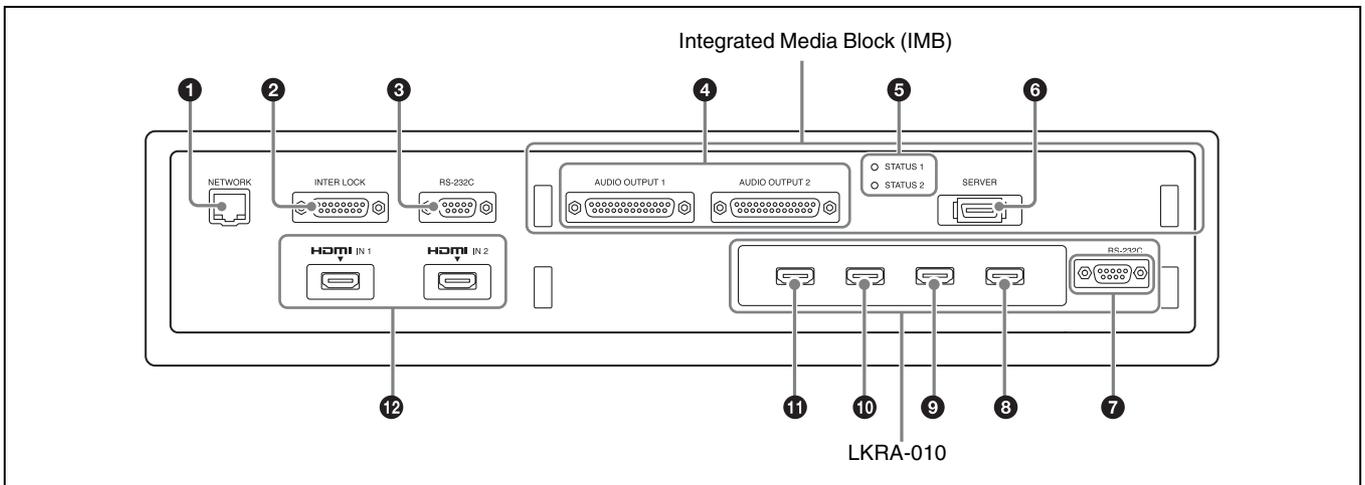


## Connector block: Sub projector

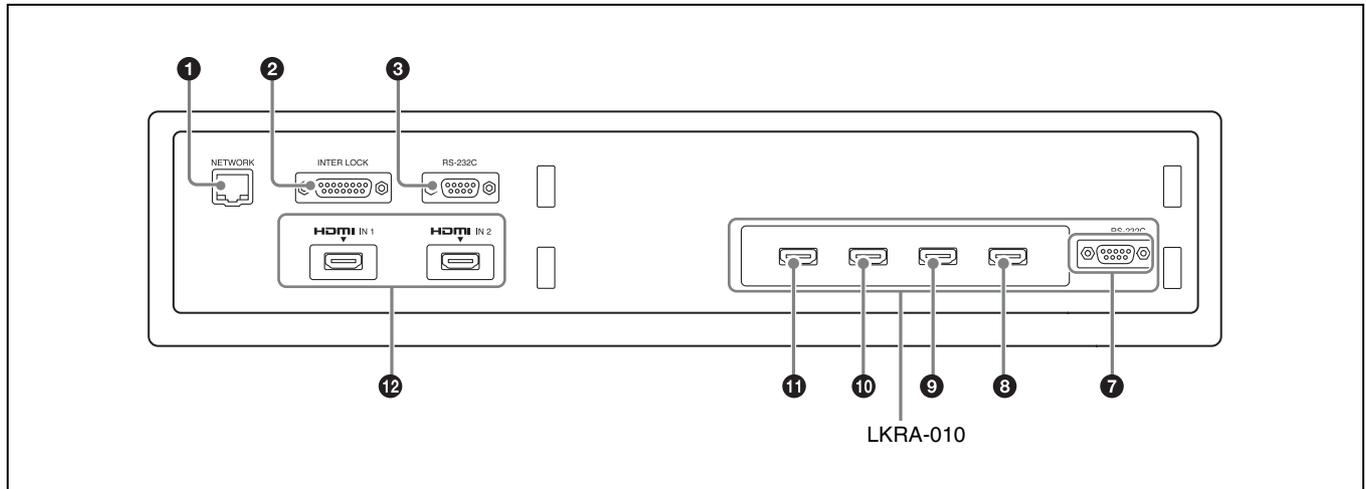

- 1 NETWORK connector (RJ-45 modular jack)**  
Used to connect to the server's PRJ connector with the supplied LAN cable.
- 2 INTER LOCK connector/Remote connector (D-sub 15 pin, female)**  
*For further details, refer to the "Installation Manual."*
- 3 RS-232C connector (D-sub 9 pin, female)**  
Used to connect to a LKRA-PCAB1.  
**Main projector:** Use the supplied connection cable to connect the CTRL2 connector on the LKRA-PCAB1.  
**Sub projector:** Use the supplied connection cable to connect the CTRL1 connector on the LKRA-PCAB1.
- 4 AUDIO OUTPUT BAL/UNBAL (audio output BAL/UNBAL) (AES/EBU) connector (D-sub 25 pin, female)**  
For connecting to an audio signal processor.
- 5 STATUS 1/2 (Status 1/2) indicator**  
Shows the status of the projector.  
*For further details, see "How to Read the Indicators" (page 41).*
- 6 SERVER connector**  
Used to connect to the server with the supplied PCI express cable (2 m).
- 7 RS-232C connector**  
This is not used in this system.
- 8 Link B OUT connector**  
Connect this connector on the main projector to the Link B IN connector on the sub projector.  
This connector is not used on the sub projector.
- 9 Link B IN connector**  
Connect this connector on the sub projector to the Link B OUT connector on the main projector.  
This connector is not used on the main projector.
- 10 Link A OUT connector**  
Connect this connector on the main projector to the Link A IN connector on the sub projector.  
This connector is not used on the sub projector.
- 11 Link A IN connector**  
Connect this connector on the sub projector to the Link A OUT connector on the main projector.  
This connector is not used on the main projector.
- 12 HDMI IN 1/2 (HDMI input 1/2) connector**  
For HDMI signal input.  
*For details on signal format, see "HDMI signals" (page 49).*

# XCT-S10 Digital Cinema Server

## Front

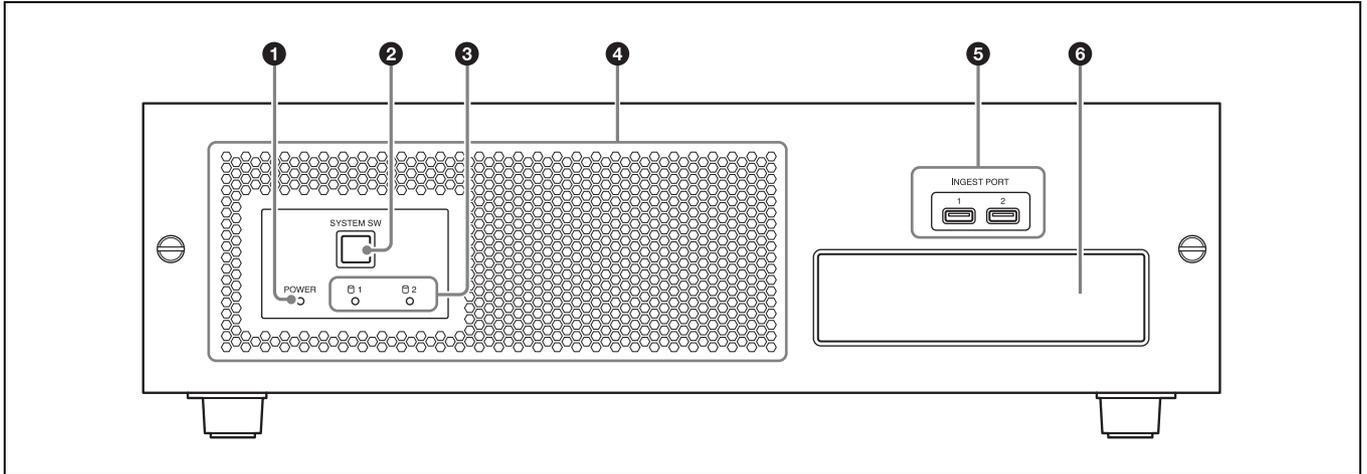

- 1 POWER indicator**  
Shows the status of the server's power.


*For further details, see "How to Read the Indicators" (page 41).*
- 2 SYSTEM SW switch**  
Starts up the server.
- 3 (HDD) 1/2 indicator**  
Shows the status of the HDD.

*For further details, see "How to Read the Indicators" (page 41).*
- 4 Ventilation holes (intake)/air filter**

*For details on air filter cleaning, refer to the "Maintenance Manual."*
- 5 INGEST PORT 1/2 connector**  
For inserting HDD or USB memory to ingest DCP/KDM.  
These can only be used for a USB HDD or USB memory device.  
For systems on which periodic calibration using SPLs is performed, connect the calibration camera to the INGEST PORT 1 connector.

*For further details, see "Ingesting from HDD via USB Connector" (page 21), and "Ingesting from a USB Flash Drive" (page 23).*
- 6 CRU DATAPORT**  
For inserting HDD to ingest DCP/KDM.  
A CRU DATAPORT carrier is necessary to use the CRU DATAPORT. For further details, contact qualified Sony service personnel.

## Rear

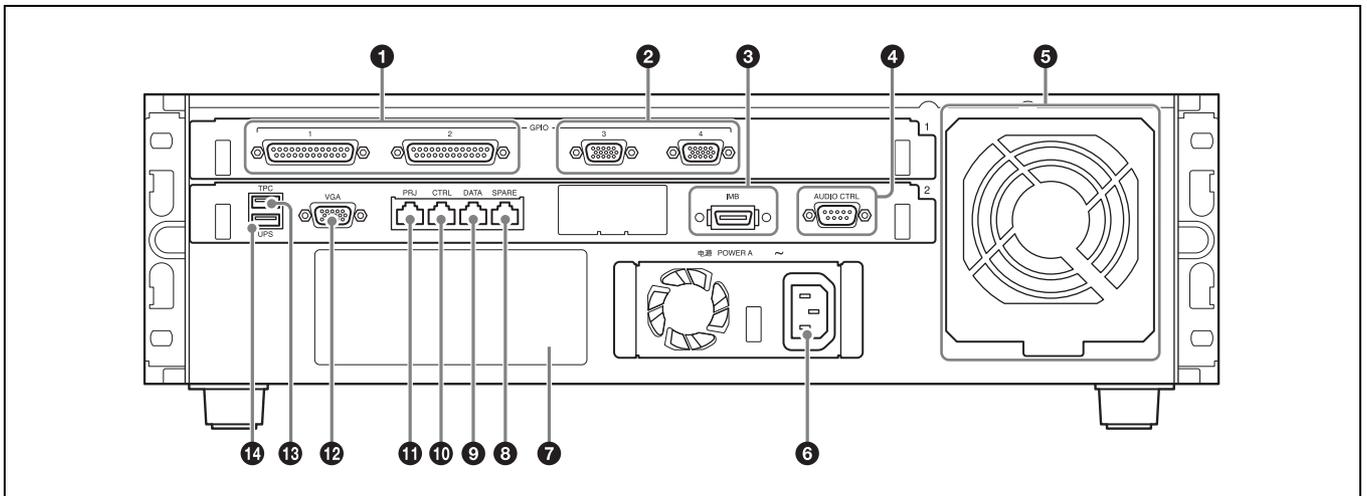

- 1 GPIO 1/2 connector (D-sub 25 pin, female)**  
For connecting to an external device.

*For further details, refer to the “Installation Manual.”*

- 2 GPIO 3/4 connector (D-sub 15 pin, female)**  
For connecting to an external device.

*For further details, refer to the “Installation Manual.”*

- 3 IMB connector**  
Used to connect to the projector with the supplied PCI express cable.

- 4 AUDIO CTRL connector (D-sub 9 pin, male)**  
Used to control audio devices.

- 5 Fan Unit**  
An exhaust fan.

- 6 Power unit (～)**  
Connects with the power cord.

- 7 Power unit B mount**  
For use with separately-sold expansion power units. With both power units A and B attached, each can be used as a redundant power source. To connect a power unit, contact qualified Sony service personnel.

- 8 SPARE connector (RJ-45 modular jack)**  
For future expansions.

- 9 DATA connector (RJ-45 modular jack)**  
Used to connect to a theater network (LAN) and allow linking and data transfer with other systems. Be sure to use a CAT6 or above for the LAN cable.

- 10 CTRL connector (RJ-45 modular jack)**  
Used to connect to a theater network (LAN) and allow linking and data transfer with other systems. Be sure to use a CAT6 or above for the LAN cable.

- 11 PRJ connector (RJ-45 modular jack)**  
Used to connect to the projector’s NETWORK connector with the supplied LAN cable.

- 12 VGA connector (D-sub 15 pin, female)**  
Used to connect to the touch panel monitor’s VGA connector with the supplied VGA cable.

*For connection instructions, refer to the “Installation Manual.”*

- 13 TPC connector**  
Used to connect to the touch panel monitor’s TPC connector with the supplied USB cable.


*For connection instructions, refer to the “Installation Manual.”*

- 14 UPS connector**  
Used to connect to an uninterruptible power supply (UPS).

---

## LKRA-007 Touch Panel Monitor

### Right side

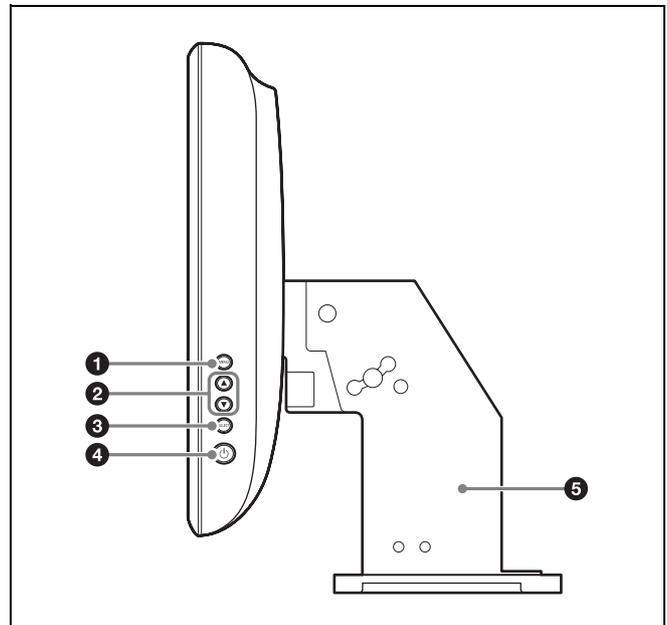

- 1 MENU switch**  
Displays the menu.
- 2 ▲ / ▼ switches**  
Used for moving the menu and setting new values.
- 3 SELECT switch**  
Used for selecting the menu and items.
- 4 ⏻ (Power) switch**  
Press this to turn the power on.  
Press this again to turn the power off.


#### Caution

- When turning the power on, do not touch the touch panel monitor screen. Doing so may prevent normal operations after start-up.
- When the power is on, do not remove the touch panel monitor cable.

**5 Monitor stand**

This is equipped with a tilt mechanism.  
The monitor's position can be adjusted in the up, down, left, and right directions.

**Bottom**

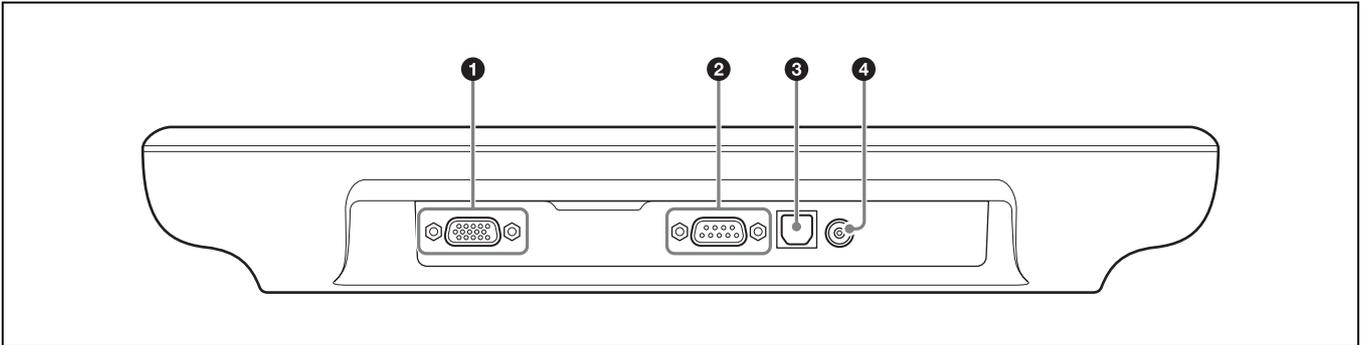

**1 VGA connector (D-sub 15 pin, female)**

Used to connect to the server's VGA connector with the supplied VGA cable.

*For connection instructions, refer to the "Installation Manual."*

**2 RS-232C connector (D-sub 9 pin, female)**

For service use.

**3 TPC connector**

Used to connect to the server's TPC connector with the supplied USB cable.


*For connection instructions, refer to the "Installation Manual."*

**4 Power input connector**

For connecting the supplied AC adapter.

## LKRA-011 3D filter and holder

(The 3D filters are installed to open to the left and right in the following sample illustration.)

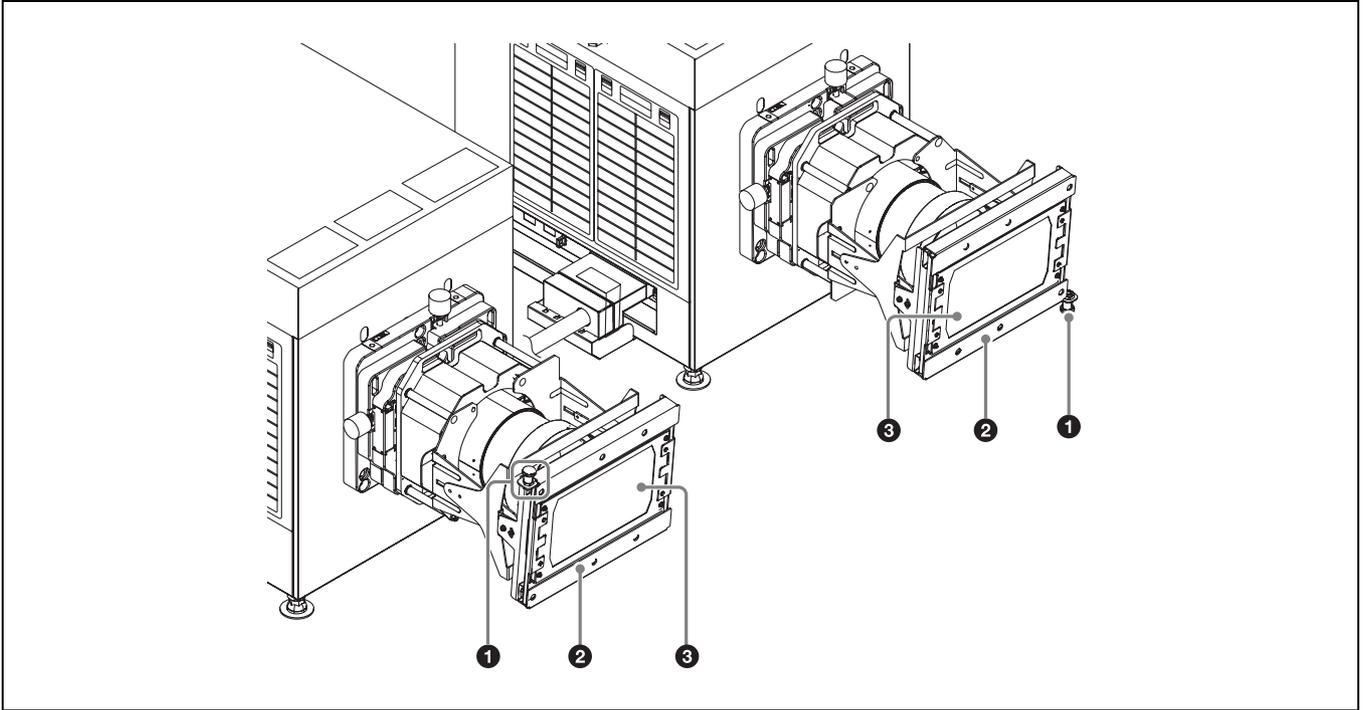


- 1 Lock pin**  
Locks the 3D filter holder.
- 2 3D filter holder**  
Holds the 3D filter.
- 3 3D filter**

*For details on using the 3D filter, see “Opening/Closing the 3D Filter” (page 36).*

# LKRA-PCAB1 Projector Auto Calibration Box

For details on how to use the LKRA-PCAB1, see “Calibrating the Screen” (page 37).

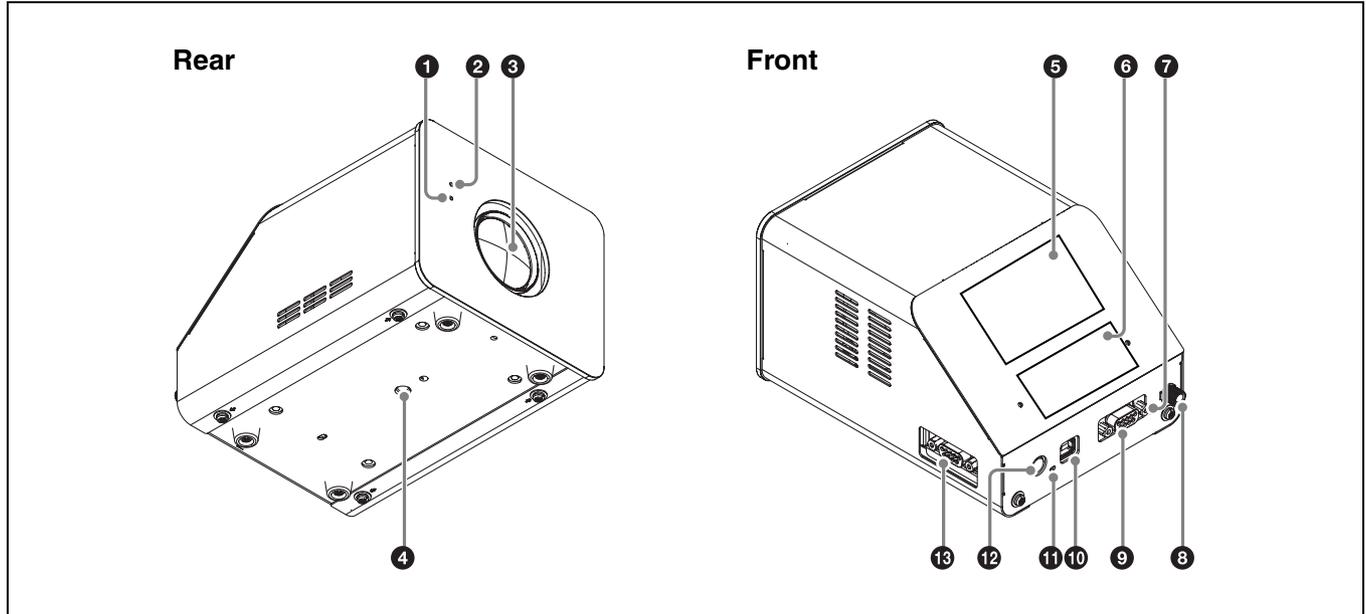

**1 Indicator B**  
Indicates the system status of the LKRA-PCAB1.


**2 Indicator A**  
Indicates that the hardware is initializing.

**3 Calibration camera**  
Measures the convergence of the two projectors.

**4 Fixing clamp hole**

**5 LCD panel**

**6 Touch sensor**  
Operate the LKRA-PCAB1 application by touching the “buttons” that correspond with the functions that appear in the function area of the LCD panel. Only the LEDs that correspond to a currently controllable function will light.  
Touching the sensor with a pen or your fingernails may result in erroneous operation. Be sure to touch the sensor firmly with your fingertips.

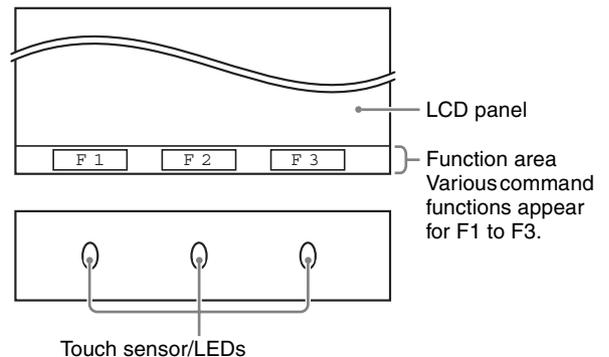

**7 Projector status LED**  
Indicates the connection status between the LKRA-PCAB1 and the projectors.

**8 GND connector**  
Connects to safety grounding.

**9 CTRL1 connector**  
Use the supplied connection cable to connect this to the RS-232C connector on the sub projector.

**10 COM connector**  
This is currently not used. (Intended for future expansion.)

**11 Power status LED**  
Indicates the power status.

## 12 DC IN connector

Connect the DC power cable of the supplied AC adapter here.

## 13 CTRL2 connector

Use the supplied connection cable to connect this to the RS-232C connector on the main projector.

## Main Screen



### 1 Auditorium number

If a computer is being used to control multiple auditoriums via a network, the auditorium numbers will be displayed. Touch the number to display the auditorium selection dialog box, and then select the auditorium to operate.

#### Caution

Multiple auditoriums can only be controlled via a network when a browser is used on a computer to operate this unit. Do not control multiple auditoriums using the touch panel monitor.

### 2 Date display

Displays the current date (server date).

### 3 Next SPL title for screening

### 4 SPL playback status

Displays the SPL playback status using the same icons used for the playback control buttons.

*For details on the buttons, see “Playing Back CPL” (page 27).*

### 5 Current SPL title

### 6 Progress bar

Displays the progress of the title currently being screened by CPL or SPL frames.

### 7 Elapsed showing time

Displays an approximate time. Although there may be a slight discrepancy in the units depending on system conditions, this will not affect the actual screening.

### 8 Scheduled start time of next SPL for screening / time remaining until start

### 9 Projector status indicator / control button

Indicates the operation status of the projector. When you tap the button, the “Projector Light Control” dialog box appears allowing you to operate the projector.

### 10 Job display button

Tap the button to switch to the “Job Status” screen in the [Library] tab.

**11 Error display button**

Displays the status of the device being controlled by the server.

When you tap the button, the “Error History” screen appears.

*For details on the “Error History” screen, refer to the “Maintenance Manual.”*

**Error:** An error has occurred. (screening stops)

**Warning:** A non-fatal problem or error has occurred. (screening continues)

**Normal:** The status is normal.

**12 Login user name**

Displays the login user name.

**13 (Power) button**

This enables shutdown, or logout from the projection system. (page 19)

**14 Main menu**

This menu provides access to all the functions on this unit. The following menus are also available.

**[Status]:** Monitors the title being screened. Manual playback can also be performed here.

*For details on how to read the status, see “To check installation/connections” (page 42).*

**[Schedule]:** Creates a schedule.

*See “Creating a Schedule” (page 32).*

**[SPL]:** Creates an SPL (Show Playlist).

*See “Creating an SPL” (page 28).*

**[Library]:** Manages DCP (Digital Cinema Package) or KDM (Key Delivery Message).

*See “Ingesting DCP” (page 21), and “Ingesting KDM” (page 23).*

**[Configuration]:** Adjusts various settings.

*For details on indicators, refer to the “Installation Manual.”*

**15 Projector selection button**

Selects the projector (main or sub) to be controlled.

*For details, see “Selecting the Projector to be Controlled” (page 20).*

**16 Playback mode display button**

Displays the playback mode.

Tap the button to switch the playback mode.

**Manual:** Playback is performed manually.

**Scheduled:** Playback is performed using a schedule.

You can select the [Play Manually] checkbox to perform playback manually even in schedule mode.

**17 Version information**

Displays the version information of the projector.

**18 Projector information display**

Displays information about the projector.

*See “Calling up Screen Adjustment Data” (page 25), “Manually Controlling Theater Facilities” (page 35).*

**19 Shortcut button**

Often-used functions are registered to this button. Tap the button to activate a function.

**Note**

The following operations can be carried out in [Prepare].

- Turn on the light source
- Open the douser
- Cancel muting
- Cancel test pattern display


*To register a function to the shortcut button, refer to the “Installation Manual.”*

**20 Error information display**

Displays the location and time an error occurred, an explanation of the error and a solution.

When an error occurs, refer to [Solution] on the lower left to deal with the problem.

When multiple errors or warnings have occurred, you can check the next or previous warning by tapping [>] or [<].

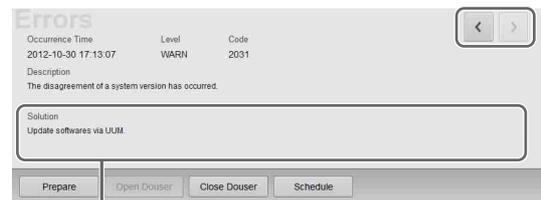

The solution will be displayed here. Follow the instructions to deal with the problem.

**21 Playback control button**

In manual playback mode, you can control playback.

*For details, see “Playing Back CPL” (page 27).*


## Items to Check

### Startup

When starting up the projection system, turn on the projectors' main power first, and then start up the server and log in to the system.

### Turning on the Main Power on the Projectors


Lower the power switch at the rear of each projector to the on position (I) to turn on both projectors.

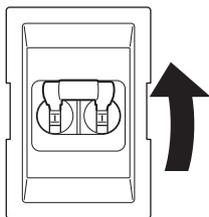

The power will turn on and the MAIN indicator and LIGHT indicator will turn solid red when the projectors enter standby mode.

### Starting up the Server

Press the SYSTEM SW switch on the server's front to turn it on.

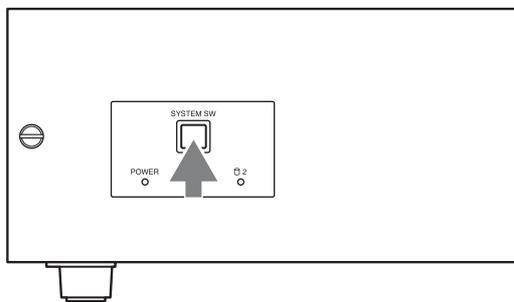

The POWER indicator will blink green, and after start-up is complete, it will turn solid green. Once the server is on, the "Login" screen will be displayed on the monitor.

#### Caution

- Do not start up the server with a USB device inserted in INGEST PORT1/2 connector on the front of the server. The USB device may not be recognized.
- When starting-up the server, do not touch the touch panel monitor screen. Doing so may prevent normal operations of the touch panel monitor after start-up.

## Logging Into the System

#### Caution

It is necessary to pre-register as a user to log in to the projection system.

For further details, refer to the "Installation Manual."

- 1 Tap your own user name in the user list, and then tap the [Password] column.



A virtual keyboard for entering your password will be displayed.

- 2 Enter your password, and then tap [Enter].



If you make a mistake when entering your password, tap [BS] to delete the last character.

When the password is entered, it will be displayed masked above the keyboard.


#### Notes

- Startup of the projection system will take some time. Startup processes for the server continue even after the user list appears. Lists, such as those for ingested CPLs, will not appear until the startup processing is complete.
- You can change your password.

See "To change your login password" (page 17).

The virtual keyboard will disappear, and asterisks (\*) will be entered in the [Password] column.

- 3 Tap [Login].  
Once you log in to the system, the “Status” screen will be displayed.

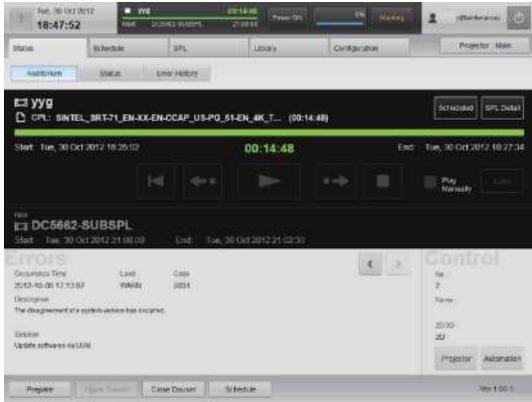

Proceed to “Starting the Projectors” (page 18).

## To change your login password

As a user, you can change your own password.

- 1 Tap the area where the user name is displayed at the top right of the screen to display the “Login” screen, and tap [Change Password].



A screen for changing your password will be displayed.

- 2 Enter the old password and new password, and then tap [OK].  
Tap each field to display a virtual keyboard, and enter the necessary information.

- 3 Tap [OK] when the confirmation screen appears.



Your password will be changed.

## Changing the login user

- 1 Tap  on the upper right of the screen.
- 2 Select [Logout], and then tap [OK].



- 3 Tap [OK] when the confirmation screen appears.



The “Login” screen will be displayed.

- 4 Change the user and log in.

# Starting the Projectors

### Caution

The projector is not lit if a chiller is not working in a prescribed condition. Start a chiller in advance. When using a Sony-recommended chiller that is communicating with the projector, set the chiller to standby.

- 1 In the “Status” screen, tap [Standby].



The “Projector Light Control” dialog box will be displayed.

- 2 Tap [Power ON].



The MAIN indicators on the rear of the projectors will turn solid green, and the LIGHT indicators will blink green.

When the main projector turns on, its MAIN, LIGHT, and IMB indicators will be solid green.

When the sub projector turns on, its MAIN and LIGHT indicators will be solid green (its IMB indicator will remain red).

- 3 Tap [Close] to close the “Projector Light Control” dialog box.


The above procedures complete preparations and confirmation for using the projection system.

# Rebooting the System

- 1 Tap  on the upper right of the screen.
- 2 Select [Reboot], and then tap [OK].



- 3 Tap [OK] when the confirmation screen appears.

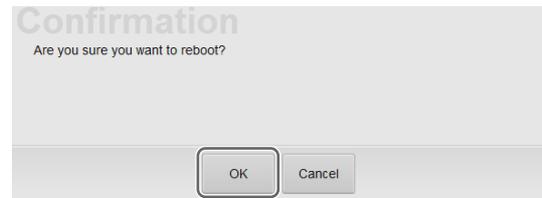

The server (including the IMB) reboots.

### Notes

- The projector itself will not reboot.
- If the projector is lit, it will be turned off, and entered the cooling state.


---

# Shutting Down the System

- 1 Tap  on the upper right of the screen.
- 2 Select [Shutdown], and then tap [OK].



- 3 Tap [OK] when the confirmation screen appears.

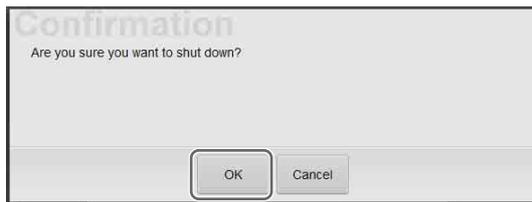

The projection system will shut down.  
The MAIN indicators and LIGHT indicators on the rear of the projectors will turn to blinking green while cooling. Once cooling is complete, the LIGHT indicators will turn to solid red. Leave the system as it is at this point.

- 4 Once the MAIN and LIGHT indicators turn solid red, and the main projector's IMB indicator begins blinking red (the sub projector's IMB indicator will remain red), move the power switch to off (O) to turn off the power.

## Caution

If, after shutdown, the power switch on the rear of a projector is not turned off and only the server is turned on, the IMB on the main projector will not power on. If this happens, the IMB indicator will blink red. Turn the power switch off, and then turn the power on again.

## Sequence of Operations

The sequence of operations from receiving distributed DCP to screening operations are shown below.

### Starting up (page 16)

Starting up the projection system.

### Ingesting DCP (page 21)

Ingest distributed DCP to the server.

### Ingesting KDM (page 23)

When DCP is encrypted, ingest the KDM (encryption key file) necessary for playback.

### Playing Back CPL (page 25)

Call up screen adjustment data and play back CPL to confirm.

### Creating an SPL (page 28)

Create an SPL to screen DCP in an auditorium.

### When screening via manual operations

#### Playing Back an SPL (page 32)

Select an SPL to screen.

### When using a screening schedule

#### Creating a Schedule (page 32)

Create a schedule to automatically screen titles.

## Selecting the Projector to be Controlled

Before performing a control operation, select the target projector.

- 1 Tap the projector selection button at the top right of the screen.



The “Select Control Projector” dialog box will be displayed.

- 2 Tap the [Selected Projector] button to select a projector, and then tap [Apply].



The selected projector and the available control operations will be displayed on the screen.

# Ingesting DCP

This procedure ingests DCP, such as the main feature to be screened, or previews, to the server.

## Notes

- When DCP is encrypted, the KDM encryption key file is necessary.
- Depending on the USB HDD type being used, the following messages may be displayed on the center of the screen. These do not indicate problems.  
“Unable to mount Audio Disc”  
“Unable to mount Utility\_\*\*USB HDD model number\*\*”

For details on ingesting KDM, see “Ingesting KDM” (page 23).

## Note

When ingesting DCP/KDM, be sure to do so with the power switches on the server and projector set to on. In such cases, be sure to verify that the IMB indicator on the main projector is lit green.

DCP can be ingested in the following ways.


- Ingesting from HDD via USB Connector (page 21)
- Ingesting from HDD via CRU DATAPORT (page 22)
- Ingesting via Network (page 23)

## Ingesting from HDD via USB Connector

### Caution


Do not start up the server with a USB device inserted in INGEST PORT1/2 connector on the front of the server. The USB device may not be recognized.

- 1 Connect the HDD containing the DCP to the server’s INGEST PORT 1/2 connector.
- 2 Tap the [Library] tab, and then tap [Library]. The “Library” screen will be displayed.
- 3 In the [External Folder] pane, select the following terminals connected to the HDD, and then tap [Open].
  - When connected to INGEST PORT 1 terminal, select [Ingest\_USB\_1].
  - When connected to INGEST PORT 2 terminal, select [Ingest\_USB\_2].

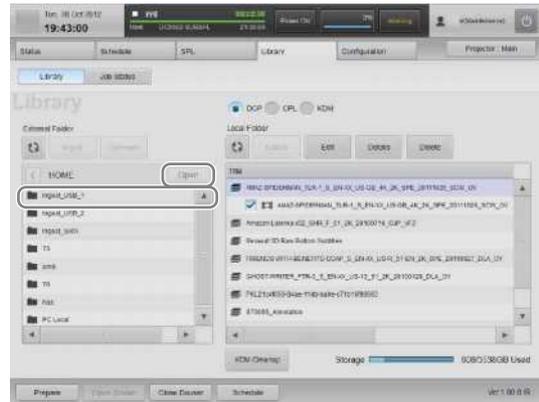

The content inside the HDD connected to INGEST PORT 1/2 will be displayed. However, folders with the following character strings (regardless of case) will not appear.  
bin, boot, dev, etc, home, initrd, lib, misc, opt, proc, root, sbin, selinux, srv, tmp, sys, usr, var

- 4 Select the DCP (  ) to ingest, and then tap [Ingest].

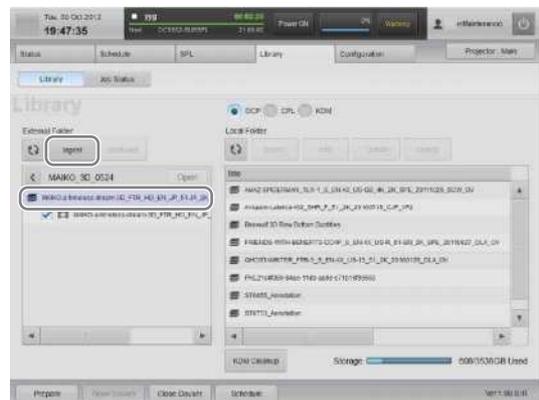

### Notes

- Select the CPL (  ) within DCP and tap [Ingest] to ingest the selected CPL only as new DCP.
- To refresh the displayed content, tap .

The selected DCP will be ingested into the server. Tap [OK] to close the message.



- 5 To continue ingesting multiple DCPs, repeat step 4. The DCP ingest request will be registered as the following job.


- 6** After DCP has been ingested, select the following terminals connected to the HDD, and then tap [Unmount].
- When connected to INGEST PORT 1 terminal, select [Ingest\_USB\_1].
  - When connected to INGEST PORT 2 terminal, select [Ingest\_USB\_2].
- You can now safely remove HDDs.

## How to export ingested DCP

- 1 In the [External Folder] pane, select the export destination.
- 2 In the [Local Folder] list, select a DCP to export, and then tap [Export].

## How to confirm progress of ingesting/exporting DCP

You can tap [Job Status] in the [Library] tab to display the “Job List” screen and check the progress and status of ingestion.

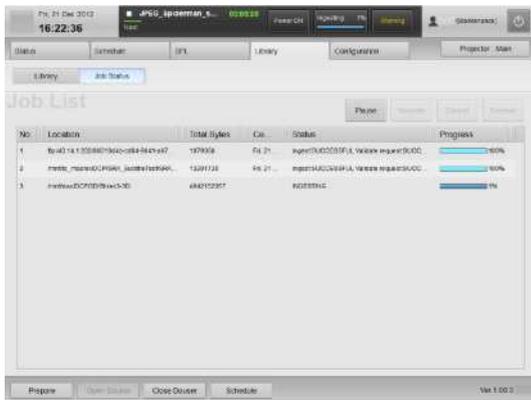

The following operations are available for each button in the [Job List] pane.


- [Pause]:** Suspends jobs
- [Resume]:** Reopens jobs
- [Cancel]:** Cancels jobs in progress.
- [Remove]:** Deletes jobs

### Note

If you pause a job and then remove it, the next job will enter a paused state. Tap [Resume] to resume that job.

## To check ingested DCP

Ingested DCP can be checked in the “Library” screen’s [Local Folder] list. Select [DCP] to display DCP ingested to the server in the [Local Folder] list.

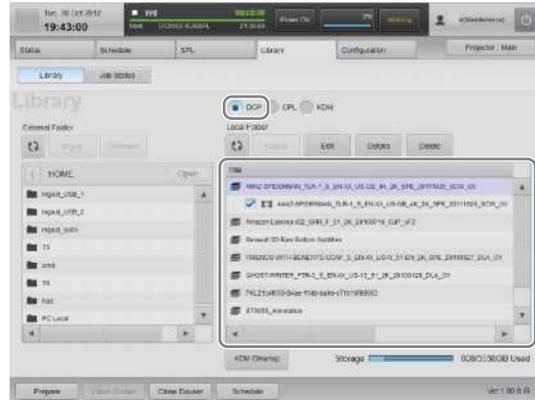

The following operations are available for each button in the [Local Folder] list.

- [Edit]:** The name of the selected DCP can be changed.
- [Details]:** Detailed information on the selected DCP will be displayed.
- [Delete]:** The selected DCP can be deleted.


### Note

To refresh the displayed content, tap .

## Ingesting from HDD via CRU DATAPORT

A CRU DATAPORT carrier is necessary to use the CRU DATAPORT. For further details, contact qualified Sony service personnel.


- 1 Insert the HDD containing DCP to the server’s CRU DATAPORT.

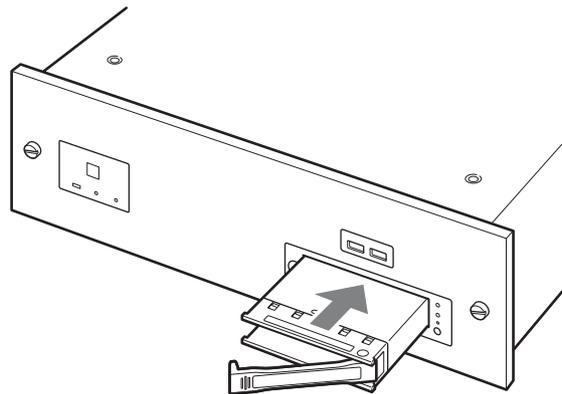

- 2 For further instructions, follow steps **2** to **6** in “Ingesting from HDD via USB Connector” (page 21) to ingest DCP. In step **3** and **6**, select [Ingest\_SATA] in the [External Folder] pane.

## To remove the HDD

Perform the following to remove the HDD.

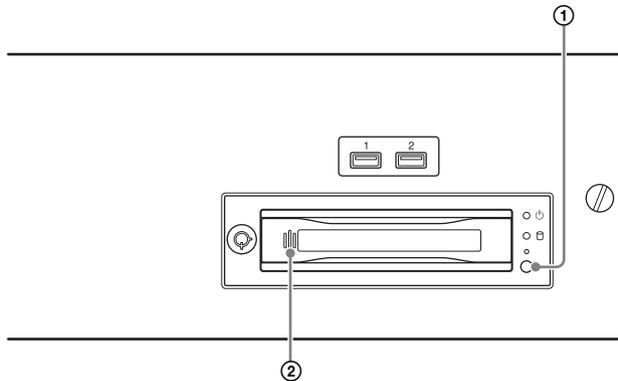

- 1 Press the power button.  
The LED blinks for a moment and then turns off.
- 2 Verify that the LED is off, push the left side of the handle, and remove the HDD.

## Ingesting via Network

DCP stored on another server can be ingested via network.

### Caution

To ingest DCP via network, it is necessary to register the source device ahead of time.

*For further details, refer to the “Installation Manual.”*

To ingest DCP, follow steps **2** to **5** in “Ingesting from HDD via USB Connector” (page 21).

In step **3**, select the source device in the [External Folder] pane.


## Ingesting KDM

When DCP is encrypted, it is necessary to also ingest the KDM encryption key file to the server.

When DCP is encrypted, a key icon will be displayed on any CPL containing DCP.

DCP can be opened in the “Library” screen.

Key icon

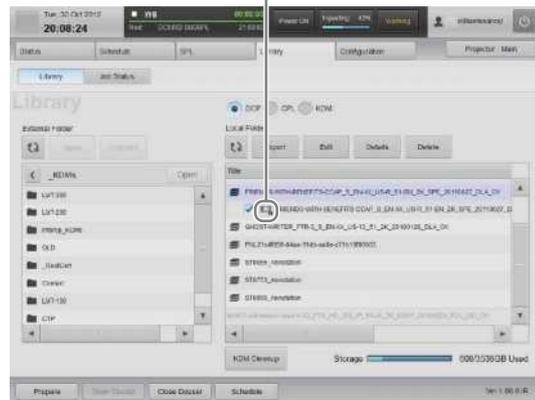

KDM can be ingested in the following ways.


- Ingesting from a USB Flash Drive (page 23)
- Ingesting from a Network Folder (page 24)

## Ingesting from a USB Flash Drive

### Caution


Do not start up the server with a USB device inserted in INGEST PORT1/2 connector on the front of the server. The USB device may not be recognized.

- 1 Connect the USB flash drive containing the KDM to the server’s INGEST PORT 1/2 connector.
- 2 Tap the [Library] tab, and then tap [Library].  
The “Library” screen will be displayed.
- 3 In the [External Folder] pane, select the following terminals connected to the USB memory device, and then tap [Open].
  - When connected to INGEST PORT 1 terminal, select [Ingest\_USB\_1].
  - When connected to INGEST PORT 2 terminal, select [Ingest\_USB\_2].

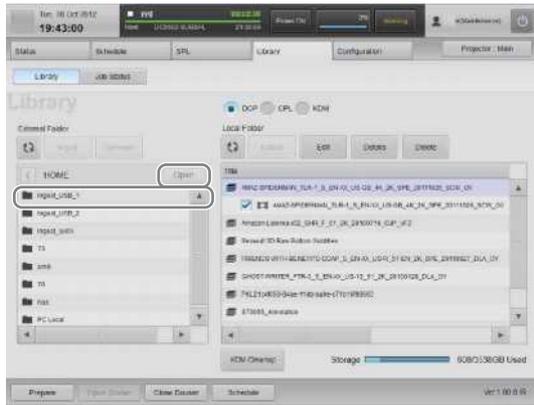

The content on the USB memory device inserted in INGEST PORT 1/2 will be displayed.

- 4 Select the KDM (  ) to import, and then tap [Ingest].

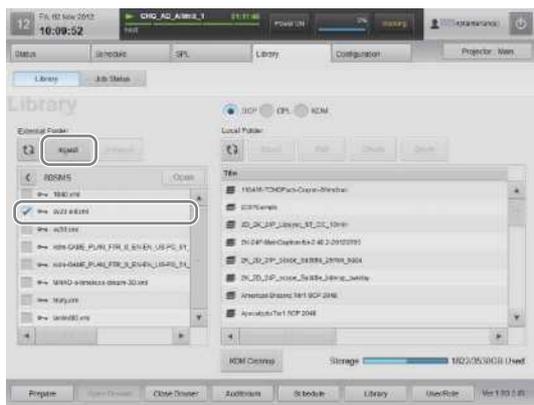

**Note**

To refresh the displayed content, tap .

The selected KDM is ingested to the server. Tap [OK] to close the message.



- 5 Confirm that the ingested KDM has been applied to the DCP.

For further details, see “To confirm that KDM has been applied” (page 24).

**Note**

You can ingest KDM from the CRU DATAPORT. For instructions, see steps 1 to 2 in “Ingesting from HDD via CRU DATAPORT” (page 22), and steps 1 to 4 in “Ingesting from a USB Flash Drive” (page 23). For steps

on how to remove an HDD, see “To remove the HDD” (page 23).


## Ingesting from a Network Folder

If a KDM is copied to a preset network folder, it will be automatically ingested.

For details on network folder settings, see the “Installation Manual.”

Execute the following steps to ingest to a network folder that has not been set.

- 1 Tap the [Library] tab, and then tap [Library]. The “Library” screen will be displayed.
- 2 Select a network folder, select the KDM you want to ingest, and then tap [Ingest].

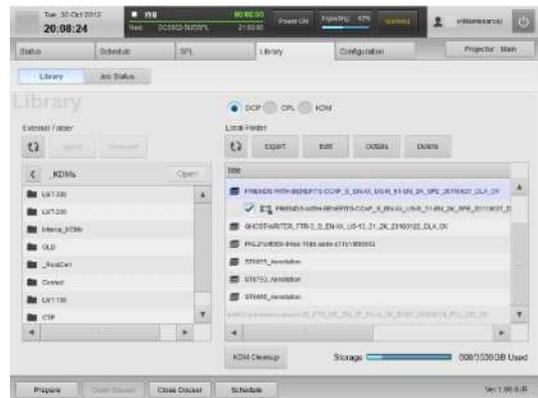

The selected KDM is ingested to the server. Tap [OK] to close the message.




- 3 Check that the ingested KDM has been applied to the DCP.

For details on operations, see “To confirm that KDM has been applied” (page 24).

## To confirm that KDM has been applied

- 1 In the [Library] tab’s “Library” screen, tap . The displayed content will be refreshed.
- 2 Tap the desired DCP to open it and confirm that the ingested KDM is displayed underneath the applicable CPL.

When KDM has not been ingested, “No Key” will be displayed.

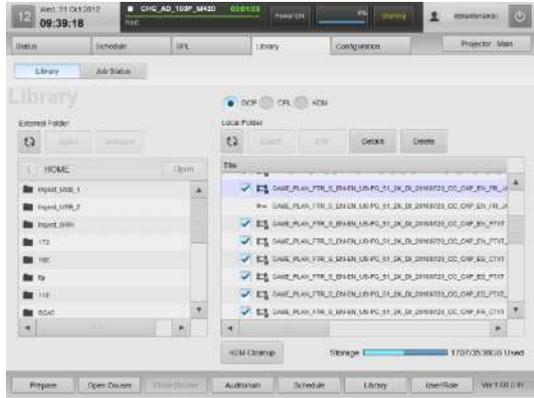

### To confirm the KDM time limit

After selecting the [KDM] radio button in the “Library” screen, select a KDM in the [Local Folder] pane, select a KDM to check, and then tap [Details] to check the period of validity.

### Deleting unnecessary KDM files

Tap [KDM Cleanup] to delete KDM that are not related to DCP.

## Playing Back CPL

### Calling up Screen Adjustment Data


Depending on the content’s signal classification (viewing angle (HD/scope/flat)) for playback, screen adjustment data can be called up when registered in the function memory. Settings such as zoom ratio, and brightness are recorded in the adjustment data.

*For details on the function memory or adjustment data, refer to the “Installation Manual.”*

When switching functions (i.e., adjustment data), the main and sub projectors must both be selected and switched individually to functions of identical numbers and names. If function switching is included in an SPL, the functions on both projectors can be switched simultaneously.


*For details, see “Creating an SPL” (page 28)*

- 1 In the [Status] tab’s “Auditorium” screen, tap [Projector].

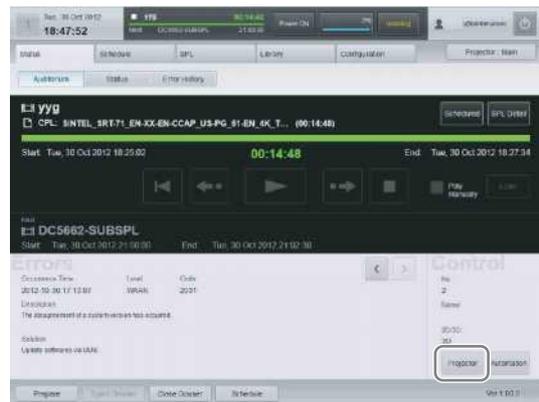

The “Projector Control” screen appears.

- 2 Select the adjustment data appropriate to the content from the [Function] list, and then tap [Load].

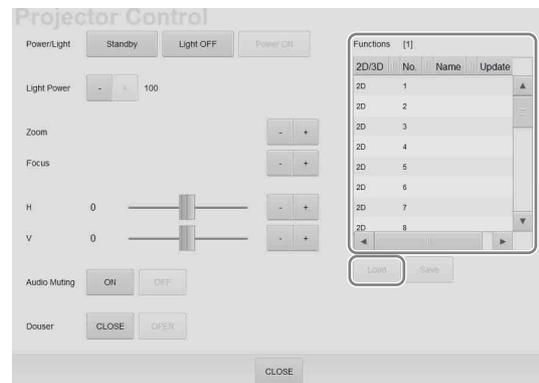

The adjustment data will be loaded into the projector.

- 3 Tap [CLOSE] at the bottom of the screen to close the screen.

The lens mounted on the projector can be checked in the “Status” tab’s “Auditorium” screen.



Information based on Function settings currently loaded will be displayed.

For details on how to change the lens, see “Attaching and Removing the Lens” (page 38).

### To fine-tune the adjustment data

You can fine-tune the adjustment data for the main and sub projectors separately. Use the projector selection button to select the projector for which to perform fine-tuning, and perform the following using the buttons in the “Projector Control” dialog box.

- [Light Power]: Adjusts the screen brightness
- [Zoom]: Adjusts the screen size
- [Focus]: Adjusts the screen focus
- [H]: Adjusts the horizontal position of the screen
- [V]: Adjusts the vertical position of the screen

### Caution


Be aware that when you tap [Save] for either the main or sub projector, the fine-tuned adjustment data will overwrite the setting values of the function number selected in the [Function] list for the respective projector.

## Selecting a CPL

### Notes

- When in Schedule Playback mode, tap [Scheduled] or [Manual] (the display will change) to set to Manual mode, or select the [Play Manually] check box. [Play Manually] is convenient for temporary playback of tests while in Schedule Playback mode.
- When [Play Manually] is selected and the manual playback and scheduled playback overlap, the content played back last will take priority.

- 1 In the [Status] tab’s “Auditorium” screen, tap [Load].

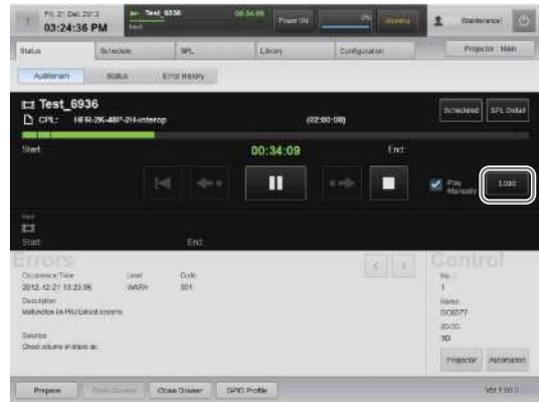

The “Load Content” screen will be displayed.

- 2 Select the [CPL] radio button to display the “CPL” list, select a CPL for playback, and then tap [Load].



The selected CPL will load, and will be displayed in the “Auditorium” screen.

CPL title, or SPL title      Loaded CPL title



## Playing Back CPL

Using buttons in the “Auditorium” screen, CPLs can be played back, paused, or cued to a certain position, and they can be checked for missing files or damaged tracks.



During CPL playback, the playback progress is displayed on the progress bar.



| Control buttons                                     | Description   |
|---|---|
| (Play back from the beginning)                      | Plays back the CPL from the beginning. This button is displayed while content is paused.  |
| (Playback will start from the previous 30 seconds.) | The playback position will rewind 30 seconds and playback will begin. This button is displayed while content is paused. When the elapsed time does not total 30 seconds, playback will start from the beginning.  |
| (Pause)   | Pauses playback. This button is only displayed during playback. While paused, the last displayed frame will remain on the screen.   |
| (Play)  | Plays back a CPL. This button is displayed while content is paused or stopped.  |
| (Playback will start from 5 minutes in advance.)    | The playback position will advance 5 minutes and playback will begin. This button is displayed while content is paused. When the current remaining time is more than 30 seconds, but less than 5 minutes, you can tap this button to play back the final 30 seconds of Duration. When the remaining time is less than 30 seconds, playback will start from the stop location. |
| (Stop)  | Stops playback. This button is displayed during playback.   |

# Creating an SPL


Create an SPL to show DCP in an auditorium. In an SPL, the screening order of a CPL for a single screening, and automatic controls for theater facilities during a screening are defined.

Function (i.e., adjustment data) switching can also be added as a cue in an SPL. In such cases, the functions on both projectors will switch simultaneously (i.e., the function numbers and function names will be identical on both projectors) in response to a single switching operation. Alternatively, when using the standard method of switching functions without SPLs, the main and sub projectors must both be selected and switched individually to functions of identical numbers and names.

## Creating an SPL

Create a new SPL. In addition to CPLs, you can add cues such as completed SPLs and lighting controls to an SPL.


- 1 Tap [SPL] in the [SPL] tab. The “SPL List” screen will be displayed.
- 2 Tap [New].

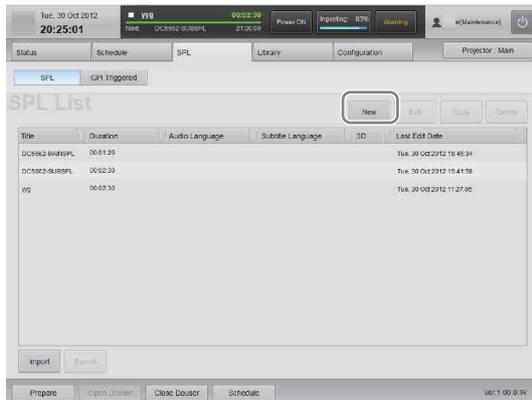


The SPL setting screen will be displayed.

- 3 Enter the SPL title in [SPL Title].


You can enter up to 128 alphanumeric characters and symbols, excluding quotation marks ("").

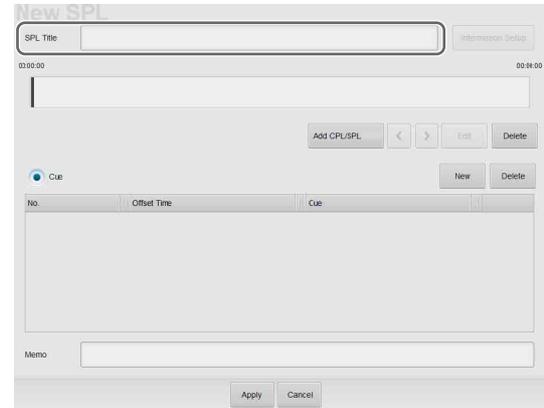

- 4 Tap [Add CPL/SPL]. The SPL/CPL/Cue list will be displayed.
- 5 Select the [CPL] radio button, select the CPL from the list that you want to add to the SPL, and then tap [Insert]. To insert in a black screen (Black), select “Black” and then tap [Insert]. Next, set the time for the black screen (Black), and then tap [Apply].

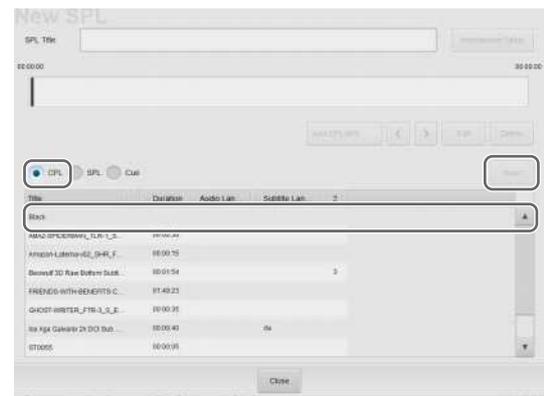

- 6 To add the completed SPL to an SPL, select the [SPL] radio button, select the SPL from the list that you want to add, and then tap [Insert].

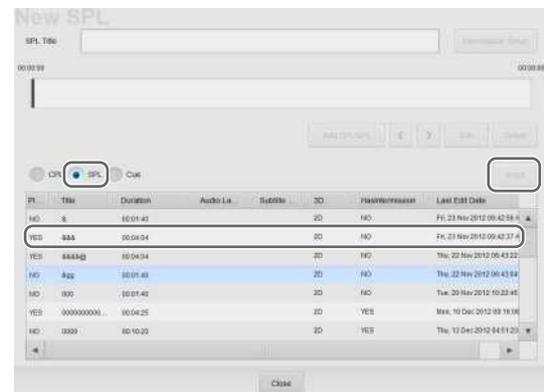

## Notes

- List operations can be carried out with the following buttons.  
[<] / [>]: Changes the CPL or SPL order  
[Delete]: Deletes the selected CPL or SPL  
[Edit]: Changes the length of the black screen (Black) when that option is selected
- You can insert a CPL or SPL and change the order by dragging and dropping the CPL or SPL.
- Up to about 10 CPLs or SPLs should be inserted in a single SPL. If you want to create an SPL that includes more than 10 CPLs, create SPLs that include about 10 CPLs each, and then combine the SPLs.
- Continuing black screens (Black) will be automatically merged into a single black screen (Black) with a total length of all screens combined. Caution: When a CPL or SPL is deleted using [Delete], and black screens (Black) exist at both ends of the CPL or SPL, they will be automatically merged.
- If you want to replace a registered CPL or SPL, insert a CPL or SPL to replace and then delete the registered CPL or SPL.
- Frequently turning on/off the laser light source does not affect projector life-span. You are recommended to turn off the light source during the intermission of the screening.

- 7 Tap [Close] to close the list.  
The added content will be displayed.


## Caution

The cue and the CPL inserted in the added SPL will not be displayed.

- 8 To insert control cues for lights and other theater facilities in an SPL, tap [New].  
When configuring events (cues) of multiple GPIO pulse types to the SPL, place them so that they are longer than the pulse intervals.

A cue will be added to the list.

- 9 Select the insertion time and type of cue.  
To delete the inserted cue, tap [Delete].

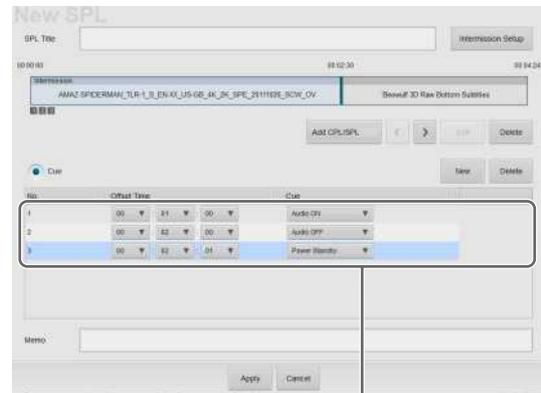

Added cue

## Caution

When a cue has been inserted, you should check to see that the cue is executed before screening content.

## Notes


- Network commands can be sent as cues (controls triggered via GPIO or via network commands).

*For details on configuring cues, refer to the Installation Manual.*

- Commands can also be sent to the LKRA-PCAB1 as cues.


*For details, see “Periodic Calibration Using SPLs” (page 37).*

- 10 Tap [Apply].

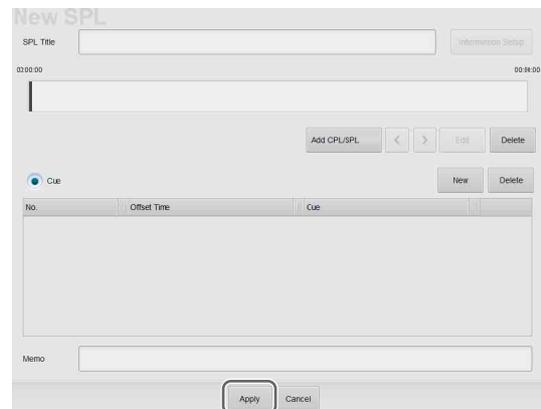

*To set an intermission, see “Setting an Intermission in the SPL” (page 30).*

The setting will be saved and added to the SPL list.

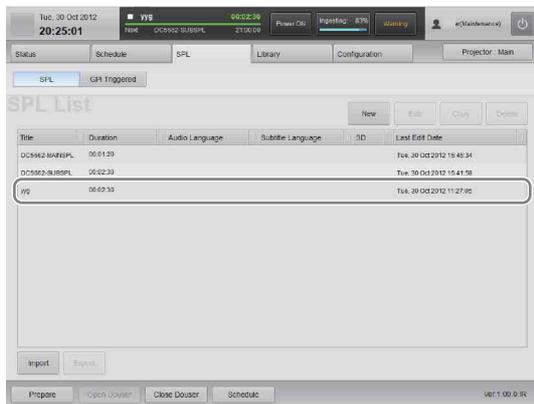

### To change the content of an SPL


Select the SPL you want to change from the SPL list and tap [Edit]. The SPL setting screen will be displayed, and you can change the content there.

*For details, see step 3 and beyond of “Creating an SPL” (page 28).*

### To copy an SPL

You can copy the content of a SPL, add a different title, and use it to create a new SPL.

- 1 In the SPL list, select the copy source, and then tap [Copy].
- 2 Enter the SPL title, and then tap [Apply].

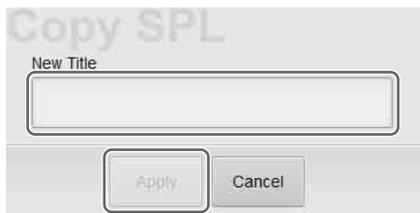

The SPL will be created.

### To delete an SPL

In the SPL list, select the SPL you want to delete, and then tap [Delete]. Once the confirmation message is displayed, tap [OK] to delete the SPL.

### Procedures for importing/exporting SPL

You can import and use an SPL that was created on another projection system, and export schedules created on the current projection system.

#### Note

SPL import and export can only be performed from a computer.

### Exporting an SPL

Select the SPL and click [Export]. When the download screen of the browser appears, save the file. Normally, the file is saved to the downloads folder. After downloading is complete, we recommend renaming the file to a name that is easy to remember.

### Importing an SPL

Click [Import]. When the upload screen of the browser appears, select the SPL file and click [Open].

#### Note

When you click [Import], a dialog will be displayed.


- To assign a new UUID when importing an SPL, select “New SPL UUID”.
- To use the same UUID as when exporting, select “Old SPL UUID”.
- When importing an SPL that contains a Sub SPL, select “Old SPL UUID” and import the Sub SPL first.

### Setting an Intermission in the SPL

You can set an intermission anywhere in the CPL registered to the SPL.


To set an intermission, insert the intermission at the desired position while playing back the CPL.

- 1 In the SPL list, select the SPL you want to add an intermission to, and then tap [Edit]. The SPL setting screen will be displayed.
- 2 Tap [Intermission Setup].

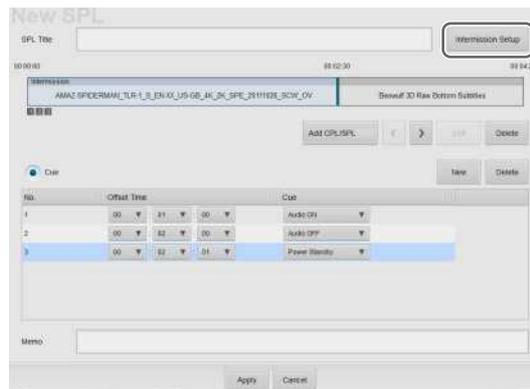

The intermission setting screen will be displayed.

### 3 Set the intermission.

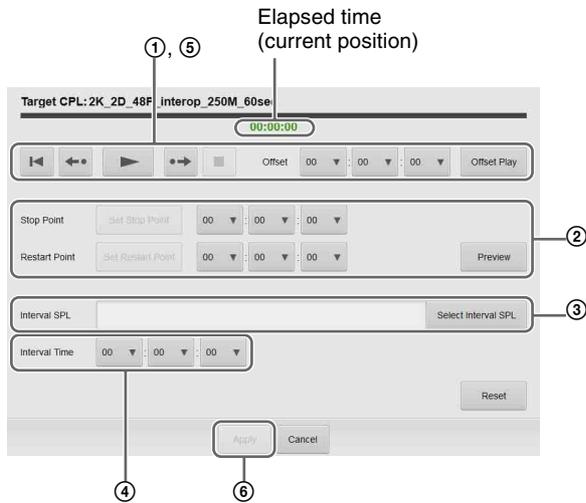

- ① Set the position where you want to insert the intermission.  
Using the operation buttons, play back the CPL and tap [Set Stop Point] at the position you want to add the intermission. Similarly, tap [Set Restart Point] where you want to restart playback. The set time will be entered in ② [Stop Point] and [Restart Point].

*For an explanation of how to use the control buttons, see “Playing Back CPL” (page 27).*

- ② Adjust the time as required.
- ③ Tap [Select Interval SPL] and select the SPL to play during the interval period (Interval SPL).
- ④ Specify the interval period.
- ⑤ Using the control buttons, play back the CPL to confirm intermission operation.
- ⑥ Tap [Apply].

The intermission will be set.

#### Note


Only one intermission can be set per SPL.

## Triggering SPL Playback Using GPI Signals

You can use a GPI signal as a trigger to start playing back an SPL.

- 1 Tap [GPI Triggered] in the [SPL] tab.  
The “GPI Triggered” screen will be displayed.

### 2 Select the GPI signal, and then tap [Edit].

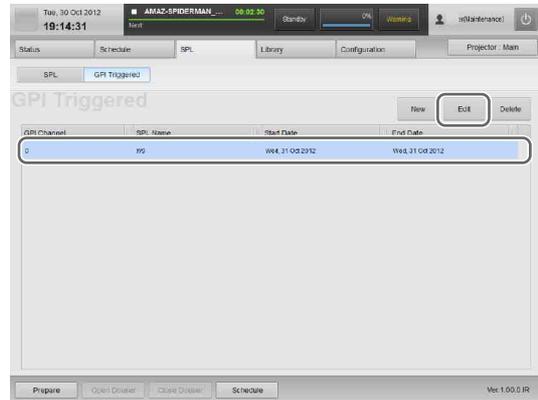

The “Edit GPI-triggered SPL” screen will be displayed.

### 3 Specify the duration for which playback is enabled.



- ① Select the SPL for which to start playback.
- ② Determine the duration for which the playback will be enabled, and change the start and end dates.
- ③ Tap [Apply].

#### Note

Tap [Details] to display detailed information on the selected SPL.

# Playing Back an SPL

Play back a created SPL.  
This section describes steps for manual playback of SPLs.

For instructions on how to create a screening schedule, see “Creating a Schedule” (page 32).

## Selecting an SPL

### Notes

- When in Schedule Playback mode, tap [Scheduled] or [Manual] (the display will change) to set to Manual mode, or select the [Play Manually] check box. [Play Manually] is convenient for temporary playback of tests while in Schedule Playback mode.
- When [Play Manually] is selected and the manual playback and scheduled playback overlap, the content played back last will take priority.

Select an SPL for playback in the [Status] tab’s “Auditorium” screen.  
Operations are the same as for selecting a CPL.

See “Selecting a CPL” (page 26).

## Playing Back an SPL

Using buttons in the “Auditorium” screen, SPLs can be played back, paused, or cued to a certain position.  
Operations are the same as for CPL playback.


See “Playing Back CPL” (page 27).

### Note

If you stop an SPL while it is in progress, the cues located after the stopped position will not be executed.

## To check the detailed information of an SPL

In the “Auditorium” screen, tap [SPL Detail] to check detailed information on the currently loaded SPL.

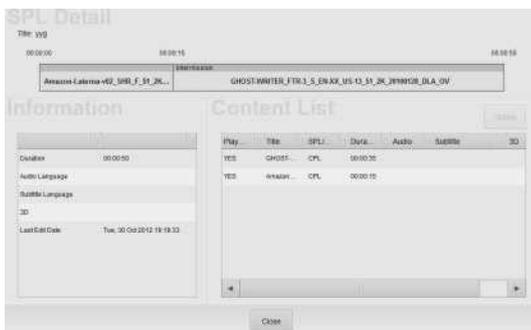

# Creating a Schedule


The schedule is a function that allows you to automatically play back an SPL at a set time.

### Note

For scheduled playback, it is necessary to tap [Scheduled] / [Manual] (the display will change) in the [Status] tab’s “Auditorium” screen and select [Scheduled].


## Creating a Schedule

- 1 Tap the [Schedule] tab.  
The “Schedule” screen will be displayed.
- 2 Tap [New].

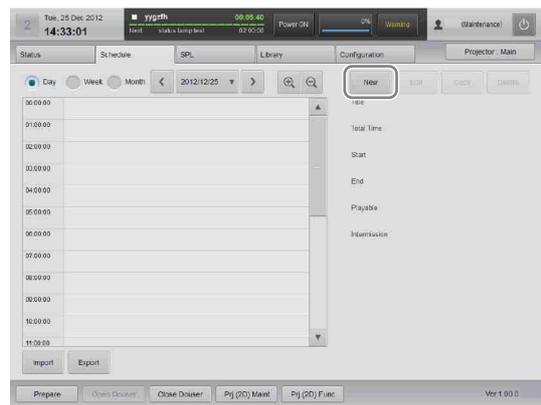

The schedule setting screen will be displayed.

- 3 Set the schedule.

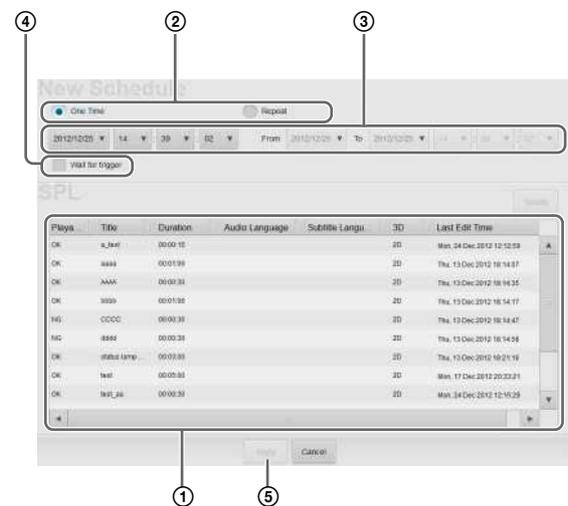


- 1 Select the SPL from the SPL list that you want to set to the schedule.  
To check detailed information on the SPL, select an SPL and tap [Details].

- ② Select whether the schedule is a one-time event, or repeating.  
To set a one-time event, select the [One Time] radio button, and to create a repeating schedule, select the [Repeat] radio button.
- ③ Set a date to execute the schedule.
  - When the [One Time] radio button has been chosen, set the date to execute the schedule.
  - When the [Repeat] radio button has been chosen, set the time period to execute the schedule.
- ④ Add a check mark to receive triggers (notifications) from other systems, to begin playback, and coordinate with other systems.

*For information on triggers, refer to the “Installation Manual.”*

- ⑤ Tap [Apply].

The schedule will be saved and reflected in the “Schedule” screen.

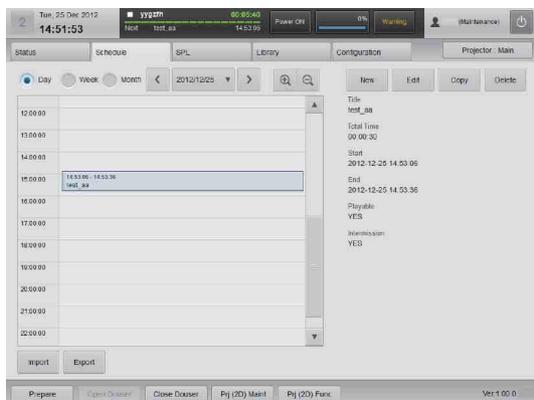

- 4 Repeat step 3 to set another schedule in a different time slot.  
As preparation for each CPL showing may take several seconds, the show durations for SPLs that include multiple CPLs may be longer than expected (As a guideline, “Number of CPLs × 6”). As a result, such shows may not finish before the scheduled start time of the next show, depending on the content. In such cases, the next show will not start.

#### Notes

- The same processing will be applied whether the [Week] or [Month] radio button is selected.
- Schedules can be moved via drag-and-drop, however, this option is not available when the [Month] radio button is selected.
- When using the unit with a connected computer, it is necessary to match the computer’s regional and time settings with the regional and time settings of

this unit. For details on settings, refer to your computer manual.

## To copy schedules

You can copy a set schedule to another time slot.

- 1 In the “Schedule” screen, select a source schedule to copy, and then tap [Copy].
- 2 Set the copy destination and then tap [Apply].

*For details on setting items, see step 3 in “Creating a Schedule” (page 32).*



The schedule will be copied.

## Importing/Exporting Schedules

You can import and use a schedule that was created on another projection system, and export schedules created on the current projection system.

#### Notes

- For schedule import and export, operations are only available from a computer.
- Import the necessary SPL before importing schedules.

## To import schedules

- 1 In the bottom left of the “Schedule” screen, click [Import].  
The file selection screen appears.
- 2 Select the schedule file to import, and click [OK].  
The schedule will be imported, and it will be displayed on the “Schedule” screen.

## To export schedules

- 1 In the bottom left of the “Schedule” screen, click [Export].  
The “Schedule Export” screen will be displayed.

- 2 Select a schedule period to export, and then click [Apply].



The schedule file is exported. Schedule files are normally stored in the downloads folder. After downloading is complete, we recommend renaming the file to a name that is easy to remember.

---

## Projecting Images Using an External Playback Device

Images can be projected on a screen from a playback device connected to the projector.

### Note

It is necessary to create an HDMI input function memory beforehand.

- 1 Connect the external playback device to the projector's HDMI IN 1/2 connector.
- 2 Call up the adjustment data for the external playback device registered to function memory.

*For details on how to call up the adjustment data, see "Calling up Screen Adjustment Data" (page 25).*

- 3 Project the images on an external playback device.

### Note

Audio signals included in HDMI cannot be output from the audio output connector of this unit.

# Manually Controlling Theater Facilities

Using touch panel monitor controls, you can control various theater facilities, such as opening and closing the curtain, and controlling the lights.

It is necessary to make some initial connections and adjust settings to control theater facilities.

*For further details, refer to the “Installation Manual.”*

## Note

You can also register theater facility controls to the SPL to automatically execute them.

*For further details, see “Creating an SPL” (page 28).*

- 1 In the [Status] tab, tap [Auditorium].  
The “Auditorium” screen will be displayed.
- 2 Tap [Automation] in the [Control] pane.



- 3 Tap the button for the control you want to execute.



The control will be executed.

- 4 Tap [Close] to close the screen.


## Note

Network commands can also be executed as automations.


## Opening/Closing the 3D Filter

Ordinarily, the 3D filters held in the 3D filter holders open and close on the left side of the projectors when viewed from the front. However, depending on the operating environment, they may be installed so that they open outward to the left and right. In such cases, the lock pin of the filter that opens to the right is located at the bottom of the holder.

### Standard installation

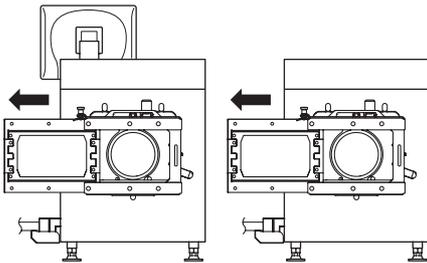


### Left/right opening installation

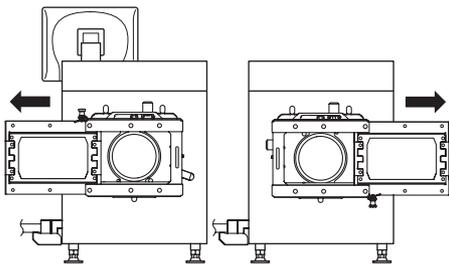

Illustrations of a standard installation are used for the explanations in the following sections.


### Opening the 3D Filter

Pull out the 3D filter in the direction of the arrow. Even if you pull the filter all the way out, it will not fall out of the holder due to the lock pin.

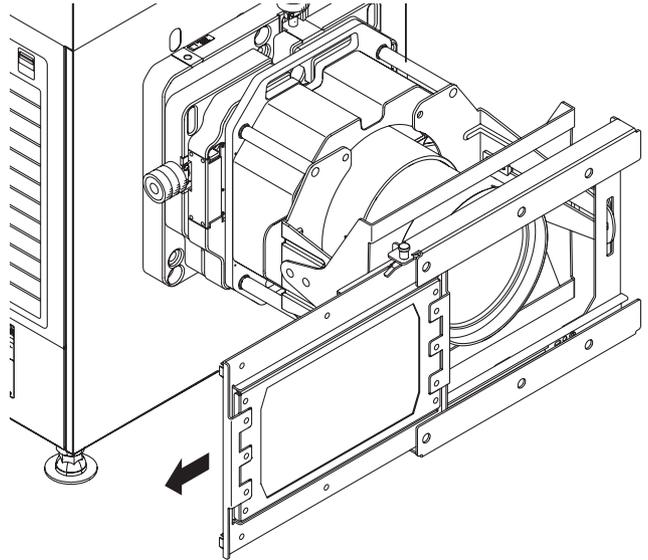

### Closing the 3D Filter

Pull the lock pin in direction A to release the lock, and slide the 3D filter back into place.

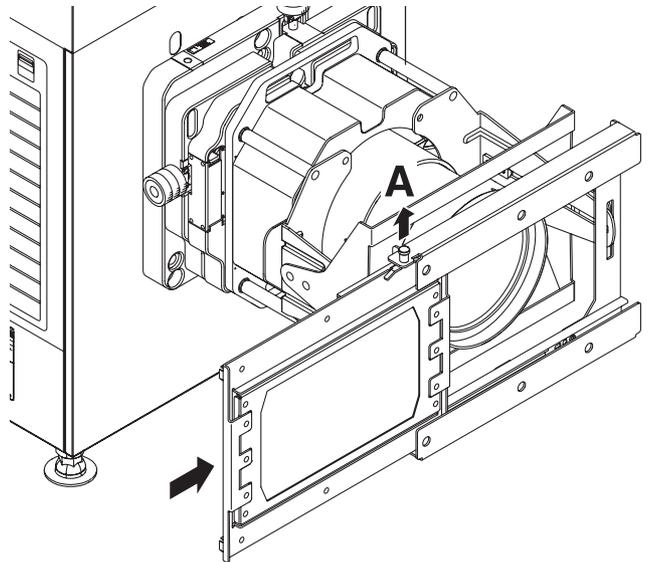

# Calibrating the Screen

The LKRA-PCAB1 (herein referred to as the “calibration camera”) can be used to automatically calibrate deviations that may occur in the convergence between the two projectors that comprise the dual system. You can perform calibration using the LCD panel and touch sensor via simple operations with each calibration operation taking about 5 minutes (when [STATIC] is selected for [OPTION] - [CALIBRATION MODE]).

## Periodic Calibration Using SPLs

You can create a calibration SPL and register it to a schedule to perform periodic calibration with the calibration camera. (Only for Ver.1.50 or later.)

### Caution

- When performing a calibration with the calibration camera, turn off all the lights in a theater.
- When the calibration camera is placed in a projection room, keep the projection room as dark as possible.
- Make sure that there are no obstructions between the calibration camera and screen.
- Run the projectors for 30 minutes or more before performing a calibration with the calibration camera.
- When performing a calibration with the calibration camera, do not operate the server from the touch panel monitor or browser.
- To make sure that there is no error on the projected image, verify the image visually after performing a calibration with the calibration camera.

Also, you can confirm the calibration by using content that includes characters or the internal test signal “Convergence Adjust.”

If you have any problems, manually perform a calibration again with the calibration SPL.


### Notes

- A calibration CPL must be ingested beforehand.
- For details on the CPLs to be used, contact qualified Sony service personnel.
- The content displayed on the calibration camera’s display during calibration using SPLs differs from that displayed during manual calibration. (only “REMOTE CTRL MODE” appears at the center of the display.)
- If the calibration camera’s power supply is cut during SPL execution, server operations may become unstable.

## 1 Create the calibration SPL.

- ① Perform steps 1 to 4 in “Creating an SPL” (page 28) to create a new SPL.

- ② Add the calibration CPL to the SPL. Select the [CPL] radio button, and select the calibration CPL from the list, and then tap [Insert].
- ③ Add the function switching cue to the SPL. Select the [Cue] radio button, and select the function switching cue for calibration from the list, and then tap [Insert].

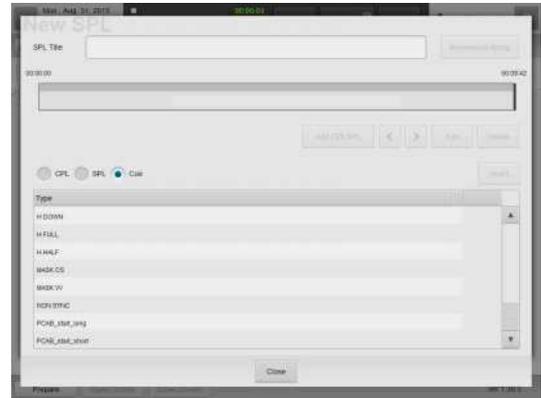


Set the offset to “00:00:30.”



- ④ Add the calibration execution cue to the SPL. Select the calibration start cue (PCAB\_start\_short) from the list, and then tap [Insert]. Set the offset to “00:01:00.”

- 2 Register the calibration SPL that you created to the schedule.  
Select the appropriate calibration frequency (daily, weekly, etc.).

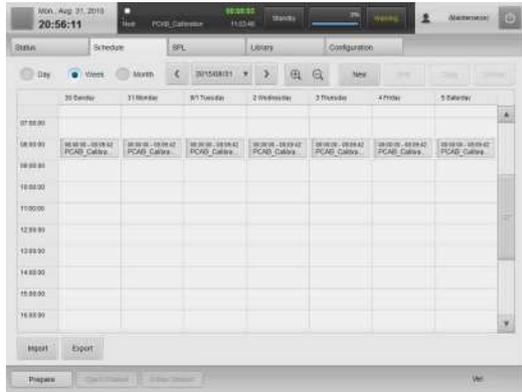

For details, see “Creating a Schedule” (page 32).

---

## Attaching and Removing the Lens

### Before changing the lens

The projection system must be shut down, and the projector switch must be set to off before changing the lens.

#### Caution

The projector uses a laser as a light source. If the lens is removed while the projector is lit, the projector is automatically turned off. You cannot turn on the projector with the lens removed.

Changing the lens while the power is on may damage the projector.



- 1 Shut down the projection system.
- 2 Move the projector power switch to the off position.

For detailed steps, see “Shutting Down the System” (page 19).

---

## Removing the Lens


- 1 Press the lock button all the way, and after the lock is released, press and hold the lock button and lift the lens fixing lever toward .

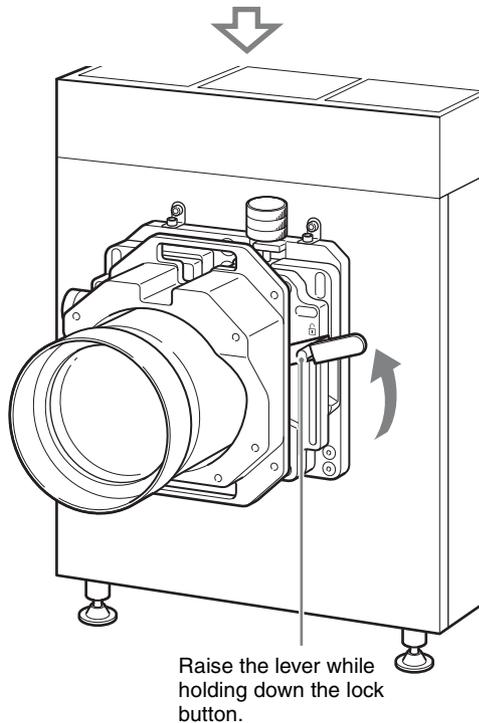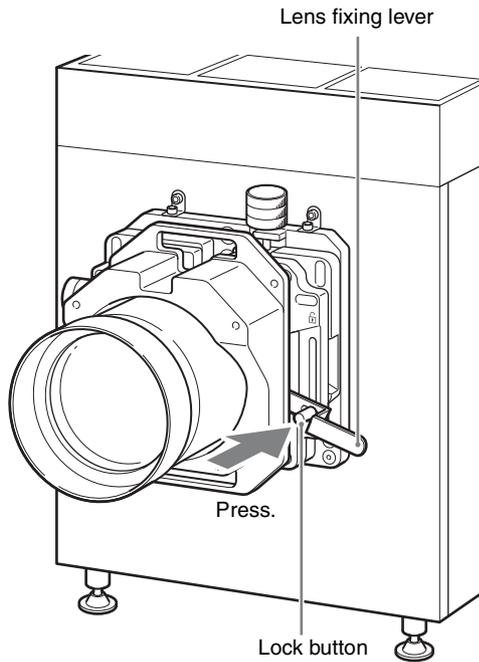

### Caution

If you lift the lever without pressing the lock button, the lock button and lever will be damaged. Be sure to press the lock button and make sure the lock is released before lifting the lever.


- 2 Remove the lens from the projector while firmly holding the lens not to drop it.

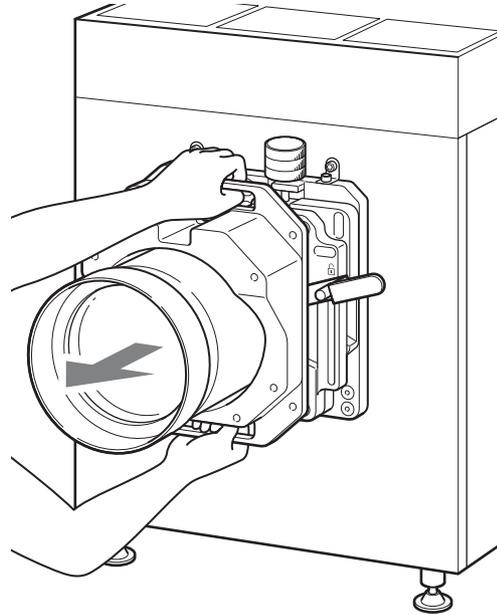



---

## Attaching the Lens

- 1 Confirm that the lens fixing lever is in the  position.

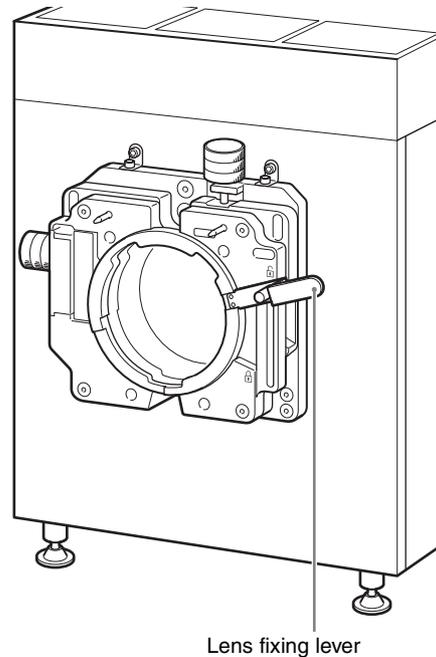


- 2** Attach the lens to the projector while firmly holding the lens not to drop it and aligning the position.

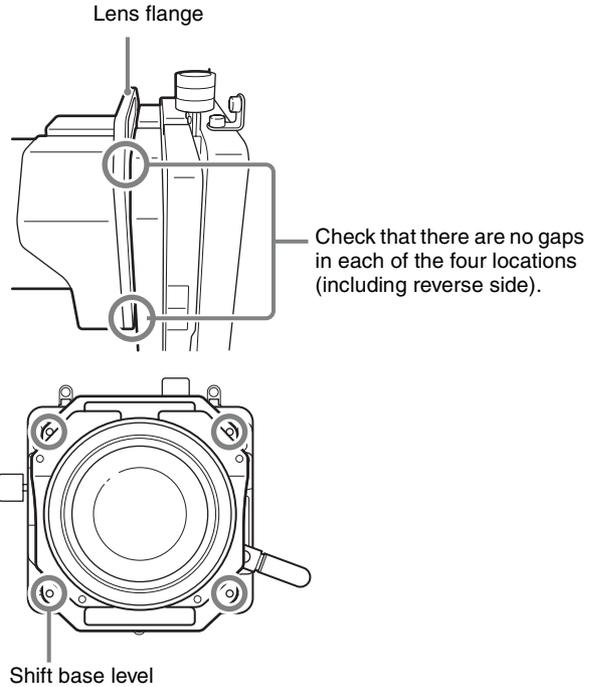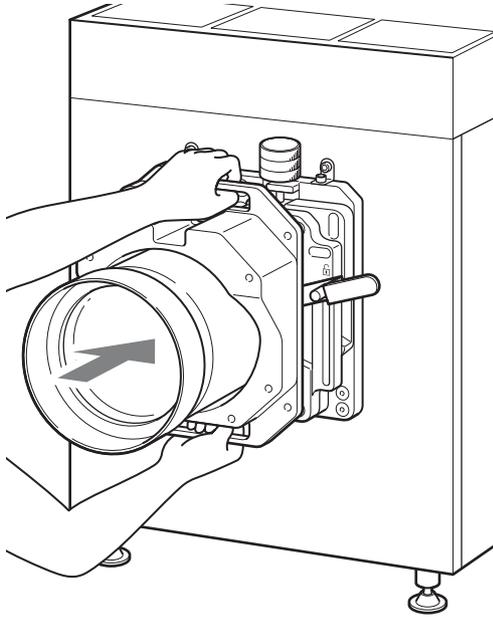

**Caution**

When attaching the lens to the projector, insert it straight.

- 3** While supporting the lens, lower the lens fixing lever while the lens flange and shift base level are contacting each other.

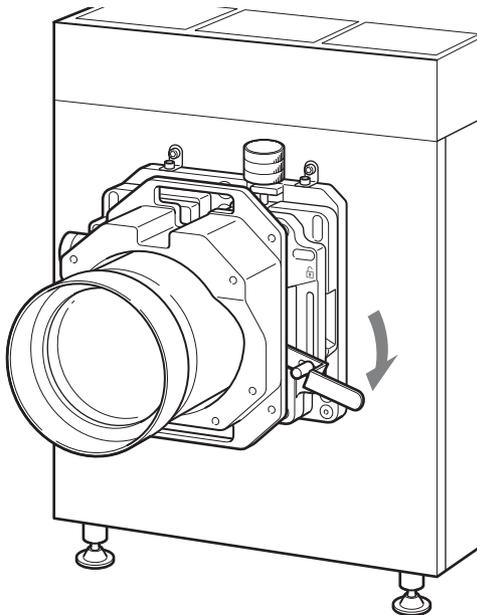


**Caution**

If locked while there is a gap between the lens flange and shift base level, the lens flange base will become warped. Be sure to attach the lens while supporting it. Make sure there are no gaps in the 4 locations on the shift base level.


# How to Read the Indicators

The following indicators show the status of the projector.


## Projector (rear)

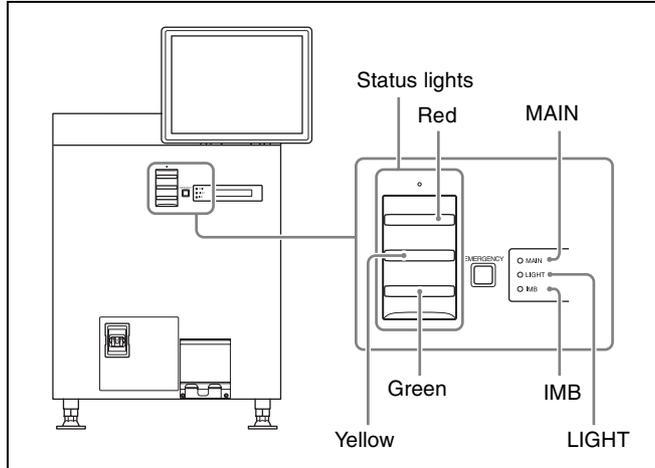

## Projector (IMB)

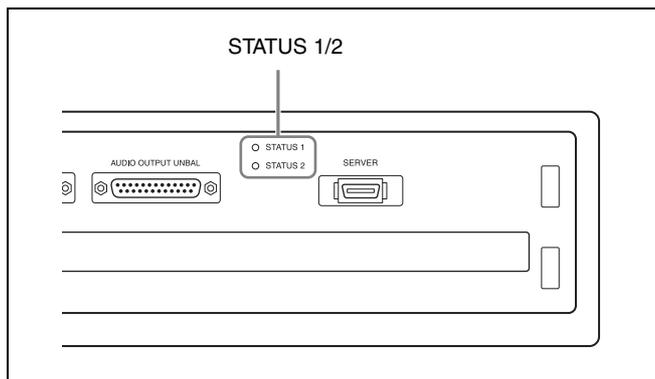

## Server (front)

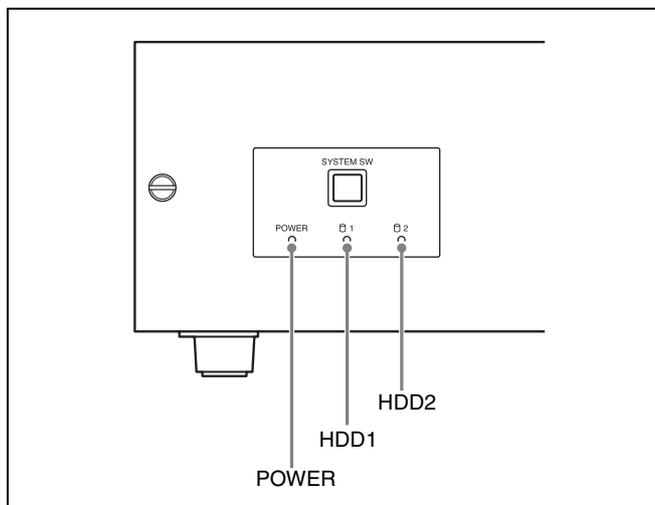

The relationship between the way the indicators light and the device's status is shown in the following table.

### Projector (rear) (status indicators)

| MAIN                   | LIGHT                  | Device status               |
|------------------------|------------------------|-----------------------------|
| Lit red                | Lit red                | Standby mode                |
| Lit green              | Blinking green (rapid) | Starting up                 |
| Lit green              | Lit green              | Power on (light source on)  |
| Lit green              | Blinking green (slow)  | Power on (light source off) |
| Blinking green (rapid) | Blinking green (rapid) | Shutting down or cooling    |

### Projector (rear) (status indicators)

| IMB                    | Device status  |
|------------------------|--|
| Lit red                | Standby mode   |
| Lit green              | Access from server or start-up complete  |
| Blinking green (rapid) | Shutting down  |
| Blinking red (rapid)   | Shutdown complete<br>After shutting down the server, it is necessary to turn the power switch on the rear of the projector off and on again. |

### Projector (rear) (status lights)

| Status light    | Device status   |
|-----------------|---|
| Lit green       | System stable and projector on, standby mode, or light source off                               |
| Blinking green  | System shutting down<br>System starting up<br>Ingesting<br>Playing<br>Projector status changing |
| Blinking yellow | Minor error   |
| Blinking red    | Severe error (hardware malfunction, show failure)   |
| Off             | Power off   |

### Projector (IMB section) (Status indicator)

| STATUS 1     | Device status  |
|--------------|--|
| Solid red    | Start-up   |
| Solid orange | Connecting to the server                                       |
| Solid green  | Connection to server complete                                  |
| STATUS 2     | Device status  |
| Solid red    | IMB section error<br>Contact qualified Sony service personnel. |
| Solid green  | Normal   |

**Caution**

If STATUS 1 indicator does not turn solid green even after a few minutes when connected to the server, contact qualified Sony service personnel.

**Server (front)**

| POWER                  | Device status              |
|------------------------|----------------------------|
| Lit red                | Standby mode               |
| Blinking green (rapid) | Starting up, shutting down |
| Lit green              | Startup complete           |

**Caution**

When the MAIN indicator is solid red and the IMB indicator is solid green, do not set the power switch on the rear of the projectors to off. After shutting down from the server, set the power switch on the rear of the projectors to off.

- HDD1 indicator:** Shows that the hard disk drive for the system is being accessed.
- HDD2 indicator:** This indicates the RAID access containing the DCP.

# Troubleshooting

Check this section before consulting qualified Sony service personnel. If the unit still does not function properly, consult qualified Sony service personnel.

**To check installation/connections**


In the “Status” window, check to make sure that the lens mount and server connection are properly married.

- 1 In the [Status] tab, tap [Auditorium] and check that the lens is correctly mounted.



A message about the lens mounting can be seen here.

- 2 Tap [Status] and confirm that the lamp for each item is lit up in solid green.

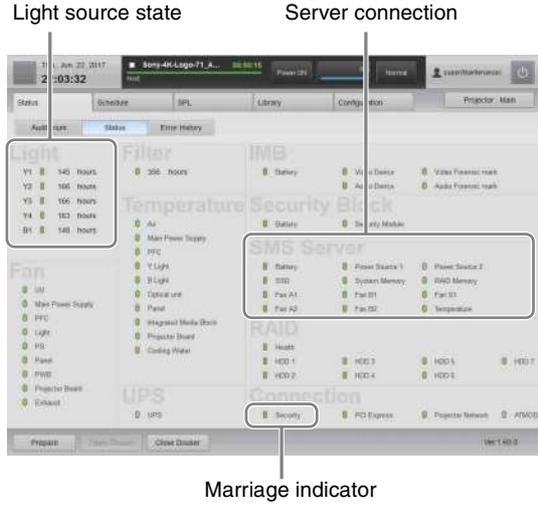


**Lamps**

- The statuses of the unit are indicated by colors.
- Green:** normal
- Yellow:** warning (title will continue to be shown)
- Red:** error (title will stop)

## Note

If the lamp is lit up in yellow or red, check the “Status – Auditorium” screen’s [Solution] message for a solution.

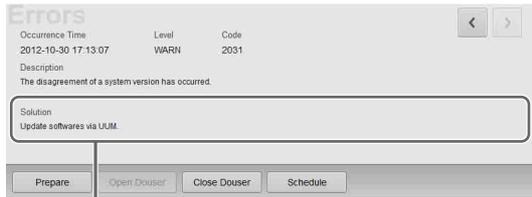

The solution will be displayed here. Follow the instructions to deal with the problem.

## The projector switched to standby during playback

When the projector switches to standby during playback due to events such as sudden power outages, use the touch panel monitor to shut down after screening is complete, and then restart the system.

If you cannot shut the unit down using the touch panel monitor, unplug the power cord connected to the rear of the server, reconnect the cord, and then start the system.

## The projector does not turn on

- Make sure that the chiller provides the proper amount of water flow (9 to 14 l/min) and water temperature. If water flow is slow, or water temperature is lower than 5°C (41°F), the projector does not turn on.
- If the lens is not attached, the projector does not turn on.

## There is something wrong with the screen/ the screen is too bright


Confirm that the correct screen adjustment data for the playback content has been called up.

For further details, “Calling up Screen Adjustment Data” (page 25).

## When operating the screen, a dialog box appears with a stopped process confirmation dialog

If this happens, tap [Continue] to continue the process. If you add a check mark to [Don’t ask me again] this dialog will no longer be displayed.

## Screenshot

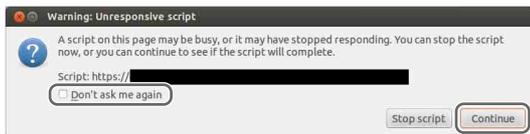

## Caution

If you tap [Stop script], processing will stop and normal operation may be hindered.

## Cannot shut down

Unplug the power cord connected to the rear of the server.

# Error Code List (LKRA-PCAB1)

| Error code | Category                      | Error message  | Possible cause   | Solution   |
|------------|-------------------------------|----------------|--|--|
| E01        | PIT:(Projector Communication) | NO CONNECTION  | • The calibration camera and projectors are not connected via the supplied connection cables.  | • Check the connections, and make sure the supplied connection cables are connected properly.  |
|            |                               |                | • The connection cables are damaged.   | • Use new connection cables. For details on replacement, contact your local Sony representative.   |
|            |                               |                | • The power switch at the rear of the projector is set to off (O).   | • Turn on the projector's main power by setting the switch to on (I).  |
| E02        |                               | NO COMM        | • The calibration camera's CTRL2 connector and the main projector's RS-232C connector are not connected via the supplied connection cable. | • Check the connections, and make sure the supplied connection cables are connected properly.  |
|            |                               |                | • The calibration camera's CTRL2 connector is connected to a device other than the main projector.   |  |
|            |                               |                | • The connection cables are damaged.   | • Use new connection cables. For details on replacement, contact your local Sony representative.   |
|            |                               |                | • The SDCP protocol's "Community" is set to a setting other than "SONY."   | • Check the "Community" setting.   |
| E03        |                               | UNCONTROLLABLE | • The projector is not running.  | • Verify that the MAIN indicators and LIGHT indicators are lit green.  |
| E06        | CAM:(Camera Communication)    | NO COMM        | • The calibration camera's connection cable is disconnected.   | • Check the connection, and make sure the cable is connected properly.   |
|            |                               |                | • The calibration camera is malfunctioning.  | • Contact your local Sony representative.  |
| E43        | ADJ:(Adjustment)              | NO SCREEN      | • The screen is not within the shooting range of the calibration camera.   | • Adjust the position of the calibration camera so that the screen is within range.<br>• Lower the ambient light.  |
| E53        |                               | NO WINDOW      | • The test pattern is not detected near the center of the calibration camera's frame.  | • Adjust the position of the calibration camera so that the cross cursor displayed in the LCD panel appears on the test pattern.   |
| E54        |                               | XPT DETECTION  | • The calibration points on the screen are not detected.   | • Lower the ambient light.<br>• Play back an adjustment CPL with the same screen aspect ratio as the [OPTION] - [PIT THROW RATIO] setting.<br>• Adjust the position and zoom of the calibration camera so that the four sides of the test pattern displayed in the LCD panel appear as vertically and horizontally straight as possible.<br>• Adjust the position of the calibration camera so that reflected light from the port glass does not enter the camera. |

| <b>Error code</b> | <b>Category</b>   | <b>Error message</b> | <b>Possible cause</b>  | <b>Solution</b>  |
|-------------------|-------------------|----------------------|--|--|
| E55               |                   | OUT OF SCREEN        | <ul style="list-style-type: none"> <li>The calibration camera's position has shifted after its position and zoom were adjusted.</li> </ul>                           | <ul style="list-style-type: none"> <li>Return to the main menu, and perform calibration again.</li> </ul>  |
| E56               |                   | RE-FOCUS             | <ul style="list-style-type: none"> <li>The calibration points on the screen are not detected, even after the focus is fine-tuned.</li> </ul>                         |  |
| E61               | CAL:(Calibration) | CENTER OVER          | <ul style="list-style-type: none"> <li>The center positions of the two projectors are outside the scope of electronic calibration.</li> </ul>                        | <ul style="list-style-type: none"> <li>Reset the distortion correction values. (Refer to the digital cinema dual system's Installation Manual.)</li> <li>Return to the main menu, and perform calibration again so that the centers of the two projectors are as close to each other as possible.</li> </ul> |
| E62               |                   | UNKNOWN SIGNAL       | <ul style="list-style-type: none"> <li>The image used for adjustment is not detected.</li> </ul>   | <ul style="list-style-type: none"> <li>Verify that the adjustment CPL is being played back.</li> </ul>   |
| E63               |                   | NO CENTER POINT      | <ul style="list-style-type: none"> <li>An error had occurred with the image used for adjustment.</li> <li>The calibration camera cannot detect the image.</li> </ul> | <ul style="list-style-type: none"> <li>Return to the main menu, and perform calibration again.</li> </ul>  |
| E64               |                   | CAMERA SHAKE         | <ul style="list-style-type: none"> <li>The calibration camera shifted during calibration.</li> </ul>   |  |
| E65               |                   | OUT OF RANGE         | <ul style="list-style-type: none"> <li>An abnormal test pattern is displayed.</li> <li>The projectors cannot be controlled.</li> </ul>                               | <ul style="list-style-type: none"> <li>Check the installation environment of the calibration camera. (Refer to the digital cinema dual system's Installation Manual.)</li> <li>Return to the main menu, and perform calibration again.</li> </ul>  |

# Specifications

## SRX-R815 Digital Cinema Projector\*

\* The dual system consists of two of these projectors.

### Optical system

|                    |  |
|--------------------|--|
| Projection method  | 1.48 inch, 4K, SXRD (3)                      |
| Resolution (H x V) | 4096 × 2160 pixels                           |
| Light source       | Yellow laser: 4 units<br>Blue laser: 2 units |
| Contrast           | 10,000:1 (typical)                           |
| Light output       | 15,000 lumens (median) (DCI color)           |

### Input/output

|              |  |
|--------------|--|
| Video input  | HDMI (2)*  |
| Audio output | Unbalance, 8 channels, 24 bit, 48/96 kHz,<br>linear PCM, D-sub 25 pin (female) (1)<br>AES/EBU, 16 channels, 24 bit,<br>48/96 kHz, linear PCM, D-sub 25 pin<br>(female) (1) |

\* Audio signals included in HDMI cannot be output from the audio output connector of this unit.

### Playback format

|           |   |
|-----------|---|
| JPEG 2000 | 4K 2D: 24p<br>2K 2D: 24p/25p*/29.97p*/30p*/48p/60p<br>2K 3D: 24p/29.97p*/30p*/48p/60p |
| MPEG-2**  | MP@HL, YUV420/422 8 bit, 80 Mbps<br>(max.) bitrate, 1920 × 1080,<br>23.98p/24p/25p    |

\* Digital watermarking (Watermarking) is not supported.

\*\* Digital watermarking (Watermarking) and playback of subtitle files are not supported.

### General

|                                   |   |
|-----------------------------------|---|
| Power                             | 200 V - 240 V AC, 50/60 Hz, single<br>phase, 19.3 A - 16 A  |
| External dimensions               | 544 × 827 × 1,239 mm<br>(21 <sup>13</sup> / <sub>32</sub> × 32 <sup>9</sup> / <sub>16</sub> × 48 <sup>25</sup> / <sub>32</sub> inches)<br>(W/H/D) (Including lens shift block<br>and feet. Excluding touch panel<br>monitor and projection parts (Status<br>lights, ducts, etc.)) |
| Weight                            | Approx. 230 kg (507 lb.) (Excluding<br>touch panel monitor)   |
| Operation guarantee temperature   | 5°C to 35°C (41°F to 95°F)  |
| Performance guarantee temperature | 10°C to 30°C (50°F to 86°F)   |

### Caution

When using the unit in temperatures between 30°C and 35°C (86°F and 95°F), consult qualified Sony service personnel.

|                      |                                   |
|----------------------|-----------------------------------|
| Operating humidity   | 35% to 75% (without condensation) |
| Storage temperatures | -20°C to +60°C (-4°F to +140°F)   |
| Storage humidity     | 10% to 90%                        |

### Supplied accessories

- Key for removing housing
- Safety Regulations (1)
- TPC adapter (1 set)
- Cable clammer (2)
- Conduit supports (2)\*

\* Conduit supports are supplied for SRX-R815/SRX-R810 only. They are not supplied for SRX-R815P/SRX-R810P.

## SRX-R810 Digital Cinema Projector\*

\* The dual system consists of two of these projectors.

### Optical system

|                    |  |
|--------------------|--|
| Projection method  | 1.48 inch, 4K, SXRD (3)                        |
| Resolution (H x V) | 4096 × 2160 pixels                             |
| Light source       | 455 nm laser: 2 units<br>465 nm laser: 2 units |
| Contrast           | 10,000:1 (typical)                             |
| Light output       | 7,500 lumens (median) (DCI color)              |

### Input/output

|              |  |
|--------------|--|
| Video input  | HDMI (2)*  |
| Audio output | Unbalance, 8 channels, 24 bit, 48/96 kHz,<br>linear PCM, D-sub 25 pin (female) (1)<br>AES/EBU, 16 channels, 24 bit,<br>48/96 kHz, linear PCM, D-sub 25 pin<br>(female) (1) |

\* Audio signals included in HDMI cannot be output from the audio output connector of this unit.

### Playback format

|           |   |
|-----------|---|
| JPEG 2000 | 4K 2D: 24p<br>2K 2D: 24p/25p*/29.97p*/30p*/48p/60p<br>2K 3D: 24p/29.97p*/30p*/48p/60p |
| MPEG-2**  | MP@HL, YUV420/422 8 bit, 80 Mbps<br>(max.) bitrate, 1920 × 1080,<br>23.98p/24p/25p    |

\* Digital watermarking (Watermarking) is not supported.

\*\* Digital watermarking (Watermarking) and playback of subtitle files are not supported.

## General

|                                   |  |
|-----------------------------------|--|
| Power                             | 200 V - 240 V AC, 50/60 Hz, single phase, 8.8 A - 10.5 A   |
| External dimensions               | 544 × 827 × 1,239 mm<br>(21 <sup>13</sup> / <sub>32</sub> × 32 <sup>9</sup> / <sub>16</sub> × 48 <sup>25</sup> / <sub>32</sub> inches)<br>(W/H/D) (Including lens shift block and feet. Excluding touch panel monitor and projection parts (Status lights, ducts, etc.)) |
| Weight                            | Approx. 205 kg (452 lb.) (Excluding touch panel monitor)   |
| Operation guarantee temperature   | 5°C to 35°C (41°F to 95°F)   |
| Performance guarantee temperature | 10°C to 30°C (50°F to 86°F)  |

### Caution

When using the unit in temperatures between 30°C and 35°C (86°F and 95°F), consult qualified Sony service personnel.

|                      |                                   |
|----------------------|-----------------------------------|
| Operating humidity   | 35% to 75% (without condensation) |
| Storage temperatures | -20°C to +60°C (-4°F to +140°F)   |
| Storage humidity     | 10% to 90%                        |

### Supplied accessories

- Key for removing housing
- Safety Regulations (1)
- TPC adapter (1 set)
- Cable clammer (2)
- Conduit supports (2) \*

\* Conduit supports are supplied for SRX-R815/SRX-R810 only. They are not supplied for SRX-R815P/SRX-R810P.

---

## XCT-S10 Digital Cinema Server

### Input/output

|                |   |
|----------------|---|
| Ingest         | USB 3.0 (2)<br>CRU DATAPORT (open slot) (1)   |
| System control | GPI (8)<br>GPO (16)<br>D-sub 9 pin, female, for audio processor control (1)<br>USB 2.0, for UPS control (1) |
| Network        | Gigabit Ethernet (2)  |

### Storage

|     |   |
|-----|---|
| HDD | 4 TB (Expandable to 8 TB),<br>Modified RAID 6 |
|-----|---|

## General

|                        |  |
|------------------------|--|
| Power                  | 100 V - 240 V AC, 50/60 Hz, single phase, 2.2 A - 1.0 A  |
| External dimensions    | 482 × 131 × 560 mm<br>(19 × 5 <sup>1</sup> / <sub>4</sub> × 22 <sup>1</sup> / <sub>8</sub> inches) (W/H/D) |
| Weight                 | Approx. 19 kg (41 lb. 14 oz.)  |
| Operating temperatures | 5°C to 35°C (41°F to 95°F)   |
| Operating humidity     | 35% to 85% (without condensation)  |
| Storage temperatures   | -20°C to +60°C (-4°F to +140°F)  |
| Storage humidity       | 10% to 90%   |

### Supplied accessories

- Feet (1 set)
- PCI express cable (2 m) (1)
- Ethernet cable (2 m) (1)

---

## LKRA-007 Touch Panel Monitor

### Optical system

|                    |                         |
|--------------------|-------------------------|
| Screen size        | 15 inch                 |
| Resolution (H × V) | 1024 × 768 pixels (XGA) |

### General

|                        |   |
|------------------------|---|
| Power                  | Touch panel monitor: 12 V DC, 1 A<br>AC adapter: 100 - 240 V AC, 50/60 Hz   |
| External dimensions    | 350 × 310 × 57 mm<br>(13 <sup>7</sup> / <sub>8</sub> × 12 <sup>1</sup> / <sub>4</sub> × 2 <sup>1</sup> / <sub>4</sub> inches) (W/H/D) |
| Weight                 | Approx. 3.6 kg (7 lb. 15 oz.)   |
| Operating temperatures | 5°C to 35°C (41°F to 95°F)  |
| Operating humidity     | 35% to 85% (without condensation)   |
| Storage temperatures   | -20°C to +60°C (-4°F to +140°F)   |
| Storage humidity       | 10% to 90%  |

### Supplied accessories

- AC adapter (1)
- VGA cable (1)
- USB cable (1)

---

## LKRA-010 Dual System Accessory Kit

|            |  |
|------------|--|
| Components | DIF-243 boards (2)<br>Shield plates (2) (for main projector and sub projector) |
|------------|--|

|                      |  |
|----------------------|--|
|                      | Conduit (1)  |
|                      | Conduit supports (2)   |
|                      | Tamper harnesses (3)   |
|                      | Conduit mounting screws (4)  |
|                      | Conduit support mounting screws (4)                                    |
| Mass                 | Approx. 10 kg (Approx. 22 lb. 8.0 oz.)<br>(total weight of components) |
| Conduit length       | 4.7 m (5 yd. 5 1/8 in.) (excluding conduit box)                        |
| Supplied accessories | Before Using This Unit (1)   |

---

## LKRA-011 3D filter and holder

|                      |  |
|----------------------|--|
| Dimensions           | Approx. 390 × 325 × 346 to 504 mm<br>(Approx. 15 3/8 × 12 7/8 × 13 5/8 to<br>19 7/8 in.) (width/height/thickness)<br>(including protrusions)<br>Thickness direction changes by adjusting<br>at installation. |
| Mass                 | Approx. 10.5 kg (Approx. 23 lb. 2.4 oz.)<br>(including LKRA-006 equivalent 3D<br>filter)   |
| Supplied accessories | Filter bracket attaching screws M8 (8)<br>Hexagonal spacers (8)<br>Washers (8)<br>Spring washers (8)<br>Filter attaching screws M4 (8)<br>Before Using This Unit (1)   |

---

## LKRA-PCAB1 Projector Auto Calibration Box

|                       |   |
|-----------------------|---|
| Power requirement     | DC 12 V, 600 mA   |
| Power consumption     | 7.5 W (max)   |
| Dimensions            | 105 × 124 × 163 mm (4 1/4 × 5 × 6 1/2 in.)<br>(height/width/depth)    |
| Mass                  | Approx. 1.3 kg (Approx. 2 lb. 14 oz.)                                 |
| Operating temperature | 5°C to 35°C (41°F to 95°F)  |
| Operating humidity    | 35% to 80% (without condensation)                                     |
| Storage temperature   | -20°C to +60°C (-4°F to +140°F)                                       |
| Storage humidity      | 20% to 90%  |
| Supplied accessories  | AC adapter (1)<br>Connection cables (2)<br>Before Using This Unit (1) |

Design and specifications are subject to change without notice.

### Notes

- Always make a test recording, and verify that it was recorded successfully.  
SONY WILL NOT BE LIABLE FOR DAMAGES OF ANY KIND INCLUDING, BUT NOT LIMITED TO, COMPENSATION OR REIMBURSEMENT ON ACCOUNT OF FAILURE OF THIS UNIT OR ITS RECORDING MEDIA, EXTERNAL STORAGE SYSTEMS OR ANY OTHER MEDIA OR STORAGE SYSTEMS TO RECORD CONTENT OF ANY TYPE.
- Always verify that the unit is operating properly before use. SONY WILL NOT BE LIABLE FOR DAMAGES OF ANY KIND INCLUDING, BUT NOT LIMITED TO, COMPENSATION OR REIMBURSEMENT ON ACCOUNT OF THE LOSS OF PRESENT OR PROSPECTIVE PROFITS DUE TO FAILURE OF THIS UNIT, EITHER DURING THE WARRANTY PERIOD OR AFTER EXPIRATION OF THE WARRANTY, OR FOR ANY OTHER REASON WHATSOEVER.
- SONY WILL NOT BE LIABLE FOR CLAIMS OF ANY KIND MADE BY USERS OF THIS UNIT OR MADE BY THIRD PARTIES.
- SONY WILL NOT BE LIABLE FOR THE LOSS, REPAIR, OR REPRODUCTION OF ANY DATA RECORDED ON THE INTERNAL STORAGE SYSTEM, RECORDING MEDIA, EXTERNAL STORAGE SYSTEMS OR ANY OTHER MEDIA OR STORAGE SYSTEMS.
- SONY WILL NOT BE LIABLE FOR THE TERMINATION OR DISCONTINUATION OF ANY SERVICES RELATED TO THIS UNIT THAT MAY RESULT DUE TO CIRCUMSTANCES OF ANY KIND.
- The following malfunction or failure cannot be qualified as being warrantable:
  - Malfunction or failure caused by using water other than distilled water or specified antifreeze solution (tap water is unacceptable.)
  - Failure or damage caused by freezing

## HDMI signals

The unit can handle up to the following HDMI signals.

### 2D

| Resolution          | Frame Rate |
|---------------------|------------|
| 720 × 480           | 59.94p/60p |
| 720 × 480           | 59.94i/60i |
| 720 × 576           | 50p        |
| 720 × 576           | 50i        |
| 1280 × 720          | 59.94p/60p |
| 1280 × 720          | 50p        |
| 1920 × 1080         | 59.94p/60p |
| 1920 × 1080         | 50p        |
| 1920 × 1080         | 23.98p/24p |
| 1920 × 1080         | 59.94i/60i |
| 1920 × 1080         | 50i        |
| VGA (640 × 480)     | 60         |
| XGA (1024 × 768)    | 60         |
| UXGA (1600 × 1200)  | 60         |
| WUXGA (1920 × 1200) | 60         |
| 2048 × 1080*        | 23.98/24   |
| 2048 × 1080*        | 60         |

\* Sony's original specification.

### 3D

| 3D Format                   | Resolution  | Frame rate |
|-----------------------------|-------------|------------|
| Frame Packing (progressive) | 1280 × 720  | 59.94p/60p |
| Frame Packing (progressive) | 1280 × 720  | 50p        |
| Frame Packing (progressive) | 1920 × 1080 | 23.98p/24p |
| Top & Bottom                | 1920 × 1080 | 59.94p/60p |
| Top & Bottom                | 1920 × 1080 | 50p        |
| Top & Bottom                | 1920 × 1080 | 23.98p/24p |
| Top & Bottom                | 1280 × 720  | 59.94p/60p |
| Top & Bottom                | 1280 × 720  | 50p        |
| Side by Side                | 1280 × 720  | 59.94p/60p |
| Side by Side                | 1280 × 720  | 50p        |
| Side by Side                | 1920 × 1080 | 59.94p/60p |
| Side by Side                | 1920 × 1080 | 50p        |
| Side by Side                | 1920 × 1080 | 59.94i/60i |
| Side by Side                | 1920 × 1080 | 50i        |

