



Optional Table Top Stand

Mounting Information

- For SHARP dealers and service engineers -

- Per concessionari e tecnici dell'assistenza SHARP -

MultiSync[®]

MODEL: PN-ME982/PN-ME862/PN-ME752/PN-ME652/PN-ME552/PN-ME502/PN-ME432


About Optional Table Top Stand

For installation, follow the instructions included with the stand. Use only those devices recommended by the manufacturer.


- NOTE:**
- PN-ME982, PN-ME862, and PN-ME752 use ST-801. PN-ME652 use ST-65M. PN-ME552, PN-ME502, and PN-ME432 use ST-43M.
 - For the ST-801, ONLY use screws which are included with the optional table top stand. Install the stand so that the arrow points forward.
 - For the ST-65M, ONLY use thumbscrews and attach the stand holders which are included with the optional table top stand. Install the stand so the long end of the feet face forward.
 - For the ST-43M, ONLY use screws which are included with the optional table top stand.
 - The monitor can only be used in the landscape orientation with the tabletop stand.

MultiSync model name	Optional table top stand
PN-ME982 PN-ME862 PN-ME752	ST-801 (screws and clamp are included)
PN-ME652	ST-65M (thumbscrews, screws, clamps, and stand holders are included)
PN-ME552 PN-ME502 PN-ME432	ST-43M (screws are included)


PN-ME982/PN-ME862/PN-ME752

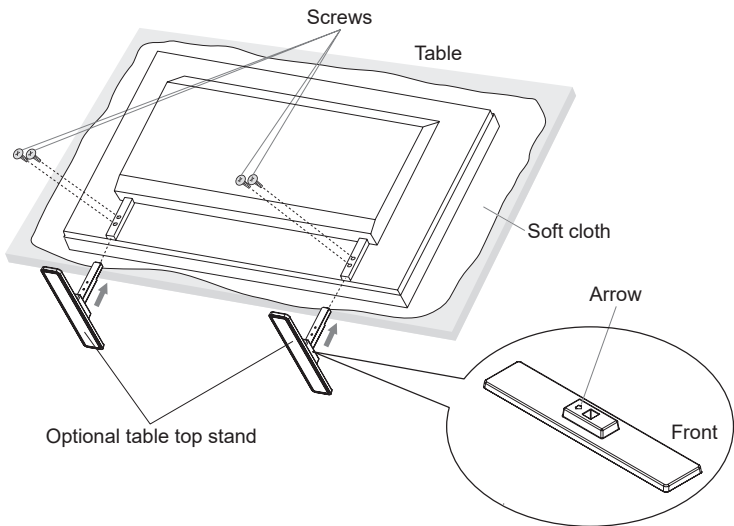

PN-ME652

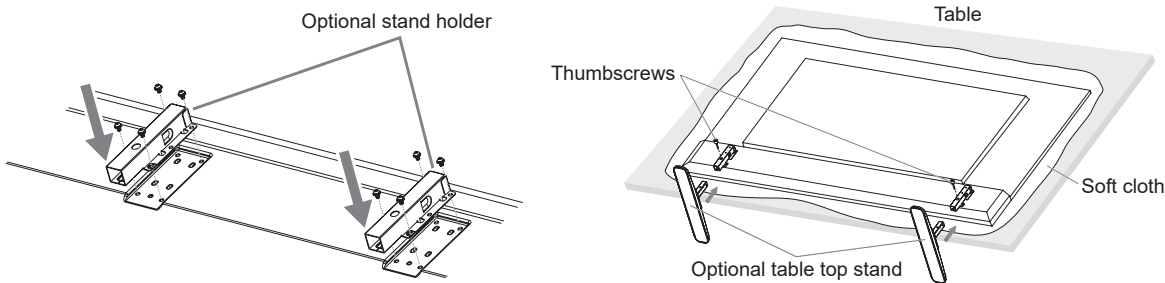

PN-ME552/PN-ME502/PN-ME432

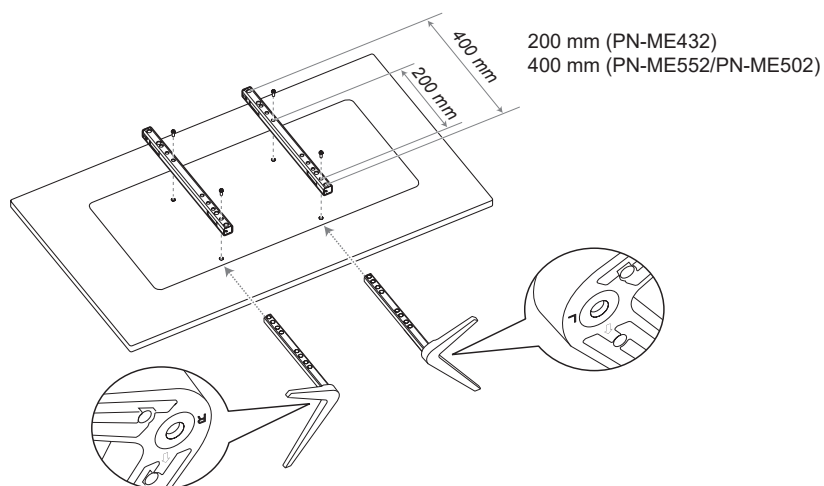

Height adjustment (PN-ME552)

1. The lines on the stand pole are indicators of the height adjustment (Figure 1). Please adjust the pipe to the lines.

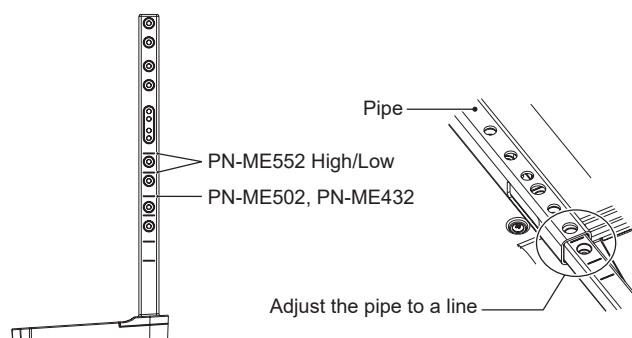


Figure 1

2. Please install the stand pole and the pipe with included screws. Please screw the two screw holes at the pipe (Figure 2).

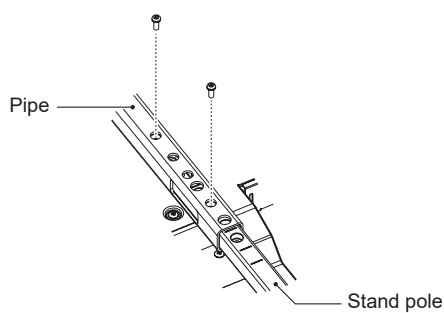


Figure 2

