

# Video Projector

## Operating Instructions

Before operating the unit, please read this manual and supplied Quick Reference Manual thoroughly and retain them for future reference.

VPL-HW65 **ES**

**SXRD** **HDMI**  
Silicon X-tal Reflective Display

---

# Table of Contents

---

## **Location of Controls**

|                        |   |
|------------------------|---|
| Front/Right Side ..... | 4 |
| Rear/Bottom .....      | 5 |
| Remote Control .....   | 6 |

---

## **Connections and Preparations**

|  |    |
|--|----|
| Installing the Unit .....                            | 7  |
| Adjusting the Picture Position .....                 | 8  |
| Connecting to Video Equipment or a<br>Computer ..... | 12 |

---

## **Projecting**

|   |    |
|---|----|
| Projecting the Picture .....                                      | 14 |
| Turning Off the Power .....                                       | 14 |
| Watching 3D Video Images .....                                    | 15 |
| Using the 3D Glasses .....  | 15 |
| Selecting the Aspect Ratio According to<br>the Video Signal ..... | 17 |
| Selecting the Picture Viewing<br>Mode .....                       | 19 |

---

## **Using the Menus**

|                                   |    |
|-----------------------------------|----|
| Operation through the Menus ..... | 20 |
| Picture Menu .....                | 22 |
| Screen Menu .....                 | 27 |
| Setup Menu .....                  | 29 |
| Function Menu .....               | 30 |
| Items Locked by Settings          |    |
| Lock .....                        | 32 |
| Installation Menu .....           | 33 |
| Information Menu .....            | 36 |
| About the Preset Memory .....     | 36 |

---

## **Using Network Features**

|                                      |  |
|--------------------------------------|--|
| Displaying the Control Window of the |  |
|--------------------------------------|--|

|  |    |
|--|----|
| Unit with a Web Browser .....                          | 37 |
| Operating the Control Window .....                     | 38 |
| Switching the Page .....                               | 38 |
| Setting the Access Limitation .....                    | 38 |
| Confirming the Information<br>Regarding the Unit ..... | 39 |

---

## **Error Handling**

|                          |    |
|--------------------------|----|
| Troubleshooting .....    | 40 |
| Warning Indicators ..... | 43 |
| Message Lists .....      | 44 |

---

## **Others**


|   |    |
|---|----|
| Updating the Software .....   | 45 |
| About the x.v.Color .....   | 45 |
| About the simulated 3D feature .....  | 45 |
| Replacing the Lamp and the Air Filter<br>and Cleaning the Ventilation Holes<br>(intake) ..... | 46 |
| Cleaning the Air Filter .....   | 49 |
| Fitting the Lens Cap .....  | 50 |
| Cleaning .....  | 50 |
| Specifications .....  | 51 |
| Preset Signals .....  | 52 |
| Input Signals and Adjustable/<br>Setting Items .....  | 54 |
| Compatible 3D Signals .....   | 55 |
| 3D Signals and Adjustable/Setting<br>Items .....  | 55 |
| Aspect Mode .....   | 56 |
| Motionflow .....  | 57 |
| Storage Conditions of Adjustable/<br>Setting Items .....                                      | 58 |
| Projection Distance and Lens Shift<br>Range .....   | 60 |
| Dimensions .....  | 62 |
| NOTICES AND LICENCES<br>FOR SOFTWARE USED IN THIS   |    |

|               |    |
|---------------|----|
| PRODUCT ..... | 65 |
| Index .....   | 81 |

# Location of Controls

## Front/Right Side

The buttons on the control panel have the same names as those on the remote control.

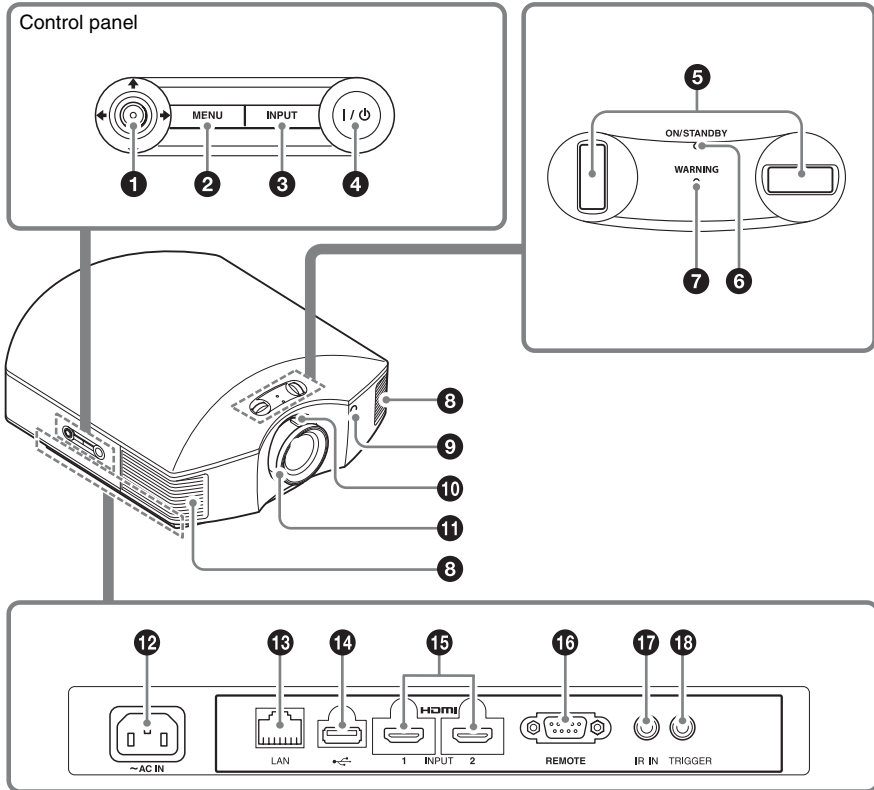

- ① ↑/↓/←/→ (arrow)/⊙ (enter) button (page 20)
- ② MENU button (page 20)
- ③ INPUT button (page 14)
- ④ I/⊙ (ON/STANDBY) button (page 8)
- ⑤ Lens shift dials (page 9)
- ⑥ ON/STANDBY indicator (page 43)
- ⑦ WARNING indicator (page 43)
- ⑧ Ventilation holes (exhaust)
- ⑨ Remote control detector (page 8)
- ⑩ Zoom lever (page 10)
- ⑪ Focus ring (page 11)
- ⑫ AC IN socket (page 8)
- ⑬ LAN connector (page 37)
- ⑭ USB connector (page 45)

**15 HDMI 1/HDMI 2 connector**  
(page 12)

**16 REMOTE connector**

Connects to a computer, etc. for remote control.


**17 IR IN connector**

Inputs signals to control the unit.

**18 TRIGGER connector (page 33)**

---

## Rear/Bottom

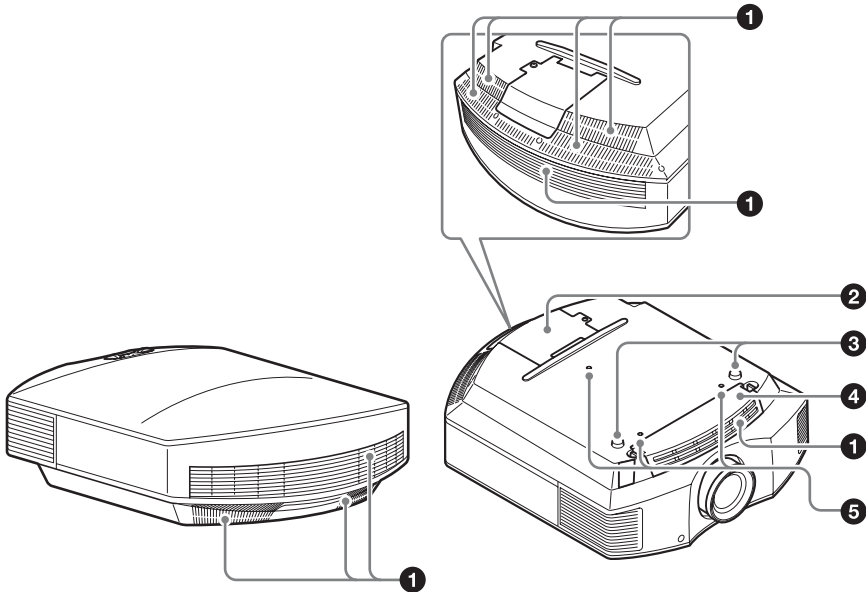

**1 Ventilation holes (intake)**  
(page 48)


**2 Lamp cover** (page 47)

**3 Front feet (adjustable)** (page 11)

**4 Filter holder** (page 48)

**5 Projector suspension support  
attaching hole** (page 63)

# Remote Control

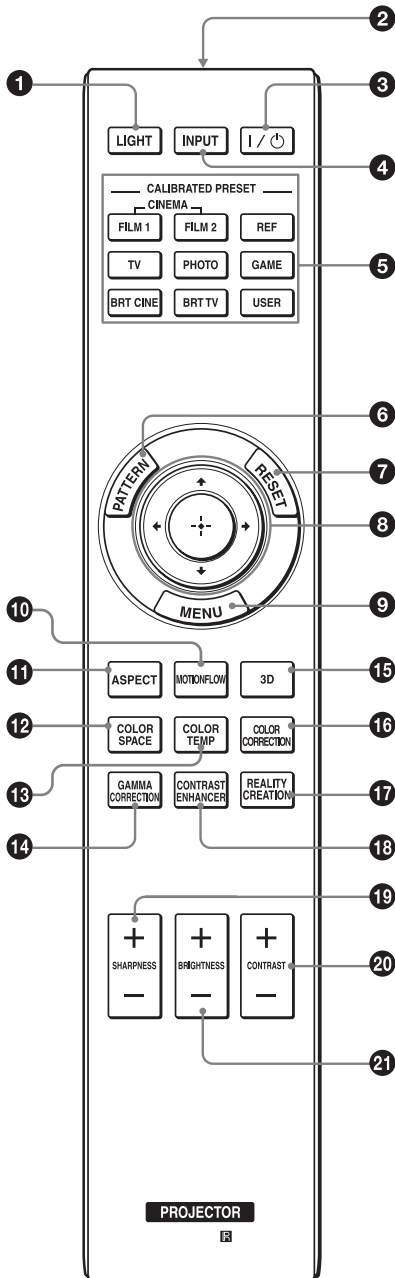

- 1 LIGHT button**  
Illuminates the buttons on the remote control.
- 2 Infrared transmitter**
- 3 I/⏻ (ON/STANDBY) button**  
(page 8)
- 4 INPUT button** (page 14)
- 5 CALIBRATED PRESET buttons**  
(page 19)
- 6 PATTERN button** (page 8)
- 7 RESET button** (page 21)
- 8 ↑/↓/←/→ (arrow)/ ⏏ (enter) buttons** (page 20)
- 9 MENU button** (page 20)
- 10 MOTIONFLOW button** (page 24)
- 11 ASPECT button** (page 17)
- 12 COLOR SPACE button** (page 26)
- 13 COLOR TEMP button** (page 24)
- 14 GAMMA CORRECTION button**  
(page 25)
- 15 3D button** (page 15)
- 16 COLOR CORRECTION button**  
(page 26)
- 17 REALITY CREATION button**  
(page 23)
- 18 CONTRAST ENHANCER button**  
(page 23)
- 19 SHARPNESS +/- button**  
(page 25)
- 20 CONTRAST +/- button** (page 24)
- 21 BRIGHTNESS +/- button**  
(page 24)

# Connections and Preparations

This section describes how to install the unit and screen, how to connect the equipment from which you want to project the picture, etc.


## Installing the Unit

The lens shift allows you to have broader options for placing the unit and viewing pictures easily.

The installation distance between the unit and a screen varies depending on the size of the screen or whether or not you use the lens shift features. Install this unit so that it fits the size of your screen. For details on the distance between the unit and the screen (the projection distance) and the size of projected video, see “Projection Distance and Lens Shift Range” (page 60).

- 1 Position the unit so that the lens is parallel to the screen.

### Top view

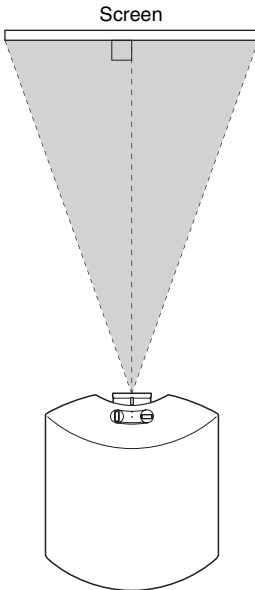



- 2 Project an image on the screen and adjust the picture so that it fits the screen (page 8).

### Note

When using a screen with an uneven surface, stripes pattern may rarely appear on the screen depending on the distance between the screen and the unit or the zooming magnifications. This is not a malfunction of the unit.

# Adjusting the Picture Position

Project an image on the screen and then adjust the picture position.

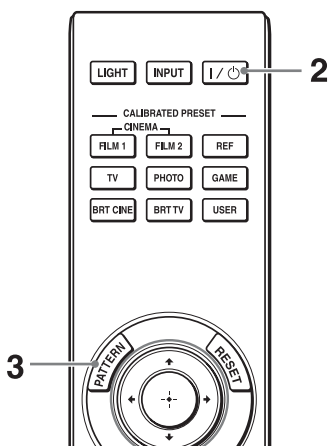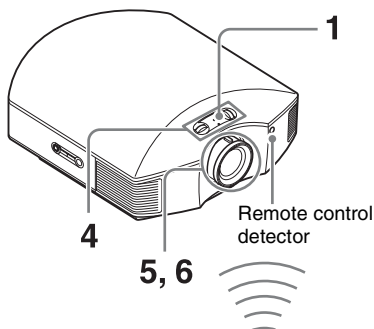

**Tip**  
The I/ON (ON/STANDBY), INPUT, MENU, and  $\uparrow/\downarrow/\leftarrow/\rightarrow/\odot$  (joystick) buttons on the side panel of the unit function the same as those on the remote control.

**Note**


Depending on the installation location of the unit, you may not be able to control it with the remote control. In this case, point the remote control to the screen instead of the projector.

**1** After connecting the AC power cord to the unit, plug the AC power cord into a wall outlet.


The ON/STANDBY indicator lights in red and the unit goes into standby mode.





**2** Press the I/ON (ON/STANDBY) button to turn on the unit.

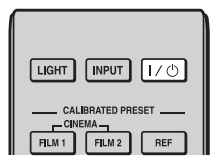

The ON/STANDBY indicator flashes in green, and then lights in green.




**3** Display a test signal for performing adjustments.  
Press the PATTERN button on the remote control to display the test signal.

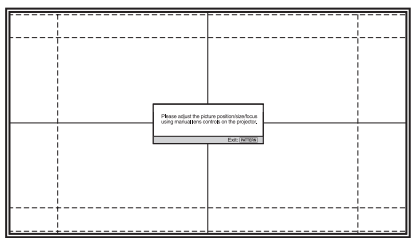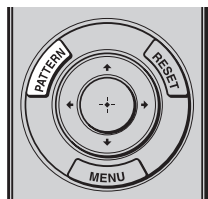

**Tip**  
Press the PATTERN button to clear the test signal display.



- 4** Move both lens shift dials to adjust the picture position.

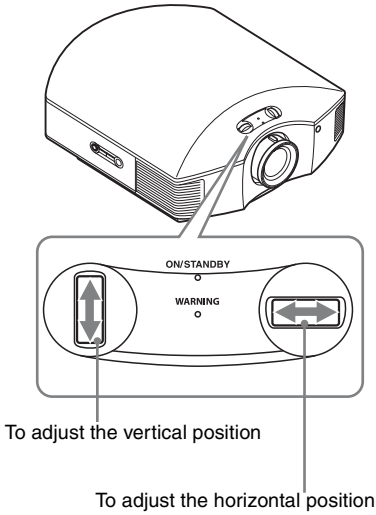




---

### To adjust the horizontal position

Turn the lens shift dial right or left.  
The picture projected on the screen moves right or left by a maximum of 25% of the screen width from the center of the lens.
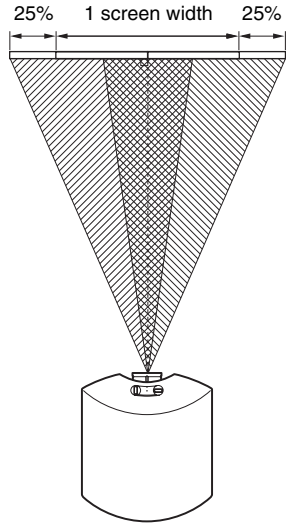
#### Top view




-  : Picture position when moving the picture to the left at maximum
-  : Picture position when moving the picture to the right at maximum

## To adjust the vertical position

Turn the lens shift dial up or down.  
The picture projected on the screen moves up or down by a maximum of 71% of the screen height from the center of the lens.


### Side view

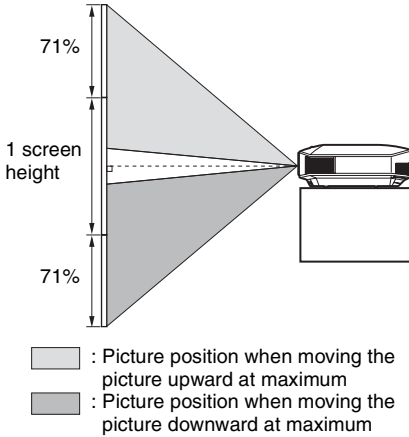


### Notes

- The range to move the picture projected on the screen can be adjusted only within the octagon area illustrated below. For details, see “Projection Distance and Lens Shift Range” (page 60).
- When you use both the horizontal and vertical lens shift features at the same time, the distance the picture projected on the screen moves differ depending on how much the lens shift is adjusted.


## Range of movement of the projected picture

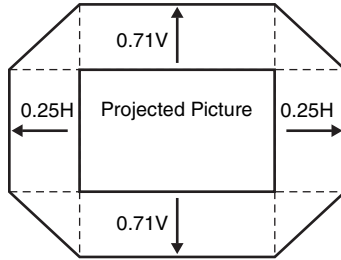


H: Width of the projected picture  
V: Height of the projected picture

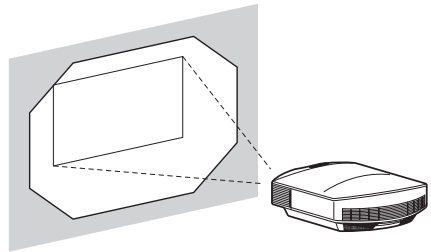

## 5 Adjust the picture size using the zoom lever.

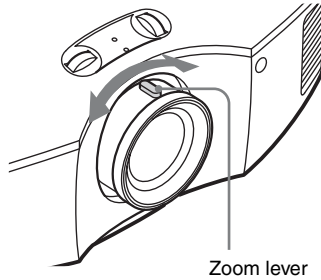


## 6 Adjust the focus using the focus ring.

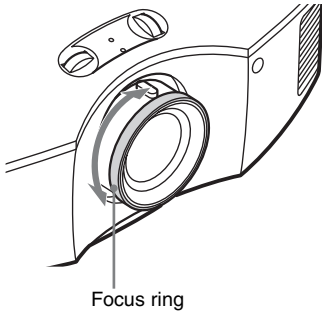

---

### To adjust the tilt of the installation surface

If the unit is installed on an uneven surface, use the front feet (adjustable) to keep the unit level.

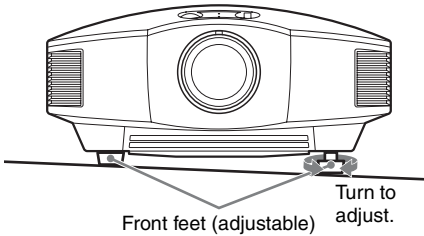


### Notes

- If the unit is tilted up or down, the projected image may be trapezoidal.
- Be careful not to catch your finger when turning the front feet (adjustable).

---

### Lens adjustment window (test pattern)

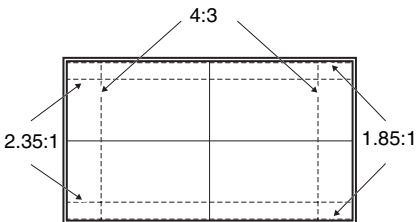


The dashed lines show the screen sizes of each aspect ratio.

# Connecting to Video Equipment or a Computer

You can enjoy high picture quality by connecting a DVD player/recorder, Blu-ray Disc player/recorder, or PlayStation® equipped with HDMI output to the HDMI input of the unit.

## When making connections, be sure to do the following:

- Turn off all equipment before making any connections.
- Use the proper cables for each connection.
- Insert the cable plugs properly; poor connection at the plugs may cause a malfunction or poor picture quality. When pulling out a cable, be sure to pull it out from the plug, not the cable itself.
- Refer to the operating instructions of the connected equipment.

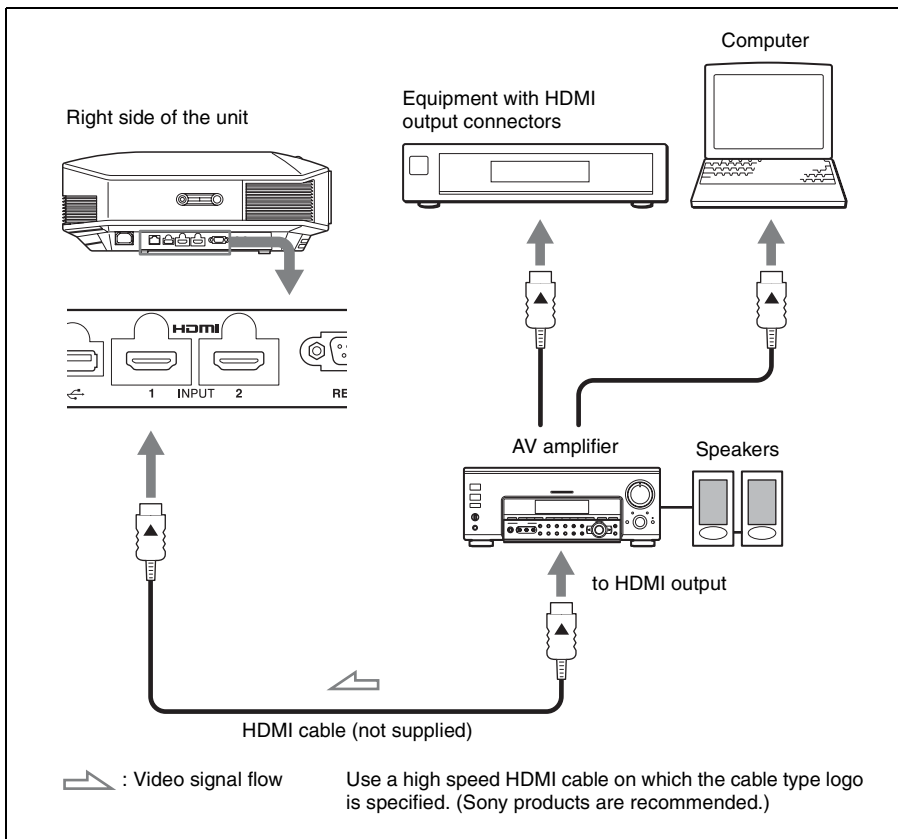

**Notes**


- Use a high-speed HDMI cable. With a standard HDMI cable, images of 1080p, DeepColor, and 3D video may not be displayed properly.
- When connecting an HDMI cable to the unit, make sure the ▼ mark on the upper part of the HDMI input of the unit and the ▲ mark on the connector of the cable is set at the same position.
- If the picture from equipment connected to the unit with an HDMI cable is not correct, check the settings of the connected equipment.
- If you set your computer, such as a notebook type, to output the signal to both computer's display and this equipment, the picture of the equipment may not appear properly. Set your computer to output the signal to only the external monitor. For details, refer to the computer's operating instructions supplied with your computer. For settings of the computer, consult with the manufacturer of the computer.

# Projecting

This section describes how to operate the unit to view the picture from the equipment connected to the unit. It also describes how to adjust the quality of the picture to suit your taste.


## Projecting the Picture

- 1 Turn on both the unit and the equipment connected to the unit.
- 2 Press INPUT to display the input palette on the screen.

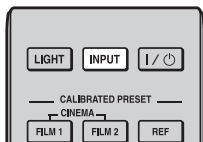

- 3 Select the equipment from which you want to display images.


Press INPUT repeatedly or press  $\uparrow/\downarrow$  /  $\odot$  (enter) to select the equipment from which to project.



Example: To view the picture from the video equipment connected to the HDMI 1 connector of this unit.

| To view the picture from                    | Press INPUT to display |
|---|------------------------|
| Equipment connected to the HDMI 1 connector | HDMI 1                 |
| Equipment connected to the HDMI 2 connector | HDMI 2                 |

### Tip

When “Status” is set to “Off” on the Setup  menu, the input palette does not appear. Press the INPUT button to switch between input terminals in sequence.

## Turning Off the Power

- 1 Press the I/ON (ON/STANDBY) button.

A message “POWER OFF?” appears on the screen.

- 2 Press the I/ON (ON/STANDBY) button again before the message disappears. The ON/STANDBY indicator flashes in green and the fan continues to run to reduce the internal heat.

The fan stops and the ON/STANDBY indicator changes from flashing green to remaining red.

The power is turned off completely, and you can disconnect the AC power cord.

### Note

Never disconnect the AC power cord while the indicator is flashing.

You can turn off the unit by holding the I/ON (ON/STANDBY) button for about 1 second, instead of performing the above steps.

---

# Watching 3D Video Images

You can enjoy powerful 3D video images, such as from 3D games and 3D Blu-ray Discs, using the optional Active 3D Glasses (TDG-BT500A).

- 1 Turn on the HDMI equipment for 3D compatibility connected to the unit, then play the 3D content.  
For details on how to play 3D content, refer to the operating instructions for the connected equipment.
- 2 Turn on the unit and project the 3D video image onto the screen.  
For details on how to project the image, see “Projecting the Picture” (page 14).
- 3 Turn on the 3D glasses, and then put them on so that they fit comfortably.  
For details on how to use the 3D glasses, see “Using the 3D Glasses” (page 15).

## Tips


- The factory default setting for “2D-3D Display Sel.” is “Auto” to allow projecting 3D video images automatically when the unit detects 3D signals.
- To convert 3D video images to 2D video images, set “2D-3D Display Sel.” to “2D” (page 30).

## Notes

- It may not be possible to display 3D video image, depending on the type of signal. Set the “2D-3D Display Sel.” to “3D,” and “3D Format” to “Side-by-Side” or “Over-Under” to suit the format of the 3D content you want to watch (page 30).
- Use the 3D glasses within the communication range (page 15).
- There are differences in perception of 3D video images among individuals.
- When the temperature of the usage environment is low, the 3D effect may be diminished.

---

## Adjusting/Setting the 3D functions

You can adjust/set the 3D functions by pressing the 3D button on the remote control or with the “3D Settings” of the Function  menu. For details, see “3D Settings” (page 30).

## Using the 3D Glasses

- 1 Turn on the 3D glasses, and register them on the unit.  
For details on how to register the 3D glasses, refer to the operating instructions supplied with the 3D glasses.
- 2 Put on the 3D glasses.
- 3 Turn toward the screen.

## Precautions for use

Misoperation may occur if:


- The viewing position is too far from the projector
- There are other communication devices, such as a wireless LAN (IEEE802.11 b/g/n) or a microwave with a bandwidth of 2.4 GHz, near the unit

---

## 3D glasses communication range

Figure below indicate the communication range of the 3D glasses. If you try to watch 3D video images from a distance greater than the communication range or install the unit outside the communication range, the 3D glasses may not be able to display the images properly. Also, the distance varies depending on the environment of the room and installation environment of the unit.

**Top or side view**

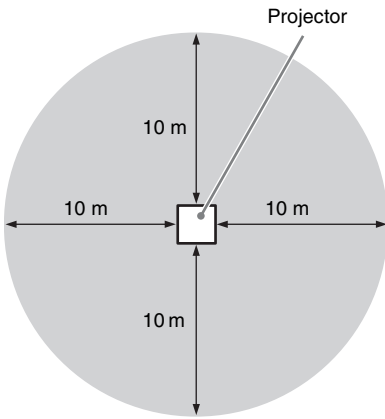











# Selecting the Aspect Ratio According to the Video Signal


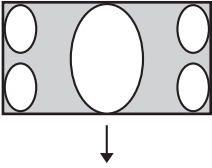

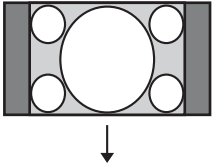
You can select an aspect ratio best suited for the video signal received.

Press ASPECT.

Each time you press the button, you can select the “Aspect” setting. You can also select it using the menu (page 27).

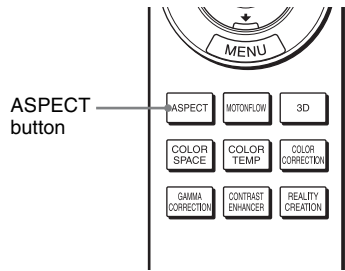

| Original image   | Recommended setting and resultant images  |
|--|---|
|  <p>1.78:1 (16:9)</p>  <p>1.33:1 (4:3)</p>  <p>1.33:1 (4:3) with side panels</p> | <p>Normal</p>   |
|  <p>Squeezed</p>  | <p>Stretch</p>   |

| Original image  | Recommended setting and resultant images  |
|---|---|
|  <p data-bbox="303 288 361 309">2.35:1</p> | <p data-bbox="740 129 826 150">V Stretch</p>  <p data-bbox="639 459 927 480">When using an anamorphic lens</p> |
|  <p data-bbox="311 673 353 694">16:9</p>   | <p data-bbox="743 512 823 533">Squeeze</p>  <p data-bbox="639 844 927 865">When using an anamorphic lens</p>   |

**Note**

Selectable aspect modes vary depending on the input signal (page 56).

**Notes on switching the “Aspect” setting**


- Select the aspect mode taking into account that changing the aspect ratio of the original picture will provide a different look from that of the original image.
- Note that if the unit is used for profit or for public viewing, modifying the original picture by switching the aspect may constitute an infringement of the rights of authors or producers, which are legally protected.

# Selecting the Picture Viewing Mode

You can select the picture viewing mode that best suits the type of video source or room conditions.

You can save and use different preset modes for 2D/3D respectively.

Press one of the CALIBRATED PRESET buttons.

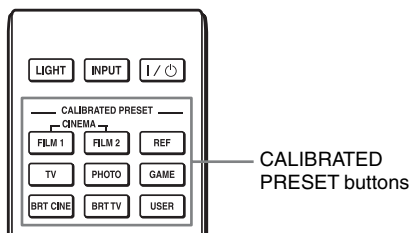

| Setting items | Description   |
|---------------|---|
| CINEMA FILM 1 | Picture quality suited to reproducing the highly dynamic and clear images typical of master positive film.  |
| CINEMA FILM 2 | Picture quality suited to reproducing the rich tone and color typical of a movie theater, based on the tones changed for FILM 1.                              |
| REF           | A picture quality setup suitable for when you want to reproduce faithfully the original image quality, or for enjoying image quality, without any adjustment. |
| TV            | Picture quality suited for watching TV programs, sports, concerts, and other video images.  |
| PHOTO         | Ideal for projecting still images taken with a digital camera.  |
| GAME          | Picture quality suited to gaming, with well-modulated colors and fast response.   |
| BRT CINE      | Picture quality suited for watching movies in a bright environment, such as a living room.  |
| BRT TV        | Picture quality suited for watching TV programs, sports, concerts, and other video images in a bright environment, such as a living room.                     |
| USER          | Adjusts the picture quality to suit your taste then saves the setting. The factory default setting is the same as "REF."                                      |

# Using the Menu

This section describes how to make various adjustments and settings using the menu.


## Note

The menu displays used for the explanation may be different from the actual menu display.


## Operation through the Menu

The unit is equipped with an on-screen menu for making various adjustments and settings. If you select an item name followed by an arrow (▶), the next menu window with setting items appears.


### 1 Press MENU.

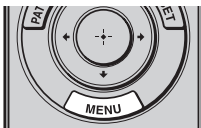


The menu window appears.

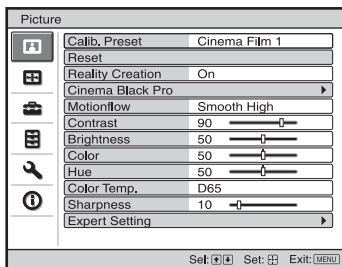


### 2 Press ↑/↓ to select a menu item, and press → or ◂.

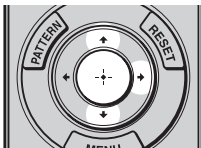

The items that can be set or adjusted with the selected menu appear. The item presently selected is shown in white.

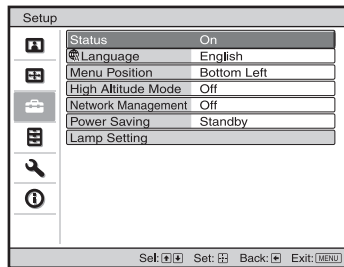


### 3 Press ↑/↓ to select an item you want to set or adjust and press → or ◂.

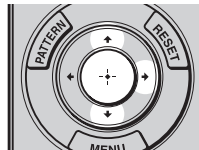


The setting items are displayed in a pop-up menu, in a setting menu, in an adjustment menu or in the next menu window.


### Pop-up menu

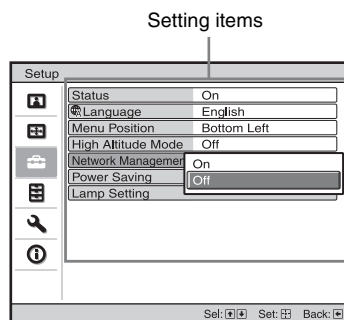


## Setting menu

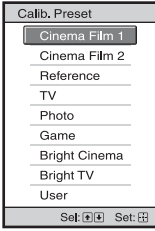

## Adjustment menu



## Next menu window

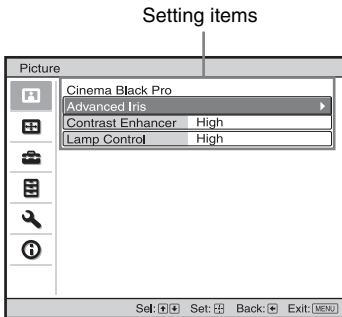

- 4 Make the setting or adjustment of an item.

### When changing the adjustment level

To increase the value, press  $\uparrow/\rightarrow$ .  
To decrease the value, press  $\downarrow/\leftarrow$ .  
Press  $\odot$  to store the setting and restore the original menu screen.

### When changing the setting

Press  $\uparrow/\downarrow$  to change the setting.  
Press  $\odot$  to restore the original screen.  
You can restore the original screen using  $\leftarrow$  depending on the selected item.


---


## To clear the menu


Press MENU.

---

## To reset the picture that has been adjusted

Select "Reset" from the Picture  menu.

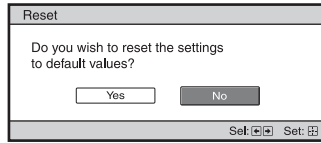

When the screen display appears, select "Yes" using  $\leftarrow$  and press  $\odot$ . All of the following settings are reset to its factory preset value:  
"Reality Creation," "Cinema Black Pro," "Motionflow," "Contrast," "Brightness," "Color," "Hue," "Color Temp.," "Sharpness," and "Expert Setting" on the Picture  menu

---

## To reset the items that have been adjusted


Select an item in the menu screen, and display the pop-up menu, the setting menu, or the adjustment menu.  
Press RESET on the remote control to reset only the selected settings to its factory preset value.

### Note

The RESET button on the remote control is available only when the adjustment menu or the setting menu is selected.

# Picture Menu

The Picture menu is used for adjusting the picture.

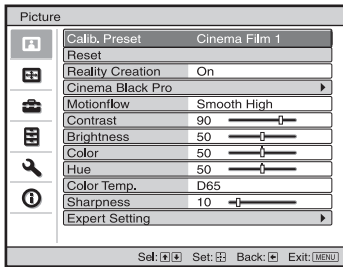

## Note

These items may not be available, depending on the type of input signal. For details, see “Input Signals and Adjustable/Setting Items” (page 54).


Item names in brackets represent those printed on the remote control.



| Setting items                           | Description   |
|---|---|
| Calib. Preset<br>[CALIBRATED<br>PRESET] | <p>You can select the picture viewing mode that best suits the type of video source or the environment.</p> <p>You can save and use different preset modes for 2D/3D respectively.</p> <p><b>Cinema Film 1:</b> Picture quality suited to reproducing the highly dynamic and clear images typical of master positive film.</p> <p><b>Cinema Film 2:</b> Picture quality suited to reproducing the rich tone and color typical of a movie theater, based on the tones changed for Cinema Film 1.</p> <p><b>Reference:</b> A picture quality setup suitable for when you want to reproduce faithfully the original image quality, or for enjoying image quality, without any adjustment.</p> <p><b>TV:</b> Picture quality suited for watching TV programs, sports, concerts, and other video images.</p> <p><b>Photo:</b> Ideal for projecting still images taken with a digital camera.</p> <p><b>Game:</b> Picture quality suited to gaming, with well-modulated colors and fast response.</p> <p><b>Bright Cinema:</b> Picture quality suited for watching movies in a bright environment, such as a living room.</p> <p><b>Bright TV:</b> Picture quality suited for watching TV programs, sports, concerts, and other video images in a bright environment, such as a living room.</p> <p><b>User:</b> You can adjust the picture quality to suit your taste, and save the setting. The factory default setting is the same as “Reference.”</p> <p><b>Tip</b><br/>Any adjustments to picture quality settings are saved for each input.</p> |
| Reset                                   | <p>Resets all currently selected Calib. Preset mode settings to their default values (page 21).</p> <p><b>Tip</b><br/>Reset does not affect settings saved for items of “Color Temp.”</p>   |

| Setting items                               | Description   |
|---|---|
| Reality Creation<br>[REALITY<br>CREATION]   | <p>Adjusts the detail and noise processing of images. (Super-resolution function)</p> <p><b>On:</b> Adjusts the settings of “Reality Creation.”</p> <p><b>Resolution:</b> When you increase the setting value, the texture and detail of the picture become sharper.</p> <p><b>Noise Filtering:</b> When you increase the setting value, the noise (picture roughness) becomes less prominent.</p> <p><b>Test: On/Off:</b> Changes “On” and “Off” at a certain frequency to check the effect of “Reality Creation.”</p> <p><b>Tip</b><br/>The display position of status during the test works together with the “Menu Position” setting (page 29).</p> <p><b>Off:</b> The “Reality Creation” function is not applied.</p>  |
| Cinema Black Pro                            |   |
| Advanced Iris                               | <p><b>Dynamic Control:</b> Adjusts the range of movement of the iris (aperture).</p> <p><b>Full:</b> Automatically optimizes the iris (aperture) and signal processing according to the brightness level of the input source. This results in a bright and high contrast image.</p> <p><b>Limited:</b> Provides a slower movement of the iris (aperture) and lower brightness than “Full,” making the picture quality suitable for viewing in a dark room.</p> <p><b>Off:</b> The “Dynamic Control” function is not applied.</p> <p><b>Brightness:</b> The higher the setting, the brighter the picture. The lower the setting, the darker the picture.</p> <p><b>Tip</b><br/>After adjusting “Brightness,” set “Dynamic Control” according to the brightness of the room and the picture itself.</p> |
| Contrast Enhancer<br>[CONTRAST<br>ENHANCER] | <p>Corrects the level of bright and dark parts automatically to optimize contrast according to a scene.</p> <p>Increases image sharpness and makes image dynamic.</p> <p><b>High/Middle/Low:</b> You can adjust the contrast enhancer.</p> <p><b>Off:</b> The contrast enhancer function is not applied.</p>  |
| Lamp Control                                | <p>Switches the lamp output.</p> <p><b>High:</b> Increases the brightness, and projects brighter images.</p> <p><b>Low:</b> Decreases the brightness, and enhances blacks by minimizing brightness.</p> <p><b>Tip</b><br/>Setting “Low” reduces fan noise, while also reducing energy consumption for longer lamp life.</p>   |

| Setting items               | Description   |
|-----------------------------|---|
| Motionflow<br>[MOTIONFLOW]  | <p><b>Impulse:</b> Reproduces original picture quality. Provides cinema-like picture, which may flicker.</p> <p><b>Combination:</b> Reduces motion blur while maintaining brightness for high-speed picture content.</p> <p><b>Smooth High:</b> Provides smoother picture movement; especially effective for film-based content.</p> <p><b>Smooth Low:</b> Provides smoother picture movement for standard use.</p> <p><b>True Cinema:</b> Images, such as a movie created in 24 frames per second, are reproduced at the original framerate.</p> <p><b>Off:</b> The “Motionflow” function is not applied.</p> <p><b>Tips</b></p> <ul style="list-style-type: none"> <li>• Select “Off” if the selected “Smooth High,” “Smooth Low,” “Impulse,” “Combination,” or “True Cinema” results in a distorted picture.</li> <li>• Depending on the picture content, you may not see the effect visually even if you have changed the settings.</li> </ul>  |
| Contrast<br>[CONTRAST]      | <p>Adjusts the contrast.</p> <p>Higher values increase the sharpness in images, while lower values decrease the sharpness.</p> <p>You can make adjustments by pressing the CONTRAST +/- on the remote control.</p>  |
| Brightness<br>[BRIGHTNESS]  | <p>Adjusts the brightness of the picture.</p> <p>The higher the setting, the brighter the picture. The lower the setting, the darker the picture.</p> <p>You can make adjustments by pressing the BRIGHTNESS +/- on the remote control.</p>   |
| Color                       | <p>Adjusts the color density.</p> <p>The higher the setting, the greater the intensity. The lower the setting, the lower the intensity.</p>   |
| Hue                         | <p>Adjusts the color tone.</p> <p>The higher the setting, the more greenish the picture becomes. The lower the setting, the more reddish the picture becomes.</p>   |
| Color Temp.<br>[COLOR TEMP] | <p>Adjusts the color temperature.</p> <p><b>D93:</b> Equivalent to 9,300 K color temperature normally used in TVs. Gives white colors a blue tint.</p> <p><b>D75:</b> Equivalent to 7,500 K color temperature used as an ancillary standard illuminant. Gives a neutral tint between “D93” and “D65.”</p> <p><b>D65:</b> Equivalent to 6,500 K color temperature used as a standard illuminant. Gives white colors a red tint.</p> <p><b>D55:</b> Equivalent to 5,500 K color temperature used as an ancillary standard illuminant. Gives white colors an even redder tint.</p> <p><b>Custom 1 to 5:</b> Enables you to adjust, set, and store your favorite color temperature.</p> <p>The factory default settings are as follows.</p> <p><b>Custom 1:</b> Same as “D93” color temperature setting.</p> <p><b>Custom 2:</b> Same as “D75” color temperature setting.</p> <p><b>Custom 3:</b> Same as “D65” color temperature setting.</p> <p><b>Custom 4:</b> Same as “D55” color temperature setting.</p> <p><b>Custom 5:</b> Setting that prioritizes brightness.</p> <p><b>Tip</b></p> <p>You can adjust each item to a color temperature according to your preference.</p> |




| Setting items                          | Description  |
|--|--|
| Sharpness<br>[SHARPNESS]               | Sharpens the outline of the picture, or reduces the noise.<br>The higher the setting, the sharper the picture. The lower the setting, the softer the picture, thus reducing the noise.<br>You can make adjustments by pressing the SHARPNESS +/- on the remote control.  |
| Expert Setting                         |  |
| NR (Noise Reduction)                   | Reduces the roughness or noise of the picture.<br><b>Auto:</b> Detects the noise level to reduce the roughness or noise of the picture automatically.<br><b>High/Middle/Low:</b> Select a setting according to the roughness or noise of the input signal source.<br><b>Off:</b> The NR (noise reduction) function is not applied.<br><br><b>Tip</b><br>The noise level may not be detected accurately with “Auto” depending on the input signal source. If the picture is unacceptable with “Auto,” select a setting from among “High,” “Middle,” “Low” or “Off.”   |
| MPEG NR (MPEG Noise Reduction)         | Reduces block noise and mosquito noise, in particular in digital signals.<br><b>Auto:</b> Detects the noise level to reduce the block noise and mosquito noise of the picture automatically.<br><b>High/Middle/Low:</b> Select a setting according to the block noise and mosquito noise of the input signal source.<br><b>Off:</b> The MPEG NR (MPEG noise reduction) function is not applied.<br><br><b>Tip</b><br>The noise level may not be detected accurately with “Auto” depending on the input signal source. If the picture is unacceptable with “Auto,” select a setting from among “High,” “Middle,” “Low” or “Off.”  |
| Smooth Gradation                       | Smooths the gradation of the flat parts of images.<br><b>High/Middle/Low:</b> You can adjust the smooth gradation effect.<br><b>Off:</b> The smooth gradation function is not applied.   |
| Film Mode                              | According to the film source you have selected, make a setting for playback.<br><b>Auto:</b> Suitable for reproducing the original picture movement. Normally, set this to “Auto.”<br><b>Off:</b> Plays back the picture in progressive format without detecting video signals automatically.  |
| Gamma Correction<br>[GAMMA CORRECTION] | Adjusts the response characteristics of the tone of the picture.<br>Select a favorite tone from 10 options.<br><b>1.8:</b> Bright Produces a brighter picture overall.<br><b>2.0</b><br><b>2.1</b><br><b>2.2</b><br><b>2.4</b><br><br><b>2.6:</b> Dark Produces a darker picture overall.<br><b>Gamma 7:</b> Simulates the gamma curve of film.<br><b>Gamma 8:</b> Increases the sharpness in images. Select this when you watch in a bright environment, such as a living room.<br><b>Gamma 9:</b> Produces a brighter picture than Gamma 8.<br><b>Gamma 10:</b> Increases the sharpness in images. Select this when you watch TV programs, etc., in a bright environment, such as a living room.<br><b>Off:</b> The “Gamma Correction” function is not applied. |
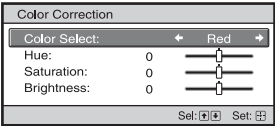
| Setting items                             | Description   |
|---|---|
| Color Correction<br>[COLOR<br>CORRECTION] | <p><b>On:</b> Adjusts Hue, Saturation or Brightness of the selected colors. Repeat steps ① and ② described below to specify the target color.</p> <p>① Press <b>↑/↓</b> to select “Color Select,” then press <b>←/→</b> to select the color you want to adjust among “Red,” “Yellow,” “Green,” “Cyan,” “Blue” and “Magenta.”</p>  <p>② Press <b>↑/↓</b> to select “Hue,” “Saturation” or “Brightness,” then adjust them to suit your taste using <b>←/→</b> while watching the projected picture.</p> <p><b>Off:</b> The “Color Correction” effect is not applied.</p>   |
| Clear White                               | <p>Emphasizes vivid whites.</p> <p><b>High/Low:</b> You can adjust the “Clear White” effect.</p> <p><b>Off:</b> The “Clear White” effect is not applied.</p>  |
| x.v.Color                                 | <p>Set this item when connecting the unit with equipment that supports x.v.Color and playing back an x.v.Color video signal.</p> <p><b>On:</b> You can play back an x.v.Color video signal.</p> <p><b>Off:</b> The “x.v.Color” function is not applied.</p> <p>For details on x.v.Color, see “About the x.v.Color” (page 45).</p> <p><b>Tip</b><br/>Setting x.v.Color to “On” disables gamma adjustment.</p>  |
| Color Space<br>[COLOR SPACE]              | <p>Converts the color space.</p> <p><b>BT.709:</b> An ITU-R BT.709 color space, which is used for high-definition television broadcast or Blu-ray Disc. The color space is equivalent to sRGB.</p> <p><b>Color Space 1:</b> The color space suited for watching TV programs and video images, such as sport, concerts, etc.</p> <p><b>Color Space 2:</b> The color space suited for watching TV programs, sport, concerts, and other video images in a bright environment, such as a living room.</p> <p><b>Color Space 3:</b> The color space suited for watching movies in a bright environment, such as a living room.</p> <p><b>Custom:</b> You can adjust the color space setting.</p>  <p><b>Tip</b><br/>You can adjust each item to a color space according to your preference.</p> |
| Input Lag<br>Reduction                    | <p>Reduces the delay of the display for a video.</p> <p><b>On:</b> Reproduces a smooth fast-moving video image with a reduced sense of afterimage.</p> <p><b>Off:</b> Turns the Input Lag Reduction function off.</p> <p><b>Tip</b><br/>When “Input Lag Reduction” is set to “On,” Motionflow, NR, and MPEG NR cannot be set.</p>   |

# Screen Menu


You can set the picture size, aspect mode, etc.

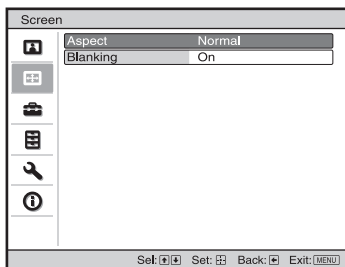

## Note

These items may not be available, depending on the type of input signal. For details, see “Input Signals and Adjustable/Setting Items” (page 54).

Item names in brackets represent those printed on the remote control.

| Setting items      | Description   |
|--------------------|---|
| Aspect<br>[ASPECT] | <p>You can set the aspect ratio of the picture to be displayed for the current input signal (page 17).</p> <p>You can set the function only when a video signal is input.</p> <p><b>Normal:</b> Input video is displayed in its original aspect ratio, enlarged to fill the screen. This mode is suitable for viewing 1.78:1 (16:9) and 1.33:1 (4:3) video.</p> <p><b>V Stretch:</b> This is the most suitable mode for using a 2.35:1 screen to view 2.35:1 video with a commercially available anamorphic lens. When you select “V Stretch” from “Trigger Select” on the Installation  menu, a 12 V signal is output from the TRIGGER connector (page 33).</p> <p><b>Squeeze:</b> With this setting, 1.78:1 (16:9) and 1.33:1 (4:3) video will be displayed in their correct aspect ratios when you use a commercially available anamorphic lens.</p> <p><b>Stretch:</b> Displays video that has been squeezed to 1.33:1 (4:3) as 1.78:1 (16:9) aspect ratio.</p> <p><b>Tips</b></p> <ul style="list-style-type: none"><li>• Selectable aspect modes vary depending on the input signal (page 56).</li><li>• The aspect cannot be selected for an input signal from a computer (pages 52, 53, 56).</li></ul> |

---

**Setting items****Description**

---

Blanking

This feature allows you to adjust the displayable region within the four directions of the screen.

**On:** Select the edge to adjust by highlighting Left, Right, Top, or Bottom using the **↑/↓** buttons.

Adjust the amount of blanking using the **←/→** buttons.

| Blanking |   |
|----------|---|
| Left:    | 2 |
| Right:   | 3 |
| Top:     | 2 |
| Bottom:  | 3 |

Set: [ ] Adjust: [ ] Set: [ ]

**Off:** Turns off the Blanking function.


**Tip**

Depending on the aspect ratio setting, right/left blanking may not be available.

---

# Setup Menu


The Setup menu is used to change the factory preset settings, etc.

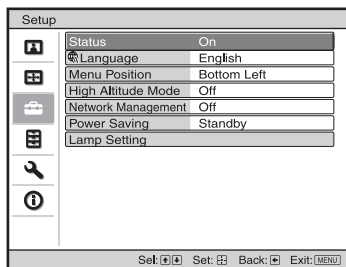

| Setting items      | Description   |
|--------------------|---|
| Status             | Sets whether or not the on-screen display is displayed.<br>Set to “Off” to turn off the on-screen displays except for certain menus, message when turning off the power, and warning messages.  |
| Language           | Selects the language used in the menu and on-screen displays.   |
| Menu Position      | You can change the position to display the menu on the screen.<br><b>Bottom Left:</b> Displays the menu on the bottom left area of the screen.<br><b>Center:</b> Displays the menu on the center of the screen.   |
| High Altitude Mode | Sets the unit to operate at the prevailing atmospheric pressure.<br><b>On:</b> Use this setting when using the unit at an altitude of 1,500 m (approx. 4,900 ft) or higher.<br><b>Off:</b> Use this setting when using the unit at normal altitudes.<br><br><b>Tip</b><br>When this item is set to “On,” the fan noise becomes slightly louder since the fan speed increases. |
| Network Management | <b>On:</b> Set when connected to the network and continuously communicating with the projector control equipment.<br><br><b>Note</b><br>When Network Management is set to “On,” the network function is continuously enabled. Set Network Management to “Off” for normal use. If you set to “On,” the power consumption increases.  |
| Power Saving       | Sets the power saving mode.<br><b>Standby:</b> If no signal is input for 10 minutes, power is turned off automatically and the projector goes into standby mode.<br><b>Off:</b> Disables the power saving function.   |
| Lamp Setting       | When replacing the lamps, set the desired lamp setting (page 46).   |

# Function Menu

The Function menu is used for changing the settings of the various functions of the unit.

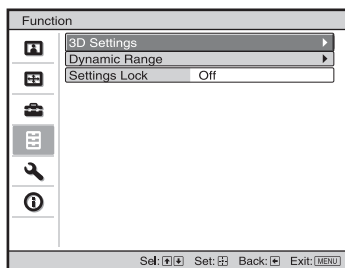

| Setting items      | Description   |
|--------------------|---|
| 3D Settings        | You can change the settings of the 3D function.   |
| 2D-3D Display Sel. | <p>For Switching the video images to “2D” or “3D.”</p> <p><b>Auto:</b> Displays 3D video images when HDMI signals with 3D information* are input. Displays 2D video images when other signals are input.</p> <p><b>3D:</b> Displays 3D video images according to the 3D system selected in “3D Format.” However, when HDMI signals with 3D information are input to the unit, displays 3D video images according to the 3D system of those HDMI signals.</p> <p><b>2D:</b> Displays 2D video images.</p> <p>* The 3D information is additional information to discriminate 3D. Some HDMI signals have additional information to discriminate 3D and some HDMI signals have none.</p> <p><b>3D Format:</b> Set the 3D system when the input HDMI signals do not include 3D information.</p> <p><b>Simulated 3D:</b> Converts 2D video images to 3D video images. The setting can be made only for input the HD signals. The simulated 3D feature may have limited effect, depending on the video source. There are differences in perception of 3D video images among individuals.</p> <p><b>Side-by-Side:</b> Select this to display 3D images as two similar images, side-by-side.</p> <p><b>Over-Under:</b> Select this to display 3D images as two similar images, one above the other.</p> <p><b>Tips</b></p> <ul style="list-style-type: none"> <li>• “2D-3D Display Sel.” cannot be set to “3D” for some video sources. For available 3D signals, see “Compatible 3D Signals” (page 55).</li> <li>• The simulated 3D feature may have limited effect, depending on the screen size (100 to 120 inches recommended) and the video source.</li> <li>• The menu display has a ghost while a 3D video image is displayed and is best viewed with the 3D glasses.</li> </ul> |

| Setting items            | Description   |
|--------------------------|---|
| 3D Glasses<br>Brightness | For adjusting the brightness of the picture when watching 3D video images.<br>You can select the brightness from among “High,” “Medium,” and “Low.”   |
| 3D Depth Adjust          | For adjusting the depth of the 3D video images on the screen. The setting can be made only when a 3D Format other than “Simulated 3D” is selected.<br><br>Depth   -2   -1   0   +1   +2<br>Front ←   Normal   → Depth<br><br>We recommend that “3D Depth Adjust” be set to “0.” The 3D video images may be difficult to perceive, depending on the setting of “3D Depth Adjust.”  |
| Simulated 3D<br>Effect   | For adjusting the 3D effect when 2D content is converted to 3D video images. You can select the effect from among “High,” “Middle,” and “Low.”<br><br><b>Tip</b><br>There are differences in perception of 3D video images converted by the simulated 3D function among individuals.  |
| Dynamic Range            | Sets the video input level for HDMI 1 and HDMI 2 connectors.<br><b>Auto:</b> Sets the video input level automatically.<br><b>Limited:</b> The video input level is set for signals of 16-235.<br><b>Full:</b> The video input level is set for signals of 0-255.<br><br><b>Note</b><br>If the video output setting of the connected HDMI device is not set correctly, light and dark parts of the video may appear too light or too dark. |
| Settings Lock            | Locks menu item settings to prevent operational error (page 32).<br><b>Off:</b> Cancels the Settings Lock.<br><b>Level A:</b> Group 1 items (below) are not displayed on the menu, and are not available.<br><b>Level B:</b> Group 1 and Group 2 items (below) are not displayed on the menus, and are not available.   |

## Items Locked by Settings Lock

### Group 1

---

#### Picture menu

---

Reset  
Reality Creation  
Advanced Iris  
Contrast Enhancer  
Lamp Control  
Motionflow  
Contrast  
Brightness  
Color  
Hue  
Color Temp.  
Sharpness  
NR  
MPEG NR  
Smooth Gradation  
Film Mode  
Gamma Correction  
Color Correction  
Clear White  
x.v.Color  
Color Space

---

### Group 2

---

#### Setup menu

---

Status  
Language  
Menu Position  
High Altitude Mode  
Network Management  
Lamp Setting

---

#### Function menu

---

Dynamic Range

---

#### Installation menu

---


Image Flip  
Trigger Select  
Panel Alignment  
Network Setting

---



# 🔧 Installation Menu

The Installation menu is used for changing the installation settings.

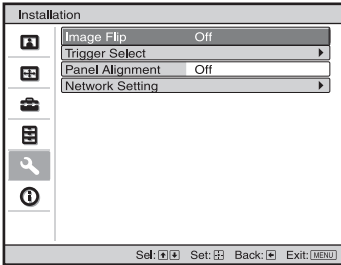

| Setting items  | Description   |
|----------------|---|
| Image Flip     | Flips the picture on the screen horizontally and/or vertically.<br><b>HV:</b> Flips the picture horizontally and vertically.<br><b>H:</b> Flips the picture horizontally.<br><b>V:</b> Flips the picture vertically.<br><b>Off:</b> The picture does not flip.<br>Use this item for installation for the backside projection or ceiling installation.   |
| Trigger Select | Switches the output function of the TRIGGER connector.<br><b>Off:</b> Turns off the TRIGGER connector function.<br><b>Power:</b> Outputs 12 V signals from the TRIGGER connector when the unit is on. The TRIGGER connector does not output any signals when the unit is in standby.<br><b>V Stretch:</b> Works with the “Aspect” setting’s “V Stretch” (page 27) and outputs a 12 V signal from the TRIGGER connector. |

| Setting items | Description |
|---------------|-------------|
|---------------|-------------|

Panel Alignment

This feature allows you to adjust the gaps in the color of characters or the picture on the screen.

**On:** Adjusts the gaps in the colors selecting “Adjust Color” or “Adjust Item.”

**Adjust Item:** Selects how to make adjustments from below.

**Shift:** Shifts the whole picture and makes adjustments.


**Zone:** Selects the desired range and makes adjustments.

**Adjust Color:** Assigns the desired color to adjust the gaps in color. Select “R” (Red) or “B” (Blue) to make adjustments based on “G” (Green).


**Pattern Color:** Select “R/G” (Red and Green) or “R/G/B” (White, all colors) when “Adjust Color” is “R” (Red). Select “B/G” (Blue and Green) or “R/G/B” (White, all colors) when the “Adjust Color” is “B” (Blue).

**Adjust:** The shift adjustment and zone adjustment of the color selected in “Adjust Color” can be made with ←/→, ↑/↓ buttons.


When “Shift” is selected: Assign the settings of the horizontal direction (H) with ←/→ buttons and the vertical direction (V) with ↑/↓ buttons on the shift adjustment screen.

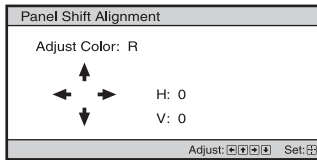

When “Zone” is selected: Select the position to adjust with ←/→ buttons for the horizontal position (H position) and ↑/↓ buttons for the vertical position (V position), then press (↕).

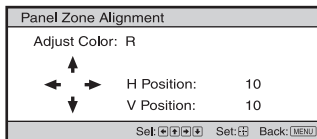

Set the amount to adjust with ←/→ buttons for the horizontal direction (H direction) and with ↑/↓ buttons for the vertical direction (V direction). You can select the position to adjust again by pressing (↕).

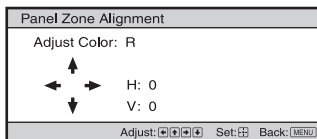






**Reset:** Returns to the factory settings.

**Off:** The optimized data has been preset.


**Note**

Depending on the adjustments made above, colors may become uneven or the resolution may change.

| Setting items    | Description   |
|------------------|---|
| Network Setting  | Perform internet protocol settings.   |
| IPv4 Setting     | <p><b>IP Address Setup:</b> Selects the IP address setting method.</p> <p><b>Auto(DHCP):</b> The IP address is assigned automatically from the DHCP server such as a router.</p> <p><b>Manual:</b> Specifies the IP address manually.</p> <p>When “Manual” is selected for “IP Address Setup,” select the item with the   buttons and input the value with the   buttons. When all items are entered, select “Apply,” and then press the  button. The entered settings will be registered.</p> <p><b>IP Address:</b> Sets the unit’s IP address.</p> <p><b>Subnet Mask:</b> Sets the unit’s subnet mask.</p> <p><b>Default Gateway:</b> Sets the unit’s default gateway.</p> <p><b>MAC Address:</b> Displays the unit’s MAC address. This cannot be changed.</p> <p><b>Apply:</b> Enables the IP address that is set manually.</p> |
| IPv6 Information | <p>Displays the IPv6 information.</p> <p>When you set the IPv6 IP address, set it on a Web browser (page 37).</p>   |

# Information Menu

The Information menu displays the model name, serial number, input signal type, software version and the cumulated hours of usage of the lamp.

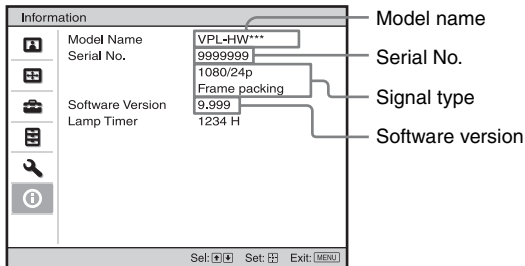


| Items            | Description   |
|------------------|---|
| Model Name       | Displays the model name   |
| Serial No.       | Displays the serial number.   |
| Signal type      | Displays the type of the input signal. When input signals with 3D information are input, the type of input signals and the 3D format are displayed. |
| Software Version | Displays the software version.  |
| Lamp Timer       | Indicates how long the lamp has been turned on (total usage).   |

## Note

You cannot adjust or change the displays listed above.

## About the Preset Memory

This unit has default image data to adjust preset data for input signals appropriately according to the signals shown in “Preset Signals” (page 52) (the preset memory). When the preset signal is input, the unit automatically detects the signal type and recalls the data for the signal from the preset memory to adjust it to an optimum picture. The signal type is displayed in the Information  menu.

## Note

Depending on the computer input signal, parts of screen may be hidden or displayed incorrectly.

# Using Network Features

Connection to the network allows you to operate the following features:


- Checking the current status of the unit via a Web browser.
- Making the network settings for the unit.
- Network monitoring and controlling with control protocol (SDAP [Advertisement], SDCP [PJ Talk], DDDP [AMX], Crestron RoomView, Control4).


## Notes

- When connecting this projector with the network, consult with the person who sets up the network. The network must be secured.
- When using this projector connected with the network, access the Control window via a Web browser and change the access limitation of the factory preset values (page 39). It is recommended to change the password regularly.
- When the setting on the Web browser is completed, close the Web browser to log out.
- The menu displays used for the explanation below may be different depending on the model you are using.
- Supported Web browsers are Internet Explorer 8/9/10/11.
- The menu displays only English.
- If the browser of your computer is set to [Use a proxy server] when you have access to the unit from your computer, click the check mark to set accessing without using a proxy server.
- AMX DDDP is not compatible with IPv6.
- These network functions are available when the unit is turned on.

## Displaying the Control Window of the Unit with a Web Browser

- 1 Connect the LAN cable.

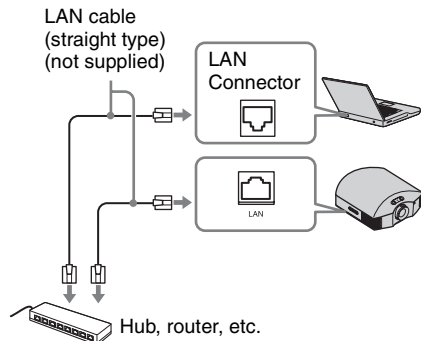


- 2 Set the network settings for the unit using “Network Setting” on the Installation  menu (page 35).
- 3 Start a Web browser on the computer, enter the following in the address field, then press the Enter key on your computer.

`http://xxx.xxx.xxx.xxx`  
(xxx.xxx.xxx.xxx: IP address for the unit)

### When connecting by the IPv6 address

`http://[xxxx:xxxx:- xxxx]`

You can confirm the IP address of the unit under “Network Setting” on the Installation  menu.

The following window appears in the Web browser:



Once you make the network settings, you can open the Control window only by performing step **3** of this procedure.

## Operating the Control Window

### Switching the Page

Click one of the Page Switching buttons to display the desired setting page.



Page Switching buttons

### Setting the Access Limitation

You can limit a user for accessing any particular page.


**Administrator:** Allowed access to all pages


**User:** Allowed access to all pages except the Setup page

When you access the Setup page for the first time, input “root” as the user name and “Projector” as the password in the authentication dialog.

When you log in for the first time, the window that prompts you to change the password is displayed. Follow the instructions on the screen to change the password.

The name of the administrator is preset to “root.”

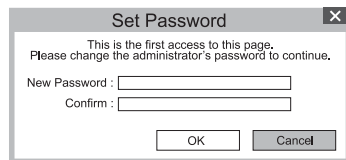

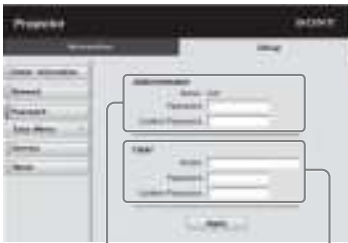

Entry area for [Administrator]

Entry area for [User]

The password can be changed in the Password page in the Setup page.  
 When you change the password, input a new password after deleting the password (\*\*\*\*\*) that was set.  
 The password of the administrator and user should be 8 to 16 characters that includes both alphabet and numeric characters.  
 Alphabet is case-sensitive.  
 The default password “Projector” cannot be set as a new password.

**Note**

If you forget your password, consult with qualified Sony personnel.

**Confirming the Information Regarding the Unit**

You can confirm the current settings for the unit on the Information page.




Information area




## Troubleshooting

If the unit appears to be operating erratically, try to diagnose and correct the problem using the following instructions. If the problem persists, consult with qualified Sony personnel.

### Power

| Symptom                           | Cause and Remedy  | Page |
|-----------------------------------|---|------|
| The power is not turned on.       | The power may not turn on if you turn the power off with I/⏻ (ON/STANDBY) button and turn it on again in a short time. After about 1 minute, turn the power on. | –    |
|                                   | Close the lamp cover securely, then tighten the screws  | 47   |
|                                   | Close the filter holder securely.   | 48   |
|                                   | Check warning indicators.   | 43   |
| The power is suddenly turned off. | Check that “Power Saving” in the Setup  menu is set to “Standby.”              | 29   |
|                                   | Set “Power Saving” to “Off.”  | 29   |


### Picture

| Symptom  | Cause and Remedy  | Page   |
|--|---|--------|
| No picture.  | Check that the connecting cable is connected to the external equipment properly.  | 12     |
|  | Select the input source correctly using the INPUT button.   | 14     |
|  | Check that the computer signal is set for output to an external monitor.<br>If the notebook computer, etc., signal is output to its display and an external monitor, the external monitor’s image may not be displayed correctly. Set your computer to output the signal to only an external monitor. | –      |
| The picture has ghosts.  | Video images are displayed in 3D. Watch the 3D video images using the 3D glasses, or set “2D-3D Display Sel.” to “2D.”  | 15, 30 |
| Bright or dark area of the video appears too bright or too dark. | This symptom may occur when signal level other than those of HDMI standard is input. Switch the output level of the connected equipment, or switch the Dynamic Range on the Function  menu of the unit.            | 31     |
| The picture is too dark.   | Adjust “Contrast” or “Brightness” on the Picture  menu properly.   | 24     |
| The picture is not clear.  | Adjust the focus.   | 11     |
|  | Condensation has accumulated on the lens. Leave the unit for about 2 hours with the power on.   | –      |
| The color of characters or the picture is not appropriate.       | Select the desired color registration in “Panel Alignment” of the Installation  menu.  | 34     |



| Symptom  | Cause and Remedy  | Page |
|--|---|------|
| Image is left on the screen. (image retention) | When high contrast non-moving images are displayed for a long period of time, there may be some image retention on the screen. This is only a temporary condition. Turning off the power for a while will eliminate the retained image. | –    |

### On-screen display

| Symptom  | Cause and Remedy  | Page |
|--|---|------|
| On-screen display does not appear.                 | Set “Status” on the Setup  menu to “On.”   | 29   |
|  | Check if the ON/STANDBY indicator should light in green. When the ON/STANDBY indicator blinks in green, the unit is starting up. Wait until it stops blinking and remains lit in green. | 8    |
| The model name does not disappear from the screen. | The display mode of the unit may be set at the time of purchase. Consult with your local dealer or qualified Sony personnel.  | –    |


### Remote control

| Symptom                           | Cause and Remedy  | Page |
|-----------------------------------|---|------|
| The remote control does not work. | Batteries could be weak. Replace them with new batteries.   | –    |
|                                   | Insert the batteries with the correct polarities.   | –    |
|                                   | If there is a fluorescent lamp near the remote control detector, the unit may work improperly or inadvertently. | –    |
|                                   | Confirm the position of the remote control detector on the unit.  | 4    |

### 3D video images


| Symptom   | Cause and Remedy  | Page |
|---|---|------|
| The video image does not seem like 3D video images. | Check if the 3D glasses are turned on.  | 15   |
|   | Make sure that the battery in the 3D glasses could be weak or is sufficiently charged.  | –    |
|   | Set “2D-3D Display Sel.” to “Auto” or “3D.”   | 30   |
|   | Check if the input signals are compatible 3D signals.   | 55   |
|   | The 3D signals may not be input depending on the specifications of the connected AV selector/AV amplifier/external equipment. If the 3D signal is not input, confirm the specifications and/or settings of the AV selector/AV amplifier/external equipment. | –    |
|   | When the viewing position is too far from the unit, the 3D glasses may not be able to display the images properly.  | 15   |
|   | The screen size is not appropriate. Set the zooming magnification to low or watch the image from farther away from the screen.  | 60   |
|   | For details, see “Precautions for use” of “Using the 3D Glasses.”   | 15   |

## Others

| Symptom                            | Cause and Remedy  | Page   |
|------------------------------------|---|--------|
| The fan is noisy.                  | Check the setting of “High Altitude Mode” on the Setup  menu.  | 29     |
|                                    | Make sure that the room temperature is not too high.  | –      |
|                                    | Check the installation requirements of the unit.<br>Fan speed increases to maintain the product reliability of the projector’s components in a room, where the temperature is higher than normal. The fan noise becomes slightly louder. The approximate normal temperature is 25°C (77°F). | –      |
| The lens shift cannot be adjusted. | The lens shift cannot be adjusted over the range of movement. Adjust the lens shift within the range of movement.   | 10, 60 |

# Warning Indicators

The ON/STANDBY or WARNING indicator lights up or flashes if there is any trouble with your projector.

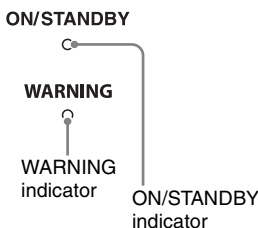

| Flashing/Lighting indicators                           | The number of flashes | Cause and Remedy   |
|--|-----------------------|--|
| ON/STANDBY<br>○  | Twice                 | Close the lamp cover securely, then tighten the screws securely (page 47).<br>Close the filter holder securely (page 48).  |
| WARNING<br>☀ (Flashes in red)                          | Three times           | The temperature of lamp is unusually high. Turn off the power and wait for the lamp to cool, then turn on the power again. If the symptom persists, the lamp may be at the end of its service life. In this case, replace the lamp with a new one (page 46). |
| ON/STANDBY<br>☀ (Flashes in red)                       | Twice                 | The internal temperature is unusually high. Check to ensure that if nothing is blocking the ventilation holes or whether or not the unit is being used at high altitudes.  |
| WARNING<br>☀ (Flashes in red)<br>Both indicators flash | Three times           | The fan is broken. Consult with qualified Sony personnel.  |

## Note


When a warning indicator other than the above starts flashing, and the symptom persists even after carrying out the above methods, consult with qualified Sony personnel.

# Message Lists

## Warning messages

| Symptom  | Cause and Remedy   | Page |
|--|--|------|
| High temp.! Lamp off in 1 min.   | Turn off the power.  | –    |
|  | Check to ensure that nothing is blocking the ventilation holes.  | 4, 5 |
| Frequency is out of range!   | Frequency is out of range. Input a signal that is within the acceptable frequency range of the unit.   | 52   |
| Please replace the Lamp/Filter.  | It is time to replace the lamp. Replace the lamp. Also, replace the air filter too. Restart cleaning the ventilation holes (intake).<br>If this message appears again after you replace the lamp and filter, the lamp replacement process is not complete. Check the lamp replacement process. | 46   |
| <b>Note</b>  |  |      |
| To clear this message, press any button either on the remote control or the control panel of the unit once.                        |  |      |
| Please clean the filter.   | It is time to clean the air filter. Clean the air filter.  | 49   |
| <b>Note</b>  |  |      |
| To clear this message, press any button either on the remote control or the control panel of the unit once.                        |  |      |
| Please clean the filter. Have you finished? Yes No   | It is time to clean the air filter. Clean the air filter.<br>If you cleaned the air filter, select “Yes.” If you did not clean the air filter, select “No.”  | 49   |
| Projector temperature is high. High Altitude Mode should be “On” if projector is being used at high altitude.                      | Check to ensure that nothing is blocking the ventilation holes.  | 4, 5 |
|  | When using the unit at high altitude, set “High Altitude Mode” to “On.”  | 29   |
| <b>Note</b>  |  |      |
| When temperature inside the unit remains high, “High Altitude Mode” is switched to “On” in 1 minute, then the fan speed increases. |  |      |
| Power Saving Mode is set. Projector will automatically enter Standby Mode in 1 minute.   | “Power Saving” is set to “Standby.”  | 29   |
| <b>Note</b>  |  |      |
| If no signal is input, the power turns off after 1 minute, and the projector goes into standby mode.                               |  |      |

## Caution messages

| Symptom   | Cause and Remedy  | Page |
|---|---|------|
|  | No signal is input in the selected input. Check connections.  | 12   |
| Not applicable!   | Press the appropriate button.<br>The operation to be activated by the button is currently prohibited. | –    |
| Settings Lock enabled.  | “Settings Lock” is set to “Level A” or “Level B.”   | 31   |

---

### Updating the Software

You can download files to update the software of the unit. Copy the downloaded files to your USB memory, insert the USB memory to the USB terminal of the unit, then perform the update.

To use the features updated, insert a USB memory device into a PC connected to the internet.

Download the update files from the following Sony website:

<http://www.pro.sony.eu/>

The website also explains how to install the update.

#### Note

Some USB memories may not be supported for use. For details, refer to the website above.

---

### About the x.v.Color

- “x.v.Color” is a promotion name given to the products that have the capability to realize a wide color space based on the xvYCC specifications and is a trademark of Sony Corporation.
- xvYCC is an international standard of the technical specifications of the extended-gamut color space for video signals. The color gamut of xvYCC is wider than the one of sRGB that is used with the current television system.

---

### About the simulated 3D feature

- Use the simulated 3D function taking into account that the picture will provide a different look from the original images, because this function converts the video images.
- Note that if the unit is used for profit or for public viewing, displaying 2D video images as 3D video images by converting to the simulated 3D may constitute an infringement of the rights of authors or producers, which are legally protected.

# Replacing the Lamp and the Air Filter and Cleaning the Ventilation Holes (intake)

## Tools you need to get started:

- Projector Lamp LMP-H210 (optional)
- Standard Phillips screwdriver
- Cloth (for scratch protection)

The lamp used for the light source has a certain lifespan. When the lamp dims, the color balance of the picture becomes strange, or “Please replace the Lamp/Filter.” appears on the screen, the lamp may be exhausted. Replace the lamp with a new one without delay.

Use an LMP-H210 Projector Lamp as the replacement lamp.

The air filter is supplied with the LMP-H210 Projector Lamp. When you replace the lamp, it is also time to replace the air filter.

Whenever you replace the lamp, be sure to replace the air filter with a new one. Also clean the ventilation holes (intake).

## Tip

The lifespan of the lamp used for the light source changes depending on the installation environment or use conditions. You can use the lamp longer by avoiding turning the lamp off until several minutes pass after turning the lamp on.

## Caution

- The lamp remains hot after the unit is turned off with the I/⏻ (ON/STANDBY) button. If you touch the lamp, you may burn your fingers. When you replace the lamp, wait for at least 1 hour for the lamp to cool.
- Do not touch the surface of the lamp. If you touch it, wipe off the fingerprints with a soft cloth.
- Pay special attention to replacing the lamp when the unit is installed on the ceiling.
- When removing the lamp unit, make sure it remains horizontal, then pull straight up.

Do not tilt the lamp unit. If you pull out the lamp unit while tilted and if the lamp breaks, the pieces may scatter, causing injury.



- When you remove the air filter, be careful not to let any dust fall into the projector.
- Replacing the air filter is crucial to maintain the good performance of the projector or to prevent malfunction to it. When a warning message for replacing the air filter appears, replace the air filter immediately.

## Notes

- Be sure to use an LMP-H210 Projector Lamp for replacement. If you use lamps other than the LMP-H210, the unit may malfunction.
- Be sure to turn off the unit and unplug the power cord before replacing the lamp, then check the ON/STANDBY indicator has already been turned off.

**1** Turn off the projector and unplug the AC power cord.

**2** When setting the projector on a flat surface such as a desk etc., put a cloth to prevent the surface from being scratched. Reverse the projector as illustrated, then place it on the cloth.

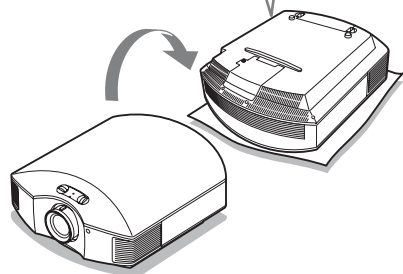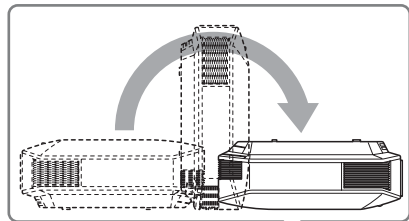



## Notes

- When the lamp is damaged the broken pieces of the lamp may become

scattered, if you do not reverse the projector. This may cause injury.

- Be sure that the projector is placed on a stable surface.


- 3** Loosen the screw on the lamp cover with a Philips screwdriver, and then open the lamp cover.

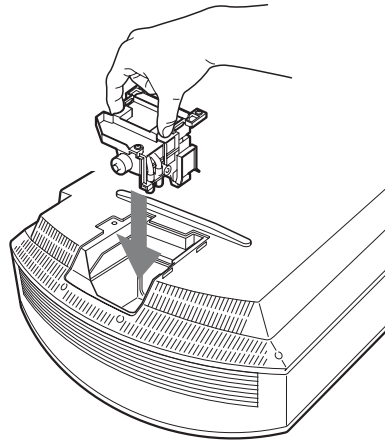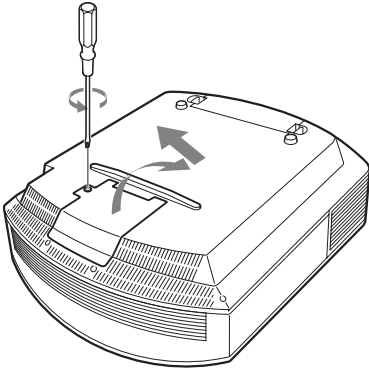

**Note**


Be careful not to touch the optical block inside the unit.

- 4** Loosen the 3 screws on the lamp with the Phillips screwdriver. Hold up the handle, then pull the lamp straight out.

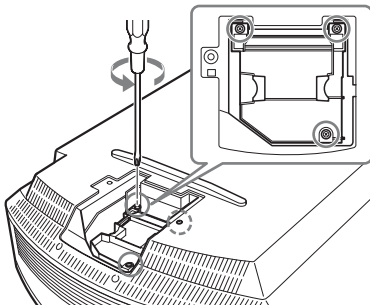


- 5** Hold the handle of the new lamp and push it in securely until it reaches the end, and then tighten the 3 screws.


- 6** Close the lamp cover, then tighten the screws.

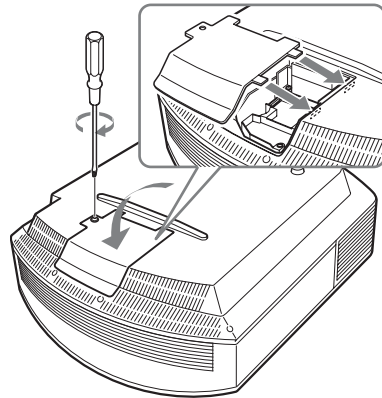

**7** Remove the filter holder.

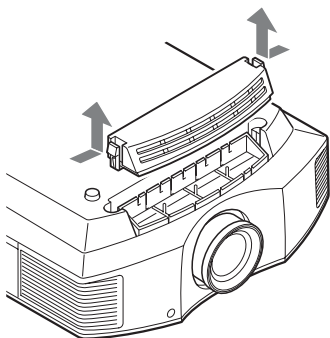

**8** Remove the air filter.

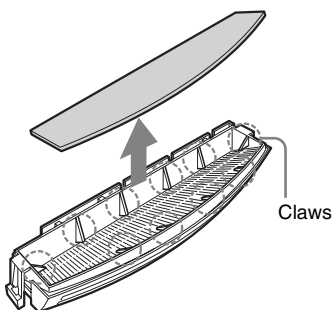

**9** Attach the new air filter so that it fits into each claws (10 positions) on the filter holder.

**Note**

Attach the air filter aligning it with the shape of the filter holder.


Also, do not touch the fan after removing the air filter that is set deep inside the projector.

**10** Attach the filter holder.

**Note**


The projector will not turn on unless the filter holder is securely closed.


**11** Wipe dust off the ventilation holes (intake) with a soft cloth.

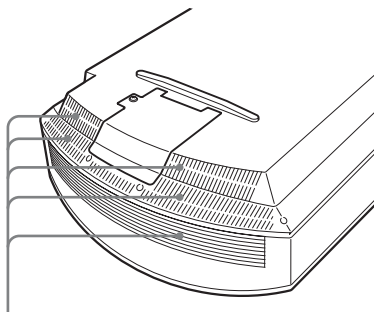

Ventilation holes (intake)

**12** Place the unit back on its original position.


**13** Turn on the unit, then select the lamp setting item on the Setup  menu. The menu screen below will be appeared.

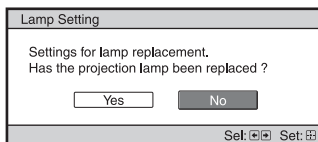

**Tip**

If "Settings Lock" is set to "Level B," set to "Off" once (page 31).

**14** Select "Yes."

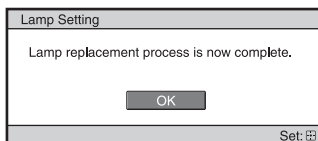

**Caution**

Do not put your hands into the lamp replacement slot, and do not allow any liquid or other objects into the slot to avoid electrical shock or fire.

**Notes**

- The unit will not turn on unless the lamp is securely installed in place.



- The unit will not turn on unless the lamp cover are securely closed.
- To clear a message displayed on the screen, press any button either on the remote control or the control panel of the unit once.

**Note**

The lamp contains mercury. The disposal rules for used fluorescent tubes depend on where you live. Follow the waste disposal policy in your area.

**Disposal of the used lamp****For the customers in the U.S.A. and Canada**

**(Hg)** Lamp contains mercury. Dispose according to applicable local, state/province and federal laws.

For additional information, see [www.sony.com/mercury](http://www.sony.com/mercury)

---

## Cleaning the Air Filter

When “Please clean the filter.” appears on the screen, you should clean the air filter. The air filter should be cleaned every 1,500 hours. This value varies depending on the environment or how the projector is used. 1,500 hours are approximate.

After washing the air filter with a mild detergent solution, dry it in a shaded place.


**Notes**

- When you clean the air filter, make sure you do not damage it.  
For details on how to attach and remove the air filter, see “Replacing the Lamp and the Air Filter and Cleaning the Ventilation Holes (intake)” Steps 7 to 10 (page 48).
- When you remove the air filter, be careful not to let any dust fall into the projector.
- Cleaning the air filter is crucial to maintain the good performance of the projector or to prevent malfunction to it. When a warning message for cleaning the air filter appears, clean the air filter immediately.

---

## Fitting the Lens Cap

When fitting the lens cap onto the lens, position the lens cap so that the concave on the side of the lens cap will fit the zoom lever, as shown in the illustration.

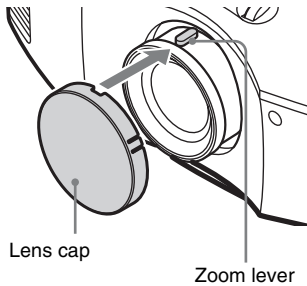

---

## Cleaning

### Cleaning the lens

The lens surface is especially treated to reduce reflection of light.

As incorrect maintenance may impair the performance of the projector, take care with respect to the following:

- Wipe the lens gently with a soft cloth such as a cleaning cloth or glass cleaning cloth.
- Stubborn stains may be removed with a soft cloth such as a cleaning cloth or glass cleaning cloth lightly dampened with water.
- Never use solvent such as alcohol, benzene or thinner, or acid, alkaline or abrasive detergent, or chemical cleaning cloth, as they will damage the lens surface.

### Cleaning the cabinet

- To remove dust from the cabinet, wipe gently with a soft cloth. If dust is persistent, wipe with a soft cloth slightly moistened with a diluted mild detergent solution.
- Never use any type of abrasive pad, alkaline/acid cleaner, scouring powder, or volatile solvent, such as alcohol, benzene, thinner or insecticide.
- Clean the unit with a cleaning cloth. Wiping with a dirty cloth may scratch the unit.
- Using such materials or maintaining prolonged contact with rubber or vinyl materials may result in damage to the screen surface and cabinet material.

# Specifications

| Item                            | Description   |   |
|---------------------------------|---|---|
| Display system                  | SXRD panel, 1 lens, projection system   |   |
| Display device                  | Size of effective display area  | 0.61-inch (15.4 mm) SXRD panel          |
|                                 | Number of pixels  | 6,220,800 pixels (2,073,600 pixels × 3) |
| Projection lens                 | 1.6 times zoom lens (manual)<br>f = 18.7 mm to 29.7 mm<br>F2.52 to F3.02  |   |
| Light source                    | Ultra High Pressure Lamp 215 W type   |   |
| Screen size                     | 40 inches to 300 inches (1,016 mm to 7,620 mm)<br>(measured diagonally)   |   |
| Acceptable video signals        | 480/60p, 576/50p, 720/60p, 720/50p, 1080/60i, 1080/50i, 1080/60p, 1080/50p, 1080/24p  |   |
| Acceptable computer signals     | fH: 19 kHz to 72 kHz<br>fV: 48 Hz to 92 Hz<br>Maximum resolution 1,920 × 1,080<br>For details, see “Preset Signals” (page 52).            |   |
| HDMI (2 inputs), HDCP compliant | Digital RGB/Y Pb/Cb Pr/Cr   |   |
| Other inputs/<br>outputs        | TRIGGER   | Minijack, DC 12 V Max. 100 mA           |
|                                 | REMOTE  | RS-232C: D-sub 9-pin (female)           |
|                                 | LAN   | RJ45, 10BASE-T/100BASE-TX               |
|                                 | IR IN   | Minijack                                |
|                                 | USB   | DC 5 V, Max. 500 mA                     |
| Outside dimensions (w/h/d)      | 407.4 mm × 179.2 mm × 463.9 mm (16 1/8 × 7 1/8 × 18 3/8 inches)   |   |
| Mass                            | Approx. 9 kg (20 lb)  |   |
| Power requirements              | AC 100 V to 240 V, 3.1 A to 1.3 A, 50/60 Hz   |   |
| Power consumption               | Max. 310 W  |   |
| Power consumption (Standby)     | 0.4 W   |   |
| Operating temperature           | 5°C to 35°C (41°F to 95°F)  |   |
| Operating humidity              | 35% to 85% (no condensation)  |   |
| Storage temperature             | -20°C to +60°C (-4°F to +140°F)   |   |
| Storage humidity                | 10% to 90%  |   |
| Supplied accessories            | See “Checking the Supplied Accessories” in the supplied Quick Reference Manual.   |   |
| Optional accessories            | <b>Projector Lamp:</b> LMP-H210 (for replacement)<br><b>Projector Suspension Support:</b> PSS-H10<br><b>Active 3D Glasses:</b> TDG-BT500A |   |

## Notes

- The values for mass and dimensions are approximate.
- Not all optional accessories are available in all countries and area. Please check with your local Sony Authorized Dealer.
- Information on accessories in this manual is current as of September 2015.

Design and specifications of this unit and its optional accessories are subject to change without notice.

## Preset Signals

The following table shows the signals and video formats which you can project using this unit. When a signal other than the preset signal shown below is input, the picture may not be displayed properly.

| Preset memory no. | Preset signal (resolution)         |   | fH (kHz) | fV (Hz) | Sync         |
|-------------------|------------------------------------|---|----------|---------|--------------|
| 5                 | 480/60p                            | 480/60p<br>(Progressive NTSC)<br>(720 × 480p) | 31.470   | 60.000  | –            |
| 6                 | 576/50p                            | 576/50p<br>(Progressive PAL)<br>(720 × 576p)  | 31.250   | 50.000  | –            |
| 7                 | 1080/60i                           | 1080/60i<br>(1920 × 1080i)                    | 33.750   | 60.000  | –            |
| 8                 | 1080/50i                           | 1080/50i<br>(1920 × 1080i)                    | 28.130   | 50.000  | –            |
| 10                | 720/60p                            | 720/60p<br>(1280 × 720p)                      | 45.000   | 60.000  | –            |
| 11                | 720/50p                            | 720/50p<br>(1280 × 720p)                      | 37.500   | 50.000  | –            |
| 12                | 1080/60p                           | 1080/60p<br>(1920 × 1080p)                    | 67.500   | 60.000  | –            |
| 13                | 1080/50p                           | 1080/50p<br>(1920 × 1080p)                    | 56.260   | 50.000  | –            |
| 14                | 1080/24p                           | 1080/24p<br>(1920 × 1080p)                    | 26.973   | 23.976  | –            |
| 18                | 720/60p<br>(Frame packing)         | 720/60p<br>(1280 × 720p)                      | 90.000   | 60.000  | –            |
| 19                | 720/50p<br>(Frame packing)         | 720/50p<br>(1280 × 720p)                      | 75.000   | 50.000  | –            |
| 20                | 1080/24p<br>(Frame packing)        | 1080/24p<br>(1920 × 1080p)                    | 53.946   | 23.976  | –            |
| 26                | 640 × 480                          | VESA 60                                       | 31.469   | 59.940  | H-NEG, V-NEG |
| 32                | 800 × 600                          | VESA 60                                       | 37.879   | 60.317  | H-POS, V-POS |
| 37                | 1024 × 768                         | VESA 60                                       | 48.363   | 60.004  | H-NEG, V-NEG |
| 45                | 1280 × 960                         | VESA 60                                       | 60.000   | 60.000  | H-POS, V-POS |
| 47                | 1280 × 1024                        | VESA 60                                       | 63.974   | 60.013  | H-POS, V-POS |
| 50                | 1400 × 1050                        | SXGA+   | 65.317   | 59.978  | H-NEG, V-POS |
| 55                | 1280 × 768                         | 1280 × 768/60                                 | 47.776   | 59.87   | H-NEG, V-POS |
| 71                | 1920 × 1080/60i<br>(Frame packing) | 1080/60i<br>(1920 × 1080i)                    | 67.500   | 60.000  | –            |

| Preset memory no. | Preset signal (resolution)         |                            | fH (kHz) | fV (Hz) | Sync |
|-------------------|------------------------------------|----------------------------|----------|---------|------|
| 72                | 1920 × 1080/50i<br>(Frame packing) | 1080/50i<br>(1920 × 1080i) | 56.250   | 50.000  | –    |

## Preset memory numbers for each input signal

### Digital signal

| Signal                                  | Preset memory number                  |
|---|---------------------------------------|
| Component signal (HDMI 1, 2 connectors) | 5 to 8, 10 to 14, 18 to 20, 71, 72    |
| Video GBR signal (HDMI 1, 2 connectors) | 5 to 8, 10 to 14, 18 to 20, 71, 72    |
| Computer signal (HDMI 1, 2 connectors)  | 10 to 13*, 26, 32, 37, 45, 47, 50, 55 |

\* Some digital signals input from computers may be displayed as preset memory number of Component or Video GBR signal.

## Input Signals and Adjustable/Setting Items

The items in the menus available to adjust differ depending on the input signal. The following tables indicate them. The items that cannot be adjusted/set are not displayed in the menu.

### Picture menu

| Item                           | Input signal                          |                                       |                 |
|--------------------------------|---------------------------------------|---------------------------------------|-----------------|
|                                | Component signal                      | Video GBR signal                      | Computer signal |
| Reality Creation               | ●                                     | ●                                     | –               |
| Advanced Iris                  | ●                                     | ●                                     | ●               |
| Contrast Enhancer              | ●                                     | ●                                     | –               |
| Lamp Control                   | ●                                     | ●                                     | ●               |
| Motionflow* <sup>1</sup>       | ● (excluding preset memory number 19) | ● (excluding preset memory number 19) | –               |
| Contrast                       | ●                                     | ●                                     | ●               |
| Brightness                     | ●                                     | ●                                     | ●               |
| Color                          | ●                                     | ●                                     | –               |
| Hue                            | ●                                     | ●                                     | –               |
| Color Temp.                    | ●                                     | ●                                     | ●               |
| Sharpness                      | ●                                     | ●                                     | –               |
| NR                             | ●                                     | ●                                     | –               |
| MPEG NR                        | ●                                     | ●                                     | ●               |
| Smooth Gradation               | ●                                     | ●                                     | –               |
| Film Mode                      | ● (excluding preset memory number 14) | ● (excluding preset memory number 14) | –               |
| Gamma Correction* <sup>2</sup> | ●                                     | ●                                     | ●               |
| Color Correction               | ●                                     | ●                                     | ●               |
| Clear White                    | ●                                     | ●                                     | ●               |
| x.v.Color                      | ●                                     | –                                     | –               |
| Color Space                    | ●                                     | ●                                     | ●               |

●: Adjustable/can be set

–: Not adjustable/cannot be set

\*1: For further details, refer to the tables in “Motionflow” (page 57).

\*2: The setting can be made only when “x.v.Color” is set to “Off”.

### Screen menu

| Item   | Input signal     |                  |                 |
|--------|------------------|------------------|-----------------|
|        | Component signal | Video GBR signal | Computer signal |
| Aspect | ●                | ●                | ●* <sup>1</sup> |

●: Adjustable/can be set

–: Not adjustable/cannot be set

\*1: If the input signal is from a computer, the setting cannot be made when the aspect ratio is 16:9 or wider (fixed at “Normal”).

**Note**

When connecting a cable such as an HDMI cable, etc., check the type of the signal in the Information **i** menu (page 36) and “Digital signal” (page 53), and check items that are adjustable/can be set.

## Compatible 3D Signals

This unit accepts the following types of 3D signals.

| Resolution         | 3D signal format    |
|--------------------|---------------------|
| 720/60p, 720/50p   | Side-by-Side format |
|                    | Over-Under format*  |
|                    | Frame packing*      |
| 1080/60i, 1080/50i | Side-by-Side format |
|                    | Frame packing       |
| 1080/24p           | Side-by-Side format |
|                    | Over-Under format*  |
|                    | Frame packing*      |
| 1080/60p, 1080/50p | Side-by-Side format |
|                    | Over-Under format   |

\*: Mandatory 3D format of the HDMI standards.

## 3D Signals and Adjustable/Setting Items

Some items on the menus may not be available to adjust/set, depending on the 3D signals. The items that cannot be adjusted are not displayed on the menu. The following tables indicate those items.


| Item                     | 3D signals          |                       |          |                       |
|--------------------------|---------------------|-----------------------|----------|-----------------------|
|                          | 720/60p,<br>720/50p | 1080/60i,<br>1080/50i | 1080/24p | 1080/60p,<br>1080/50p |
| Reality Creation         | ●                   | ●                     | ●        | ●                     |
| Advanced Iris            | –                   | –                     | –        | –                     |
| Lamp Control             | ●                   | ●                     | ●        | ●                     |
| Motionflow* <sup>1</sup> | ●                   | ●                     | ●        | ●                     |
| NR                       | –                   | –                     | –        | –                     |
| MPEG NR                  | –                   | –                     | –        | –                     |
| Smooth Gradation         | –                   | –                     | –        | –                     |
| Film Mode                | –                   | ●                     | –        | –                     |
| x.v.Color                | ●                   | ●                     | ●        | ●                     |
| Aspect* <sup>2</sup>     | ●                   | ●                     | ●        | ●                     |

●: Adjustable/can be set

–: Not adjustable/cannot be set

\*1: The item is not available for Frame Packing/Over-Under on 720/60p, or Over-Under on 1080/60p.

\*2: For further details, refer to the tables in “Aspect Mode” (page 56).

When the unit is set to convert 2D video images to 3D video images, some items on the menus may be not available to adjust/set, depending on the “3D Format” settings on the Function  menu. The items that cannot be adjusted are not displayed on the menu. The following tables indicate these items.

| Item                     | 3D signals |              |              |
|--------------------------|------------|--------------|--------------|
|                          | Over-Under | Side-by-Side | Simulated 3D |
| Reality Creation         | ●          | ●            | ●            |
| Advanced Iris            | –          | –            | –            |
| Lamp Control             | ●          | ●            | ●            |
| Motionflow* <sup>1</sup> | ●          | ●            | ●            |
| NR                       | –          | –            | ●            |
| MPEG NR                  | –          | –            | ●            |
| Smooth Gradation         | –          | –            | ●            |
| Film Mode* <sup>2</sup>  | –          | ●            | ●            |
| x.v.Color                | ●          | ●            | ●            |
| Aspect* <sup>3</sup>     | ●          | ●            | ●            |

●: Adjustable/can be set

–: Not adjustable/cannot be set

\*1: The item is not available for Over-Under on 720/60p, or Over-Under on 1080/60p.

\*2: The item is not available for 720/60p, or Over-Under on 1080/60p.

\*3: For further details, refer to the tables in “Aspect Mode” (page 56).

## Aspect Mode

Selectable items vary depending on the type of input signal or 3D format.

For details, see the tables below. Items that cannot be selected are not displayed in the menu.

### 2D

| Acceptable signals                | 1920 × 1080<br>1280 × 720 | 720 × 480<br>720 × 576 | Others                        |
|-----------------------------------|---------------------------|------------------------|-------------------------------|
| Preset memory number<br>(page 52) | 7, 8, 10 to 14            | 5, 6                   | 26, 32, 37, 45, 47, 50,<br>55 |
| Normal                            | ●                         | ●                      | ●* <sup>1</sup>               |
| V Stretch                         | ●                         | ●                      | –                             |
| Squeeze                           | ●                         | ●                      | –                             |
| Stretch                           | –                         | ●                      | –                             |

\*1: Not displayed in the menu as fixed at Normal.



### 3D

| Acceptable signals             | 1920 × 1080, 1280 × 720 |            |                  |                |
|--------------------------------|-------------------------|------------|------------------|----------------|
| 3D format                      | Side-by-Side            | Over-Under | Frame packing    | Simulated 3D   |
| Preset memory number (page 52) | 7, 8, 10 to 14          | 10 to 14   | 18 to 20, 71, 72 | 7, 8, 10 to 14 |
| Normal                         | ●                       | ●          | ●                | ●              |
| V Stretch                      | ●                       | ●          | ●                | ●              |
| Squeeze                        | ●                       | ●          | ●                | ●              |
| Stretch                        | –                       | –          | –                | –              |

### Motionflow

Selectable items vary depending on the type of input signal or 3D format.  
For details, see the tables below. Items that cannot be selected are not displayed in the menu.

### 2D

| Acceptable signals             | 1920 × 1080<br>1280 × 720<br>720 × 480<br>720 × 576 | Others                     |
|--------------------------------|---|----------------------------|
| Preset memory number (page 52) | 5 to 8, 10 to 13                                    | 26, 32, 37, 45, 47, 50, 55 |
| Impulse                        | ●   | –                          |
| Combination                    | ●   | –                          |
| Smooth High                    | ●   | –                          |
| Smooth Low                     | ●   | –                          |
| True Cinema                    | ●   | –                          |

### 3D

| Acceptable signals             | 1920 × 1080, 1280 × 720 |    |            |            |        |    |                |                |
|--------------------------------|-------------------------|----|------------|------------|--------|----|----------------|----------------|
| 3D format                      | Frame packing           |    |            | Over-Under |        |    | Side-by-Side   | Simulated 3D   |
| Preset memory number (page 52) | 18                      | 19 | 20, 71, 72 | 10, 12     | 11, 13 | 14 | 7, 8, 10 to 14 | 7, 8, 10 to 14 |
| Impulse                        | –                       | –  | –          | –          | –      | –  | –              | –              |
| Combination                    | –                       | –  | –          | –          | –      | –  | –              | –              |
| Smooth High                    | –                       | –  | ●          | –          | –      | ●  | ●              | ●              |
| Smooth Low                     | –                       | ●  | ●          | –          | ●      | ●  | ●              | ●              |
| True Cinema                    | –                       | –  | –          | –          | –      | –  | –              | –              |

## Storage Conditions of Adjustable/Setting Items

Each adjustable/setting item is individually stored for each input connector. For further details, see the tables below.

### Preset memory numbers for each input signal

| Input       | Preset memory numbers                        |
|-------------|--|
| HDMI 1 (2D) | 5 to 8, 10 to 14, 26, 32, 37, 45, 47, 50, 55 |
| HDMI 2 (2D) |  |
| HDMI 1 (3D) | 7, 8, 10 to 14, 18 to 20, 71, 72             |
| HDMI 2 (3D) |  |


### Picture menu

| Item              | Storage conditions                           |
|-------------------|--|
| Calib. Preset     | For each input connector and Calib. Preset   |
| Reset             |  |
| Reality Creation  |  |
| Advanced Iris     |  |
| Contrast Enhancer |  |
| Lamp Control      |  |
| Motionflow        |  |
| Contrast          |  |
| Brightness        |  |
| Color             |  |
| Hue               |  |
| Color Temp.       |  |
| D93-D55           |  |
| Custom 1-5        |  |
| Gain R            | For each Color Temp., D93-D55 and Custom 1-5 |
| Gain G            |  |
| Gain B            |  |
| Bias R            |  |
| Bias G            |  |
| Bias B            |  |



| Item             | Storage conditions                         |
|------------------|--|
| Sharpness        | For each input connector and Calib. Preset |
| NR               |  |
| MPEG NR          |  |
| Smooth Gradation |  |
| Film Mode        |  |
| Gamma Correction |  |
| Color Correction |  |
| Clear White      |  |
| x.v.Color        |  |
| Color Space      |  |

# Projection Distance and Lens Shift Range

The projection distance refers to the distance between the front of the lens and the projected surface.

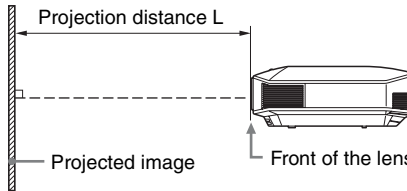


The lens shift range represents the distance in percent (%) by which the lens can be shifted from the center of the projected image. The lens shift range is regarded as 0% when the point **(A)** in the illustration (point where a line drawn from the center of the lens and the projected image cross at right angles) is aligned with the center of the projected image and full width or full height of the projected image is regarded as 100%.

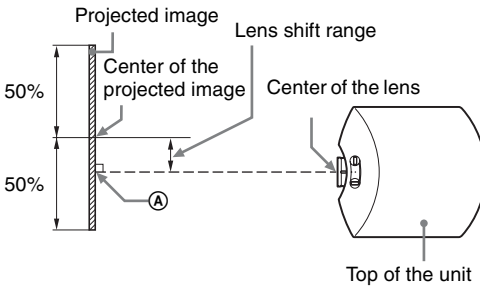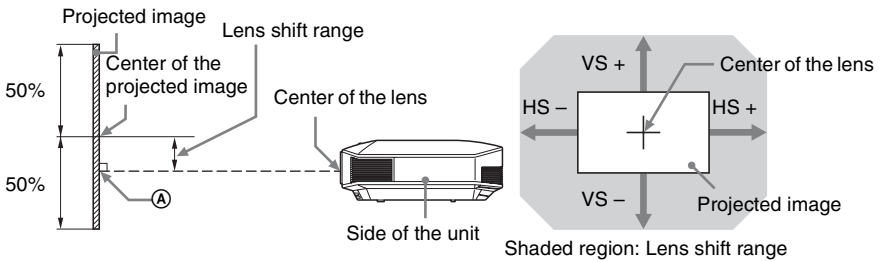

- VS +: Vertical lens shift range (up) [%]
- VS -: Vertical lens shift range (down) [%]
- HS +: Horizontal lens shift range (right) [%]
- HS -: Horizontal lens shift range (left) [%]

## When projecting in 1.78:1 (16:9) format

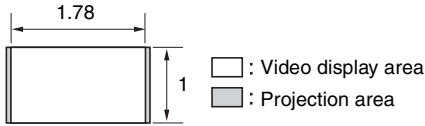

### Projection distance

Unit: m (inches)

| Projection image size |                        | Projection distance L   |
|-----------------------|------------------------|-------------------------|
| Diagonal              | Width × Height         |                         |
| 80" (2.03 m)          | 1.77 × 1.00 (70 × 39)  | 2.40 – 3.83 (95 – 150)  |
| 100" (2.54 m)         | 2.21 × 1.25 (87 × 49)  | 3.00 – 4.79 (119 – 188) |
| 120" (3.05 m)         | 2.66 × 1.49 (105 × 59) | 3.61 – 5.76 (142 – 226) |
| 150" (3.81 m)         | 3.32 × 1.87 (131 × 74) | 4.52 – 7.20 (178 – 283) |
| 200" (5.08 m)         | 4.43 × 2.49 (174 × 98) | 6.04 – 9.61 (238 – 378) |


### Projection distance formula

D: Projected image size (Diagonal)

Unit: m (inches)

| Projection distance L (minimal length)                                 | Projection distance L (maximal length)                                 |
|--|--|
| $L = 0.030349 \times D - 0.0354$<br>$(L = 1.194837 \times D - 1.3915)$ | $L = 0.048191 \times D - 0.0212$<br>$(L = 1.897302 \times D - 0.8329)$ |

### Lens shift range

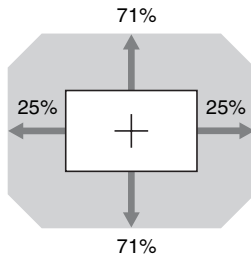


$$VS + = VS - = 71 - 2.840 \times (HS + \text{ or } HS -) [\%]$$

$$HS + = HS - = 25 - 0.352 \times (VS + \text{ or } VS -) [\%]$$

# Dimensions


## Front

Unit: mm (inches)

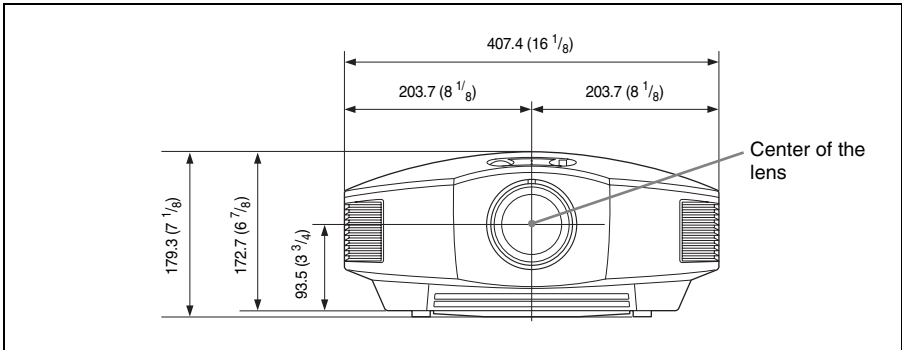

## Bottom


Unit: mm (inches)

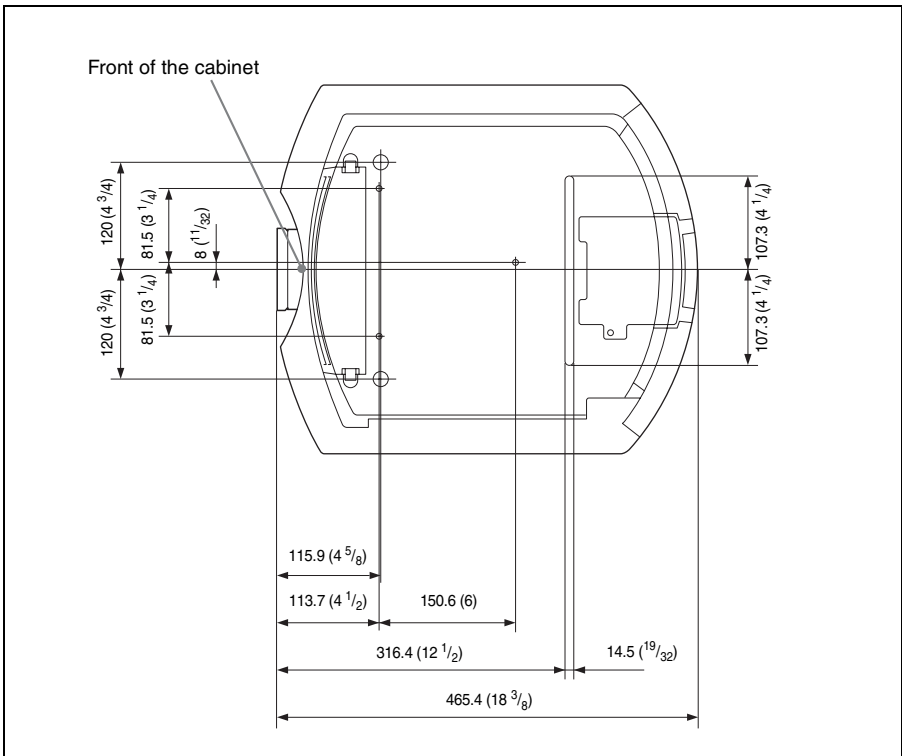

# Attaching the PSS-H10 projector suspension support


## Front view

Unit: mm (inches)

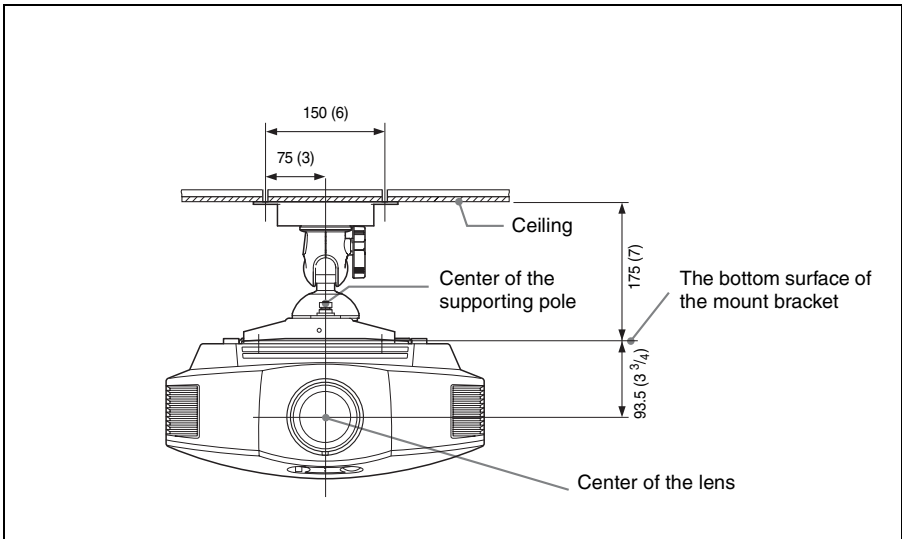


## Side view

Unit: mm (inches)

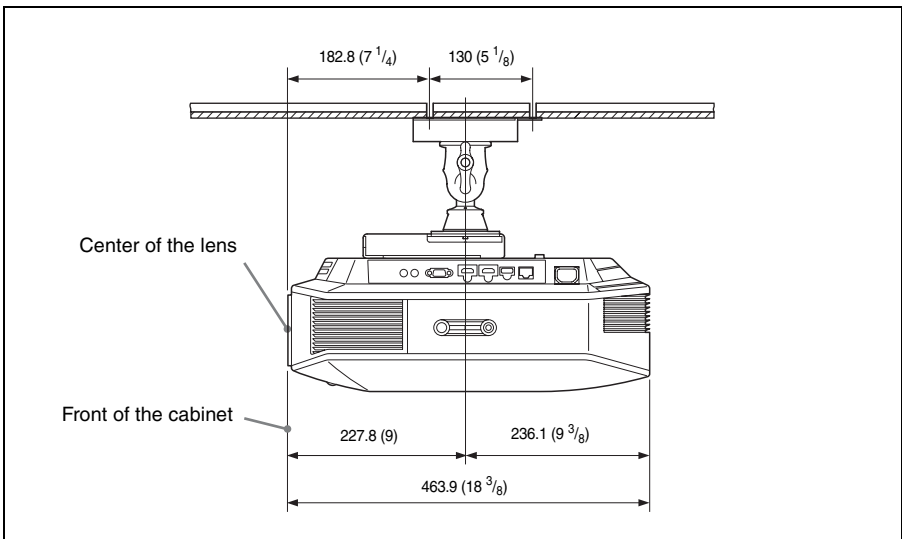

**Top view**

Unit: mm (inches)

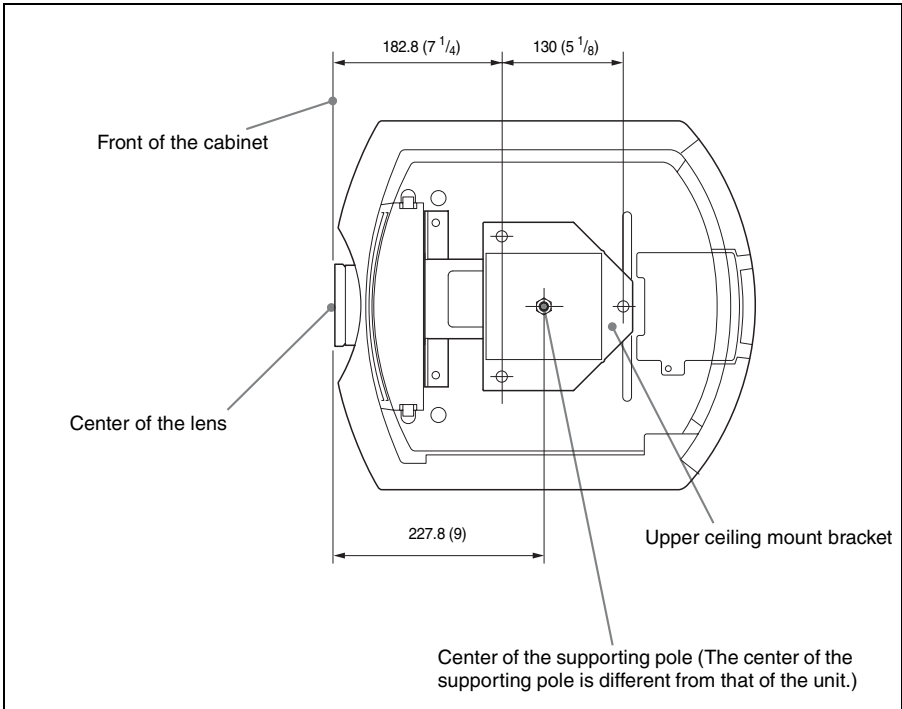



---

# NOTICES AND LICENCES FOR SOFTWARE USED IN THIS PRODUCT

## GPL/LGPL LICENSED SOFTWARE

The following GPL executables and LGPL libraries are used in this product and are subject to the GPL/LGPL License Agreements included as part of this documentation:

### Package list:

linux-kernel  
alsa-lib  
busybox  
crypto  
directfb  
dosfstools  
e2fsprogs  
exceptionmonitor  
fuse  
gdisk  
glib  
glibc  
iptables  
libmicrohttpd  
libnuma (in numactl)  
procps  
pump-autoip  
XZ utils

Source code for these executables and libraries, as well as other executables and libraries, can be obtained using the following link:  
<http://oss.sony.net/Products/Linux/>

=====

## GNU GENERAL PUBLIC LICENSE Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301, USA. Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

### Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software--to make sure the software is free for all its users. This General Public License applies to most of

the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Library General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it. For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations. Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

The precise terms and conditions for copying, distribution and modification follow.

## GNU GENERAL PUBLIC LICENSE TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

**0.** This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter,

translation is included without limitation in the term “modification”). Each licensee is addressed as “you”. Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

**1.** You may copy and distribute verbatim copies of the Program’s source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

**2.** You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

**a)** You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.

**b)** You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.

**c)** If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other

licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

**3.** You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:

**a)** Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,

**b)** Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,

**c)** Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

**4.** You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will

automatically terminate your rights under this License.

However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

**5.** You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

**6.** Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.

**7.** If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances. It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

**8.** If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

**9.** The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns. Each version is given a distinguishing version number.

If the Program specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

**10.** If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

## **NO WARRANTY**

BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER,

OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

## END OF TERMS AND CONDITIONS

### How to Apply These Terms to Your New Programs

If you develop a new program, and you want it to be of the greatest possible use to the public, the best way to achieve this is to make it free software which everyone can redistribute and change under these terms.

To do so, attach the following notices to the program. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the "copyright" line and a pointer to where the full notice is found.

<one line to give the program's name and a brief idea of what it does.> Copyright (C) <year> <name of author>

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301, USA. Also add information on how to contact you by electronic and paper mail.

If the program is interactive, make it output a short notice like this when it starts in an interactive mode: Gnomovision version 69, Copyright (C) year name of author Gnomovision comes with ABSOLUTELY NO WARRANTY; for details type 'show w'.

This is free software, and you are welcome to redistribute it under certain conditions; type 'show c' for details.

The hypothetical commands 'show w' and 'show c' should show the appropriate parts of the General

Public License. Of course, the commands you use may be called something other than 'show w' and 'show c'; they could even be mouse-clicks or menu items--whatever suits your program.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a "copyright disclaimer" for the program, if necessary. Here is a sample; alter the names:

Yoyodyne, Inc., hereby disclaims all copyright interest in the program 'Gnomovision' (which makes passes at compilers) written by James Hacker.  
<signature of Ty Coon>, 1 April 1989

Ty Coon, President of Vice

This General Public License does not permit incorporating your program into proprietary programs.

If your program is a subroutine library, you may consider it more useful to permit linking proprietary applications with the library. If this is what you want to do, use the GNU Library General Public License instead of this License.

=====

## GNU LESSER GENERAL PUBLIC LICENSE

### Version 2.1, February 1999

Copyright (C) 1991, 1999 Free Software Foundation, Inc. 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301, USA. Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

[This is the first released version of the Lesser GPL. It also counts as the successor of the GNU Library Public License, version 2, hence the version number 2.1.]

### Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public Licenses are intended to guarantee your freedom to share and change free software--to make sure the software is free for all its users.

This license, the Lesser General Public License, applies to some specially designated software packages--typically libraries--of the Free Software Foundation and other authors who decide to use it. You can use it too, but we suggest you first think carefully about whether this license or the ordinary General Public License is the better strategy to use in any particular case, based on the explanations below. When we speak of free software, we are referring to freedom of use, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish); that you receive source code or can get it if you want it; that you can change the software and use pieces of it in new free

programs; and that you are informed that you can do these things.

To protect your rights, we need to make restrictions that forbid distributors to deny you these rights or to ask you to surrender these rights. These restrictions translate to certain responsibilities for you if you distribute copies of the library or if you modify it. For example, if you distribute copies of the library, whether gratis or for a fee, you must give the recipients all the rights that we gave you. You must make sure that they, too, receive or can get the source code. If you link other code with the library, you must provide complete object files to the recipients, so that they can relink them with the library after making changes to the library and recompiling it. And you must show them these terms so they know their rights. We protect your rights with a two-step method: (1) we copyright the library, and (2) we offer you this license, which gives you legal permission to copy, distribute and/or modify the library.

To protect each distributor, we want to make it very clear that there is no warranty for the free library. Also, if the library is modified by someone else and passed on, the recipients should know that what they have is not the original version, so that the original author's reputation will not be affected by problems that might be introduced by others.

Finally, software patents pose a constant threat to the existence of any free program. We wish to make sure that a company cannot effectively restrict the users of a free program by obtaining a restrictive license from a patent holder. Therefore, we insist that any patent license obtained for a version of the library must be consistent with the full freedom of use specified in this license.

Most GNU software, including some libraries, is covered by the ordinary GNU General Public License. This license, the GNU Lesser General Public License, applies to certain designated libraries, and is quite different from the ordinary General Public License. We use this license for certain libraries in order to permit linking those libraries into non-free programs.

When a program is linked with a library, whether statically or using a shared library, the combination of the two is legally speaking a combined work, a derivative of the original library. The ordinary General Public License therefore permits such linking only if the entire combination fits its criteria of freedom. The Lesser General Public License permits more lax criteria for linking other code with the library.

We call this license the "Lesser" General Public License because it does Less to protect the user's freedom than the ordinary General Public License. It also provides other free software developers Less of an advantage over competing non-free programs. These disadvantages are the reason we use the ordinary General Public License for many libraries.

However, the Lesser license provides advantages in certain special circumstances.

For example, on rare occasions, there may be a special need to encourage the widest possible use of a certain library, so that it becomes a de-facto standard. To achieve this, non-free programs must be allowed to use the library. A more frequent case is that a free library does the same job as widely used non-free libraries. In this case, there is little to gain by limiting the free library to free software only, so we use the Lesser General Public License.

In other cases, permission to use a particular library in non-free programs enables a greater number of people to use a large body of free software. For example, permission to use the GNU C Library in non-free programs enables many more people to use the whole GNU operating system, as well as its variant, the GNU/Linux operating system.

Although the Lesser General Public License is Less protective of the users' freedom, it does ensure that the user of a program that is linked with the Library has the freedom and the wherewithal to run that program using a modified version of the Library. The precise terms and conditions for copying, distribution and modification follow. Pay close attention to the difference between a "work based on the library" and a "work that uses the library". The former contains code derived from the library, whereas the latter must be combined with the library in order to run.

## **GNU LESSER GENERAL PUBLIC LICENSE TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION**

**0.** This License Agreement applies to any software library or other program which contains a notice placed by the copyright holder or other authorized party saying it may be distributed under the terms of this Lesser General Public License (also called "this License"). Each licensee is addressed as "you".

A "library" means a collection of software functions and/or data prepared so as to be conveniently linked with application programs (which use some of those functions and data) to form executables.

The "Library", below, refers to any such software library or work which has been distributed under these terms.

A "work based on the Library" means either the Library or any derivative work under copyright law; that is to say, a work containing the Library or a portion of it, either verbatim or with modifications and/or translated straightforwardly into another language. (Hereinafter, translation is included without limitation in the term "modification".)

"Source code" for a work means the preferred form of the work for making modifications to it. For a library, complete source code means all the source code for all modules it contains, plus any associated interface

definition files, plus the scripts used to control compilation and installation of the library. Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running a program using the Library is not restricted, and output from such a program is covered only if its contents constitute a work based on the Library (independent of the use of the Library in a tool for writing it). Whether that is true depends on what the Library does and what the program that uses the Library does.

**1.** You may copy and distribute verbatim copies of the Library's complete source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and distribute a copy of this License along with the Library.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

**2.** You may modify your copy or copies of the Library or any portion of it, thus forming a work based on the Library, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

**a)** The modified work must itself be a software library.

**b)** You must cause the files modified to carry prominent notices stating that you changed the files and the date of any change.

**c)** You must cause the whole of the work to be licensed at no charge to all third parties under the terms of this License.

**d)** If a facility in the modified Library refers to a function or a table of data to be supplied by an application program that uses the facility, other than as an argument passed when the facility is invoked, then you must make a good faith effort to ensure that, in the event an application does not supply such function or table, the facility still operates, and performs whatever part of its purpose remains meaningful.

(For example, a function in a library to compute square roots has a purpose that is entirely well-defined independent of the application. Therefore, Subsection 2d requires that any application-supplied function or table used by this function must be optional: if the application does not supply it, the square root function must still compute square roots.) These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Library, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on

the Library, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Library.

In addition, mere aggregation of another work not based on the Library with the Library (or with a work based on the Library) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

**3.** You may opt to apply the terms of the ordinary GNU General Public License instead of this License to a given copy of the Library. To do this, you must alter all the notices that refer to this License, so that they refer to the ordinary GNU General Public License, version 2, instead of to this License. (If a newer version than version 2 of the ordinary GNU General Public License has appeared, then you can specify that version instead if you wish.) Do not make any other change in these notices.

Once this change is made in a given copy, it is irreversible for that copy, so the ordinary GNU General Public License applies to all subsequent copies and derivative works made from that copy. This option is useful when you wish to copy part of the code of the Library into a program that is not a library.

**4.** You may copy and distribute the Library (or a portion or derivative of it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange.

If distribution of object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place satisfies the requirement to distribute the source code, even though third parties are not compelled to copy the source along with the object code.

**5.** A program that contains no derivative of any portion of the Library, but is designed to work with the Library by being compiled or linked with it, is called a "work that uses the Library". Such a work, in isolation, is not a derivative work of the Library, and therefore falls outside the scope of this License. However, linking a "work that uses the Library" with the Library creates an executable that is a derivative of the Library (because it contains portions of the Library), rather than a "work that uses the library". The executable is therefore covered by this License. Section 6 states terms for distribution of such executables.

When a “work that uses the Library” uses material from a header file that is part of the Library, the object code for the work may be a derivative work of the Library even though the source code is not. Whether this is true is especially significant if the work can be linked without the Library, or if the work is itself a library. The threshold for this to be true is not precisely defined by law.

If such an object file uses only numerical parameters, data structure layouts and accessors, and small macros and small inline functions (ten lines or less in length), then the use of the object file is unrestricted, regardless of whether it is legally a derivative work. (Executables containing this object code plus portions of the Library will still fall under Section 6.) Otherwise, if the work is a derivative of the Library, you may distribute the object code for the work under the terms of Section 6. Any executables containing that work also fall under Section 6, whether or not they are linked directly with the Library itself.

**6.** As an exception to the Sections above, you may also combine or link a “work that uses the Library” with the Library to produce a work containing portions of the Library, and distribute that work under terms of your choice, provided that the terms permit modification of the work for the customer’s own use and reverse engineering for debugging such modifications.

You must give prominent notice with each copy of the work that the Library is used in it and that the Library and its use are covered by this License. You must supply a copy of this License. If the work during execution displays copyright notices, you must include the copyright notice for the Library among them, as well as a reference directing the user to the copy of this License. Also, you must do one of these things:

**a)** Accompany the work with the complete corresponding machine-readable source code for the Library including whatever changes were used in the work (which must be distributed under Sections 1 and 2 above); and, if the work is an executable linked with the Library, with the complete machine-readable “work that uses the Library”, as object code and/or source code, so that the user can modify the Library and then relink to produce a modified executable containing the modified Library. (It is understood that the user who changes the contents of definitions files in the Library will not necessarily be able to recompile the application to use the modified definitions.)

**b)** Use a suitable shared library mechanism for linking with the Library. A suitable mechanism is one that (1) uses at run time a copy of the library already present on the user’s computer system, rather than copying library functions into the executable, and (2) will operate properly with a modified version of the library, if the user installs one, as long as the modified

version is interface-compatible with the version that the work was made with.

**c)** Accompany the work with a written offer, valid for at least three years, to give the same user the materials specified in Subsection 6a, above, for a charge no more than the cost of performing this distribution.

**d)** If distribution of the work is made by offering access to copy from a designated place, offer equivalent access to copy the above specified materials from the same place.

**e)** Verify that the user has already received a copy of these materials or that you have already sent this user a copy.

For an executable, the required form of the “work that uses the Library” must include any data and utility programs needed for reproducing the executable from it. However, as a special exception, the materials to be distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

It may happen that this requirement contradicts the license restrictions of other proprietary libraries that do not normally accompany the operating system. Such a contradiction means you cannot use both them and the Library together in an executable that you distribute.

**7.** You may place library facilities that are a work based on the Library side-by-side in a single library together with other library facilities not covered by this License, and distribute such a combined library, provided that the separate distribution of the work based on the Library and of the other library facilities is otherwise permitted, and provided that you do these two things:

**a)** Accompany the combined library with a copy of the same work based on the Library, uncombined with any other library facilities. This must be distributed under the terms of the Sections above.

**b)** Give prominent notice with the combined library of the fact that part of it is a work based on the Library, and explaining where to find the accompanying uncombined form of the same work.

**8.** You may not copy, modify, sublicense, link with, or distribute the Library except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense, link with, or distribute the Library is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

**9.** You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Library or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by

modifying or distributing the Library (or any work based on the Library), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Library or works based on it.

**10.** Each time you redistribute the Library (or any work based on the Library), the recipient automatically receives a license from the original licensor to copy, distribute, link with or modify the Library subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties with this License.

**11.** If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Library at all. For example, if a patent license would not permit royalty-free redistribution of the Library by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Library.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply, and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

**12.** If the distribution and/or use of the Library is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Library under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

**13.** The Free Software Foundation may publish revised and/or new versions of the Lesser General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns. Each version is given a distinguishing version number.

If the Library specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Library does not specify a license version number, you may choose any version ever published by the Free Software Foundation.

**14.** If you wish to incorporate parts of the Library into other free programs whose distribution conditions are incompatible with these, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

## **NO WARRANTY**

**15.** BECAUSE THE LIBRARY IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE LIBRARY, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE LIBRARY "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE LIBRARY IS WITH YOU. SHOULD THE LIBRARY PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

**16.** IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE LIBRARY AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE LIBRARY (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE



LIBRARY TO OPERATE WITH ANY OTHER SOFTWARE), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

## END OF TERMS AND CONDITIONS

### How to Apply These Terms to Your New Libraries

If you develop a new library, and you want it to be of the greatest possible use to the public, we recommend making it free software that everyone can redistribute and change. You can do so by permitting redistribution under these terms (or, alternatively, under the terms of the ordinary General Public License).

To apply these terms, attach the following notices to the library. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the “copyright” line and a pointer to where the full notice is found.

<one line to give the library’s name and a brief idea of what it does.>

Copyright (C) <year> <name of author>

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public license as published by the Free Software Foundation; either version 2.1 of the License, or (at your option) any later version.

This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301, USA.

Also add information on how to contact you by electronic and paper mail.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a “copyright disclaimer” for the library, if necessary. Here is a sample; alter the names:

Yoyodyne, Inc., hereby disclaims all copyright interest in the library ‘Frob’ (a library for tweaking knobs) written by James Random Hacker.

<signature of Ty Coon>, 1 April 1990  
Ty Coon, President of Vice

=====

## Notification of BSD

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

3. All advertising materials mentioning features or use of this software must display the following acknowledgement:

4. Neither the name of the following developers nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS “AS IS” AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

The following notices are required to satisfy the license terms of the software that we have mentioned in this document:

This product includes software developed by the NetBSD Foundation, Inc. and its contributors.

This product includes software developed by the University of California, Berkeley and its contributors.

This product includes software developed for the NetBSD Project. See <http://www.NetBSD.org/> for information about NetBSD.

This product includes software developed by Christos Zoulas.

This product includes software developed by Niels Provos.

This product includes software developed by the University of California, Lawrence Berkeley Laboratory.

This product includes software developed by WIDE Project and its contributors.

This product includes software developed by Brian Aker.

This product includes software developed by Danga Interactive, Inc.

=====

## INDEPENDENT JPEG GROUP SOFTWARE

This software is based in part on the work of the Independent JPEG Group.

=====

## SOFTWARE DEVELOPED BY THE OPENSLL PROJECT FOR USE IN THE SSL TOOLKIT

### LICENSE ISSUES

=====

The OpenSSL toolkit stays under a dual license, i.e. both the conditions of the OpenSSL License and the original SSLeay license apply to the toolkit. See below for the actual license texts. Actually both licenses are BSD-style Open Source licenses. In case of any license issues related to OpenSSL please contact openssl-core@openssl.org.

### OpenSSL License

-----

=====

Copyright (c) 1998-2011 The OpenSSL Project. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgment: "This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit. (<http://www.openssl.org/>)"
4. The names "OpenSSL Toolkit" and "OpenSSL Project" must not be used to endorse or promote products derived from this software without prior written permission. For written permission, please contact openssl-core@openssl.org.
5. Products derived from this software may not be called "OpenSSL" nor may "OpenSSL" appear in their names without prior written permission of the OpenSSL Project.
6. Redistributions of any form whatsoever must retain the following acknowledgment: "This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit (<http://www.openssl.org/>)"

THIS SOFTWARE IS PROVIDED BY THE OpenSSL PROJECT "AS IS" AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OpenSSL PROJECT OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

=====

This product includes cryptographic software written by Eric Young (eay@cryptsoft.com). This product includes software written by Tim Hudson (tjh@cryptsoft.com).

### Original SSLeay License

-----

Copyright (C) 1995-1998 Eric Young

(eay@cryptsoft.com)

All rights reserved.

This package is an SSL implementation written by Eric Young (eay@cryptsoft.com).

The implementation was written so as to conform with Netscapes SSL.

This library is free for commercial and non-commercial use as long as the following conditions are aheared to. The following conditions apply to all code found in this distribution, be it the RC4, RSA, lhash, DES, etc., code; not just the SSL code. The SSL documentation included with this distribution is covered by the same copyright terms except that the holder is Tim Hudson (tjh@cryptsoft.com).

Copyright remains Eric Young's, and as such any Copyright notices in the code are not to be removed. If this package is used in a product, Eric Young should be given attribution as the author of the parts of the library used.

This can be in the form of a textual message at program startup or in documentation (online or textual) provided with the package.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the copyright notice, this list of conditions and the following disclaimer.

2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

3. All advertising materials mentioning features or use of this software must display the following acknowledgement: "This product includes cryptographic software written by Eric Young (eay@cryptsoft.com)" The word 'cryptographic' can be left out if the routines from the library being used are not cryptographic related :-).

4. If you include any Windows specific code (or a derivative thereof) from the apps directory (application code) you must include an acknowledgement: "This product includes software written by Tim Hudson (tjh@cryptsoft.com)" THIS SOFTWARE IS PROVIDED BY ERIC YOUNG "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

The licence and distribution terms for any publically available version or derivative of this code cannot be changed. i.e. this code cannot simply be copied and put under another distribution licence [including the GNU Public Licence.]

=====

## FREETYPE/FREETYPE2 SOFTWARE

The software is based in part of the work of the FreeType Team.

=====

## Notification of MIT

EXPAT

Copyright (c) 1998, 1999, 2000 Thai Open Source Software Center Ltd and Clark Cooper

Copyright (c) 2001, 2002, 2003, 2004, 2005, 2006 Expat maintainers.

JSONcpp Copyright (c) 2007-2010 Baptiste Lepilleur

yaml-cpp Copyright (c) 2008 Jesse Beder.

cJSON Copyright (c) 2009 Dave Gamble  
GIFLIB Copyright (c) 1997 Eric S. Raymond  
PyYAML Copyright (c) 2006 Kirill Simonov  
Parson Copyright (c) 2012 - 2014 Krzysztof Gabis  
Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

=====

## CURL SOFTWARE

COPYRIGHT AND PERMISSION NOTICE.

Copyright (c)

1996 - 2012, Daniel Stenberg, <daniel@haxx.se>.

All rights reserved.

Permission to use, copy, modify, and distribute this software for any purpose with or without fee is hereby granted, provided that the above copyright notice and this permission notice appear in all copies.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT OF THIRD PARTY RIGHTS. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE. Except as contained in this notice, the name of a copyright holder shall not be used in advertising or otherwise to promote the sale, use or

other dealings in this Software without prior written authorization of the copyright holder.

**klibc and jemalloc**

All of the documentation and software included in the 4.4BSD and 4.4BSD-Lite Releases is copyrighted by The Regents of the University of California. Copyright 1979, 1980, 1983, 1986, 1988, 1989, 1991, 1992, 1993, 1994 The Regents of the University of California.

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

All advertising materials mentioning features or use of this software must display the following acknowledgement:

This product includes software developed by the University of California, Berkeley and its contributors.

Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

The Institute of Electrical and Electronics Engineers and the American National Standards Committee X3, on Information Processing Systems have given us permission to reprint portions of their documentation.

In the following statement, the phrase "this text" refers

to portions of the system documentation.

Portions of this text are reprinted and reproduced in electronic form in the second BSD Networking Software Release, from IEEE Std 1003.1-1988, IEEE Standard Portable Operating System Interface for Computer Environments (POSIX), copyright C 1988 by the Institute of Electrical and Electronics Engineers, Inc. In the event of any discrepancy between these versions and the original IEEE Standard, the original IEEE Standard is the referee document.

In the following statement, the phrase "This material" refers to portions of the system documentation.

This material is reproduced with permission from American National Standards Committee X3, on Information Processing Systems. Computer and Business Equipment Manufacturers Association (CBEMA), 311 First St., NW, Suite 500, Washington, DC

20001-2178. The developmental work of Programming Language C was completed by the X3J11 Technical Committee.

The views and conclusions contained in the software and documentation are those of the authors and should not be interpreted as representing official policies, either expressed or implied, of the Regents of the University of California.

**Big5 Font(DynaComware)**

The DynaFont used on the screen display are solely develop by DynaComware.

**icu(libic)**

ICU License - ICU 1.8.1 and later  
COPYRIGHT AND PERMISSION NOTICE  
Copyright (c) 1995-2012 International Business Machines Corporation and others  
All rights reserved.

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, provided that the above copyright notice(s) and this permission notice appear in all copies of the Software and that both the above copyright notice(s) and this permission notice appear in supporting documentation.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT

LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OF THIRD PARTY RIGHTS. IN NO EVENT SHALL THE COPYRIGHT HOLDER OR HOLDERS INCLUDED IN THIS NOTICE BE LIABLE FOR ANY CLAIM, OR ANY SPECIAL INDIRECT OR CONSEQUENTIAL DAMAGES, OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

Except as contained in this notice, the name of a copyright holder shall not be used in advertising or otherwise to promote the sale, use or other dealings in this Software without prior written authorization of the copyright holder.

-----  
All trademarks and registered trademarks mentioned herein are the property of their respective owners.  
=====

## dhcpcd

Copyright (c) 2004-2011 by Internet Systems Consortium, Inc. ("ISC")

Copyright (c) 1995-2003 by Internet Software Consortium

Permission to use, copy, modify, and distribute this software for any purpose with or without fee is hereby granted, provided that the above copyright notice and this permission notice appear in all copies.

THE SOFTWARE IS PROVIDED "AS IS" AND ISC DISCLAIMS ALL WARRANTIES WITH REGARD TO THIS SOFTWARE INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL ISC BE LIABLE FOR ANY SPECIAL, DIRECT, INDIRECT, OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

Internet Systems Consortium, Inc.

950 Charter Street  
Redwood City, CA 94063

info@isc.org

<https://www.isc.org/>  
=====

## libevent

Libevent is available for use under the following license, commonly known as the 3-clause (or "modified") BSD license:

=====

Copyright (c) 2000-2007 Niels Provos

<provos@citi.umich.edu>

Copyright (c) 2007-2010 Niels Provos and Nick Mathewson

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

**1.** Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

**2.** Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

**3.** The name of the author may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED.

IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

=====

Portions of Libevent are based on works by others, also made available by them under the three-clause BSD license above. The copyright notices are available in the corresponding source files; the license is as above.

Here's a list:

log.c:

Copyright (c) 2000 Dug Song

<dugsong@monkey.org>

Copyright (c) 1993 The Regents of the University of California.

strlcpy.c:

Copyright (c) 1998 Todd C. Miller

<Todd.Miller@courtesan.com>

win32select.c:

Copyright (c) 2003 Michael A. Davis  
<mike@datanerds.net>

evport.c:

Copyright (c) 2007 Sun Microsystems  
ht-internal.h:

Copyright (c) 2002 Christopher Clark  
minheap-internal.h:

Copyright (c) 2006 Maxim Yegorushkin  
<maxim.yegorushkin@gmail.com>

=====  
The arc4module is available under the following,  
sometimes called the "OpenBSD" license:  
Copyright (c) 1996, David Mazieres <dm@uun.org>  
Copyright (c) 2008, Damien Miller  
<djm@openbsd.org>

Permission to use, copy, modify, and distribute this  
software for any purpose with or without fee is hereby  
granted, provided that the above copyright notice and  
this permission notice appear in all copies.

THE SOFTWARE IS PROVIDED "AS IS" AND  
THE AUTHOR DISCLAIMS ALL WARRANTIES  
WITH REGARD TO THIS SOFTWARE  
INCLUDING ALL IMPLIED WARRANTIES  
OF MERCHANTABILITY AND FITNESS. IN NO  
EVENT SHALL THE AUTHOR BE LIABLE FOR  
ANY SPECIAL, DIRECT, INDIRECT, OR  
CONSEQUENTIAL DAMAGES OR ANY  
DAMAGES WHATSOEVER RESULTING FROM  
LOSS OF USE, DATA OR PROFITS, WHETHER  
IN AN ACTION OF CONTRACT, NEGLIGENCE  
OR OTHER TORTIOUS ACTION, ARISING OUT  
OF OR IN CONNECTION WITH THE USE OR  
PERFORMANCE OF THIS SOFTWARE.

## boost

=====  
Boost Software License - Version 1.0 - August 17th,  
2003

Permission is hereby granted, free of charge, to any  
person or organization obtaining a copy of the  
software and accompanying documentation covered  
by this license (the "Software") to use, reproduce,  
display, distribute, execute, and transmit the  
Software, and to prepare derivative works of the  
Software, and to permit third-parties to whom the  
Software is furnished to do so, all subject to the  
following:

The copyright notices in the Software and this entire  
statement, including the above license grant, this  
restriction and the following disclaimer, must be  
included in all copies of the Software, in whole or in  
part, and all derivative works of the Software, unless  
such copies or derivative works are solely in the form  
of machine-executable object code generated by a  
source language processor.

THE SOFTWARE IS PROVIDED "AS IS",  
WITHOUT WARRANTY OF ANY KIND,  
EXPRESS OR IMPLIED, INCLUDING BUT NOT

LIMITED TO THE WARRANTIES OF  
MERCHANTABILITY, FITNESS FOR A  
PARTICULAR PURPOSE, TITLE AND NON-  
INFRINGEMENT. IN NO EVENT SHALL THE  
COPYRIGHT HOLDERS OR ANYONE  
DISTRIBUTING THE SOFTWARE BE LIABLE  
FOR ANY DAMAGES OR OTHER LIABILITY,  
WHETHER IN CONTRACT, TORT OR  
OTHERWISE, ARISING FROM, OUT OF OR IN  
CONNECTION WITH THE SOFTWARE OR THE  
USE OR OTHER DEALINGS IN THE  
SOFTWARE.

## ppp

=====  
Copyrights:

\*\*\*\*\*

All of the code can be freely used and redistributed.  
The individual source files each have their own  
copyright and permission notice.

Pppd, pppstats and pppdump are under BSD-style  
notices. Some of the pppd plugins are GPL'd. Chat is  
public domain.

## ntp

=====  
Copyright (c) University of Delaware 1992-2012.  
Permission to use, copy, modify, and distribute this  
software and its documentation for any purpose with  
or without fee is hereby granted, provided that the  
above copyright notice appears in all copies and that  
both the copyright notice and this permission notice  
appear in supporting documentation, and that the  
name University of Delaware not be used in  
advertising or publicity pertaining to distribution of  
the software without specific, written prior  
permission. The University of Delaware makes no  
representations about the suitability this software for  
any purpose. It is provided "as is" without express or  
implied warranty.

## libcap

=====  
Unless otherwise \*explicitly\* stated, the following  
text describes the licensed conditions under which the  
contents of this libcap release may be used and  
distributed:

Redistribution and use in source and binary forms of  
libcap, with or without modification, are permitted  
provided that the following conditions are met:

**1.** Redistributions of source code must retain any  
existing copyright notice, and this entire permission  
notice in its entirety, including the disclaimer of  
warranties.

**2.** Redistributions in binary form must reproduce all  
prior and current copyright notices, this list of  
conditions, and the following disclaimer in the

documentation and/or other materials provided with the distribution.

**3.** The name of any author may not be used to endorse or promote products derived from this software without their specific prior written permission.

ALTERNATIVELY, this product may be distributed under the terms of the GNU General Public License, in which case the provisions of the GNU GPL are required INSTEAD OF the above restrictions. (This clause is necessary due to a potential conflict between the GNU GPL and the restrictions contained in a BSD-style copyright.)

THIS SOFTWARE IS PROVIDED "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR(S) BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

=====

## Python®

Python® is a registered trademark of the Python Software Foundation.

=====

## lighttpd

Copyright (c) 2004, Jan Kneschke, incremental All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the 'incremental' nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS

"AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

=====

## pcrc

### PCRE LICENCE

-----

PCRE is a library of functions to support regular expressions whose syntax and semantics are as close as possible to those of the Perl 5 language.

Release 8 of PCRE is distributed under the terms of the "BSD" licence, as specified below. The documentation for PCRE, supplied in the "doc" directory, is distributed under the same terms as the software itself.

The basic library functions are written in C and are freestanding. Also included in the distribution is a set of C++ wrapper functions.

### THE BASIC LIBRARY FUNCTIONS

-----

Written by: Philip Hazel

Email local part: ph10

Email domain: cam.ac.uk

University of Cambridge Computing Service,  
Cambridge, England.

Copyright (c) 1997-2010 University of Cambridge  
All rights reserved.

### THE C++ WRAPPER FUNCTIONS

-----

Contributed by: Google Inc.

Copyright (c) 2007-2010, Google Inc. All rights reserved.

### THE "BSD" LICENCE

-----

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- \* Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- \* Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- \* Neither the name of the University of Cambridge nor the name of Google Inc. nor the names of their contributors may be used to endorse or promote products derived from this software without specific prior written permission.

These notices must be retained in any copies of any part of this documentation and/or software.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.  
End

=====

**RSA Data Security's MD5 License**

Copyright (C) 1991-2, RSA Data Security, Inc.  
Created 1991. All rights reserved.

License to copy and use this software is granted provided that it is identified as the "RSA Data Security, Inc. MD5 Message-Digest Algorithm" in all material mentioning or referencing this software or this function.

License is also granted to make and use derivative works provided that such works are identified as "derived from the RSA Data Security, Inc. MD5 Message-Digest Algorithm" in all material mentioning or referencing the derived work.

RSA Data Security, Inc. makes no representations concerning either the merchantability of this software or the suitability of this software for any particular purpose. It is provided "as is" without express or implied warranty of any kind.



# Index

## Numerics

|                                      |    |
|--------------------------------------|----|
| 3D glasses                           |    |
| 3D glasses communication range ..... | 15 |
| Using the 3D glasses .....           | 15 |
| 3D Settings                          |    |
| 2D-3D Display Sel. (Select) .....    | 30 |
| 3D Depth Adjust .....                | 31 |
| 3D Format .....                      | 30 |
| 3D Glasses Business .....            | 31 |
| Simulated 3D Effect .....            | 31 |
| 3D video .....                       | 15 |

## A

|                 |        |
|-----------------|--------|
| Aspect          |        |
| Normal .....    | 17, 27 |
| Squeeze .....   | 18, 27 |
| Stretch .....   | 17, 27 |
| V Stretch ..... | 18, 27 |

## B

|                  |    |
|------------------|----|
| Blanking .....   | 28 |
| Brightness ..... | 24 |

## C

|  |    |
|--|----|
| Calib. Preset  |    |
| Bright Cinema .....                                  | 22 |
| Bright TV .....                                      | 22 |
| Cinema Film 1 .....                                  | 22 |
| Cinema Film 2 .....                                  | 22 |
| Game .....   | 22 |
| Photo .....  | 22 |
| Reference .....                                      | 22 |
| TV .....   | 22 |
| User .....   | 22 |
| Cinema Black Pro .....                               | 23 |
| Cleaning .....                                       | 50 |
| Clear White .....                                    | 26 |
| Color .....  | 24 |
| Color Correction .....                               | 26 |
| Color Space .....                                    | 26 |
| Color Temp. (Temperature) .....                      | 24 |
| Compatible 3D signals .....                          | 55 |
| Connecting to Video equipment or a<br>computer ..... | 12 |
| Contrast .....                                       | 24 |
| Contrast Enhancer .....                              | 23 |

## D

|                     |    |
|---------------------|----|
| Dimensions .....    | 62 |
| Dynamic Range ..... | 31 |

## E

|                      |    |
|----------------------|----|
| Expert Setting ..... | 25 |
|----------------------|----|

## F

|                 |    |
|-----------------|----|
| Film Mode ..... | 25 |
|-----------------|----|

## G

|                        |    |
|------------------------|----|
| Gamma Correction ..... | 25 |
|------------------------|----|

## H

|                          |    |
|--------------------------|----|
| High Altitude Mode ..... | 29 |
| Hue .....                | 24 |

## I

|   |    |
|---|----|
| Image Flip .....                                    | 33 |
| Input Lag Reduction .....                           | 26 |
| Input signals and adjustable/setting<br>items ..... | 54 |

## L

|                              |       |
|------------------------------|-------|
| Lamp Control .....           | 23    |
| Lamp Setting .....           | 29    |
| Lamp Timer .....             | 36    |
| LAN connector .....          | 4, 37 |
| Language .....               | 29    |
| Lens adjustment window ..... | 11    |
| Location of controls         |       |
| Front/Right side .....       | 4     |
| Rear/Bottom .....            | 5     |

## M

|                                      |    |
|--------------------------------------|----|
| Menu                                 |    |
| Function .....                       | 30 |
| Information .....                    | 36 |
| Installation .....                   | 33 |
| Operation .....                      | 20 |
| Picture .....                        | 22 |
| Screen .....                         | 27 |
| Setup .....                          | 29 |
| Menu Position .....                  | 29 |
| Messages                             |    |
| Caution .....                        | 44 |
| Warning .....                        | 44 |
| Motionflow .....                     | 24 |
| MPEG NR (MPEG Noise Reduction) ..... | 25 |

## N

|                            |    |
|----------------------------|----|
| Network Management .....   | 29 |
| Network Setting .....      | 35 |
| NR (Noise Reduction) ..... | 25 |

## P

|   |    |
|---|----|
| Panel Alignment .....                             | 34 |
| Picture position adjustment .....                 | 8  |
| Power Saving .....                                | 29 |
| Preset memory number .....                        | 36 |
| Preset mode                                       |    |
| BRT CINE .....                                    | 19 |
| BRT TV .....                                      | 19 |
| CINEMA FILM 1 .....                               | 19 |
| CINEMA FILM 2 .....                               | 19 |
| GAME .....  | 19 |
| PHOTO .....                                       | 19 |
| REF .....   | 19 |
| TV .....  | 19 |
| USER .....  | 19 |
| Preset signals .....                              | 52 |
| Projecting the Picture .....                      | 14 |
| Projection distance .....                         | 61 |
| Projection distance and lens shift<br>range ..... | 60 |

## R

|                               |    |
|-------------------------------|----|
| Reality Creation .....        | 23 |
| Remote control .....          | 6  |
| Remote control detector ..... | 4  |
| Replacing the lamp .....      | 46 |
| Reset .....                   | 22 |
| Resetting the items .....     | 21 |

## S

|                        |    |
|------------------------|----|
| Settings Lock .....    | 31 |
| Sharpness .....        | 25 |
| Signal type .....      | 36 |
| Smooth Gradation ..... | 25 |
| Software Version ..... | 36 |
| Specifications .....   | 51 |
| Status .....           | 29 |

## T

|                       |    |
|-----------------------|----|
| Trigger Select .....  | 33 |
| Troubleshooting ..... | 40 |
| Turning off .....     | 14 |
| Turning on .....      | 8  |

## U

|                             |    |
|-----------------------------|----|
| Updating the software ..... | 45 |
|-----------------------------|----|

## W

|                          |    |
|--------------------------|----|
| Warning indicators ..... | 43 |
|--------------------------|----|

## X

|                 |        |
|-----------------|--------|
| x.v.Color ..... | 26, 45 |
|-----------------|--------|

### Trademark Information

- “PlayStation” is a registered trademark of Sony Computer Entertainment Inc.
- The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.
- “Blu-ray” and “Blu-ray Disc” are trademarks of Blu-ray Disc Association.

.....  
This projector supports DeepColor, x.v.Color, LipSync, 3D signal and computer input signal of HDMI standards. It also supports HDCP.

